

OAI 3 4456 0549453 4 . LABORATORY
operated by
UNION CARBIDE CORPORATION
for the
U.S. ATOMIC ENERGY COMMISSION



ORNL - TM - 908,
Volume II

of 9

MSRE DESIGN AND OPERATIONS REPORT
PART VIII, OPERATING PROCEDURES

R.H. Guymon

CENTRAL RESEARCH LIBRARY
DOCUMENT COLLECTION
LIBRARY LOAN CO
NOT TRANSFER TO ANOTHER
if you wish someone else to see
document, send in name with docu
ment and the library will arrange a

NOTICE This document contains information of a preliminary nature and was prepared primarily for internal use at the Oak Ridge National Laboratory. It is subject to revision or correction and therefore does not represent a final report.

LEGAL NOTICE

This report was prepared as an account of Government sponsored work. Neither the United States, nor the Commission, nor any person acting on behalf of the Commission:

A. Makes any warranty or representation, expressed or implied, with respect to the accuracy, completeness, or usefulness of the information contained in this report, or that the use of any information, apparatus, method, or process disclosed in this report may not infringe privately owned rights; or

B. Assumes any liabilities with respect to the use of, or for damages resulting from the use of any information, apparatus, method, or process disclosed in this report.

As used in the above, "person acting on behalf of the Commission" includes any employee or contractor of the Commission, or employee of such contractor, to the extent that such employee or contractor of the Commission, or employee of such contractor prepares, disseminates, or provides access to, any information pursuant to his employment or contract with the Commission, or his employment with such contractor.

ORNL-TM-908,
Volume II

MSRE DESIGN AND OPERATIONS REPORT
PART VIII, OPERATING PROCEDURES

R.H. Guymon

JANUARY 1966

OAK RIDGE NATIONAL LABORATORY

Oak Ridge, Tennessee

Operated by

UNION CARBIDE CORPORATION

for the

UNITED STATES ATOMIC ENERGY COMMISSION

OAK RIDGE NATIONAL LABORATORY LIBRARIES



3 4456 0549451 4



PREFACE

The report on the Molten-Salt Reactor Experiment (MSRE) has been arranged into twelve major parts as shown below. Each of these covers a particular phase of the project, such as the design, safety analysis, operating procedures, etc. An attempt has thus been made to avoid much of the duplication of material that would result if separate and independent reports were prepared on each of these major aspects.

Detailed references to supporting documents, working drawings, and other information sources have been made throughout the report to make it of maximum value to ORNL personnel. Each of the major divisions of the report contains the bibliographical and other appendix information necessary for that part.

The final volumes of the report, Part XII, contain rather extensive listings of working drawings, specifications, schedules, tabulations, etc. These have been given a limited distribution.

Most of the reference material is available through the Division of Technical Information Extension, Atomic Energy Commission, P.O. Box 62, Oak Ridge, Tennessee. For material not available through this source, such as inter-Laboratory correspondence, etc., special arrangements can be made for those having a particular interest.

None of the information contained in this report is of a classified nature.

All the reports are listed below.


ORNL-TM-728*	MSRE Design and Operations Report, Part I, Description of Reactor Design, by R. C. Robertson
ORNL-TM-729	MSRE Design and Operations Report, Part II, Nuclear and Process Instrumentation, by J. R. Tallackson
ORNL-TM-730*	MSRE Design and Operations Report, Part III, Nuclear Analysis, by P. N. Haubenreich, J. R. Engel, B. E. Prince, and H. C. Claiborne
ORNL-TM-731	MSRE Design and Operations Report, Part IV, Chemistry and Materials, by F. F. Blankenship and A. Taboada

* Issued.

- ORNL-TM-732* MSRE Design and Operations Report, Part V,
Reactor Safety Analysis Report, by S. E. Beall,
P. N. Haubenreich, R. B. Lindauer, and
J. R. Tallackson
- ORNL-TM-733* MSRE Design and Operations Report, Part VI,
Operating Safety Limits for the Molten-Salt
Reactor Experiment, by S. E. Beall and
R. H. Guymon
- ORNL-TM-907* MSRE Design and Operations Report, Part VII,
Fuel Handling and Processing Plant,
by R. B. Lindauer
- ORNL-TM-908 MSRE Design and Operations Report, Part VIII,
Operating Procedures, by R. H. Guymon
- ORNL-TM-909 MSRE Design and Operations Report, Part IX,
Safety Procedures and Emergency Plans,
by A. N. Smith
- ORNL-TM-910 MSRE Design and Operations Report, Part X,
Maintenance Equipment and Procedures,
by E. C. Hise and R. Blumberg
- ORNL-TM-911 MSRE Design and Operations Report, Part XI,
Test Program, by R. H. Guymon and
P. N. Haubenreich
- MSRE Design and Operations Report, Part XII,
Lists: Drawings, Specifications, Line Schedules,
Instrument Tabulations (Vol. 1 and 2)

Acknowledgement

The Operating Procedures were written primarily by members of the MSRE Operations Department of the ORNL Reactor Division. Substantial contributions were made by members of the Development Department of the Reactor Division and by members of the Instruments and Controls Division who wrote and reviewed various sections. All contributions are gratefully acknowledged.



CONTENTS

Volume I

PREFACE

ACKNOWLEDGEMENT

- 1 INTRODUCTION
 - 1A Explanation of Operating Procedures
 - 1B List of Other Material Available
- 2 NUCLEAR ASPECTS OF OPERATION
 - 2A Simplified Reactor Theory
 - 1 Glossary
 - 2 Atomic Structure
 - 3 Radioactivity and Radiation
 - 4 The Fission Process
 - 5 Cross Sections and Reaction Rates
 - 6 The Fission Chain Reaction in an Infinite Reactor
 - 7 Effect of Neutron Leakage
 - 8 Criticality
 - 9 Extraneous Neutron Sources and Subcritical Multiplication
 - 10 Reactor Kinetics
 - 11 Nuclear Instrumentation
 - 12 Reactor Control
 - 13 Xenon and Samarium
 - 2B MSRE Nuclear Characteristics
 - 1 Core Reactivity Factors
 - 2 Heat Generation and Temperature Distributions
 - 3 Instrumentation
 - 4 Kinetics and Safety
- 3 OPERATION OF AUXILIARY SYSTEMS
 - 3A Electrical System
 - 1 System Startup
 - 2 Normal Operation
 - 3 Emergency and Special Operations
 - 4 Normal Shutdown

- 3B Instrument Air and Service Air Systems
 - 1 Startup
 - 2 Normal Operation
 - 3 Emergency or Special Operation
 - 4 Shutdown
- 3C Water System
 - 1 Startup
 - 2 Normal Operation
 - 3 Emergency Operation
 - 4 Normal Shutdown
- 3D Component Cooling Systems
 - 1 Startup
 - 2 Normal Operation
 - 3 Emergency Operations
 - 4 Special Operations
 - 5 Shutdown
- 3E Shield and Containment
 - 1 Reactor and Drain Tank Cells
 - 1.1 Startup
 - 1.2 Normal Operation
 - 1.3 Emergency or Special Operation
 - 1.4 Shutdown
 - 2 Vapor Condensing System
 - 2.1 Startup
 - 2.2 Normal Operation
 - 2.3 Emergency and Special Operations
 - 2.4 Shutdown Operation
 - 3 Coolant Cell and Coolant Drain Tank Cell
 - 3.1 Startup
 - 3.2 Normal Operation
 - 3.3 Emergency or Special Operations
 - 3.4 Shutdown

- 4 Special Equipment Room
- 5 West Tunnel and South Electric Service Area
- 6 Charcoal Bed Pit
- 7 Filter Pit
- 8 Auxiliary Cells
- 3F Ventilation System
 - 1 Startup
 - 2 Normal Operation
 - 3 Operation during Maintenance
 - 4 Special Operations
 - 5 Shutdown
- 3G Leak-detector System
 - 1 Startup
 - 2 Normal Operation
 - 3 Location of Leaking Flanges
 - 4 Shutdown Procedures
- 3H Instrumentation
 - 1 Controllers and Indicators
 - 2 Scanner
 - 3 Computer
 - 4 Annunciators
 - 5 Jumper Board
 - 6 Other Instruments
 - 6.1 FqI-569-A
 - 6.2 AO₂-566-A
 - 6.3 PdE-RC-E
 - 6.4 ABe-A-AD3
 - 6.5 AO₂-548
 - 6.6 AH₂O-548
- 3I Freeze Valves
 - 1 Definitions and Criteria
 - 2 Basic Operation and Interlocks
 - 3 Operation of Freeze Valves

- 3J Liquid Waste System
 - 1 Jetting Reactor Cell and Drain Tank Cell Sumps
 - 2 Sampling Reactor and Drain Tank Cell Sumps
 - 3 Jetting Auxiliary Cell Sumps
 - 4 Building Sump Operation
 - 5 Pit Pump Operation
 - 6 Treatment and Disposal of Waste Contents
 - 7 Clarification of Decontamination Tank or Decontamination Cell Liquid
 - 8 Backwash of the Waste Filter
 - 9 General Decontamination and Clean Up
- 3K Be Monitoring System
 - 1 General Building Air Sampling System
 - 2 Ventilation System Air Handling
 - 3 NSL Be Air Monitoring Unit
 - 4 Coolant System Stack Be Monitoring Unit
- 4 AUXILIARY SYSTEMS STARTUP CHECK LISTS
 - 4A Electrical System
 - 4B Instrument Air System
 - 4C Cooling Water Systems
 - 4D Component Cooling Systems
 - 4E Shield and Containment Systems
 - 4F Ventilation System
 - 4G Leak-detector System
 - 4H Instrumentation
 - 4I Freeze Valves

Volume II

- 5 REACTOR STARTUP
 - 5A Purging Oxygen and Moisture from the Salt System
 - 5B Startup of Cover-gas and Offgas Systems
 - 5C Heatup of Drain Tank System
 - 5D Addition of Fuel, Flush, and Coolant Salt to the Drain Tanks
 - 5E Startup of Lube-oil Systems for the Fuel and Coolant Pumps
 - 5F Heatup of Fuel and Coolant Systems
 - 5G Prepare Drain Tank Systems for Reactor Startup
 - 5H Routine Pressure Test

- 5I Filling the Fuel and Coolant Systems
 - 5J Criticality and Power Operation
 - 1 Preparation for Power Operation
 - 2 Starting Power Operation using Automatic Load Control and Rod Servo
 - 3 Manual and Special Power Operation
 - 5K Normal Operating Conditions
- 6 SAMPLING AND ADDITIONS
- 6A Fuel System Sampling and Enriching
 - 1 General Description of Sampling the Fuel System
 - 2 General Description of Adding Enriching Capsules to the Fuel System
 - 3 Fuel System Sampling Check List
 - 4 Fuel System Enriching Check List
 - 5 Fuel System Sampler Startup
 - 6 Fuel System Sampler Shutdown
 - 7 Unusual Operating Conditions for the Sampler Enricher
 - 6B Coolant System Sampling
 - 1 General Description of Sampling the Coolant System
 - 2 Coolant System Sampling Check List
 - 3 Coolant System Sampler Startup
 - 4 Coolant System Sampler Shutdown
 - 6C Water System
 - 1 Treatment of Treated Water or Nuclear Penetration
 - 2 Treatment of Cooling Tower Water
 - 3 Condensate
 - 4 Procedure for Total Inhibitor Analysis
 - 5 Procedure for Chromate Analysis
 - 6 Procedure for Hardness Analysis
 - 7 pH Measurement
 - 6D Cell Air
 - 6E Lube Oil System
 - 1 Sampling of New Oil as Received
 - 2 Sampling at Oil Packages
 - 3 Addition of Lube Oil to Oil Packages

- 6F Cover Gas
- 6G Offgas System
- 7 HEAT BALANCE
 - 7A General Description
 - 7B Computer Heat Balance
 - 7C Manual Heat Balance
- 8 PERIODIC INSTRUMENT CALIBRATION AND CIRCUIT CHECKS
 - 8A Neutron Level
 - 1 Wide-range Counting Channels
 - 2 Nuclear Safety Channels
 - 3 Linear Power Channels
 - 8B Calibration Check of Process Radiation Monitors
 - 1 Preparation
 - 2 Radiation Monitor 557 (Offgas from Charcoal Beds)
 - 3 Radiation Monitor 528 (Coolant System Offgas)
 - 4 Radiation Monitor 565 (Cell Offgas)
 - 5 Radiation Monitor 500 (Main Helium Supply)
 - 6 Process Monitor 596 (Outside Transmitter Room)
 - 7 Process Monitor 827 (Treated Water)
 - 8 Oil System Process Monitors (Service Tunnel)
 - 8C Calibration of Personnel Monitors and Stack Monitors
 - 1 Routine Source Check
 - 2 Alarm Matrix Check
 - 3 Evacuation Alarm Test
 - 4 Containment Stack Monitor Tests
 - 8D Safety Circuit Checks
 - 1 Fuel Pump and Overflow Tank Pressure
 - 2 Helium Supply Pressure
 - 3 FP and OFT Bubblers
 - 4 Rod Scram Circuits
 - 5 Emergency Fuel Drain
 - 6 High/Low Reactor Cell Pressure
 - 7 Coolant Pump Speed and Coolant Salt Flow
 - 8 Sampler-Enricher
 - 9 Exercise Control Rods

9 UNUSUAL OPERATING CONDITIONS

- 9A Loss of Electrical Power
 - 1 Loss of Preferred TVA Feeder
 - 2 Complete Loss of TVA Power - All Diesels Operable
 - 3 Failure of DG-3 during a TVA Power Outage
 - 4 Failure of DG-4 during a TVA Power Outage
 - 5 Failure of DG-5 during a TVA Power Outage
 - 6 Failure of DG-3 and 4 during a TVA Power Outage
 - 7 Failure of DG-3 and 5 or 4 and 5 during a TVA Power Outage
 - 8 Loss of 250v DC Systems
 - 9 Loss of Instrument Power
- 9B Loss of Cooling Water
 - 1 Treated Water System
 - 2 Cooling Tower Water
- 9C Loss of Fuel or Coolant Pump
 - 1 Loss of Fuel Pump
 - 2 Loss of Coolant Pump
- 9D Loss of Instrument Air
 - 1 Air Compressor Electrical Difficulties
 - 2 Other Air Compressor Difficulties
 - 3 Effects of Loss of Instrument Air
- 9E Radiation Increases
 - 1 Personnel Monitors
 - 2 Process Radiation Detectors
 - 3 High Stack Activity
- 9F Control-rod Drive Difficulty
- 9G Loss of Computer
- 9H Lube-oil System Difficulties
 - 1 Coolant Salt Pump Lube System Failure
 - 2 Fuel Salt Pump Lube System Failure
 - 3 Total Oil System Failure
 - 4 Excess Oil Seal Leakage
- 9I Salt in Overflow Tank
- 9J Loss of Helium Purge to the Circulating Pumps
- 9K Loss of Component Cooling Blowers

- 9L Removal of Water from the Steam Domes
- 9M Regeneration of Helium Dryer
- 9N High Cell Leak Rate Indication
 - 1 Salt Leaking into the Cell
 - 2 Water Leaking into the Cell
 - 3 Loss of Reactor or Drain Tank Space Coolers
 - 4 Actual High Cell Leak Rate
- 10 REACTOR SHUTDOWN
 - 10A Normal Shutdown
 - 1 Power Reduction and Going Subcritical
 - 2 Draining and Flushing the Fuel System
 - 3 Draining the Coolant System
 - 4 Cooldown of Fuel and Coolant Systems
 - 5 Shutdown of Remaining Equipment
 - 10B Special Shutdown
 - 1 Power Reduction and Going Subcritical
 - 2 Draining and Flushing the Fuel System
 - 3 Shutdown of Remaining Equipment
- 11 SHUTDOWN OPERATIONS
 - 11A Fuel or Flush Salt Transfers
 - 1 Preparation for Transfers
 - 2 Transfer from FD-1 to FST
 - 3 Transfer from FD-2 to FST
 - 4 Transfer from FFT to FST
 - 5 Transfer from FST to FD-1
 - 6 Transfer from FST to FD-2
 - 7 Transfer from FST to FFT
 - 8 Transfer from FD-1 to FD-2
 - 9 Transfer from FD-2 to FD-1
 - 10 Heatup of FST
 - 11 Heatup of Line 111
 - 12 Heatup of Waste Line 112
 - 13 Heatup of Fill Line 203
 - 14 Heatup of Transfer and Salt Addition Freeze Valve Assemblies

- 11B Opening Reactor Cell, Drain Tank Cell, and Coolant Cell Shields
 - 1 Reactor Cell Heater Shutdown Check List
 - 2 Drain Tank Cell Heater Shutdown Check List
 - 3 Coolant Cell Heater Shutdown Check List
 - 4 Cooling Water Shutdown Check List
 - 5 Freeze Valve Shutdown Check List
 - 6 Component Cooling Air to Components Shutdown Check List
 - 7 Component Cooling Pumps Shutdown Check List
 - 8 Electrical Breakers Shutdown Check List
 - 9 Opening Reactor Cell and Drain Tank Cell
 - 10 Opening the Coolant Cell
- 11C Graphite Sampling
- 11D Routine Inspection and Testing of Equipment
 - 1 Process Systems
 - 2 Auxiliary Systems
 - 3 Pressure Relief Valves
 - 4 Rupture Discs
 - 5 Reactor Cell and Drain Tank Cell Containment Vessels
 - 6 Secondary Containment Vessels
- 12 ROUTINE OBSERVATIONS
 - 12A Logs
 - 12B Check Lists
 - 12C Recorders and Indicators
 - 12D Computer
 - 12E Tags and Signs
- 13 MAINTENANCE AND CHANGES
 - 13A Maintenance
 - 13B Modifications
 - 13C Changes in Operating Procedures
 - 13D Changes in Computer Program
 - 13E Revisions of Approved Documents



Approved by

R. H. Hugmon


9/7/65

SECTION 5

REACTOR STARTUP

After the auxiliary startup check lists have been completed, there is still a considerable number of operations to be done prior to power operation. The details of these are given in this section in chronological order. In each section a general description is given as to what is to be done, what precautions are necessary and suggests corrective action in case of difficulty. This is followed by detailed check lists.

Section 5K describes the normal operation of the plant. Information is given as to what equipment should be operated and in general how it is to be operated. The operational limits are covered by the Building Log. (12A-2A or 12A-2B)



6/26/64
Approved by

R. H. Yagman

5A-1
8/3/65

5A PURGING OXYGEN AND MOISTURE FROM THE SALT SYSTEMS

After any appreciable amount of atmospheric contamination has occurred, as when a system is opened for maintenance, it will be necessary to purge out most of the oxygen and moisture before heat-up.

By evacuation and refilling the coolant system with helium, the oxygen and moisture content can be reduced to a tolerable (~100 ppm) level. However, evacuation cannot be used on the fuel or fuel drain tank systems because fission gases would be released from the charcoal beds. Oxygen and moisture will be removed from the fuel system by purging a sufficient amount of helium while mixing with the fuel pump. Since mixing during a continuous purge is not possible in the fuel drain tanks, alternate pressure-vent cycles will be used.

1 PURGING THE FUEL SYSTEM

Init. Date & Time

Purging of the fuel system after maintenance will consist of introducing helium into as many openings as possible, circulating it with the fuel pump, and venting continuously through the main charcoal beds. A minimum of 9 fuel system volumes (~675 ft³) of helium will be required to lower the oxygen concentration from atmospheric to < 100 ppm. Details are given below:

1.1 Close or check that the following valves are closed:

(High Bay Area)

Sampler-enricher operational valve _____,

(Main Board)

F P vent HCV 533 _____,

Bypass valves HCV 544 _____,

HCV 545 _____,

HCV 546 _____,

(Vent House)

Sample Station V 518A _____, and V-518E _____.

(Coolant Drain Cell)

WOR V 720A _____ and V 720B _____,

V 525A _____ and V 525B _____,

Approved by *D. W. Guyman*

5A-2
8/3/65

	<u>Init.</u>	<u>Date & Time</u>
(Electric Service Area)		
V-519A _____.	_____	_____
1.2 Check that freeze valves 104, 105, and 106 are deep frozen _____.	_____	_____
1.3 Set up maximum helium flows through the four bubble tubes and the pump (FP) as follows:		
(Diesel House)		
1.3.1 Check helium supply of 40 psig on lines 501 and 516 _____.	_____	_____
(Main Board)		
1.3.2 Set PCV-522 to 5 psig.	_____	_____
1.3.3 Set FP bubbler selector switch S-36 "both bubbler" position _____.	_____	_____
(Vent House)		
1.3.4 Open V-522B _____ and V-557B _____.	_____	_____
1.3.5 Open two of the following pairs of valves and close the other two pairs: V-620 _____ and V-624 _____, V-621 _____ and V-625 _____, V-622 _____ and V-626 _____, V-623 _____ and V-627 _____.	_____	_____
1.3.6 Open or check open the following:		
(Special Equipment Room)		
V-524A _____,		
(Transmitter Room)		
V-592A _____, V-600A _____, V-596A _____, V-599A _____, V-593A _____, V-589A _____.	_____	_____
1.3.7 Adjust bubbler throttle valves to obtain flows as given in building log.		
(Transmitter Room)		
FP bubblers: V-592B for FI-592 _____, V-596B for FI-596 _____, V-593B for FI-593 _____.		

Approved by B. K. Heyman

5A-3
8/3/65

Init. Date & Time

- OFT bubblers:
- V 600B for FI 600 _____,
 - V 599B for FI 599 _____,
 - V 589B for FI 589 _____.

NOTE: The OFT bubblers may be plugged because of a frozen heel of salt. This will be indicated by a high pressure on FI 599 and FI 600 (alarms on XA 4006-6) and a false high level indication on LI 599 and LI 600 (alarm on XA 4007-2). In this event close block valves HV 599 and HV 600. It would then be necessary to relieve the pressure by turning test switch S-38 momentarily to "equalizer No. 1" and then to "equalizer No. 2" positions. Wait until the OFT temperature is above salt liquidus before placing plugged bubblers back into service. Indicate condition of bubblers:

- 1.3.7 Set FIC 516 to maximum flow (~5 l/m).
- 1.4 In preparation for running the fuel pump to aid in mixing the purge gas, check the following:

(Control Room)

- 1.4.1 Oil level on LI-OT-1 > 50 % _____,
- PIC 513 set for 7 psig _____,
- F.O.P. No. _____ running _____,
- Shield oil flow 8 gpm on FI 704 _____,
- Seal oil flow of 4 gpm on FI 703 _____.

(Water Room)

- 1.4.2 Motor cooling water 5 gpm on FI 830 _____.

(Control Room)

- 1.4.3 Start fuel pump.

- 1.5 Determine the required purge time required before heat up is begun as follows:

Approved by

[Signature]

5A-4
8/3/65

Init. Date & Time

1.5.1 Determine total helium flow being introduced into the fuel system. Refer to calibration curves available to convert indicator readings to l/min.

(Transmitter Room)

- FI 592 _____ psig = _____ l/m,
- FI 596 _____ psig = _____ l/m,
- FI 593 _____ psig = _____ l/m,
- FI 600 _____ psig = _____ l/m,
- FI 599 _____ psig = _____ l/m,
- FI 589 _____ psig = _____ l/m,

(Main Board)

- FI 516 _____ % = _____ l/m,
- Total Flow _____ l/m.

1.5.2 Determine time required to purge 7 system volumes at the flow established in step 1.5.1 by:

$$\text{Time (hrs)} = \frac{75 \text{ ft}^3/\text{vol} \times 7 \text{ vol}}{\text{Flow l/m} \times \frac{60}{28.3}} = \frac{248}{\text{Flow l/m}} = \text{hrs.}$$

Purging helium at the rate in 1.5.1 while mixing with the fuel pump, for the time above should reduce oxygen contamination to < 500 ppm.

- 1.6 After purging for the length of time determined above (approx 30 hrs), reduce the purge to normal flow rate (see section 5.I.2.8 and 5.I.2.9).
- 1.7 Continue the normal purge rate (total approx 4.2 l/m) during reactor startup to further reduce oxygen concentration in the gas to below 100 ppm which would represent < 1 ppm oxide in 8,800 lbs of salt.

2 PURGING THE FUEL DRAIN TANKS

Purging of a fuel system drain tank after it has been opened to atmosphere for any reason consists of alternately pressurizing and venting of helium. Pressure

Approved by *B. K. Haymon*

5A-5
8/3/65

Init. Date & Time

changes of 5 psi will be made by alternately pressurizing to 7 psig and venting to 2 psig. To reduce the oxygen concentration from atmospheric to < 500 ppm before heat up is begun will require 24 cycles. An additional 6 cycles will be performed during heat up to lower oxygen concentration to < 100 ppm. Each pressure cycle will require in excess of an hour due to flow limitations of FE 517. The theoretical number of ΔP cycles to reduce oxygen concentration to any desired value may be determined by:

$$N = \frac{\ln \frac{C_0}{C}}{\ln \frac{P_2}{P_1}}$$

where N = number of pressure cycles purge gas required

C₀ = beginning concentration O₂ in ppm

C = desired or end concentration O₂ in ppm

P₁ = end vent cycle pressure, psia

P₂ = end pressure cycle, psia.

2.1 Check that the cover gas system is in operation. _____

2.2 Check that the drain tank, associated fill and transfer piping, and freeze valves, to be purged are at room temperature (Mark through tank(s) not to be purged). _____

FDL _____	FD2 _____	FFT _____
Line 109 _____	Line 108 _____	Line 107 _____
FV 109 _____	FV 108 _____	FV 107 _____
Line 106 _____	Line 105 _____	Line 104 _____
FV 106 _____	FV 105 _____	FV 104 _____

(Control Room)

2.3 Close the bypass valve(s). _____

HCV 544 _____	HCV 545 _____	HCV 546 _____
---------------	---------------	---------------

2.4 Close the vent valve(s). _____

HCV 573 _____	HCV 575 _____	HCV 577 _____
---------------	---------------	---------------

Approved by *B. N. Guyman*

5A-6
8/3/65

Init. Date & Time

2.5 Set PIC 517 to 8 psig. Note that fuel system pressure must be < 2 psig for this valve to open. _____

2.6 Open tank supply valve by checking that: _____

2.6.1 Receiver selector S-4 in FST position _____

2.6.2 FV 111, FV 107, FV 108, FV 109 are frozen _____

2.6.3 Two jumpers placed in circuit 115 _____
Permission to insert jumpers _____

2.6.4 Request open valve: _____

HCV 572 _____	HCV 574 _____	HCV 576 _____
---------------	---------------	---------------

2.7 Complete pressure-vent cycles of 7 psig to 2 psig as follows: _____

2.7.1 When pressure in tank reaches 7 psig, close supply valve and open vent valve. _____

Close HCV 572 _____	Close HCV 574 _____	Close HCV 576 _____
Open HCV 573 _____	Open HCV 575 _____	Open HCV 577 _____

2.7.2 When pressure in tank reaches 2 psig, close vent valve and open supply valve: _____

Close HCV 573 _____	Close HCV 575 _____	Close HCV 577 _____
Open HCV 572 _____	Open HCV 574 _____	Open HCV 576 _____

2.8 Repeat above cycle (step 7) 24 times before heat up is begun. Record data in Table 5A-1. _____

2.9 Continue above during reactor startup (Sections 5A and 5B). There should be a total of at least 30 cycles. Record data in table 5A-2. _____

2.10 Remove jumpers in circuit 115 _____

Approved by R. H. Huggins

5A-9
8/3/65

3 PURGING OF THE COOLANT PIPING AND DRAIN TANK

Purging of the coolant piping system and coolant drain tank will consist of evacuation of 0.5 psia or less and refilling with helium. Provisions will be made for the prevention of beryllium contamination from the vacuum system.

If the coolant system or coolant drain tank system are to be purged separately, the applicable portions of this procedure will be used.

3.1 Check that the entire coolant system, coolant drain lines, FV 204 and FV 206 are at room temperature. Init. Date & Time

3.2 Check that the drain tank (CDT) is: emptied of salt and cold _____
or, full of frozen salt _____.

(Vent House)

3.3 Install a vacuum pump at V 560A. The vacuum pump is to be either fitted with an absolute filter on the exhaust or connected to building exhaust. Tag the pump as being beryllium contaminated. Include a vacuum gauge to indicate system pressure. _____

(Control Room)

3.4 Turn the CP bubbler selector S-39 to "off." _____
(This closes HCV 595 B1, B2, B3 and opens HCV 595 B4 and B5.) _____

3.5 Close or check closed the following valves:

(Coolant Drain Cell)

V 511A _____, V 770 _____,
V 512 _____, V 529 _____,

(Transmitter Room)

V 594A _____, V 595A _____, V 598A _____,

(High Bay)

Coolant sampler valve HCV 998 _____

Approved by B. K. Grayman

5A-10
8/3/65

	<u>Init.</u>	<u>Date & Time</u>
(Special Equipment Room)		
3.6 Check that line 203 is blanked.	_____	_____
3.7 Open the following valves:		
(Coolant Drain Cell)		
V 511B _____, V 526 _____,		
(Control Room)		
HCV 511A _____, FIC 512 _____, HCV 527 _____,		
HCV 511B _____, PCV 528 _____, HCV 536 _____,		
HCV 547 _____.	_____	_____
(Vent House)		
3.8 Close V 560B _____.	_____	_____
(Vent House)		
3.9 Turn on vacuum pump and throttle open V 560A according to capacity of the pump. As pressure drops, open valve completely.	_____	_____
3.10 Evacuate the system to ~0.5 psia and hold for 4 hours. Record time 4-hour period started _____, stopped _____.	_____	_____
(Diesel House)		
3.11 Check or install a temporary line from V 500C to V 597B to bypass FCV 500 if fast purge is desired.	_____	_____
3.12 Start coolant pump, cover gas purge and coolant drain tanks, purge as follows:		
(Coolant Drain Cell)		
3.12.1 Open V 512 _____ and V 511 A _____.	_____	_____
(Control Room)		
3.12.2 Set FIC 512 to 0.6 l/m.	_____	_____
3.12.3 Throttle HCV 511B open slightly (there is no flow indicator on this line) so that there is a small purge through the drain tank.	_____	_____
3.13 Purge for two hours, then close V 560A _____ and stop vacuum pump _____.	_____	_____

Approved by

B. H. Seymour

5A-11
8/3/65

Init. Date & Time

3.14 Continue purge during remainder of reactor startup.

Remove bypass around FCV 500 _____. Open V 560B
when system reaches atmospheric pressure _____.

3.15 Remove vacuum pump from vent house. Handle as
if it were beryllium contaminated equipment
until it has been cleared by Industrial Hygiene.
Drain the oil and have a sample analyzed for
beryllium content. Flush out the pump with
clean oil. Dispose of all used oil in approved
beryllium containers marked for burial.
Oil sample contains _____ $\mu\text{g}/\text{cc}$ beryllium.



Approved by

D. W. Hayman

5B-1
7/26/65

5B STARTUP OF COVER GAS AND OFFGAS SYSTEMS

The cover and offgas systems may remain essentially in full operation during shutdown periods. However, they are important enough that at each startup all valves, equipment, and instrumentation will be checked. The following detailed procedure is designed to provide a supply to all necessary locations and put each system in a standby condition.

NOTE: Position of valves marked "*" may depend upon conditions of the system. If possible, set these as indicated. If not, shift supervisor should approve deviation.

Init. Date/Time

1. Put two sections of the main charcoal beds on stream. Shift supervisor should decide which two are to be used.

1.1 Open two of the following pairs of valves and close the other two pairs. Tag all eight valves and note their position.

(Vent House)

- V-620 and 624 _____
- V-621 and 625 _____
- V-622 and 626 _____
- V-623 and 627 _____

1.2 Set the following valves as shown:

- | | |
|--------------------------|-------------------------------|
| V-522A tag open _____ | V-518C2 tag closed _____ |
| V-522B tag open _____ | V-518C3 tag closed _____ |
| V-518A tag closed _____ | V-518D tag closed _____ |
| V-518G tag open _____ | V-518E tag closed _____ |
| V-518B1 tag closed _____ | V-518F tag closed _____ |
| V-518B2 tag closed _____ | V-557A tag closed _____ |
| V-518B3 tag closed _____ | V-557B tag open _____ |
| V-518C1 tag closed _____ | V-537 tag closed _____ |
| V-524B tag closed _____ | V-538A and B tag closed _____ |
| | V-566A and D tag closed _____ |

Approved by



5B-2
7/26/65

Init. Date/Time

2 Put the auxiliary charcoal bed on stream by setting hand valves as follows:

- V-561A Tag open _____
- V-571A Tag closed _____
- V-571B Tag closed _____
- V-562A Tag open _____
- V-562B Tag closed _____
- V-562C Tag open _____

3 Set up valves for the coolant system and oil systems as follows:

- V-560A Tag closed _____
- V-560B Tag open _____

(Service Tunnel)

- V-534A Tag open _____
- V-534B Tag open _____
- V-535A Tag open _____
- V-535B Tag open _____
- *V-513A Closed _____
- V-513B Tag open _____
- *V-510A Closed _____
- V-510B Tag open _____

NOTE: The setting of all evacuation valves in line 565 are covered in Section 4E.

4 Check to see that the offgas monitor RIA-557 and stack monitor RIA-S-1 are in service.

5 Set the fuel drain tank valving as follows:

(NESA)

- V-519A Closed _____
- *HCV-573 Closed _____

(Main Control Room)

- *HCV-575 closed _____
- *HCV-577 closed _____
- "HCV-544 closed _____

Approved by *P. V. Heyman*

5B-3
7/26/65
Init. Date/Time

5 (continued)

- *HCV 545 closed _____
- *HCV-546 closed _____
- *HCV-572 closed _____
- *HCV-574 closed _____
- *HCV-576 closed _____
- *HCV-533 closed _____

NOTE: V-572, 574, and 576 are opened on containment check list.

6 Set fuel system valves as follows:

- *FCV-516 closed _____
- PCV-522 closed _____

(Special Equipment Room)

- V-524A tag open _____
- V-500J tag open _____
- V-554 tag closed and cap line _____

(Transmitter Room)

- *V-592A closed _____ V-589B open _____
- V-592B open _____ V-599A closed _____
- *V-593A closed _____ V-599B open _____
- V-593B open _____ V-600A closed _____
- *V-596A closed _____ V-600B open _____
- V-596B open _____ V-501 tag open _____
- V-589A closed _____

NOTE: V-516, V-592C, 593C, 596C, 589C, 599C, 600C, and 519B are opened on containment check list.

V-523 is in the reactor cell and should be opened before cell is sealed.

7 Set coolant system valves as follows:

- *V-594A closed _____
- V-594B open _____
- *V-595A closed _____
- V-595B open _____
- *V-598A closed _____
- V-598B open _____

Approved by *P. K. Gungman*

5B-4
7/26/65

7 (continued)

Init. Date/Time

(Coolant Cell)

- V-594C tag open _____
- V-595C tag open _____
- V-598C tag open _____
- V-512 tag open _____
- V-511A tag open _____
- V-511B tag open _____

(Main Control Room)

- *HCV-511A closed _____
- *FCV-512 closed _____
- *HCV-527 closed _____
- *HCV-536 closed _____
- *HCV-547 closed _____

8 Valves to fuel sampler enricher should be set as follows:

(High Bay)

- V-509 tag open _____ V-650 closed _____
- *V-672 closed _____ V-645 closed _____
- *V-664 closed _____ V-646 closed _____
- *V-666 closed _____ V-655 open _____
- V-671 closed _____ V-668 open _____
- *V-657 closed _____ V-670 open _____
- *V-683 closed _____ V-669 open _____
- V-644 closed _____

9 Set valves to coolant system sampler as follows:

- V-515 open and tagged _____
- VC-650 closed _____
- VC-651 closed _____
- VC-670 closed _____
- _____
- _____
- _____
- _____

Approved by B. W. Symon

5B-5
7/26/65

Init. Date/Time

10 Set chemical processing valves as follows:

- V-530 open _____
- PCV-530 set at 20 psig _____
- *V-611 closed _____
- *V-607A closed _____
- *V-607C closed _____
- *V-608A closed _____
- *V-610A closed _____
- V-603A closed _____

(Main Control Room)

- HCV-530 closed _____
- *HCV-692 closed _____

11 Valves in supply to leak-detector system are set as follows:

(Diesel House)

- V-514A tag open _____

(Transmitter Room)

- V-514B tag open _____
- *V-514C closed _____
- PCV-514 set at 100 psig _____

12 Connect helium trailer to line 500.¹

Open all valves on trailer. _____

13 Set valves in helium supply headers as follows:

- V-FHS open _____
- V-500A open _____
- V-500D open _____
- V-500E tag open _____
- *V-500F closed _____
- *V-597A closed _____
- V-597B tag closed _____
- *V-549 open _____
- *V-605A closed _____
- V-500 N-1 closed _____

¹Helium Trailer license number - USN 120761

Approved by *P. K. Guyman*

5B-6
7/26/65

Init. Date/Time

- 13 (continued)
 - V-500 N-2 closed _____
 - V-500 N-3 closed _____
- 14 Check to see that helium dryer and oxygen removal unit No. 2 are ready to operate but valved off and in standby.
 - V-500B open _____
 - V-504 tag closed _____
 - V-503A tag open _____
 - V-503B tag closed _____
 - V-503C tag closed _____
 - TIC-DR2-1 set at zero _____
 - TIC-PH2-1 set at 800°F _____
 - TIC-O₂R2-1 set at 800°F _____
- 15 Put helium dryer and oxygen removal unit No. 1 in service.
 - 15.1 Set valves as follows:
 - V-500C tag closed _____
 - V-500D tag open _____
 - V-505A tag closed _____
 - V-505B closed _____
 - 15.2 Set heater controllers as follows:
 - TIC-DR1-1 set at zero _____
 - TIC-PH1-1 set at 800°F _____
 - TIC-O₂R1-1 set at 1200°F _____
 - 15.3 Periodically open V-549 to vent pressure.
- 16 Check to see that all emergency cylinders are connected to headers and headers are above 1500 psig.
Tag closed V-502A and V-502B.
- 17 Check to see that the pressure in the normal helium supply header is above 500 psig and is in service (PI-500F).

Approved by *R. H. Hymon*

5B-7
7/26/65

	<u>Init.</u>	<u>Date/Time</u>
18 Set PCV-500G at 250 psig (PI-500H).	_____	_____
19 Set FIC-500 at 0.35 cfm. This will limit the helium flow to the capacity of the dryer and O ₂ removal units.	_____	_____
20 Continue to purge through line 549 until the moisture content is less than 1 ppm O ₂ and 6 ppm H ₂ O. Set flow to oxygen and H ₂ O analyzers at 100 cc/min.	_____	_____
21 When the No. 1 dryer and O ₂ removal units are functioning satisfactorily, set up remaining valves as follows: V-597A tag open _____ V-605A open _____ V-605B open _____ V-500F closed _____ V-500H tag open _____	_____	_____
22 Set PCV-605 at 35 psig.	_____	_____
23 If PCV-605 does not function properly, have it repaired and recheck operation.	_____	_____
24 When PCV-605 does function properly, set valves as follows: V-605A tag closed _____ V-605B tag closed _____ V-500F tag open _____ V-500G tag open _____	_____	_____
25 Set PCV-500C at 35 psig.	_____	_____
26 Check to see that RIA-500D is in service.	_____	_____



Approved by J. H. Hymon

5C-1
9/7/65

5C HEATUP OF DRAIN TANK SYSTEM

This section covers the heatup of FD-1, FD-2, FFT, and associated lines. In general, whenever a tank is heated, the lines will be heated and kept hot from this drain tank to the first freeze valves. From this point the lines can be heated or cooled depending on the operation in progress. Heatup of lines necessary for salt addition will be covered in 5D; heatup of the fuel and coolant systems and the fill lines will be covered in 5F, and heatup of the transfer lines and fuel storage tank will be covered in 11A.

In this procedure, the details of the heatup of each tank are listed separately; however, all can be heated simultaneously if desired. When possible the TE's on lines and vessels which are being heated should be monitored continuously. Equipment previously heated should be monitored at least twice per shift to prevent overheating or freezing.

In normal operation FD-1, FD-2, FFT and CDT will be maintained at 1100 to 1200°F. The FST may be cooled if desired. The transfer freeze valves and other pockets of salt located in a high gamma field shall be maintained at 400°F to 600°F to prevent the excessive evolution of fluorine. The empty lines may be cooled to ambient temperature.

It is assumed that the tanks and lines being heated may contain salt. To prevent rupture due to the expansion of the salt as it is heated, the tank will be heated first followed by the section of pipe next to the tank and continued in this order until the line is heated to the freeze valve. The maximum permissible heatup or cooldown rate is 100°F per hour.

1 HEATUP OF FD-1 AND ADJACENT LINES

This section covers the heatup of FD-1, line 106 to FV-106, and line 109 from FD-1 to the surge pot nearest FD-1.

	<u>Init.</u>	<u>Date/Time</u>
1.1 Check that the following FV's are switched to freeze and that temperatures indicate that they are frozen.		
FV-104 ___	FV-107 ___	FV-110 ___
FV-105 ___	FV-108 ___	FV-111 ___
FV-106 ___	FV-109 ___	_____

Approved by *A. J. Gwynne*

5C-2
9/7/65

Init. Date/Time

- 1.2 Unplug the thermocouples listed in Table 5C-1 and plug them into the special recorders so the heatup may be closely followed. Finish filling out Table 5C-1. Swing link the scanner "C" points which are removed and plug different thermocouples into the recorders in place of the ones put on the special recorders. Keep the thermocouple tabulations up to date. _____
- 1.3 Close the following valves.
HCV-544 _____ HCV-572 _____
Depending upon operation, it is possible that jumpers may be needed in circuits 20 and 21 in order to close HCV-544. Approval to insert jumpers _____.
- 1.4 As the tank heats up, keep a careful watch on PR-572B to prevent overpressurizing the tank. Periodically vent through HCV-573 when necessary to keep the pressure between 3 and 7 psig. _____
- 1.5 If they are not on, push the "start" button on the following induction regulator blowers.
G5BB-2 _____ TLB-1 _____
- 1.6 If FD-1 is already hot, start heating up lines 106 and 109 by turning on H-106-1 and H-109-1 to give a heatup rate of 100°F/hr on TE-106-1 and TE-109-1 then skip to step 1.8. If the tank is cold, turn on heaters FD1-1 and FD1-2 to 75% of their 1200°F current setting (amperage) and continue with step 1.7. _____
- 1.7 The tank temperature should be followed primarily by watching the points listed in Table 5C-1. Additional tank temperatures are indicated on scanner "C". When the tank

Approved by *J. V. Heyman*

5C-3
9/7/65

Init. Date/Time

1.7 (continued)

temperature is approximately 400°F, turn on H-106-1 and H-109-1 to 50% of their 1200°F current setting. After they are turned on, make any adjustment necessary to keep the pipes under these heaters lagging the tank by ~ 200°F until the thawing temperature is exceeded (850°F). H-FDL-1 and H-FDL-2 should be increased to their 1200°F setting when the tank gets to 600°F or whenever the heat-up rate starts leveling off.

1.8 When TE-106-1 reaches 400°F, start filling out Table 5C-4 and turn on heater H-106-2. Keep TE-106-2 about 200°F less than TE-106-1. Also set H-FDL-1 and H-FDL-2 to their 1200°F settings.

1.9 When TE-109-1 reaches 400°F, turn on heaters H-109-2 and H-109-3. Due to the heater arrangement on line 109, it will be impossible to heat it up in a step-wise manner. Keep all of the thermocouples under heaters H-109-2 and H-109-3 as close together as possible and lagging TE-109-1 about 200°F.

1.10 Continue the procedure of turning on successive heaters on line 106 out to the freeze valve. The last heater turned on should be H-FV-106-3. Keep the temperature under each successive heater about 200°F lower than the adjacent heater to it on the tank side until 850°F is exceeded.

1.11 Level the temperatures out between 1100°F and 1200°F.

Approved by B. H. Johnson

5C-4
9/7/65

Init. Date/Time

1.12 After the lines are heated, place the thermocouples listed in Table 5C-1 back on their normal readouts. Keep the thermocouple logs up to date.

1.13 If jumpers were inserted in step 1.3, remove them.

2 HEATUP OF FD-2 AND ADJACENT LINES

This section covers the heatup of FD-2, line 105 to FV-105, and line 108 from FD-2 to the surge pot nearest FD-2.

2.1 Check that the following FV's are switched to freeze and that temperatures indicate that they are frozen.

- FV-104 _____ FV-108 _____
- FV-105 _____ FV-109 _____
- FV-106 _____ FV-110 _____
- FV-107 _____ FV-111 _____

2.2 Unplug the thermocouples listed in Table 5C-2 and plug them into the special recorders so the heatup may be closely followed. Finish filling out Table 5C-2. Swing link the scanner "C" points which are removed and plug different thermocouples into the recorders in place of the ones put on the special recorders. Keep the thermocouple tabulations up to date.

2.3 Close the following valves.

- HCV-545 _____ HCV-574 _____

Depending upon operation, it is possible that jumpers may be needed in circuits 20 and 21 in order to open HCV-545. Approval to insert jumpers _____.

Approved by B. N. Guyman

5C-5
9/7/65

Init. Date/Time

- 2.4 As the tank heats up, keep a careful watch on PR-574B to prevent overpressurizing the tank. Periodically vent through HCV-575 when necessary to keep the pressure between 3 and 7 psig. _____
- 2.5 If not already on, push the "start" button on following induction regulator blowers.
G5BB-2 _____ TLB-1 _____
- 2.6 If FD-2 is already hot, start heating up lines 105 and 108 by turning on H-105-1 and H-108-1 to give a heat-up rate of 100°F/hr on TE-105-1 and TE-108-1 then skip to step 2.8. If the tank is cold, turn on heaters FD2-1 and FD2-2 to 75% of their 1200°F current setting (amperage) and continue with step 2.7. _____
- 2.7 The tank temperature should be followed primarily by watching the points listed in Table 5C-2. Additional tank temperatures are indicated on scanner "C". When the tank temperature is approximately 400°F, turn on H-105-1 and H-108-1 to 50% of their 1200°F current setting. After they are turned on, make any adjustment necessary to keep the pipes under these heaters lagging the tank by ~ 200°F until the thawing temperature is exceeded (850°F). H-FD2-1 and H-FD2-2 should be increased to their 1200°F setting when the tank gets to 600°F or when the heat-up rate starts leveling off. _____
- 2.8 When TE-105-1 reaches 400°F, start filling out Table 5C-5 and turn on heater H-105-2. Keep TE-105-2 about 200°F less than TE-105-1. Also set H-FD2-1 and H-FD2-2 to their 1200°F settings. _____

Approved by *[Signature]*

5C-6
9/7/65

Init. Date/Time

2.9 When TE-108-1 reaches 400°F, turn on heaters H-108-2 and H-108-3. Due to the heater arrangement on line 108, it will be impossible to heat it up in a stepwise manner. Keep all of the thermocouples under heaters H-108-2 and H-108-3 as close together as possible and lagging TE-108-1 about 200°F.

2.10 Continue the procedure of turning on successive heaters on line 105 out to the freeze valve. The last heater turned on should be H-FV-105-3. Keep the temperature under each successive heater about 200°F lower than the adjacent heater to it on the tank side until 850°F is exceeded.

2.11 Level all temperatures out between 1100°F and 1200°F.

2.12 After the lines are heated, place the thermocouples listed in Table 5C-2 back on their normal readouts. Keep the thermocouple logs up to date.

2.13 If jumpers were inserted in step 2.3, remove them.

3 HEATUP OF FFT AND ADJACENT LINES

This section covers the heatup of FFT, line 104 to FV-104, and line 107 from FFT to the surge pot nearest FFT.

3.1 Check that the following FV's are switched to freeze and that temperatures indicate that they are frozen.

- | | |
|--------------|--------------|
| FV-104 _____ | FV-108 _____ |
| FV-105 _____ | FV-109 _____ |
| FV-106 _____ | FV-110 _____ |
| FV-107 _____ | FV-111 _____ |

Approved by B. W. Haysman

5C-8
9/7/65

Init. Date/Time

- 3.7 (continued)
temperature is approximately 400°F, turn on H-106-1 and H-109-1 to 50% of their 1200°F current setting. After they are turned on, make any adjustment necessary to keep the pipes under these heaters lagging the tank by ~ 200°F until the thawing temperature is exceeded (850°F). H-FFT-1 and H-FFT-2 should be increased to their 1200°F settings when the tank gets to 600°F or when the heatup rate starts leveling off. _____
- 3.8 When TE-104-1 reaches 400°F, start filling out Table 5C-6 and turn on heater H-104-2. Keep TE-104-2 about 200°F less than TE-104-1. Also set H-FFT-1 and H-FFT-2 to their 1200°F settings if the tank is not already hot. _____
- 3.9 When TE-107-1 reaches 400°F, turn on heaters H-107-2 and H-107-3. Due to the heater arrangement on line 107, it will be impossible to heat it up in a stepwise manner. Keep all of the thermocouples under heaters H-107-2 and H-107-3 as close together as possible and lagging TE-107-1 about 200°F. _____
- 3.10 Continue the procedure of turning on successive heaters on line 107 out to the freeze valve. The last heater turned on should be H-FV-107-3. Keep the temperature under each successive heater about 200°F lower than the adjacent heater to it on the tank side until 850°F is exceeded. _____
- 3.11 Level off all temperatures between 1100°F and 1200°F. _____

Approved by *P. H. G. M. M. M.*

5C-9
9/7/65

Init. Date/Time

3.12 After the lines are heated, place the thermocouples listed in Table 5C-3 back on their normal readouts. Keep the thermocouple logs up to date.

3.13 If jumpers were inserted in step 3.3, remove them.

4 HEATUP OF CDT

This section covers the heatup of CDT and line 204 to the shoulders of FV-204 and FV-206.

4.1 Check that freeze valves 204 and 206 are switched to freeze and that temperatures indicate that they are frozen.

4.2 Unplug the thermocouples listed in Table 5C-7 and plug them into a special recorder so the heatup may be closely followed. Finish filling out Table 5C-7. Swing link the scanner "C" points which are removed. Keep both thermocouple logs up to date.

4.3 Close the following valves.

HCV-511 _____ HCV-547 _____

Depending upon operation, it is possible that jumpers may be needed in circuits 140 and 141 in order to close HCV-547. Approval to insert jumpers _____.

4.4 As the tank heats up, keep a careful watch on PR-511D to prevent overpressurizing the tank. Periodically vent through HCV-527 when necessary to keep the pressure between 3 and 7 psig.

4.5 If the CDT is already hot, start heating up line 204 by turning on H-204-2 to give a heat-up rate of ~ 100°F/hr on TE-204-8A and TE-204-B7A then skip to step 4.7. If the tank

Approved by PH Guymon

5C-10
9/7/65

Init. Date/Time

- 4.5 (continued)
is cold and empty, turn on heaters CDT-1, 2, and 3 to 75% of their 1200°F current setting and continue with step 4.6. _____
- 4.6 The tank heat-up may be followed by watching the points listed in Table 5C-7. Additional tank temperatures may be observed on scanner "C". When the tank temperature is approximately 400°F, turn on H-204-2. Keep the line temperature less than the tank temperature. _____
- 4.7 When the temperature under heater 204-2 reaches ~ 400°F, turn on heater FV-204-3. Keep the temperature of the freeze valve pot about 200°F less than the temperatures under H-204-2 until the pot exceeds 850°F. _____
- 4.8 The coolant drain tank heaters should be set to their 1200°F settings when the coolant drain tank heat-up rate begins to level off. _____
- 4.9 Turn on H-FV-204-2 when TE-FV-204-5B reaches 400°F. Keep TE-FV-204-5B at least 200°F above TE-206-7 until TE-206-7 exceeds 850°F. _____
- 4.10 Make adjustments necessary to level the temperatures out at 1200°F. However, do not exceed the 1200°F setting on H-FV-204-2. Since this heater is next to a section of frozen salt, it may not reach 1200°F until the freeze valve heaters are turned on. _____
- 4.11 If jumpers were inserted in step 4.3, remove them. _____
- 4.12 After the tank and lines are heated, place the thermocouples listed in Table 5C-7 back to their normal readout. Keep the thermocouple logs up to date. _____

Approved by *P. W. Jayman*

5C-11
9/7/65

TABLE 5C-1
HEATUP OF FD-1, LINE 106 to FV-106
and
LINE 109 to FV-109

TE No.	Heater No.	NORMAL READOUT		TEMPORARY READOUT	
		Readout	Pt.	Recorder	Point
FD1-1B	FD1-2	Scanner "C"	1		
FD1-3B	FD1-1	"	14		
FD1-5	FD1-1	"	13		
FD1-6	FD1-2	"	3		
FD1-9	FD1-2	"	6		
FD1-18B	FD1-1 & FD1-2	None	None		
106-1	106-1	Scanner "C"	15		
106-2	106-2	"	16		
106-3	106-3	"	17		
106-4	FV-106-3	"	18		
FV-106-5B	FV-106-3	TR-3300	24		
109-1	109-1	Scanner "C"	20		
109-2	109-2	"	21		
109-3	109-2	"	22		
109-4	109-3	"	23		
109-FL	109-3	"	24		
109-5	109-3	"	25		
109-6	109-2	"	26		

Approved by *B. J. Grayman*

5C-12
9/7/65

TABLE 5C-2
HEATUP OF FD-2, LINE 105 TO FV-105
and
LINE 108 to FV-108

TE No.	Heater No.	NORMAL READOUT		TEMPORARY READOUT	
		Readout	Pt.	Recorder	Point
FD2-3B	FD2-1	Scanner "C"	42		
FD2-5	FD2-1	"	41		
FD2-6	FD2-2	"	31		
FD2-9	FD2-2	"	34		
FD2-18B	FD2-1 & FD2-2	None	None		
105-1	105-1	Scanner "C"	43		
105-2	105-2	"	44		
105-3	105-3	"	45		
105-4	105-4	"	46		
105-5	FV-105-3	"	47		
FV-105-5B	FV-105-3	TR-3300	23		
108-1	108-1	Scanner "C"	48		
108-2	108-2	"	49		
108-3	108-2	"	50		
108-4	108-3	"	51		
108-FL	108-3	"	52		
108-5	108-3	"	53		
108-6	108-2	"	54		

Approved by *B. H. Johnson*

5C-13
9/7/65

TABLE 5C-3
HEATUP OF FFT, LINE 104 to FV-104
and
LINE 107 to FV-107

TE No.	Heater No.	NORMAL READOUT		TEMPORARY READOUT	
		Readout	Pt.	Recorder	Point
FFT-2B	FFT-1	Scanner "C"	65		
FFT-4	FFT-1	"	64		
FFT-6	FFT-2	"	59		
FFT-9	FFT-2	"	60		
FFT-11	FFT-1	"	62		
104-1	104-1	"	66		
104-2	104-2	"	67		
104-3	104-3	"	68		
104-A4	104-4	"	69		
104-B4	FV-104-3	"	70		
FV-104-5B	FV-104-3	TR-3300	22		
107-1	107-1	Scanner "C"	74		
107-2	107-2	"	75		
107-3	107-3	"	76		
107-FL	107-3	"	77		
107-4	107-3	"	78		
107-5	107-2	"	79		

Approved by *[Signature]*

5C-14
9/7/65

TABLE 5C-4

RECORD THE FOLLOWING THERMOCOUPLES TEMPERATURES
WHEN TE-106-1 IS AT THESE TEMPERATURES

TE-106-1	400°F	600°F	800°F	1000°F	1200°F
TE-106-2					
TE-106-3					
TE-106-4					
TE-FV-106-5B					

TABLE 5C-5

RECORD THE FOLLOWING THERMOCOUPLE
TEMPERATURES WHEN TE-105-1 IS AT THE INDICATED TEMPERATURES

TE-105-1	400°F	600°F	800°F	1000°F	1200°F
TE-105-2					
TE-105-3					
TE-105-4					
TE-105-5					
TE-FV-105-5B					

TABLE 5C-6

RECORD THE FOLLOWING THERMOCOUPLE TEMPERATURES
WHEN TE-104-1 IS AT THE INDICATED TEMPERATURES

TE-104-1	400°F	600°F	800°F	1000°F	1200°F
TE-104-2					
TE-104-3					
TE-104-A4					
TE-104-B4					
TE-FV-104-5B					

Approved by *R. A. Simpson*

5C-15
9/7/65

TABLE 5C-7
HEATUP OF CDT AND LINE 204 to FV-204 and 206

TE No.	Heater No.	NORMAL READOUT		TEMPORARY READOUT	
		Readout	Pt.	Recorder	Point
CDT-1B	204-2	Scanner "C"	91		
CDT-4	CDT-1, 3	"	89		
CDT-5B	CDT-3	None	None		
CDT-6	CDT-2	Scanner "C"	86		
CDT-2B	CDT-1	"	85		
204-8A	204-2	"	92		
204-B7A	204-2	"	93		
204-A7A	FV-204-3	"	94		
FV-204-5B	FV-204-3	"	95		
206-7	FV-204-2	"	96		



Approved by R.H. Langman

5D-1
7/29/65

5D ADDITION OF FUEL, FLUSH AND COOLANT SALT
TO THE DRAIN TANKS

NOTE: If no salt is to be added, section 5D can be omitted.

Fuel, flush, and coolant salt will be prepared by the Reactor Chemistry Division and will be stored as a solid under a helium blanket until it is charged to the system. Nonuranium salt will be handled in cans holding 250 to 300 lb each. Uranium will be charged as the UF_4 - LiF_4 eutectic (27 mole % UF_4) from smaller cans containing 30 to 50 lb.

Two portable furnaces and control units furnished by the Reactor Chemistry Division will be used for heating the salt. Each can will be weighed, heated, pressurized to the system, cooled and reweighed.

Fuel or flush salt can be charged directly to the fuel drain tanks, fuel flush tank, or to the fuel storage tank from the charging station in the high bay. Charging after criticality will be done via the fuel storage tank to provide an additional freeze valve between the reactor and the charging station. The charging line will be blanked off at the 852-ft elevation when not in use. To minimize intermixing of different salts, lines to all other tanks will be prefilled before addition and will be emptied afterward. Special instructions will be issued when needed.

Coolant salt will be charged directly to the coolant drain tank from the coolant salt charging station, located above the special equipment room. The same furnaces and control units used for charging fuel will be used for the coolant salt. The charge line will be blanked off at the coolant drain tank when not in use.

Details of both charging operations follow.

Fuel and Flush Salt Charging (Fig. 5D-1)


(Note: This procedure assumes that the freeze valves have been filled with salt and oxygen has been purged from the system.)

- | | <u>Init.</u> | <u>Date and Time</u> |
|---|--------------|----------------------|
| 1.1 Set up two portable furnaces and control units at the fuel-charging station. | _____ | _____ |
| 1.2 Check that receiving tanks, transfer lines, salt addition lines and purge line 610, are heated above 1000°F (Section 5C, 11A1 and 11A15). | _____ | _____ |
| 1.3 Prefill salt lines as required. (Special instructions will be issued.) | _____ | _____ |
| 1.4 Place a weighed salt can in each furnace. Check that all openings on the can are plugged when received. | _____ | _____ |
| 1.5 Connect helium jumpers between the control unit (A1 and A2) and a vent connection on the top of | _____ | _____ |

Approved by *[Signature]*

5D-2
7/29/65

FIG. 5D-1 SALT ADDITION STATION

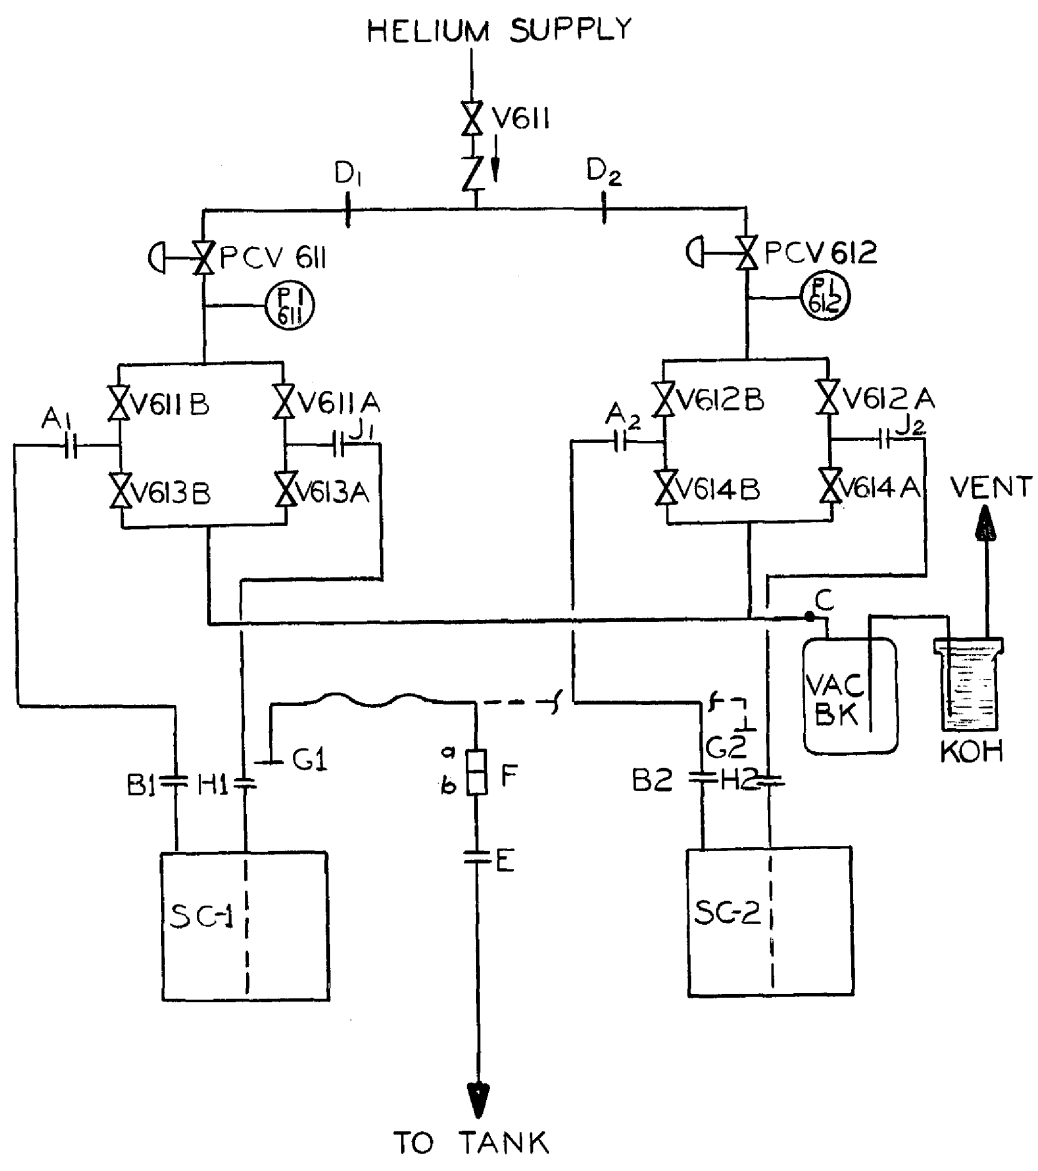

Approved by *[Signature]*

5D-3
7/29/63

- | | <u>Init.</u> | <u>Date and Time</u> |
|---|--------------|----------------------|
| each can (B1 and B2). These jumpers should contain an electric insulating section so that the salt can is not grounded through control units | _____ | _____ |
| 1.6 Connect a KOH bubbler and a back siphon relief trap to the control unit as shown at C. | _____ | _____ |
| 1.7 Close HV 611A, 611B, 613A, 612A, 612B and 614A. | _____ | _____ |
| 1.8 Open HV 613B and 614B. | _____ | _____ |
| 1.9 Connect helium supply to control unit at D1 and D2. | _____ | _____ |
| 1.10 Open V 611 and set PCV 611 and 612 at 8 psig. | _____ | _____ |
| 1.11 Set furnace temperature controllers at 1300°F, and heat up the salt. (Temperature controllers and thermocouples are integral parts of the charging unit.) | _____ | _____ |
| 1.12 Attach a 4-in. dia. flexible hose to V 978 in the absorber cubicle for use as a portable vent. Turn on the adsorber blower at the fuel processing control panel. Always have the suction of this hose near any salt containing lines which are open. | _____ | _____ |
| 1.13 Check that FV 111 is frozen. | _____ | _____ |
| 1.14 Set PCV 604 at 2 psig and open V 610A and 610B.
Flow should be stopped by FV 111 | _____ | _____ |
| GAS MASKS ARE REQUIRED FOR MOST OF THE FOLLOWING OPERATIONS. | | |
| BERYLLIUM SAMPLER SHOULD BE IN OPERATION. | | |
| 1.15 Remove the blank from line 111 and install weighed adapter flange at E. | _____ | _____ |
| 1.16 Install weighed salt addition jumper at F. | _____ | _____ |
| 1.17 Purge jumper, thru L610 and then cap line at G1. | _____ | _____ |
| 1.18 Attach resistance heater lugs to heat salt addition jumper. Ground connection should be at F. | _____ | _____ |
| 1.19 Install purge jumper at J1, crack open V 611A and purge air from line and then cap line at H ₁ . | _____ | _____ |
| 1.20 When salt can in furnace No. 1 is at 1000 to 1200°F, and can is at atmospheric pressure (PI SC1), remove blanks at H-1. | _____ | _____ |
| 1.21 Install weighed dip tube to bottom of can and attach to purge jumper at H-1. | _____ | _____ |

Approved by A. W. Gaymon

SD-4
7/29/63

	<u>Init.</u>	<u>Date and Time</u>
1.22 Open V 611A and bubble helium through the salt in Can No. 1 for approximately 5 min at a rapid rate as indicated by the KOH bubbler. This mixes the salt and assures that it is completely melted.	_____	_____
1.23 Close V 611A.	_____	_____
1.24 Check that pressure in selected receiver tank is equal to or less than atmospheric.	_____	_____
1.25 Record drain tank inventory (FD-1, FD-2, FFT, and FST).	_____	_____
1.26 At G-1; remove cap from salt addition jumper (purge will be provided by line 610), remove control unit purge line, J1 to H1, and attach dip tube to salt addition jumper (H1 to G1).	_____	_____
1.27 Using resistance heater, heat salt addition jumper to cherry red.	_____	_____
1.28 Thaw FV 111 and FV to selected receiver tank.	_____	_____
1.29 Open vent valve on selected receiver tank.	_____	_____
1.30 Close V 613B and open V 611B to transfer salt in furnace No. 1.	_____	_____
1.31 When transfer is complete as indicated by PI SC1 and receiver tank weight, close V 611B. NOTE: Record weight indication when probe light level indicator or receiver tank comes on.	_____	_____
1.32 Turn off heat to salt addition jumper.	_____	_____
1.33 When receiver tank pressure is equal to or is less than atmospheric, open V 613B.	_____	_____
1.34 When PI SC1 is at approximately atmospheric pressure, close V 613B and disconnect vent at B-1.	_____	_____
1.35 Disconnect salt addition line at G-1 and plug ends at G1, F _a and F _b .	_____	_____
1.36 Remove salt can from furnace No. 1. Reweigh when cool. If dip tube is removed before weighing, be sure to note this and record its weight also.	_____	_____
1.37 Place a new weighed salt can in furnace No. 1 and connect to vent line at B-1.	_____	_____
1.38 Open V 613B.	_____	_____

Approved by W. J. [Signature]

5D-5
7/29/65

	<u>Init.</u>	<u>Date and Time</u>
1.39 Connect purge jumper at J2 and crack open V 612A to purge line.	_____	_____
1.40 When salt can in furnace No. 2 is at 1000 to 1200°F and can is at atmospheric pressure (PI SC2), remove blank at H-2.	_____	_____
1.41 Install weighed dip tube to bottom of can and attach to purge line at H-2.	_____	_____
1.42 Open V 612A and bubble helium through the salt in can No. 2 for approximately 5 min at a rapid rate as indicated by the KOH bubbler. This mixes the salt and assures that it is completely melted.	_____	_____
1.43 Close V 612A.	_____	_____
1.44 Check that pressure in selected receiver tank is less than atmospheric.	_____	_____
1.45 Record drain tank inventory (FD-1, FD-2, FFT, and FST). (Check List 12B5)	_____	_____
1.46 At G-1, remove cap from salt addition jumper and remove control unit purge line. Attach dip tube to salt addition jumper (G-2 to H-2).	_____	_____
1.47 Using resistance heater, heat salt addition jumper to cherry red.	_____	_____
1.48 Close V 614B and open V 612B to transfer salt can in furnace No. 2.	_____	_____
1.49 When transfer is complete as indicated by PI SC2 and receiver tank weight, close V 612B.	_____	_____
NOTE: Record weight indication when probe light level indicator changes.		
1.50 Turn off heat to salt addition jumper.	_____	_____
1.51 When receiver tank pressure is equal to or less than atmospheric, open V 614B.	_____	_____
1.52 When PI SC2 is at atmospheric pressure, close V 614B and disconnect vent at B-2.	_____	_____
1.53 Disconnect salt addition line at G-2 and plug ends (G and F _a F _b).	_____	_____
1.54 Remove salt can from furnace No. 2. Reweigh when cool. If dip tube is removed before reweighing, be sure to note this and record its weight also.	_____	_____
1.55 Place a new weighed salt can in furnace No. 2 and connect to vent line at B-2.	_____	_____

Approved by [Signature]

5D-6
7/29/65

	<u>Init.</u>	<u>Date and Time</u>
1.56 Open V 614B.	_____	_____
1.57 Repeat <u>Step 1.10</u> to <u>Step 1.56</u> until all salt has been added.	_____	_____
1.58 After last salt has been added, turn off heat to furnace and salt addition line.	_____	_____
1.59 Remove salt addition line at G-1 (or G-2) and F, and reweigh.	_____	_____
1.60 Cap line 111 at F or E.	_____	_____
1.61 Turn off V 610A and B.	_____	_____
1.62 Flush the salt addition line. (A special procedure will be issued.)	_____	_____
1.63 Turn off helium supply to charging unit and disconnect unit.	_____	_____
1.64 Have area smeared for beryllium contamination.	_____	_____
1.65 Blow out transfer lines per Section 5G.	_____	_____

Coolant Salt Charging (Fig. 5D-1)

(Note: This procedure assumes that the freeze valves have been filled with salt and oxygen has been purged from the system.)

	<u>Init.</u>	<u>Date and Time</u>
2.1 Set up two portable furnaces and control units at the fuel-charging station.	_____	_____
2.2 Check that salt addition lines, purge line 630, and coolant drain tank are connected and heated above 1000°F (Section 5C and 11A17).	_____	_____
2.3 Place a weighed salt can in each furnace. Check that all openings on the can are plugged when received.	_____	_____
2.4 Connect jumpers between the control unit (A1 and A2) and a vent connection on the top of each can (B1 and B2). These jumpers should contain an electric insulating section so that the salt can is not grounded.	_____	_____
2.5 Connect a KOH bubbler and a back siphon relief trap to the control unit as shown at C1.	_____	_____
2.6 Close HV 611A, 611B, 613A, 612A, 612B and 614A.	_____	_____
2.7 Open HV 613B and 614B.	_____	_____
2.8 Connect cylinder helium supply to control unit at D1, D2, and D3.	_____	_____
2.9 Open V 615 and set PCV 611 and 612 at 8 psig.	_____	_____

Approved by B. W. Johnson

5D-7
7/29/65

	<u>Init.</u>	<u>Date and Time</u>
2.10 Set furnace temperature controllers at 1300°F, and heat up the salt. (Temperature controllers and thermocouples are integral parts of the charging unit.)	_____	_____
2.11 Attach a 4-in. flexible hose to L934 outside building for use as a portable vent. Always have the suction of this hose near any salt containing lines which are open.	_____	_____
2.12 Check that FV204 and 206 are frozen.	_____	_____
2.13 Check B 60. Flow should be stopped by FV 111.	_____	_____
GAS MASKS ARE REQUIRED FOR MOST OF THE FOLLOWING OPERATIONS. BERYLLIUM SAMPLER SHOULD BE IN OPERATION.		
2.14 Remove the blank from line 203 and install weighed adapter flange at E.	_____	_____
2.15 Install weighed salt addition jumper at F.	_____	_____
2.16 Purge jumper thru L 630 and cap jumper line at G1.	_____	_____
2.17 Open vent valve on selected receiver tank.	_____	_____
2.18 Attach resistance heater lugs to heat salt addition jumper. Ground connections should be at F.	_____	_____
2.19 Install purge jumper at J-1, crack open V 611A and purge air from line and then cap line at H ₁ .	_____	_____
2.20 When salt can in furnace No. 1 is at 1000 to 1200°F, and can is at atmospheric pressure (PI SC1), remove blanks at H-1.	_____	_____
2.21 Install weighed dip tube to bottom of can and attach to purge jumper at H-1.	_____	_____
2.22 Open V 611A and bubble helium through the salt in Can No. 1 for approximately 5 min at a rapid rate as indicated by the KOH bubbler. This mixes the salt and assures that it is completely melted.	_____	_____
2.23 Close V 611A.	_____	_____
2.24 Check that pressure in selected receiver tank is equal to or less than atmospheric.	_____	_____
2.25 Record CDT inventory.	_____	_____
2.26 At G-1; remove cap from salt addition jumper (purge will be provided by line 610), remove control unit purge line, J1 to H1, and attach dip tube to salt addition jumper (H1 to G1).	_____	_____

Approved by A. H. Johnson

5D-8
7/29/65

	<u>Init.</u>	<u>Date and Time</u>
2.27 Using resistance heater, heat salt addition jumper to cherry red.	_____	_____
2.28 Close V 613B and open B 611B to transfer salt in furnace No. 1.	_____	_____
2.29 When transfer is complete as indicated by PI SC1 and receiver tank weight, close V 611B. NOTE: Record weight indication when probe light level indicator CDT comes on.	_____	_____
2.30 Turn off heat to salt addition jumper.	_____	_____
2.31 When receiver tank pressure is equal to or less than atmospheric, open V 613B.	_____	_____
2.32 When PI SC1 is at approximately atmospheric pressure, close V 613B and disconnect vent at B-1.	_____	_____
2.33 Disconnect salt addition line at G-1 and plug ends at G ₁ , F _a and F _b .	_____	_____
2.34 Remove salt can from furnace No. 1. Reweigh when cool. If dip tube is removed before reweighing, be sure to note this and record its weight also.	_____	_____
2.35 Place a new weighed salt can in furnace No. 1 and connect to vent line at B-1.	_____	_____
2.36 Open V 613B.	_____	_____
2.37 Connect purge jumper at J-2 and crack open V 612A to purge line. When salt can in furnace No. 2 is at 1000 to 1200°F and can is at atmospheric pressure (PI SC2), remove blank at H-2.	_____	_____
2.38 Install weighed dip tube to bottom of can and attach to purge line at H-1.	_____	_____
2.39 Open V 612A and bubble helium through the salt in can No. 2 for approximately 5 min at a rapid rate as indicated by the KOH bubbler. This mixes the salt and assures that it is completely melted.	_____	_____
2.40 Close V 612A.	_____	_____
2.41 Record CDT inventory.	_____	_____
2.42 At G-1, remove cap from salt addition jumper and remove control unit purge line. Attach dip tube to salt addition jumper (Check GW to HZ).	_____	_____
2.43 Using resistance heater, heat salt addition jumper to cherry red.	_____	_____

Approved by B. K. Hayman

5D-9
7/29/65

	<u>Init.</u>	<u>Date and Time</u>
2.44 Close V 614B and open V 612B to transfer salt can in furnace No. 2.	_____	_____
2.45 When transfer is complete as indicated by PI SC2 and receiver tank weight, close V 612B.	_____	_____
NOTE: Record weight indication when probe light level indicator changes.		
2.46 Turn off heat to salt addition jumper.	_____	_____
2.47 When receiver tank pressure is equal to or less than atmospheric, open V 614B.	_____	_____
2.48 When PI SC2 is at atmospheric pressure, close V 614B and disconnect vent at B-2.	_____	_____
2.49 Disconnect salt addition line at G-2 and plug ends (G and F _a F _b).	_____	_____
2.50 Remove salt can from furnace No. 2. Reweigh when cool. If dip tube is removed before reweighing, be sure to note this and record its weight also.	_____	_____
2.51 Place a new weighed salt can in furnace No. 2 and connect to vent line at B-2.	_____	_____
2.52 Open V 614B.	_____	_____
2.53 Repeat <u>Step 2.9 to Step 2.52</u> until all salt has been added.	_____	_____
2.54 After last salt has been added, turn off heat to furnace and salt addition line.	_____	_____
2.55 Remove salt addition line at G-1 (or G-2) and F, and reweigh.	_____	_____
2.56 Cap line 203 at F or E.	_____	_____
2.57 Turn off V 630.	_____	_____
2.58 Flush the salt addition line. (A special procedure will be issued.)	_____	_____
2.59 Turn off helium supply to charging unit and disconnect unit.	_____	_____
2.60 Have area smeared for beryllium contamination.	_____	_____
2.61 Turn off heaters on L 203 and CTD, Table 5C4 and tag off.	_____	_____
2.62 Disconnect L 203 from CDT and install blank flange on CDT. Blank off each end of L 203.	_____	_____
2.63 Leak check flange on CDT with portable LD unit.	_____	_____
2.64 Remove tag on CDT heaters Table 5C4 and turn heaters on.	_____	_____



Approved by P. W. Gayman

5E-1
9/16/65

5E STARTUP OF LUBE OIL SYSTEMS
for the
FUEL AND COOLANT CIRCULATING PUMPS

The lube oil systems must be in operation before the fuel and coolant pumps are started and/or heated. The pressure on the lube oil storage tank should be maintained at 2 to 8 psi above the pump pressures. Normally, FOP-2 and COP-2 will be in operation with FOP-1 and COP-1 in standby. The lube oil systems are considered to be closed systems, and therefore, have no block valves to isolate them from the cell. Therefore, no valve from the oil systems to the atmosphere should be opened while the reactor is in operation without written approval of the operation chief.

To start up the lube oil systems, oil is added to the supply tank, the tanks are purged and pressurized with helium, the valves are set, the pumps started and flows adjusted. It may be also necessary to drain the oil from the oil-catch tanks.

1 DETAILS FOR STARTUP OF LUBE OIL SYSTEMS

	<u>Init.</u>	<u>Date/Time</u>
(Auxiliary Control Room)		
1.1 Check both OCT levels:		
LI-524 ____%		
LI-526 ____%		
(Coolant Drain Tank Cell)		
1.2 Drain oil from OCT-1 and OCT-2 into WOR-1 or 2 until the level is 5 to 10%.		
(Auxiliary Control Room)		
1.3 Record LI-524 ____%, LI-526 ____%.		
1.4 Calculate and record in console log and on WOR-1, WOR-2 inventory cards the amount of oil drained from OCT-1 to WOR-1 ____ and from OCT-2 to WOR-2 ____.		
1.5 Drain oil from syphon pot into WOR-1 ____.		

Approved by P. H. Guyman

5E-2
9/16/65

Init. Date/Time

1.6 Calculate the amount of oil drained from syphon pot to WOR-1. Record this on syphon pot and WOR-1 inventory cards and in console log.

1.7 Isolate WOR-1 and 2 by tagging the following valves closed:

- V-720A _____, V-525A _____
- V-529 _____, V-720-2A _____
- V-720B _____, V-525B _____
- V-770 _____, V-720-2B _____.

(Service Tunnel)

1.8 Fill the oil supply tanks (OT-1 and OT-2) with Gulfspin-35 oil through V-711 and 761. Normal starting level as indicated by LI-OT-1-A3 and LI-OT-2-A3 is 55 to 60% if lines are full and 80 to 90% if lines are empty. Record the following:

- LI-OT-1-A3 before filling _____,
- LI-OT-2-A3 before filling _____,
- LI-OT-1-A3 after filling _____,
- LI-OT-2-A3 after filling _____,
- Oil added to OT-1 (measured) _____,
- Oil added to OT-2 (measured) _____.

NOTE: Do not allow air to get into the oil catch tanks.

1.9 Check that all flanges removed for maintenance are leaktight and all leak-detector lines are capped.

1.10 Remove cover from the oil filters, OF-1 and OF-2; turn handle three full turns, then replace cap.

- OF-1 _____,
- OF-2 _____.

Approved by *A.H. [Signature]*

5E-3
9/16/65

Init. Date/Time

1.11 Leak check flanges by pressurizing leak detector to 100 psig. Allowable pressure drop is 1 psi per hour for an 8-hour period.

	<u>OF-1</u>	<u>OF-2</u>		
Time start	_____	_____		
Pressure start	_____	_____		
Time stop	_____	_____		
Pressure stop	_____	_____		
Pressure drop, psi/hr	_____	_____		
LKD line capped	_____	_____	_____	_____

1.12 Set oil valves as follows:

- V-712A tag closed _____
- V-601A tag closed _____
- V-762A tag closed _____
- V-762B tag closed _____
- V-762C tag closed _____

<u>Fuel Oil System</u>	<u>Coolant Oil System</u>
V-703A tag open _____	V-753A tag open _____
V-702 tag open _____	V-752 tag open _____
V-701 tag open _____	V-751 tag open _____
V-713 tag open _____	V-763 tag open _____
V-714 tag open _____	V-764 tag open _____
V-715 open _____	V-765 open _____
V-703B closed _____	V-753B closed _____
V-704 closed _____	V-754 closed _____
V-703C tag closed _____	V-753C tag closed _____
V-703D tag closed _____	V-753D tag closed _____
V-590 tag open _____	V-591 tag open _____
V-706 tag open _____	V-756 tag open _____
V-711 tag closed _____	V-761 tag closed _____
V-716 tag closed _____	V-766 tag closed _____

Approved by *P. H. ...*

5E-4
9/16/65

Init. Date/Time

1.13 Pressurize the systems with helium as follows:

- V-513A tag open ___ V-510A tag open ___
- V-513B tag open ___ V-510B tag open ___
- V-513C tag open ___ V-510C tag open ___
- V-513D tag open ___ V-510D tag open ___
- V-535A tag open ___ V-534A tag open ___
- V-535B tag open ___ V-534B tag open ___
- V-531 tag open ___ V-551 tag open ___
- V-532 tag open ___ V-552 tag open ___

1.14 Check to be sure FI-821 and FI-823 read 7 to 10 gpm.

(Main Control Room)

- Set PIC-513 on Auto at 7 psig ___
- Set PIC-510 on Auto at 7 psig ___

1.15 Start FOP No. 2, and note that discharge pressure (PI-702) >60 psig.

1.16 Start COP No. 2, and note that discharge pressure (PI-752) >60 psig.

(Service Tunnel)

- 1.17 Open V-704 to full open position.
- 1.18 Throttle V-703B to give a flow of 3.5 gpm on FI-703.
- 1.19 Simultaneously throttle V-715 and V-703B to give a flow of 3.5 gpm on FI-703 and 6.5 gpm on FI-704 (as V-715 is throttled down, flows on FI-703 and FI-704 will increase).
- 1.20 Readjust V-703B if necessary.
- 1.21 Notify shift supervisor if V-715 needs to be throttled down more than 3 3/4 turns from full open position.
- 1.22 Open V-754 to full open position.
- 1.23 Throttle V-753B to give a flow of 3.5 gpm on FI-753.

Approved by *[Signature]*

5E-5
9/16/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 1.24 Simultaneously throttle V-765 and V-753B to give a flow of 3.5 gpm on FI-753 and 6.5 gpm on FI-754 (as V-765 is throttled down, flow on FI-753 and FI-754 will increase). | _____ | _____ |
| 1.25 Readjust V-753B if necessary. | _____ | _____ |
| 1.26 Notify shift supervisor if V-765 needs to be throttled down more than 3 7/8 turns from full open position. | _____ | _____ |
| 1.27 Stop FOP-2 and COP-2 by opening breakers FOP-2 and COP-2 in the service tunnel and note that FOP-1 and COP-1 start. | _____ | _____ |
| 1.28 Reset and close breakers FOP-2 and COP-2. | _____ | _____ |
| (Switch House) | | |
| 1.29 Stop FOP-1 and COP-1 by opening breakers G3-11 and G4-11 and note that FOP-2 and COP-2 start. | _____ | _____ |
| 1.30 Reset and close breakers G3-11 and G4-11. | _____ | _____ |
| (Service Tunnel) | | |
| 1.31 Readjust flows if necessary (Steps 17 through 24). | _____ | _____ |
| 1.32 The oil supply tank levels should be 50 to 60%.
Record: | | |
| LI-OT-1-A3 _____, | | |
| LI-OT-2-A3 _____. | | |
| 1.33 Set LI-OT-1-A3 and OT-2 to alarm at 1% below the operating level and to close FSV-703 and FSV-753 at 1% below the operating level.
Record the following: | | |

	<u>Level Reading</u>	<u>Alarm Setpoint</u>	<u>Valve Control Setpoint</u>
LI-OT-1-A3	_____	_____	_____
LI-OT-2-A3	_____	_____	_____

Approved by RA/My man

5E-6
9/16/65

Init. Date/Time

1.34 Check that the oil tank radiation monitors
are in place and in operation:

RIA-OT-1 _____,

RIA-OT-2 _____.

Approved by

R. H. Chapman

5F-1
9/9/65

5F HEATUP OF FUEL AND COOLANT SYSTEMS

The heatup rate of the fuel and coolant systems should not exceed 100°F per hour, and since the two systems are connected at the heat exchanger, the temperature range of all points on both systems should be kept as close as is practical. The circulating pumps will run during heatup, and the helium purge flow will be kept at the normal rate. This is to aid in heating up the graphite and help purge out any remaining oxygen.

To minimize thermal stresses, the component coolant air flow should be flowing to the control rods and reactor neck during the heatup.

Details of the operation are given below.

1 PREPARATION FOR HEATUP

(Main Control Room)

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 1.1 Open HCV-523, V-961A, and V-961B to provide a vent for the overflow tank and reactor neck annulus. | _____ | _____ |
| 1.2 Set FIC-516A and FIC-512 per building log to purge system during heatup. | _____ | _____ |
| 1.3 Set PRC-522A and PRC-528A on automatic at 5 psig. | _____ | _____ |

(Coolant Cell)

- | | | |
|---|-------|-------|
| 1.4 Physically check that the radiator doors are closed. | _____ | _____ |
| 1.5 Physically check that the bypass dampers are closed. | _____ | _____ |
| 1.6 Close the hatch between the coolant drain tank cell and the radiator duct (Downstream of radiator). | _____ | _____ |
| 1.7 Close both doors between the blower house and the radiator duct. (Upstream of the radiator). | _____ | _____ |

(Main Control Room)

Approved by *J. V. Johnson*

5F-2
9/9/65

	<u>Init.</u>	<u>Date/Time</u>
1.8 Perform operations necessary to make up Circuit 134 (Prefill mode).	_____	_____
1.9 Check that No. 1 and No. 3 blowers are off.	_____	_____
1.10 Fully insert all three control rods. CR-1 _____ CR-2 _____ CR-3 _____	_____	_____
1.11 Start the coolant pump while listening for unusual noises on the mike (Xdb E CP D).	_____	_____
1.12 Record the following: EII-CP-D _____ (should be 19 amps) EWI-CP-D _____ (should be 2 Kw) SI-CP-G _____ (should be 1750 rpm) (Transmitter Room) SI-CP-G1 _____ (should be 1750 rpm) SI-CP-G2 _____ (should be 1750 rpm)	_____	_____
NOTE: Taps to the flow indicator FR-201 will be frozen, and therefore, this instrument will not be in operation. (Main Control Room)		
1.13 Start the fuel pump while listening for unusual noises on the mike. (Xdb E FPF).	_____	_____
1.14 Record the following: EII-FP-D _____ (should be 19 amps) EWI-FP-D _____ (should be 2 Kw) SI-FP-E _____ (should be 1150 rpm) (Transmitter Room) SI-FP-E1 _____ (should be 1150 rpm) SI-FP-E2 _____ (should be 1150 rpm)	_____	_____
1.15 Check that the thermocouples listed in Table 5F-1, 5F-2, and 5F-3 are plugged into the readout instruments listed and the instruments are in service.	_____	_____

Approved by *P. W. Kingman*

5F-3
9/9/65

Init. Date/Time

1.16 Start the air flows to the control rods and the reactor neck. Set as per the building log.

Control rods	HIC-915	_____
Reactor Neck	HIC-961	_____
	HIC-962	_____
	HIC-963	_____

1.17 Push the start buttons on all the induction regulator blowers and check to see that they start.

TIC-1	_____	TIC-2	_____
TIA-1	_____	TIA-2	_____
TIB-1	_____	TIB-2	_____
G5-BB-1	_____	G5-BB-2	_____
G5-2Y-1	_____	T2-Y-1	_____

2 HEATUP

2.1 Set the reactor heaters (R-1, R-2, and R-3) at 50% of their 1200^oF current setting.

2.2 The reactor vessel will be the most slowly heated component due to its large mass. Turn on and adjust the remainder of the heaters listed in Tables 5F-1, 5F-2, and 5F-3 so as to keep the temperatures under these heaters more than the reactor but within 150^oF of the reactor. The heater calibration curves may be used as a guide in making heater adjustments.

NOTE: Part of the method of monitoring the radiator heatup will be Scanners "D" and "E." Note that these have variable references and will need to be adjusted as the heatup progresses.

Approved by *B. P. Gungor*

5F-4
9/9/65

Init. Date/Time

2.3 Each time the reactor heatup rate begins to slacken, increase the reactor heaters' current settings. The settings should be increased from 50% to 75%; from 75% to 90%, and from 90% to 105% of their 1200^oF amperage settings.

	<u>Init.</u>	<u>Date/Time</u>
Increased to 75%	_____	_____
Increased to 90%	_____	_____
Increased to 105%	_____	_____

2.4 As the heatup progresses, the temperature of the penetrations should be given special attention. Try to keep the piping temperature on both sides of the penetration as close to the pipe temperature in the penetration as is possible. Record the temperatures as indicated in Table 5F-5.

2.5 When the temperatures indicated by TE-CR-124 and TE-CR-122 (points 34 and 35 on Scanner B) are above 900^oF, the flow element should be heated. The following steps should be used.

2.5.1 Record the following temperatures:

TE-CR-124 (Scanner B Pt. 34)	_____	^o F
TE-CR-123 (TI-3200 Pt. 7)	_____	^o F
TE-CR-122 (Scanner B Pt. 35)	_____	^o F

2.5.2 If CR-124 and CR-122 indicate temperatures above 900^oF, turn on the flow element heaters. These are listed in Table 5F-4.

2.5.3 Adjust the heaters to give a heatup rate of ~ 200^oF/hr. Try to keep the temperatures of the thermocouples

Approved by *[Signature]*

5F-5
9/9/65

Init. Date/Time

2.5.3 (continued)
listed in Table 5F-4 within $\pm 100^{\circ}\text{F}$
of each other.

2.5.4 When the temperature of the flow
elements reaches that of line 201,
level off the heatup rate of the
flow elements and keep at the same
temperature as line 201.

2.6 When the temperature indicated by
TE-103-13 is above 900°F , start
heating the short section of line
106 as follows.

2.6.1 Plug the thermocouples listed
in Table 5F-6 into one of the
special recorders so heatup of this
section of line may be closely fol-
lowed. Finish filling out Table
5F-6A. Keep thermocouple logs
up to date.

2.6.2 When TE-103-13 is above 900°F ,
turn on H-106-4. Adjust to give a
heatup rate of $\leq 100^{\circ}\text{F/hr}$. This
section of line must be heated very
carefully due to the likely pres-
ence of salt in the lines. Do not
allow the temperature of TE-106-5A
to exceed TE-FV-105-6B. Table 5F-7
should be filled in to aid the oper-
ator in keeping up with the tempera-
tures of the thermocouples.

2.6.3 Do not exceed the 1200°F setting
on heater 106-4. The temperatures
of TE-106-5A or TE-FV-105-6B may

Approved by 

5F-6
9/9/65

Init. Date/Time

2.6.3 (continued)

neither come up to their normal valve until the freeze valve shoulder heaters are turned on. Leave the thermocouples listed in Table 5F-6 reading out on the special recorder until the freeze valve shoulder heaters are turned on and/or the temperature of all thermocouples in 5F-6 are above 1100^oF. See Procedure 5I for freeze valve heatup.

2.7 Level all temperatures in the loops at 1100 to 1200^oF. Make heater adjustments necessary to accomplish this (such as lowering the reactor heaters from 105% to 100% of their 1200^oF setting).

GENERAL NOTE: The heatup of the drain tanks and lines out to the freeze valves is covered in Procedure 5C. Heatup of the freeze valves shoulders is covered in the fill Procedure (5I).

TABLE 5F-1
THERMOCOUPLES AND HEATERS FOR REACTOR CELL COMPONENTS

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL	OTHER HEATERS ON THIS CONTROLLER
Scanner "A"	1	R-1	R-2	R-2	HCP-7	
"	2	R-3	R-1	R-1	HCP-7	
"	3	R-4B			HCP-7	
"	4	R-5B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	5	R-6B			HCP-7	
"	6	R-11	R-2	R-2	HCP-7	
"	7	R-12	R-1	R-1	HCP-7	
"	8	R-13	R-3	R-3	HCP-7	
"	9	R-14	R-2	R-2	HCP-7	
"	10	R-15B	R-2, R-3	R-2, R-3	HCP-7	
"	11	R-16	R-1	R-1	HCP-7	
"	12	R-18B	R-3	R-3	HCP-7	
"	13	R-19	R-2	R-2	HCP-7	
"	14	R-20B	R-2	R-2	HCP-7	
"	15	R-21	R-2, R-3	R-2, R-3	HCP-7	
"	16	R-22	R-1	R-1	HCP-7	
"	17	R-23B	R-1	R-1	HCP-7	
"	18	R-24	R-3	R-3	HCP-7	
"	19	R-25B	R-2	R-2	HCP-7	
"	20	R-26B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	

Approved by 

5F-7
9/9/65

TABLE 5F-1 (continued)

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL	OTHER HEATERS ON THIS CONTROLLER
Scanner "A"	21	R-27B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	22	R-28B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	23	R-29B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	24	R-30B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	25	R-31B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	Reference	R-32B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
"	26	100-1B				
"	27	100-2B	H 100-1	H 100-1	HCP-5	
"	28	100-3B	H 100-2	H 100-2	HCP-6	
"	29	100-4	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	30	100-5	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	31	FP-7B	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	32	FP-8B	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	33	OFT-2A	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	34	OFT-3	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	35	OFT-5	FP-1, FP-2	FP-1, FP-2	HCP-7	
"	36	101-1	H 101-1	RCH-7	HCP-7	H-102-3
"	37	101-2B	H 101-2	H-101-2	HCP-6	
"	38	101-3B	H 101-3	H 101-3	HCP-6	
"	39	HX-3B	H 101-3	H 101-3	HCP-6	
"	40	HX-6	HX-1	HX-1	HCP-7	

Approved by 

5F-8
9/9/65

TABLE 5F-1 (continued)

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL	OTHER HEATERS ON THIS CONTROLLER
Scanner "A"	41	HX-7B	HX-1	HX-1	HCP-7	
"	42	HX-8	HX-2	HX-2	HCP-7	
"	43	HX-9B	HX-2	HX-2	HCP-7	
"	44	HX-10	HX-2	HX-2	HCP-7	
"	45	HX-2B	HX-3	HX-3	HCP-7	
"	46	HX-5	HX-3	HX-3	HCP-7	
"	47	102-1B	H 102-1	H 102-1	HCP-7A	
"	48	102-A2	H 102-2A	H 102-2	HCP-7	
"	49	102-B2	H 102-2B	H 102-2	HCP-7	
"	50	102-3B	H-102-3	RCH-7	HCP-7	H-101-1
"	51	102-A4B	H-102-4	H-102-4	HCP-7A	
"	52	102-B4B	H-102-5	H-102-5	HCP-7A	
"	53	102-5B				
"	54	200AS-ALA	H-200-16	H-200-16	HCP-7A	
"	55	200-A9A	H-200-1, 16	H-200-1, 16	HCP-5, 7A	
"	56	200-B9A	H-200-1	H-200-6	HCP-5	
"	57	200-10	H-200-2	RCH-1	HCP-6	
"	58	200-11A	H-200-3	RCH-1	HCP-6	
"	59	200-12	H-200-4	RCH-1	HCP-6	
"	60	200-13	H-200-5	RCH-2	HCP-6	H-201-8

Approved by



5F-9
9/9/65

TABLE 5F-1 (continued)

Page 4 of 5

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL	OTHER HEATERS ON THIS CONTROLLER
Scanner "A"	61	200-14B	H-200-6	RCH-3	HCP-6	
"	62	200-15	H-200-7	RCH-3	HCP-6	
"	63	200-16A	H-200-8	RCH-3	HCP-6	
"	64	200-A17	H-200-9	RCH-4	HCP-6	H-201-4
"	65	200-B17	H-200-9	RCH-4	HCP-6	H-201-4
"	66	200-18	H-200-10	RCH-5	HCP-7	H-201-3
"	67	200-19B	H-200-11	H-200-11	HCP-5	
"	68	200-20B	H-200-12	H-200-12	HCP-5	
"	69	HX-1B	HX-1	HX-1	HCP-7	
"	70	HX-4B				
"	71	201-1A	H-201-1	H-201-1	HCP-5	
"	72	201-2A	H-201-2	H-201-2	HCP-5	
"	73	201-3	H-201-3	RCH-5	HCP-7	H-200-10
"	74	201-A4	H-201-4	RCH-4	HCP-6	H-200-9
"	75	201-B4	H-201-4	RCH-4	HCP-6	H-200-9
"	76	201-5B	H-201-5	RCH-6	HCP-7	
"	77	201-6	H-201-6	RCH-6	HCP-7	
"	78	201-7A	H-201-7	RCH-6	HCP-7	
"	79	201-8	H-201-8	RCH-2	HCP-6	H-200-5
"	80	201-A9A	H-201-9	H-201-9	HCP-5	

Approved by


5F-10
9/9/65

TABLE 5F-1 (continued)

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL	OTHER HEATERS ON THIS CONTROLLER
Scanner "A"	81	201-B9A	H-201-9, 14	H-201-9, 14	HCP-5, 7A	
"	82	201AS-A1A	H-201-14	H-201-14	HCP-7A	
"	83	103-A1A	H-FV-103	H-FV-103	HCP-8	
"	84	103-B1	H 103	H 103	HCP-8	
"	85	103-2	H 103	H 103	HCP-8	
"	86	103-3	H 103	H 103	HCP-8	
"	87	103-4	H 103	H 103	HCP-8	
"	88	103-A5	H 103	H 103	HCP-8	
"	89	103-B5	H 103	H 103	HCP-8	
"	90	103-7	H 103	H 103	HCP-8	
"	91	103-9	H 103	H 103	HCP-8	
"	92	103-10	H 103	H 103	HCP-8	
"	93	103-A11	H 103	H 103	HCP-8	
"	94	103-12				
"	95	103-13	H 104-7	H 104-7	HCP-10	
"	96	103-14A	H 104-7	H 104-7	HCP-10	
"	97	104-B6	H 104-7	H 104-7	HCP-10	
"	98	104-A6	H 104-6	H 104-6	HCP-9	
"	99	104-5A	H 104-5	H 104-5	HCP-9	
"	100	R-32B	R-1, R-2, R-3	R-1, R-2, R-3	HCP-7	
Reference						

Approved by 

5F-11
9/9/65

TABLE 5F-2
T/C's AND HEATERS FOR COOLANT SYSTEM OUT OF REACTOR CELL

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Scanner "B"	1	CP-6B	CP1	CP1	HCP-4
"	2				
"	3	CP-9B	CP2	CP2	HCP-4
"	4	LE-A1	LECP-2	LECP-2	HCP-3
"	5	LE-A3	LECP-1	LECP-1	HCP-3
"	6	200-1	H-200-13	H-200-13	HCP-1
"	7	200-2	H-200-13	H-200-13	HCP-1
"	8	200-3	H-200-13	H-200-13	HCP-1
"	9	200-4	H-200-13	H-200-13	HCP-1
"	10	200-5	H-200-13	H-200-13	HCP-1
"	11	200-6	H-200-13	H-200-13	HCP-1
"	12	200-A7A	H-200-14	H-200-14	HCP-2
"	13	200-B7A	H-200-14	H-200-14	HCP-2
"	14	200-C7B	H-200-14	H-200-14	HCP-2
"	15	200-D7A	H-200-14	H-200-14	HCP-2
"	16	200-A8A	H-200-15	H-200-15	HCP-2
"	17	200-B8A			
"	18	200-C8A			
"	19	201-A10A			
"	20	201-B10A			

Approved by 

5F-12
9/9/65

TABLE 5F-2 (continued)

Page 2 of 4

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Scanner "B"	21	201-C10A	H-201-10	H-201-10	HCP-2
"	22	201-A11A	H-201-11	H-201-11	HCP-2
"	23	201-B11A	H-201-11	H-201-11	HCP-2
"	24	201-C11A	H-201-11	H-201-11	HCP-2
"	25	201-D11A	H-201-11	H-201-11	HCP-2
"	26	201-12	H-201-12	H-201-12	HCP-1
"	27	201-13	H-201-12	H-201-12	HCP-1
"	28	201-14	H-201-12	H-201-12	HCP-1
"	29	201-15	H-201-12	H-201-12	HCP-1
"	30	201-16	H-201-12	H-201-12	HCP-1
"	31	201-17	H-201-12	H-201-12	HCP-1
"	32	205-1	H-205-1	H-205-1	HCP-3
"	33	205-2	H-205-1	H-205-1	HCP-3
"	34	CR-124	H-201-13	H-201-13	HCP-2
"	35	CR-122	H-201-13	H-201-13	HCP-2
"	36	CR-128	CR-7	CR-7	HCP-1
"	37	CR-129	CR-7	CR-7	HCP-1
"	38	CR-126	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	39	CR-127	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	40	CR-130	CR-8	CR-8	HCP-1
"	41	CR-131	CR-8	CR-8	HCP-1

Approved by


5F-13
9/9/65

TABLE 5F-2 (continued)

Page 3 of 4

READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Scanner "B"	42	CR-125A	H-202-1	H-202-1	HCP-3
"	43	CR-132	CR-1, 2, 4, 5, 6	CR-1, 2, 4, 5, 6	HCP-1
"	44	CR-133	CR-1, 2, 4, 5, 6	CR-1, 2, 4, 5, 6	HCP-1
"	45	CR-134	CR-1, 2, 4, 5, 6	CR-1, 2, 4, 5, 6	HCP-1
"	46	CR-135	CR-1, 2, 4, 5, 6	CR-1, 2, 4, 5, 6	HCP-1
"	47	CR-136	CR-1, 2, 4, 5, 6	CR-1, 2, 4, 5, 6	HCP-1
"	48	CR-137	CR-1, 2, 4, 5, 6	CR-1, 2, 4, 5, 6	HCP-1
"	49	CR-138	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	50	CR-139	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	51	CR-140	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	52	CR-141	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	53	CR-142	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	54	CR-143	CR-1, 2, 3, 4, 5, 6	CR-1, 2, 3, 4, 5, 6	HCP-1
"	55	CR-144	CR-1, 3, 4, 5, 6	CR-1, 3, 4, 5, 6	HCP-1
"	56	CR-145	CR-1, 3, 4, 5, 6	CR-1, 3, 4, 5, 6	HCP-1
"	57	CR-146	CR-1, 3, 4, 5, 6	CR-1, 3, 4, 5, 6	HCP-1
"	58	CR-147	CR-1, 3, 4, 5, 6	CR-1, 3, 4, 5, 6	HCP-1
"	59	CR-148	CR-1, 3, 4, 5, 6	CR-1, 3, 4, 5, 6	HCP-1
"	60	CR-149	CR-1, 3, 4, 5, 6	CR-1, 3, 4, 5, 6	HCP-1
"	61	202-A2	H-202-2	H-202-2	HCP-1
"	62	202-B2	H-202-2	H-202-2	HCP-1

Approved by


5F-14
9/9/65

TABLE 5F-2 (continued)


READOUT	POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Scanner "B"	63	202-3	H-202-2	H-202-2	HCP-1
"	64	202-A4	H-202-2	H-202-2	HCP-1
"	65	202-A5	H-202-2	H-202-2	HCP-1
"	66	202-6	H-202-2	H-202-2	HCP-1
TRA-3500	1	204-1B	204-1	204-1	HCP-4
"	2	204-2B	204-1	204-1	HCP-4
"	3	204-3B	204-1	204-1	HCP-4
"	4	204-4B	204-1	204-1	HCP-4
"	5	204-5B	204-1	204-1	HCP-4
"	6	204-6B	204-1	204-1	HCP-4
"	9	206-1B	206-1	206-1	HCP-4
"	10	206-2B	206-1	206-1	HCP-4
"	11	206-3B	206-1	206-1	HCP-4
"	12	206-4B	206-1	206-1	HCP-4
"	13	206-5B	206-1	206-1	HCP-4
"	14	206-6B	206-1	206-1	HCP-4

Approved by



5F-15
9/9/65

Approved by

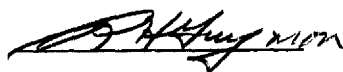5F-16
9/9/65TABLE 5F-3
T/C's AND HEATERS AT RADIATOR RISERS

Page 1 of 8

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-15	D-1, D-61	CR-51	CR-8*	CR-8*	HCP-1
"	D-2, D-62	CR-53	CR-8*	CR-8*	HCP-1
"	D-3, D-63	CR-55	CR-8*	CR-8*	HCP-1
"	D-4, D-64	CR-57	CR-8*	CR-8*	HCP-1
"	D-5, D-65	CR-59	CR-8*	CR-8*	HCP-1
Riser-16	D-6, D-66	CR-61	CR-8*	CR-8*	HCP-1
"	D-7, D-67	CR-63	CR-8*	CR-8*	HCP-1
"	D-8, D-68	CR-65	CR-8*	CR-8*	HCP-1
"	D-9, D-69	CR-67	CR-8*	CR-8*	HCP-1
"	D-10, D-70	CR-69	CR-8*	CR-8*	HCP-1
"	D-11, D-71	CR-71	CR-8*	CR-8*	HCP-1
Riser-17	D-12, D-72	CR-73	CR-8*	CR-8*	HCP-1
"	D-13, D-73	CR-75	CR-8*	CR-8*	HCP-1
"	D-14, D-74	CR-77	CR-8*	CR-8*	HCP-1
"	D-15, D-75	CR-79	CR-8*	CR-8*	HCP-1
"	D-16,	CR-81	CR-8*	CR-8*	HCP-1
"	D-17	CR-83	CR-8*	CR-8*	HCP-1
Riser-18	D-18	CR-85	CR-8*	CR-8*	HCP-1
"	D-19	CR-87	CR-8*	CR-8*	HCP-1
"	D-20	CR-89	CR-8*	CR-8*	HCP-1
"	D-21	CR-91	CR-8*	CR-8*	HCP-1
"	D-22	CR-93	CR-8*	CR-8*	HCP-1
"	D-23	CR-95	CR-8*	CR-8*	HCP-1
Riser-19	D-24	CR-97	CR-8*	CR-8*	HCP-1
"	D-25	CR-99	CR-8*	CR-8*	HCP-1
Riser-11	D-26, D-86	CR-1	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

TABLE 5F-3 (continued)

Page 2 of 8

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-11	D-27, D-87	CR-3	CR-8*	CR-8*	HCP-1
"	D-28, D-88	CR-5	CR-8*	CR-8*	HCP-1
"	D-29, D-89	CR-7	CR-8*	CR-8*	HCP-1
"	D-30, D-90	CR-9	CR-8*	CR-8*	HCP-1
"	D-31, D-91	CR-11	CR-8*	CR-8*	HCP-1
Riser-12	D-32, D-92	CR-13	CR-8*	CR-8*	HCP-1
"	D-33, D-93	CR-15	CR-8*	CR-8*	HCP-1
"	D-34, D-94	CR-17	CR-8*	CR-8*	HCP-1
"	D-35, D-95	CR-19	CR-8*	CR-8*	HCP-1
"	D-36, D-96	CR-21	CR-8*	CR-8*	HCP-1
"	D-37, D-97	CR-23	CR-8*	CR-8*	HCP-1
Riser-13	D-38, D-98	CR-25	CR-8*	CR-8*	HCP-1
"	D-39, D-99	CR-27	CR-8*	CR-8*	HCP-1
"	D-40	CR-29	CR-8*	CR-8*	HCP-1
"	D-41, D-51	CR-31	CR-8*	CR-8*	HCP-1
"	D-42, D-52	CR-33	CR-8*	CR-8*	HCP-1
"	D-43, D-53	CR-35	CR-8*	CR-8*	HCP-1
Riser-14	D-44, D-54	CR-37	CR-8*	CR-8*	HCP-1
"	D-45, D-55	CR-39	CR-8*	CR-8*	HCP-1
"	D-46, D-56	CR-41	CR-8*	CR-8*	HCP-1
"	D-47, D-57	CR-43	CR-8*	CR-8*	HCP-1
"	D-48, D-58	CR-45	CR-8*	CR-8*	HCP-1
"	D-49, D-59	CR-47	CR-8*	CR-8*	HCP-1
Riser-15	D-50, D-60	CR-49	CR-8*	CR-8*	HCP-1
Riser-13	D-51, D-41	CR-31	CR-8*	CR-8*	HCP-1
"	D-52, D-42	CR-33	CR-8*	CR-8*	HCP-1
"	D-53, D-43	CR-35	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

Approved by 

5F-18
9/9/65

TABLE 5F-3 (continued)

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-13	D-54, D-44	CR-37	CR-8*	CR-8*	HCP-1
Riser-14	D-55, D-45	CR-39	CR-8*	CR-8*	HCP-1
""	D-56, D-46	CR-41	CR-8*	CR-8*	HCP-1
""	D-57, D-47	CR-43	CR-8*	CR-8*	HCP-1
""	D-58, D-48	CR-45	CR-8*	CR-8*	HCP-1
""	D-59, D-49	CR-47	CR-8*	CR-8*	HCP-1
Riser-15	D-60, D-50	CR-49	CR-8*	CR-8*	HCP-1
""	D-61, D-1	CR-51	CR-8*	CR-8*	HCP-1
""	D-62, D-2	CR-53	CR-8*	CR-8*	HCP-1
""	D-63, D-3	CR-55	CR-8*	CR-8*	HCP-1
""	D-64, D-4	CR-57	CR-8*	CR-8*	HCP-1
""	D-65, D-5	CR-59	CR-8*	CR-8*	HCP-1
Riser-16	D-66, D-6	CR-61	CR-8*	CR-8*	HCP-1
""	D-67, D-7	CR-63	CR-8*	CR-8*	HCP-1
""	D-68, D-8	CR-65	CR-8*	CR-8*	HCP-1
""	D-69, D-9	CR-67	CR-8*	CR-8*	HCP-1
""	D-70, D-10	CR-69	CR-8*	CR-8*	HCP-1
""	D-71, D-11	CR-71	CR-8*	CR-8*	HCP-1
Riser-17	D-72, D-12	CR-73	CR-8*	CR-8*	HCP-1
""	D-73, D-13	CR-75	CR-8*	CR-8*	HCP-1
""	D-74, D-14	CR-77	CR-8*	CR-8*	HCP-1
""	D-75, D-15	CR-79	CR-8*	CR-8*	HCP-1
""	D-76	CR-101	CR-8*	CR-8*	HCP-1
""	D-77	CR-103	CR-8*	CR-8*	HCP-1
""	D-78	CR-105	CR-8*	CR-8*	HCP-1
""	D-79	CR-107	CR-8*	CR-8*	HCP-1
Riser-20	D-80	CR-109	CR-8*	CR-8*	HCP-1
""	D-81	CR-111	CR-8*	CR-8*	HCP-1
""	D-82	CR-113	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

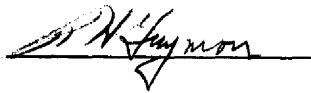


TABLE 5F-3 (continued)

Page 4 of 8

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-20	D-83	CR-115	CR-8*	CR-8*	HCP-1
""	D-84	CR-117	CR-8*	CR-8*	HCP-1
""	D-85	CR-119	CR-8*	CR-8*	HCP-1
Riser-11	D-86, D-26	CR-1	CR-8*	CR-8*	HCP-1
""	D-87, D-27	CR-3	CR-8*	CR-8*	HCP-1
""	D-88, D-28	CR-5	CR-8*	CR-8*	HCP-1
""	D-89, D-29	CR-7	CR-8*	CR-8*	HCP-1
""	D-90, D-30	CR-9	CR-8*	CR-8*	HCP-1
""	D-91, D-31	CR-11	CR-8*	CR-8*	HCP-1
Riser-12	D-92, D-32	CR-13	CR-8*	CR-8*	HCP-1
""	D-93, D-33	CR-15	CR-8*	CR-8*	HCP-1
""	D-94, D-34	CR-17	CR-8*	CR-8*	HCP-1
""	D-95, D-35	CR-19	CR-8*	CR-8*	HCP-1
""	D-96, D-36	CR-21	CR-8*	CR-8*	HCP-1
""	D-97, D-37	CR-23	CR-8*	CR-8*	HCP-1
Riser-13	D-98, D-38	CR-25	CR-8*	CR-8*	HCP-1
""	D-99, D-39	CR-27	CR-8*	CR-8*	HCP-1
""	D-100	Reference	CR-8*	CR-8*	HCP-1
Riser-15	E-1, E-61	CR-52	CR-8*	CR-8*	HCP-1
""	E-2, E-62	CR-54	CR-8*	CR-8*	HCP-1
""	E-3, E-63	CR-56	CR-8*	CR-8*	HCP-1
""	E-4, E-64	CR-58	CR-8*	CR-8*	HCP-1
""	E-5, E-65	CR-60	CR-8*	CR-8*	HCP-1
Riser-16	E-6, E-66	CR-62	CR-8*	CR-8*	HCP-1
""	E-7, E-67	CR-64	CR-8*	CR-8*	HCP-1
""	E-8, E-68	CR-66	CR-8*	CR-8*	HCP-1
""	E-9, E-69	CR-68	CR-8*	CR-8*	HCP-1
""	E-10, E-70	CR-70	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

Approved by *R. J. Simpson*

5F-20
9/9/65

TABLE 5F-3 (continued)

Page 5 of 8

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-16	E-11, E-71	CR-72	CR-8*	CR-8*	HCP-1
Riser-17	E-12, E-72	CR-74	CR-8*	CR-8*	HCP-1
""	E-13, E-73	CR-76	CR-8*	CR-8*	HCP-1
""	E-14, E-74	CR-78	CR-8*	CR-8*	HCP-1
""	E-15, E-75	CR-80	CR-8*	CR-8*	HCP-1
""	E-16,	CR-82	CR-8*	CR-8*	HCP-1
""	E-17	CR-84	CR-8*	CR-8*	HCP-1
Riser-18	E-18	CR-86	CR-8*	CR-8*	HCP-1
""	E-19	CR-88	CR-8*	CR-8*	HCP-1
""	E-20	CR-90	CR-8*	CR-8*	HCP-1
""	E-21	CR-92	CR-8*	CR-8*	HCP-1
""	E-22	CR-94	CR-8*	CR-8*	HCP-1
""	E-23	CR-96	CR-8*	CR-8*	HCP-1
Riser-19	E-24	CR-98	CR-8*	CR-8*	HCP-1
""	E-25	CR-100	CR-8*	CR-8*	HCP-1
Riser-11	E-26, E-86	CR-2	CR-8*	CR-8*	HCP-1
""	E-27, E-87	CR-4	CR-8*	CR-8*	HCP-1
""	E-28, E-88	CR-6	CR-8*	CR-8*	HCP-1
""	E-29, E-89	CR-8	CR-8*	CR-8*	HCP-1
""	E-30, E-90	CR-10	CR-8*	CR-8*	HCP-1
""	E-31, E-91	CR-12	CR-8*	CR-8*	HCP-1
Riser-12	E-32, E-92	CR-14	CR-8*	CR-8*	HCP-1
""	E-33, E-93	CR-16	CR-8*	CR-8*	HCP-1
""	E-34, E-94	CR-18	CR-8*	CR-8*	HCP-1
""	E-35, E-95	CR-20	CR-8*	CR-8*	HCP-1
""	E-36, E-96	CR-22	CR-8*	CR-8*	HCP-1
""	E-37, E-97	CR-24	CR-8*	CR-8*	HCP-1

"Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

Approved by *R. H. Guymer*

5F-21
9/9/65

TABLE 5F-3 (continued)

Page 6 of 8

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-13	E-38, E-98	CR-26	CR-8*	CR-8*	HCP-1
"	E-39, E-99	CR-28	CR-8*	CR-8*	HCP-1
"	E-40,	CR-30	CR-8*	CR-8*	HCP-1
"	E-41, E-51	CR-32	CR-8*	CR-8*	HCP-1
"	E-42, E-52	CR-34	CR-8*	CR-8*	HCP-1
"	E-43, E-53	CR-36	CR-8*	CR-8*	HCP-1
Riser-14	E-44, E-54	CR-38	CR-8*	CR-8*	HCP-1
"	E-45, E-55	CR-40	CR-8*	CR-8*	HCP-1
"	E-46, E-56	CR-42	CR-8*	CR-8*	HCP-1
"	E-47, E-57	CR-44	CR-8*	CR-8*	HCP-1
"	E-48, E-58	CR-46	CR-8*	CR-8*	HCP-1
"	E-49, E-59	CR-48	CR-8*	CR-8*	HCP-1
Riser-15	E-50, E-60	CR-50	CR-8*	CR-8*	HCP-1
Riser-13	E-51, E-41	CR-32	CR-8*	CR-8*	HCP-1
"	E-52, E-42	CR-34	CR-8*	CR-8*	HCP-1
"	E-53, E-43	CR-36	CR-8*	CR-8*	HCP-1
Riser-14	E-54, E-44	CR-38	CR-8*	CR-8*	HCP-1
"	E-55, E-45	CR-40	CR-8*	CR-8*	HCP-1
"	E-56, E-46	CR-42	CR-8*	CR-8*	HCP-1
"	E-57, E-47	CR-44	CR-8*	CR-8*	HCP-1
"	E-58, E-48	CR-46	CR-8*	CR-8*	HCP-1
"	E-59, E-49	CR-48	CR-8*	CR-8*	HCP-1
Riser-15	E-60, E-50	CR-50	CR-8*	CR-8*	HCP-1
"	E-61, E-1	CR-52	CR-8*	CR-8*	HCP-1
"	E-62, E-2	CR-54	CR-8*	CR-8*	HCP-1
"	E-63, E-3	CR-56	CR-8*	CR-8*	HCP-1
"	E-64, E-4	CR-58	CR-8*	CR-8*	HCP-1
"	E-65, E-5	CR-60	CR-8*	CR-8*	HCP-1
Riser-16	E-66, E-6	CR-62	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermo-couples listed in this Table.

TABLE 5F-3 (continued)

Page 7 of 8

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-16	E-67, E-7	CR-64	CR-8*	CR-8*	HCP-1
""	E-68, E-8	CR-66	CR-8*	CR-8*	HCP-1
""	E-69, E-9	CR-68	CR-8*	CR-8*	HCP-1
""	E-70, E-10	CR-70	CR-8*	CR-8*	HCP-1
""	E-71, E-11	CR-72	CR-8*	CR-8*	HCP-1
Riser-17	E-72, E-12	CR-74	CR-8*	CR-8*	HCP-1
""	E-73, E-13	CR-76	CR-8*	CR-8*	HCP-1
""	E-74, E-14	CR-78	CR-8*	CR-8*	HCP-1
""	E-75, E-15	CR-80	CR-8*	CR-8*	HCP-1
Riser-19	E-76	CR-102	CR-8*	CR-8*	HCP-1
""	E-77	CR-104	CR-8*	CR-8*	HCP-1
""	E-78	CR-106	CR-8*	CR-8*	HCP-1
""	E-79	CR-108	CR-8*	CR-8*	HCP-1
Riser-20	E-80	CR-110	CR-8*	CR-8*	HCP-1
""	E-81	CR-112	CR-8*	CR-8*	HCP-1
""	E-82	CR-114	CR-8*	CR-8*	HCP-1
""	E-83	CR-116	CR-8*	CR-8*	HCP-1
""	E-84	CR-118	CR-8*	CR-8*	HCP-1
""	E-85	CR-120	CR-8*	CR-8*	HCP-1
Riser-11	E-86, E-26	CR-2	CR-8*	CR-8*	HCP-1
""	E-87, E-27	CR-4	CR-8*	CR-8*	HCP-1
""	E-88, E-28	CR-6	CR-8*	CR-8*	HCP-1
""	E-89, E-29	CR-8	CR-8*	CR-8*	HCP-1
""	E-90, E-30	CR-10	CR-8*	CR-8*	HCP-1
""	E-91, E-31	CR-12	CR-8*	CR-8*	HCP-1
Riser-12	E-92, E-32	CR-14	CR-8*	CR-8*	HCP-1
""	E-93, E-33	CR-16	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

Approved by *B. W. Ferguson*

5F-23
9/9/65

TABLE 5F-3 (continued)

LOCATION	SCANNER POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Riser-12	E-94, E-34	CR-18	CR-8*	CR-8*	HCP-1
"	E-95, E-35	CR-20	CR-8*	CR-8*	HCP-1
"	E-96, E-36	CR-22	CR-8*	CR-8*	HCP-1
"	E-97, E-37	CR-24	CR-8*	CR-8*	HCP-1
Riser-13	E-98, E-38	CR-26	CR-8*	CR-8*	HCP-1
"	E-99, E-39	CR-28	CR-8*	CR-8*	HCP-1
"	E-100	Reference	CR-8*	CR-8*	HCP-1

*Although Heater H-CR-8 will be most important, the other heaters on the radiator will have a significant effect on the temperatures of the thermocouples listed in this Table.

Approved by 

5F-24
9/9/65

TABLE 5F-4
THERMOCOUPLES AND HEATERS
FOR
HEATUP OF THE COOLANT SYSTEM FLOW VENTURI

LOCATION	TR-3400 POINT	TE NUMBER	HEATER NUMBER	CONTROLLER NUMBER	CONTROL PANEL
Stem	1	FT-201A-1A	*		
Body	2	FT-201A-2A	FT-201A-1	FT-201A-1	HCP-3
Body	3	FT-201A-3A	FT-201A-2	FT-201A-2	HCP-3
Stem	4	FT-201A-4A	*		
Body	5	FT-201A-5A	FT-201A-3	FT-201A-3	HCP-3
Body	6	FT-201A-6A	FT-201A-4	FT-201A-4	HCP-3
Stem	7	FT-201B-1A	*		
Body	8	FT-201B-2A	FT-201B-1	FT-201B-1	HCP-3
Body	9	FT-201B-3A	FT-201B-2	FT-201B-2	HCP-3
Stem	10	FT-201B-4A	*		
Body	11	FT-201B-5A	FT-201B-3	FT-201B-3	HCP-3
Body	12	FT-201B-5A	FT-201B-4	FT-201B-4	HCP-3

*The thermocouples located on the stem are heated by both H-201-13-1
(controller no. H-201-13) and the body heater nearest them.

Approved by *P. H. Grayman*

5F-25
9/9/65

TABLE 5F-5
RECORD THE TEMPERATURE OF THE THERMOCOUPLES LISTED BELOW
AT THE
TEMPERATURES OF THE REACTOR VESSEL AS INDICATED.

IMPORTANT: The following data is taken at only two temperatures during heatup, but the operator should continually check the penetration temperatures (at least every 30 minutes).

TE NUMBER	REACTOR VESSEL TEMPERATURE		THERMOCOUPLE READOUT	HEATER CONTROLLER
	500°F	1000°F		
201-A9A			Scanner "A" Point 80	H-201-9
201-B9A			Scanner "A" Point 81	H-201-14
201AS-A1A			Scanner "A" Point 82	H-201-14
201-A10A			Scanner "B" Point 19	H-201-14 and 10
201-B10A			Scanner "B" Point 20	H-201-11
201-C10A			Scanner "B" Point 21	H-201-11
201-B11A			Scanner "B" Point 23	H-201-11
201-D11A			Scanner "B" Point 25	H-201-11
201-12			Scanner "B" Point 26	H-201-12
200-B9A			Scanner "A" Point 56	H-200-1
200-A9A			Scanner "A" Point 55	H-200-16
200AS-A1A			Scanner "A" Point 54	H-200-16
200-B8A			Scanner "B" Point 17	H-200-15 and 16
200-A8A			Scanner "B" Point 16	H-200-15
200-C7B			Scanner "B" Point 14	H-200-14
200-A7A			Scanner "B" Point 12	H-200-14
200-6			Scanner "B" Point 11	H-200-13

Approved by *D. H. Ferguson*

5G-1
8-13-65

5G PREPARE DRAIN TANK SYSTEMS FOR REACTOR STARTUP

Before starting to fill the fuel or coolant system, the gas valving and freeze valves in the drain tank systems should be checked. All freeze valves in the fuel drain tank transfer lines will be deep frozen during operation. Normally FD-1, FD-2, FFT and CDT will be maintained at 1000 to 1200 degrees F, the equalizing valves (HCV-544, HCV-545 and HCV-546) will be open, and the vent valves on the tanks (HCV-573, HCV-575 and HCV-577) will be closed.

Details of startup preparations are given below:

1 Blow Salt Out of Transfer Lines as Follows:

NOTE: If transfer lines are known to be free of salt, proceed to step 5G-2.

	<u>Init.</u>	<u>Date/Time</u>
1.1 Vent FST to 15.7 psia (PR-608) through HCV-692 and leave the valve open.	_____	_____
1.2 Close the following hand valves in the fuel processing system: V-608A _____ V-607A _____ V-609 _____ V-610B _____ V-690B _____	_____	_____
1.3 Blank line 111 or have a charging can attached and valved off.	_____	_____
1.4 Check to see that the salt in the transfer lines is molten and FV-104 _____, FV-105 _____, FV-106 _____, FV-107 _____, FV-108 _____, FV-109 _____, FV-112 _____ are frozen.	_____	_____
1.5 Thaw FV-110 _____ and FV-111 _____.	_____	_____
1.6 Close PCV-604.	_____	_____
1.7 Open V-610B to blow out lines 110 and 111	_____	_____

Approved by W. J. [Signature]

5G-2
8-13-65

Init. Date/Time

- 1.7 (continued)
by increasing PCV-604. PI-604 and PR-608 should be observed to determine when lines are free of salt.
- 1.8 Close V-610A. Increase pressure on FST ~ 1/2 psi and freeze FV-110.
- 1.9 Vent FD-1 ____, FD-2 ____, FFT ____ and FST ____ to less than 15 psia by opening HCV-573 ____, HCV-575 ____, HCV-577 ____, and HCV-692 ____. Leave these valves open.

IF FUEL HAS BEEN TRANSFERRED PRIOR TO STARTUP PROCEED AS

FOLLOWS: If flush salt has been transferred, use the alternate plan below.

- 1.10 Thaw FV-108 or 109 to allow the salt to be blown from the lines to the tank containing fuel salt (i.e. FD-1 or FD-2).
- 1.11 Close PCV-604.
- 1.12 Open V-610B to blow out line 108 or 109 by increasing PCV-604.
- 1.13 Close HV-610B. Increase pressure on FD-1 or FD-2 ~ 1/2 psi and freeze FV-108 or 109. Jumpers approved _____.
- 1.14 Thaw freeze valve to other drain tank (FV-109 or 108).
- 1.15 Repeat steps 1.11 through 1.14.
- 1.16 Thaw FV-107.
- 1.17 Open V-610B and adjust PCV-604 to blow out line 107. PI-604 and FFT pressure (PI-576B) should be observed to determine when the line is free of salt.
- 1.18 Close V-610A and B. Increase pressure on FFT ~ 1/2 psi and freeze FV-107.

Approved by 

5G-3
8-13-65

Init. Date/Time

1.19 Pressurize through V-610 to determine that
FV's are frozen.

1.20 Freeze FV-111.

IF FLUSH SALT HAS BEEN TRANSFERRED PRIOR TO THE STARTUP,

USE THE ALTERNATE PROCEDURE GIVEN BELOW:

1.10 Alternate: Thaw FV-107 to allow salt to be
blown from the lines to the fuel flush tank.

1.11 Alternate: Close PCV-604.

1.12 Alternate: Open V-610B and adjust PCV-604
to blow out line 107. PI-604 and FFT
pressure (PR-576B) should be observed to
determine when the line is free of salt.

1.13 Alternate: Close V-610B. Increase FFT
pressure ~ 1/2 psi and freeze FV-107.

Jumpers approved _____.

1.14 Alternate: Thaw FV-108.

1.15 Alternate: Close PCV-604.

1.16 Alternate: Open V-610B and adjust PCV-604
to blow out line 108. PI-604 and PR-574B
should be observed to determine when the
line is free of salt.

1.17 Alternate: Close V-610B. Increase FD-2
pressure ~ 1/2 psi and freeze FV-108.

Jumpers approved _____.

1.18 Alternate: Thaw FV-109.


1.19 Alternate: Close PCV-604.

1.20 Alternate: Open V-610B to adjust PCV-604
to blow out line 109. PI-604 and PR-572B
should be observed to determine when the line
is free of salt.

1.21 Alternate: Close V-610A and B. Increase
pressure on FD-1 ~ 1/2 psi and freeze FV-109.

Jumpers approved _____.

Approved by

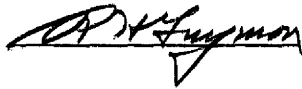

5G-4
8-13-65

	<u>Init.</u>	<u>Date/Time</u>
1.22 <u>Alternate:</u> Pressurize through line 610 to test FV's are frozen.	_____	_____
1.23 <u>Alternate:</u> Freeze FV-111.	_____	_____
2 Deep freeze the transfer freeze valves and lines. Switch FV-107, 108, 109, 110, 111, 112 to freeze. Turn off all heaters that are given in Tables 11A 1 to 4.	_____	_____
3 Check to see that FD-1, FD-2, FFT and CDT are at 1000 to 1200 degrees F and that the TE's given in Tables 5C 1, 2, 3 and 4 are being scanned.	_____	_____
4 The thermocouples in Table 5G1 monitor portions of the lines which are filled with salt during operation and also are needed to drain the fuel or coolant systems. Do not allow these to cool below 950 degrees F at any time during operation. Check that the thermocouples are plugged into the readout instrument listed. The bypass switch on TRA 3500 should be tagged open.	_____	_____
5 The fuel storage tank may be cooled and put into deep freeze condition (i.e., all heaters off) or it may be heated. FV-110 and 112 should be frozen. The lines between the tank and these freeze valves should be maintained at approximately the same temperature as the tank. If the tank is to be heated the thermocouples listed in Table 11A2 should be monitored.	_____	_____
6 Close or check closed helium supply valves HCV-572 _____, 574 _____, 576 _____, and 511 _____. If FST is not being used, close V-608B _____, 609B _____, and 690B _____. Indicate condition _____.	_____	_____
7 To prevent possible back diffusion of oxygen into the salt, all vents on the tanks should be closed. Close HCV-573 _____, 575 _____, and 577 _____. If FST is not being used, close HCV-692 _____.	_____	_____


Approved by



5G-5
8-13-65

TABLE 5G-1
THERMOCOUPLE READOUT FOR DRAIN LINES

TE No.	TE Jack Panel No.	Pyrometer Panel No.	Instrument and Point No.
204-1B	830	207	TR 3500-1
204-2B	832	208	TR 3500-2
204-3B	834	209	TR 3500-3
204-4B	836	210	TR 3500-4
204-5B	838	211	TR 3500-5
204-6B	840	212	TR 3500-6
204-B7B	927	213	TR 3500-7
204-8B	842	214	TR 3500-8
206-1B	846	215	TR 3500-9
206-2B	848	216	TR 3500-10
206-3B	850	217	TR 3500-11
206-4B	852	218	TR 3500-12
206-5B	854	219	TR 3500-13
206-6B	856	220	TR 3500-14
103-14B	402	221	TR 3500-15
106-5B	420	222	TR 3500-16
FV-105-A4	274	27	TR 3300-3
FV-105-B4	275	28	TR 3300-4
FV-106-A4	286	29	TR 3300-5
FV-106-B4	287	30	TR 3300-6
FV-204-A4	713	42	TR 3300-18
FV-204-B4	714	43	TR 3300-19
FV-206-A4	723	44	TR 3300-20
FV-206-B4	724	45	TR 3300-21



Approved by



5H-1
7/29/65

5H ROUTINE PRESSURE TEST

The fuel system will be periodically tested (approximately every year) at 65 psig and 1200°F and after opening any system. The coolant system will be tested at 65 psig and 1200°F. The test procedure is designed to provide (1) a strength test of the reactor piping and equipment, (2) a rough indication of any leakage from the reactor piping, and (3) an operating check of pressure switches which are actuated during the course of the test.

In order to thoroughly test the heat exchanger, the fuel system will be pressurized to 65 psig with the coolant system at essentially atmospheric pressure, and the coolant system will be pressurized to 65 psig after the fuel system is at atmospheric pressure. Since FD-1, FD-2, and FFT will be connected to the fuel system during operation, they will be included in the test. The FST will not be included but will be tested prior to any chemical processing. The CDT will be included when the coolant system is tested. To avoid excessive pressure on the pump seals, the lube oil systems will be pressurized. Valves will be closed in the offgas lines upstream of the charcoal beds, thus isolating them from the test. The fuel and coolant samples will be tested during the sampler startup.

Prior to starting the test, the salt piping and equipment must be at 1200°F, the reactor and drain cell must be sealed and evacuated to 12.7 psia. To prevent transfer of salt, the necessary freeze valves will be frozen, and the gas spaces of the various systems will be interconnected. The test may be run with the systems empty or with coolant salt in the coolant system and flush salt in the fuel system.

Details of the procedure are given below:

1. Check that all auxiliary systems startup operations listed in Sections 4A through 4I have been completed, or the Operations Chief has approved items omitted.

Operations Chief's approval to proceed with system empty or with salt circulating.

Date _____

Approved by

P. N. Heyman

5H-2
7/29/65

Init. Date/Time

(Main Control Room)

- 2. Open the following valves to equalize pressure between the fuel and FDT systems.
HCV-544 _____, HCV-545 _____, HCV-546 _____.
- 3. Open HCV-527 to equalize pressure between the coolant system and the CDF system. _____
- 4. Close the following: PCV-517, _____,
HCV-572 _____, HCV-574 _____, HCV-576 _____.
- 5. Close V-605A and 605B. Replace PCV-605 with a PCV with at least 65 psig capacity and a 70 psig relief valve downstream of the PCV. _____
- 6. Set the new regulator at 40 psig and start regulating through it. _____

(Water Room)

- 7. Remove cap from line upstream of PX-508 and attach a helium cylinder with low-pressure regulator. Set the pressure at zero. _____
- 8. Close the following to prevent helium addition to the coolant system. _____

(Transmitter Room)

- V-594A _____
- V-595A _____
- V-598A _____

(Coolant Drain Cell)

- V-512 _____

(Main Control Room)

- HCV-511A _____
- PCV-512 _____

(Vent House)

- 9. Close HCV-547 and HCV-536 to prevent moisture from OT-1 or 2 getting into coolant system. _____

Approved by *R. H. Guyman*

5H-3
7/29/65

Init. Date/Time

- 10. Close the following:
V-561 _____ V-522V _____
V-534A _____ V-535A _____
V-518A _____

(Special Equipment Room)

V-524A _____

(Main Control Room)

- 11. Check that FV-103 is frozen.
If test is to be made with salt circulating
(See Step 1) it will be necessary to install
clip lead jumpers around the following points:
SC1C3 to SC1D3 and SC2E3 to SC2F3. Permission
to insert jumpers _____. This will
prevent emergency drain on high pump bowl
pressure (25 psig) from thawing FV-103.

- 12. Check that the following freeze valves are
deep frozen.

FV-107 _____ FV-109 _____
FV-108 _____ FV-110 _____
FV-111 _____
FV-112 _____

(Diesel House)

- 13. Increase the back pressure on the rupture
disc in line 508 to 35 psig. It will be
necessary to increase the flow until the ex-
cess flow valve 508 closes.

- 14. Increase PCV-605 to 65 psig.

(North Electric Service Area)

- 15. If the test is to be made with salt circu-
lating (See approval at step 1) check that FP
is on and coolant pump is off.
Approval to insert prefill jumper in ECC-147.

Approved by



5H-4
7/29/65

Init. Date/Time

16. Start adding helium to the fuel system at maximum rate through Line 519 and the fuel bubblers. Set S-36 on Position 2. Open V-592, 593, 596, 589, 599, and 600 A and B.

NOTE: Do not allow PI-500M to drop below 30 psig.

Throttle HV-519A if necessary. Keep OT-1 less than fuel system (within 5 psig), keep the fuel system pressure (PRC-522), and the drain tank pressures (PR 572, 574, and 576) within 5 psi of each other. Neither coolant pressure (PR-528) nor FST pressure (PR-608) should increase. It may be necessary to close V-510A to keep OT-2 from pressurizing.

17. Record alarms and control actions that occur as indicated in Table 5H-1.

NOTE: When pressure gets to 45 psig stop pressurizing and put a 20 psig back pressure on PT-522. This will give PR-522 a range of 20-70 psig. Tag PR-522 with Caution Tag. This will also feed a false signal to all 522 Pressure switches. However action of all switches should have been checked in Table 4H-1 before 45 psig is reached. Do not check further switch action until back pressure is removed.

18. When pressure reaches 63-65 psig, in all systems, close off helium supply. Close V-519A _____, V-592A _____, V-593A _____, V-596A _____, V-589A _____, V-599A _____, and V-600A _____.

(If necessary to vent V-561 or V-522B will need to be opened.)

Approved by *B. K. [Signature]*

5H-5
7/29/65

Init. Date/Time

19. Record time and pressures at 5-min intervals as follows:

INTERVAL	TIME	PR-522	PI-500M	*PI-701 or PI-702	INITIAL
START					
5 min					
10 min					
15 min					

* Record Discharge pressure of pump which is not in service.

20. Data is satisfactory. Shift Supervisor's initials: _____

21. Lower the pressure in the fuel system; set valves as follows:

(Vent House)

V-561 Tag open _____

V-522B Tag open _____

(Special Equipment Room)

V-524A Tag open _____

Throttle V-535A to keep OT-1 pressure 5 psig less than fuel system.

NOTE: Keep pressure on OT-1, fuel system (PR-522), and FDT system (PR-572, 574, and 576) within 5 psi of each other. When pressure gets to 45 psig remove the back pressure from PR-522. This should cause 522 pressure switches to go into alarm condition.

Approved by *R. H. Guyman*

5H-6
7/29/65

	<u>Init.</u>	<u>Date/Time</u>
22. As pressure decreases from this point on, record alarms and control actions that occur as indicated in Table 5H-1. When 20 psig is reached remove jumpers if they were inserted in step 11.	_____	_____
23. When fuel system reaches 5 psig stop venting fuel system. Close operational and maintenance valves at sampler, and lower "1C" pressure to 0 psig. Turn off permissive switch in control room.	_____	_____
24. If the test is to be made with salt circulating (see approval at step 1) turn the FP off and start the CP.	_____	_____
25. Close Valve 560B, start pressurizing coolant system at maximum rate through PCV-511, FCV-512, and the coolant bubblers. Set S-39 to Position 2. Open V-594, V-595, and V-598A and B, and V-512.	_____	_____
NOTE: Do not allow PI-500M to drop below 30 psig. Throttle FCV-512 and HCV-511B if necessary. Keep OT-2 pressure, coolant system pressure (PRC-528), and the coolant drain tank pressure (PR-511D) within 5 psi of each other.		
26. Record alarms and control actions that occur as indicated in Table 5H-2.	_____	_____
27. When coolant system pressure gets to 30 psig, HCV-511 will close due to action of PSS-511D1. After this action has been verified, have instrument mechanic increase setting on this pressure switch. This will reopen HCV-511. Continue adding helium until pressure reaches approximately 40 psig.	_____	_____

Approved by *P. H. Guyman*

5H-7
7/29/65

Init. Date/Time

28. When 40 psig is reached, FCV-512 should close. At this point stop adding pressure and put a back pressure of 30 psig on PT-528. This will give PR-528 a range of 30-80 psig and allow the system pressure to be monitored all the way to 65 psig. Attach caution tag to PR-528. Note that all 528 pressure switches will see a false signal and no actions need be recorded until the back pressure is removed from PT-528. Instrument mechanic may need to continue increasing set point on PSS-511DL to allow flow through HCV-511. _____
29. When coolant system pressure reaches 65 psig, close off helium supply. Close PCV-511 _____, FCV-512 _____, V-512 _____, V-594A _____, V-595A _____, V-598A _____.
(Do not overpressurize due to heatup of helium. If necessary to vent, use V-560B.) _____
30. Record PR-528 at 5-min intervals for 15 minutes. _____

Interval	Clock Time	PR-528	*PI-751 or PI-752	Initials
Start				
5 min				
10 min				
15 min				

* Record discharge pressure of pump which is not in service.

31. Data is satisfactory. Shift supervisor's initials. _____

Approved by *R. H. Haymon*

5H-8
7/29/65

Init. Date/Time

(Vent House)

- 32. Start lowering the coolant system pressures by opening V-560B (Tag open). Keep pressure on OT-2, coolant system (PR-528) and CDT (PR-511D) within 5 psig of each other. Throttle through V-535A to lower OT-2 pressure. _____
- 33. As coolant system pressure is lowered, lower the setting on PSS-511D1 until 40 psig is reached. Reset the pressure switch at 40 psig by alternately raising and lowering the pressure in the coolant system until a 40 psig setting is obtained. _____
- 34. When pressure gets to 40 psig, remove back pressure from PT-528. _____
- 35. Record alarms and control actions which occur as indicated in Table 5H-2 until 5 psig is reached. _____
- 36. Start CP and remove jumper in ECC-147. _____
- 37. Lower setpoint on PCV-605 to 40 psig as indicated by PI-500M. _____
- 38. Remove helium cylinder from PA-508 and reinstall PX-508. (Check PX-508 and XA-4028-6 before reinstalling.) _____
- 39. Replace PCV-605 with original PCV and put spare parts in spare parts cabinet. _____
- 40. Open bubbler valves, A and B.
V-589 _____, V-593 _____, V-598 _____,
V-592 _____, V-594 _____, V-599 _____,
V-595 _____, V-600 _____, V-596 _____.

Approved by *B. H. Hymon*

5H-9
7/29/65

Init. Date/Time

- 41. Check that V-534A and V-535A have been opened.
- 42. Reset pressures and flows in all systems to values which are compatible to the present situation.

Table 5H.1 FUEL SYSTEM ANNUNCIATIONS AND CONTROL ACTIONS

CAUSE	CIRCUIT	ACTION AND AFFECTED CIRCUIT	INDICATION OR OPERATOR CHECK POINT ¹	
			PRESSURE INCREASING	PRESSURE DECREASING
Fuel Pump >2 psig	20	Open HCV 544, 545, 546. Close FCV 517, HCV 572, 574, 576	In Circuit 20 light on Jumper Board off	Light on
Overflow Tank >2 psig	21	Circuit 131, 132, 133, 127, 115, and 116	In Circuit 21 light on Jumper Board off	Light on
FD 1 >5 psig	89	Closes HCV 572, FV 109 permissive off, Circuit 115, A-720	In Circ. 115 light FD 1 Press. Light off	Light on
FD 2 >5 psig	90	Close 2 of 3 HCV 574, FV 108 permissive off Circuit 115, A 709	In Circ. 115 light FD 2 Press. Light off	Light on
FFT >5 psig	91	Close 2 of 3 FV 107 permissive off, Circuit 115, A-698	In Circ. 115 light FFT Press. Light off	Light on
FDT 1 >30 psig	109	Close HCV 572, Open HCV 573, Circuit 115, 117	In Circ. 117 FDT Press. light off In Circ. 115 FDT Press. light off	Light on
FD 2 >30 psig	110	Close HCV 574. Open HCV 575 Circuit 115, 118	In Circ. 118 FD 2 Press. light off In Circ. 115 FD 2 Press. light off	Light on
FFT >30 psig	111	Close HCV 576. Open HCV 577 Circuit 115, 119	In Circ. 119 FFT Press. light off In Circ. 115 FFT Press. light off	Light on
Fuel Pump >40	129	Close FCV 516. Circuit 129	In Circ. 129 He Press. light off	Light on
Hi Press RD-L508	AOB3	XA4028-6 ~ 10 psi Common on MB-2 XA-4001-1	Alarm	Audio and light on
Hi-Lo Fuel Pump Press.	MB 8	XA-4006-5 ~ 1 - 10 psi	Alarm	Ann. clear
Hi-Lo OT-1 Press.	MB 10	XA-4008-4 ~ 5 - 15 psi	Alarm	Audio and light on high
Hi FD 1 Press	MB 11	XA 4009-2 25 psig	Alarm	Alarm lo
Hi FD 2 Press	MB 11	XA 4009-1 25 psig	Alarm	Audio and light on high
Hi FFF Press.	MB 11	XA 4009-3 25 psig	Alarm	Ann. Clear
Cover Gas Pressure	MB 11	XA 4009-6 Common - from Aux. Bd. 3 XA 4028	Alarm	Audio and light on high
Lo He Treated Pressure	AB-3	XA 4028-4 (100 psig)	Alarm	Ann. Clear
Hi Lo He Pressure	AB-3	XA 4028-5 (FA 500L) (30 - 41 psig)	Alarm	Audio and light on high
FP >25 psig	22 & 23	Cause Emergency Drain, opens HCV 533 Al	In circuits 22 & 23 light on, jumper board off	Ann. Clear

¹ Where possible, record pressure at which action occurs.

Sampler Common

BS-1C-E 35 psia

PdS-1C-3 Press in 1C >3A (ΔP = 1 psig)

Increasing

ALARM _____

ALARM _____

Decreasing

CLEAR _____

CLEAR _____

Approved by *[Signature]*


5H-10
7/29/65

Approved by *R. K. Grayman*

Table 5H.2 COOLANT SYSTEM ANNUNCIATOR AND CONTROL ACTION

CAUSE	CIRCUIT	CONTROL ACTION	OPERATOR CHECK ¹	
			PRESSURE INCREASING	PRESSURE DECREASING
CDT >30 psig	107	Open HCV 547	In Circuit 121, CDT Press. light off _____	In Circuit 121 CDT Press. light on _____
		Close HCV 511	In Circuit 126 CDT Press. light off _____	In Circuit 126 CDT Press. light on _____
CP >40 psig	128	Close FCV 512	In Circuit 128 He Supply light off _____	In Circuit 128 He Supply Light on _____
			FCV 512 closed _____	FCV may open, operator should close _____
CP Hi-Lo Press. Ann.	XA 4005-2	Hi alarm 10 psi	Annunciation _____	
		Lo alarm 2 psi		Annunciation _____
		M B 6		
CDT-Hi Press Ann.	XA 4004-6	Hi alarm 25 psi	Annunciation _____	
		Lo alarm 1 psi		No annunciation _____
		M B 5		

¹ When possible record pressure at which action occurs.



Approved by



5I-1
10/4/65

5I FILLING THE FUEL AND COOLANT SYSTEMS

When the coolant system temperatures reach 1000 to 1100°F, it will be filled with salt, the freeze valves will be frozen, and circulation of coolant salt will be started. When the fuel and coolant system temperatures reach 1150 to 1200°F and the graphite temperatures are above 1100°F, the fuel system will be filled with either flush salt or fuel salt depending on condition of the system. It is estimated that heatup should take about 36 hours which is sufficient time to heat up the graphite. The outlet gas temperature is essentially the same as the top graphite temperature and therefore could be a good indication of graphite heatup rate. However, the installed thermocouples will probably be affected more by the heater temperatures than by the gas temperature in the system.

After the fuel system has been filled with flush salt, FV-103 will be frozen, the reactor access nozzle freeze joint will be established, and the fuel pump will be started. The flush salt will be circulated for at least two hours and sampled prior to draining to the fuel flush tank.

The fuel system will then be filled with fuel salt. The filling will be done with all three control rods withdrawn to the prefill elevation. The reactor will be filled in several steps, with sufficient time delay between steps for neutron multiplication to be determined. If criticality appears feasible, filling will be discontinued.

When the proper level is reached in the pump bowl, FV-103 will be frozen and the fuel pump started.

Details of the operations are given below:

1 FILLING THE COOLANT SYSTEM

(Main Control Room)

	<u>Init.</u>	<u>Date/Time</u>
1.1 When coolant system temperatures are above 1000°F, stop the coolant pump.	_____	_____
1.2 Check that the coolant drain tank salt temperatures are between 1100 and 1200°F.	_____	_____

Approved by

RH Lyman

5I-2
10/4/65

Init. Date/Time

- 1.3 Adjust the CDT wt. alarm to annunciate when 1500 lb of salt have been transferred to the coolant system.

NOTE: Step 2.1 can be done simultaneously with Steps 1.4 and 1.5 in preparation for adding flush salt to the fuel system.

(Heater Control Panel)

- 1.4 With FV-204 and 206 in the freeze position, heat up the shoulders to approximate operating temperatures with heater settings as listed in the building log. The heaters are controlled by FV 204-1 and FV 204-1A on HCP-2, FV 206-1 and FV 206-1A on HCP-3. Temperatures of TE FV 204-A4 and FV 204-B4 are recorded on TRA 3300-18 and 19. Temperatures of TE FV 206-A4 and FV 206-B4 are recorded on TRA 3300-20 and 21.

- 1.5 When FV-204 and 206 shoulder temperatures have been adjusted, plug TE FV 204-5B into Scanner c, Point 95.

- 1.6 Put coolant pump bubbler level instrument in service as follows:

(Main Control Room)

- 1.6.1 Set selector switch (S-39) on Position 2 which is "Record LT-598, Bubbler No. 1, and No. 2 on."

(Transmitter Room)

- 1.6.2 Check that test switch (S-40) is in the "Off" position.

- 1.6.3 Open the following:

V-594A _____

V-595A _____

V-598A _____

Approved by *R. H. Seymour*

5I-3
10/4/65

	<u>Init.</u>	<u>Date/Time</u>
1.6.4 Adjust V-594B, V-595B, and V-598B so that the following read 25 psig.		
FI-594 _____		
FI-595 _____		
FI-598 _____		
1.7 Record CDT weight: on salt inventory and transfer date sheet Table 12B-5. Attach sheet to this procedure and identify data per step number of this procedure.		
(Main Control Room)		
1.8 Set FCV-512 on auto at 0.6 l/m.		
1.9 Thaw FV-204 and FV-206 and adjust FV heaters to control TE 204-A4, 204-B4, 206-A4, and 206-B4 at 1200 to 1225°F.		
1.10 Set valves as follows:		
Equalizer HCV-527 closed _____		
CDT vent HCV-547 closed _____		
CP vent HCV-536 open _____		
CDT supply HCV-511A closed _____		
Set PIC-511C on auto at 27 psig _____.		
1.11 Stop the coolant pump (CP).		
1.12 Adjust HIC-511B to approximately 50% and open HCV-511A to begin filling coolant system. Note coolant system calibration and do not stop fill at FF-200 or FF-201 (reasons of thermal stress).		
1.13 As system is filled, record WRCDT when the upper tank probe light goes off _____ and when lower probe light goes off _____.		
1.14 Note time when salt fills FF-200. This will be after approximately 1500 lbs. of salt have been transferred. _____ Reset CDT wt. alarm to annunciate when 4800 lbs. have been transferred to the coolant system.		

Approved by *P. H. Johnson*

5I-5
10/4/65

Init. Date/Time

1.17 (continued)

reached:

PR-511 _____

PR-528 _____

LR-595 _____

WR CDT _____

1.18 Freeze FV-204 and FV-206 and record LR-595

1.19 Test FV's by venting CDT about 1 psi. Open
HCV-547 momentarily while observing LR-595.
If level drops below minimum start level,
readjust level and refreeze.

1.20 After allowing ~ 1 hour for temperatures
to reach equilibrium, check the thaw time
of FV-204 and 206 as follows or obtain the
operations chief permission to omit the
test _____.

1.20.1 Record the following temperatures

TE FV 204-1B _____ TE FV 206-1B _____

TE FV 204-2B _____ TE FV 206-2B _____

TE FV 204-3B _____ TE FV 206-3B _____

TE FV 204-A4 _____ TE FV 206-A4 _____

TE FV 204-B4 _____ TE FV 206-B4 _____

1.20.2 Record air loading to HCV-906

(TIC 906-A2) _____ and to HCV-907

(TIC 907-A2) _____.

1.20.3 Simultaneously turn off heaters

FV-204-1, 204-1A, 206-1, and 206-1A and
switch FV-204 and 206 to thaw. Record
time _____.

1.20.4 Note time when the freeze valves thaw.

FV-204 _____ FV-206 _____.

NOTE: The CP level will decrease when the first FV thaws.

Approved by R. H. Hayman

5I-6
10/4/65

Init. Date/Time

Temperatures will be used to determine when the other FV thaws.

- 1.20.5 If thaw time of either valve is longer than 15 minutes, refreeze, adjust FV temperatures and retest. See that new valves of heater settings are added to building log. _____
- 1.20.6 Refill and refreeze per steps 1.15 to 1.19. _____
- 1.21 Close HCV-536 and adjust coolant pump pressure (PR-528) to 5 psig. Record LR-595 _____
- 1.22 To lessen thermal stresses in FF-200 and 201, wait until 3 hours after Step 1.14 before starting CP. While observing the pump motor speed, amps, and watts, as well as coolant salt flow meter FR-201 and loop temperatures; start coolant pump (CP). _____
- 1.23 Check the CP level with salt circulating to see that it is within limits of Step 1.15. The calculated level at 1060°F should be between 56 and 60.5% level at 1060°F = LR-595 - .07 (T - 1060°F) where; LR-595 is present level in %, T is present temperature of coolant salt. If not within above limits, refill as follows:
 - 1.23.1 Open HCV-536 CP vent. _____
 - 1.23.2 Check that the ΔP (PR-511-PRC-528) is less than at Step 1.17. (Vent CDT slightly through HCV-547.) Record:
 - PR-511 _____
 - PRC-528 _____
 - 1.23.3 While observing pump bowl level and CDT wt., thaw FV-206. _____

Approved by



5I-7
10/4/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 1.23.4 Estimate new fill level according to information in Step 1.15 except that 1.15.2 is disregarded. Fill level should be ____%. | _____ | _____ |
| 1.23.5 Readjust level by throttling HCV-511B and opening HCV-511A to refill to above level. Close HCV-511A ____. | _____ | _____ |
| 1.23.6 Record the following:
PR-511 ____
PRC-528 ____
LR-595 ____
WR-CDTC ____ | _____ | _____ |
| 1.23.7 Refreeze FV-206 and record LR-595 ____. | _____ | _____ |
| 1.23.8 Test the FV's by venting the CDT and observing LR-595. | _____ | _____ |
| 1.23.9 Close HCV-536 and adjust the coolant pump pressure (PRC-528) to 5 psig. Record LR-595 ____. | _____ | _____ |
| 1.23.10 While observing the pump motor speed (SICPG) amps (EiICPD) and watts (EwICPD) as well as the coolant salt flow (FE-201) and the loop temperatures; start the coolant pump. Recheck the CP level. It should be between 56 and 60.5% at 1060°F. Level at 1060° = LR-595 - .07 (T - 1060°F) where: LR-595 = present level in %, T = present temperature of coolant salt. | _____ | _____ |
| 1.24 When the level is within limits with the pump running, vent the CDT through HCV-547 to 5 psig. | _____ | _____ |
| 1.25 Close HCV-547 and open HCV-527 to connect the CDT to the coolant system. With this arrangement, thawing FV-204 and 206 is all that is necessary to drain the coolant system. | _____ | _____ |

Approved by

A. N. Guyman

5I-8
10/4/65

Init. Date/Time

1.26 Record the following:

LR-595 _____

WRCDT _____

(Transmitter Room)

1.27 Record CDT inventory on salt inventory and transfer data sheet Table 12B-5 attached.

1.28 If necessary, adjust the heaters to maintain 1175^oF in the coolant system. Using the heater calibration curves as a guide, adjust each heater by approximately the same % change in current to avoid overheating any one heater.

1.29 Within one hour after starting the CP, sample the coolant salt according to Procedure 6B3 and enter into salt sample log.

2 FILL FUEL SYSTEM WITH FLUSH SALT

2.1 Set FV-104 in the freeze position, set HIC 908-A2 at ~ 5 (Check building log.), and heat up the shoulders to approximate operating temperature with htr settings as listed on the building log. The heaters are controlled by FV-104-1, FV-104-1A on HCP-9. Temperatures of TE FV 104-A4 and TE FV 104-B4 are recorded on TRA 3300-1 and 2.

2.2 Set valves as follows:

FFT Vent HCV-577 closed _____

FFT Eq. HCV-546 open _____

FP Vent HCV-533 open _____

FFT Supply HCV-576 closed _____

FDI Eq. HCV-544* open _____

FD2 Eq. HCV-545* open _____

Set PIC-517A on auto at 21 psig. _____

*These can be left closed if conditions in the tanks so dictate.

Approved by



51-9
10/4/65

Init. Date/Time

2.3 When the graphite temperatures are estimated to be above 1100°F and all other fuel system temperatures are above 1150°F, switch drain tank selected to FFT, start thawing FV-103 and FV-104, and prepare for filling the fuel system with flush salt.

2.4 Check that all the neutron instruments are in service and that BF₃ chamber confidence contact in circuit 174 has been satisfied. Observe BF₃ and other neutron instruments during the fill.

2.5 Check that all three control rods are at 24 inches.

2.6 Check that the FFT temperatures are all above 1150°F.

2.7 Check that FV-105, 106, 107, 108, 109, 110, 111, and 112 are deep frozen. This is to prevent inadvertant transfer between tanks or mixing of the fuel and flush salt through the fill lines.

2.8 Set the FFT weight alarm to annunciate when ~ 9000 lbs. have been transferred to the fuel system.

2.9 Put fuel pump bubblers level instruments in service as follows:

2.9.1 Set the selector switch (S-36) on Position 2 which is "Record LT-596 - Bubbler No. 1 and No. 2 on."

(Transmitter Room)

2.9.2 Check that test switch (S-37) is in the "Off" position.

2.9.3 Open the following:

Approved by

P. A. Ferguson

5I-10
10/4/65

	<u>Init.</u>	<u>Date/Time</u>
2.9.3 (continued)		
V-592A _____		
V-593A _____		
V-596A _____	_____	_____
2.9.4 Adjust V-592B, V-593B, and V-596B so that the following read 25 psig:		
FI-592 _____		
FI-593 _____		
FI-596 _____	_____	_____
2.10 Put the overflow tank bubbler level instru- ment in service as follows:		
2.10.1 Check that the test switch (S-38) is in the "Off" position.	_____	_____
2.10.2 Open the following:		
V-589A _____		
V-599A _____		
V-600A _____	_____	_____
2.10.3 Adjust V-589B, V-599B and V-600 so that the following read 25 psig:		
FI-589A _____		
FI-599A _____		
FI-600A _____	_____	_____
2.10.4 Check that the OFT is empty as indi- cated by LI-589 and LI-600.	_____	_____
(Main Control Room)		
2.11 When FV-104 is thawed, push operate mode button. Light will stay on. Adjust FV heaters to con- trol temperatures to ~ 1200 ^o F.	_____	_____
2.12 Take a complete salt inventory (Check list 12B5.) attached.	_____	_____
2.13 When ready to begin fill, stop FP, close HCV-546, and open HCV-576.	_____	_____

Approved by *G. K. H. M. M.*

5I-11
10/4/65

Init. Date/Time

NOTE: If a freeze joint is not already established on the reactor neck, it will be necessary to do so during the filling with flush salt. To establish a freeze joint, cooling air should be turned off at this time. With shift supervisor's permission, close the following. These should be left open if a freeze joint has already been established.

(Transmitter Room)

HIC-961 ___ inside 2" sample access (air closes)

HIC-962 ___ outside RAN (air closes)

HIC-963 ___ inside RAN (air closes)

(Main Control Room)

2.14 As the system is filled, record WR-FFT when the upper flush tank probe light goes off ___ and when the lower light goes off ____.

NOTE: FE-517 will limit the flow to less than 22 scfh with a 40 psi pressure drop. Filling of the fuel system will take approximately 3 1/2 hours. Thermocouples on piping and vessels may be helpful in following the fill. Do not overflow the fuel pump. The fuel drain tanks, fuel flush tank, and fuel storage tank weights should be observed to assure that salt is not flowing to them. The fission count rate should be observed to be sure that fuel was not inadvertently mixed with the flush salt. The reactor neck flange temperatures TER-34 and TER-35 should not exceed 400°F. Refer to fuel system calibration curves to determine the pressure differential and/or weight of salt necessary to fill to various elevations. Do not stop fill while salt is midway in freeze flanges.

2.15 Determine the desired FP fill level for normal operation at 59% ± 3% as follows: Refer

Approved by PAK [Signature]

5I-12
10/4/65

Init. Date/Time

2.15 (continued)
to the graph of "fuel system fill level"
in the calibration curve notebook. Estimate
the average salt temperature in the fuel
system from Scanner A _____°F. According
to the graph the desired fill level is
_____% . Note that the fill salt temper-
ature should be between 1150°F and 1225°F.

2.16 As soon as LR-593 indicates salt has reached
FP bowl, turn on cooling air to FP shroud.
Adjust HIC-903A (TR) for 20 SCFM cooling
air as indicated on FI-903.

2.17 Note time that FF-101 is filled; ie when
level in FP reaches ~ 50% on LR-593.

2.18 Before desired level is reached, close
HCV-576. _____ Allow for coast up of ~
5% on LR-593 after HCV-576 is closed.

NOTE: If salt inadvertently overflows into the over-
flow tank, refer to Section 9I.

2.19 Record the following:

(Main Control Room)

- PR-576A _____
- PRC-522 _____
- LR-593 _____
- WR-FFT _____

(Auxillary Control Room)

- LI-599 _____
- LI-600 _____

2.20 Freeze FV-103 and record LR-593 _____.

2.21 Test the freeze valve by venting FFT slightly.
Open HCV-577 momentarily while observing
LR-593. If the level drops too far according
to fill level graph, readjust level and re-
freeze.

Approved by *P. Kelly*

5I-13
10/4/65

Init. Date/Time

2.22 If a freeze joint is to be established in the reactor neck, proceed as follows; if not, proceed to Step 2.24.

2.22.1 Set PRC-522 at 15 psig. _____

2.22.2 Close HRC-533 and HCV-577. _____

2.22.3 Open HCV-544, 545 and 546. _____

2.22.4 If the equilibrium pressure is less than 10 psig, repressurize using PRC-522 or through line 519. Set PRC-522 at the final pressure (≥ 10 psig) and record PRC-522 _____. _____

2.22.5 Open the following valves and establish freeze joints. (This will take at least 30 minutes.)

HCV-962 _____

HCV-961 _____ HCV-963 _____

(Main Control Room)

2.22.6 When frozen record the following temperatures:

TE R-7A _____ TE R-44B _____

TE R-8A _____ TE R-45A _____

TE R-9 _____ TE R-46A _____

TE R-10 _____ TE R-47 _____

TE R-33 _____ TE R-42A _____

TE R-34 _____ TE R-43A _____

2.22.7 Reduce the pressure (PRC-522A) to 5 psig using PCV-522. Set on auto at 5 psig. _____

2.23 When the fuel pump pressure (PRC-522A) reaches 5 psig, record LR-593 _____. _____

2.24 If a freeze joint does not need to be established, proceed as follows. Shift supervisor's permission _____. _____

Approved by *P. H. Johnson*

5I-14
10/4/65


	<u>Init.</u>	<u>Date/Time</u>
2.24.1 Vent FFT through HCV-577 to a pressure such that when HCV-544, 545, and 546 are opened, the equilibrium pressure will be ~ 5 psig.	_____	_____
2.24.2 Close HCV-533 and 577.	_____	_____
2.24.3 Set PRC-522 at 5 psig.	_____	_____
2.24.4 Open HCV-544, 545 and 546.	_____	_____
2.25 Wait at least 3 hours after FF-101 was filled with salt. Step 2.17 start _____ end _____.	_____	_____
2.26 Fully insert all three control rods.	_____	_____
2.27 While observing the pump motor speed (SI-FPE), amps (EII-FPE), and watts (EWI-FPE) as well as loop temperatures; start the fuel pump.	_____	_____
NOTE: It is desirable to start the pump as soon as possible to avoid freezing salt in a cold spot. (Electric Service Area)		
2.28 Purge salt from line 103 as follows:		
2.28.1 Check V-519A closed _____.	_____	_____
2.28.2 Push and hold in HS-519-A1 _____.	_____	_____
2.28.3 Observe PI-519 _____ (will be sub-atmospheric if DT has been vented).	_____	_____
2.28.4 Throttle open V-519A to introduce small amount of helium into line 519. Close to observe pressure on PI-519 _____.	_____	_____
2.28.5 Repeat small additions of helium and observation of pressure change with V-519A closed. As soon as further additions fail to show increase in pressure, line 103 has blown through to the drain tank.	_____	_____
2.28.6 Close V-519A _____. Release HS 519-A1 _____.	_____	_____

Approved by P. H. Kingman

5I-15
10/4/65

	<u>Init.</u>	<u>Date/Time</u>
2.29 Adjust heaters to maintain 1175°F.	_____	_____
2.30 Take salt inventory (Check list 12B5.).	_____	_____
2.31 Sample from FP (Check list 6A3.) and make entry in sample log.	_____	_____
<u>3 DRAIN OF FLUSH SALT</u>		
3.1 When flush salt operation is complete (minimum of 2 hours of circulation) and sample has been taken, check that FV-105, 106, 107, 108, 109, 110, 111, and 112 are deep frozen, FV-104 is thawed, and drain tank selector is to FFT position.	_____	_____
3.2 Take a salt inventory - (Check list 12B5).	_____	_____
3.3 Check the thaw time of FV-103 as follows:		
3.3.1 Record the following temperatures:		
TE FV 103-1B _____		
TE FV 103-2B _____		
TE FV 103-3B _____		
TE 102-5C (1170 - 1180°F) _____		
TE R-32 (1170 - 1180°F) _____	_____	_____
3.3.2 Record air loading to HCV-919 (TIC 919-A2)	_____	_____
3.3.3 Simultaneously turn off reactor heaters R1, R2, and R3, and switch the fuel drain switch to drain. Record time _____.	_____	_____
3.3.4 Note time when FV-103 thaws _____ as indicated by FP level decrease.	_____	_____
3.3.5 If thaw time is longer than 15 minutes, adjust FV temperatures, and retest.	_____	_____
3.3.6 Turn on heater R1, R2, and R3 at same setting as 3.3.3.	_____	_____


NOTE: The bulk of the salt will drain in approximately 40 minutes. While the flush salt is draining, start

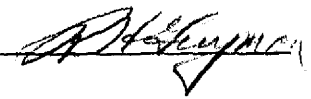Approved by 

5I-16
10/4/65

	<u>Init.</u>	<u>Date/Time</u>
heating FV-105 and 106 as given in 4.1 and 4.2 or 5.1 and 5.2. Do not allow FV's to thaw.	_____	_____
3.4 When salt has left FP, turn off cooling air to FP shroud with HIC-903.	_____	_____
3.5 When the bulk of the salt has drained, switch fuel salt drain switch to "Off"	_____	_____
3.6 Open HCV-577.	_____	_____
3.7 Continue purging through FCV-516 and the bubblers until all of the salt has been blown down to the FFT as indicated by WR-FFT-C and by closing HCV-577 to note pressure buildup in FFT.	_____	_____
3.8 When all salt has been drained, there will be sufficient pressure on fuel system to bubble through FFT. Reduce fuel system thru HCV-533 by ~ 0.5 psi to position salt in FV-104.	_____	_____
3.9 Switch FV-104 to freeze position.	_____	_____
3.10 Reduce HIC 908-A2 to zero.	_____	_____
(Heater Control Panel)		
3.11 Adjust heater controller FV-104-1 and FV-104-1A located on HCP-9 to deep freeze FV-104. TE FV 104-A4 and B4 should be maintained at 400 to 600 ^o F.	_____	_____
3.12 Take a system inventory (Check list 12B5.).	_____	_____
3.13 Push prefill button, and start fuel pump.	_____	_____
<u>4 FILL FUEL SYSTEM WITH FUEL SALT FROM FD-1 (For filling from FD-2, see Section 5.).</u>		
4.1 Check that heater H-106-4 is on at normal operation setting. Heatup Procedure 5F calls for all drain line heaters being on, with exception of the FV shoulders. Because of the configuration of pipe and heaters in this area, this temperature is dependent also		

Approved by

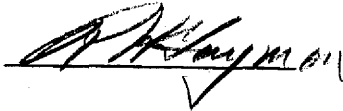

5I-17
10/4/65

Init. Date/Time

- 4.1 (continued)
upon FV-105 and FV-106 shoulder heaters. Note that TS FV 105-6A (temperature at the "Tee") must be above 900^oF before valve can be thawed. The temperature of the lower end of line 103 and the "tee" may be read out on special recorder. See Procedure 5F, Step 2.6 and Table 5F-6 as used for this heatup. As valve shoulders are heated in the next step, check that temperature gradient is such that the "Tee" reaches melting temperature before the FV shoulders.
- 4.2 With FV-106 in the freeze position, heat up FV-106 shoulders to approximate operating temperatures with htr. settings as listed in the building log. FV-105 and FV-104 will be kept in deep freeze above 400^oF. FV-106 shoulder temperatures are controlled by FV-106-1 and FV-106-1A on HCP-9 and temperatures are indicated by TE FV 106-A4A and TE FV 106-B4A on TR 3300-5 and 6. FV-104 and FV-105 will be kept in deep freeze but above 400^oF. While shoulder temperatures are being adjusted, observe FV-106-5B on TR 3300-24. Pot temperature must be up to 900^oF or valve will not thaw.
- 4.3 When temperatures of line 103 and the "Tee" are above low alarm setpoint of TR 3500, connect TE's listed in Table 5F-6 of Procedure 5F to their normal readout.
- 4.4 Check that FV-104, FV-105, 107, 108, 109, 110, 111, and 112 are deep frozen. This is to prevent inadvertant transfer between tanks or mixing of the fuel and flush salt through the fill lines.

Approved by

[Handwritten Signature]

5I-18
10/4/65

Init. Date/Time

(Main Control Room)

4.5 Check that safety interlocks as follows:

4.5.1 Vent fuel system pressure by opening HCV-533. _____

4.5.2 As soon as lights go on in circuit 20 and 21, close HCV-533. Add helium pressure to fuel system via FCV-516 and bubblers. Note pressure on PI-589A _____ psig when light goes out in ckt. 21. Note pressure on PI-592 _____ psig when light goes out in ckt. 20. _____

4.5.3 Above pressures agree with switch tabulation settings of PSS 589-A2 _____ psig and PSS 592-B2 _____ psig. _____

4.5.4 Prepare for thawing FV-106 by venting fuel system and FD-1. Open HCV-533 _____. Open HCV-573 _____. _____

4.5.5 Check prefill rod position switches in circuits 20 and 21 for each rod, and record results in the table below. Compare results with switch tabulation. (BF₃ chamber confidence is required to raise the rods.)

Sw.
Tab. Actual

ZSS N RR1-A2 _____

ZSS NCR 2-A2 _____

ZSS NCR 3-A2 _____

Raising rod lights ON in ckt. 21.

ZSS RR1-A1 _____

ZSS CR2-A1 _____

ZSS CR3-A1 _____

Approved by



5I-19
10/4/65

	<u>Init.</u>	<u>Date/Time</u>
4.5.6 Check safety high sensitivity setpoint as follows:		
4.5.6.1 The FP must be off, and all safety channels in-tripped. Note that the galloping safety lights on console are green indicating high sensitivity mode (15 KW).	_____	_____
4.5.6.2 Set the "current adjust" dial to zero on the "test module" of safety channel No. 1 (on NB2).	_____	_____
4.5.6.3 Push "low current" push button on the test module and hold in while adjusting current adjust dial.	_____	_____
4.5.6.4 Increase setting on current adjust dial until flux amplifier panel meter reads 150%. If it will not go to 150%, it may indicate that the safety flux setting has not been switched to the 15 KW range.	_____	_____
4.5.6.5 Check that the safety channel scram occurs at above set point $\pm 2\%$.	_____	_____
4.5.6.6 Reset channel No. 1.	_____	_____
4.5.6.7 Repeat Steps 1 through 6 above for safety channel No. 2.	_____	_____
4.5.6.8 Repeat Steps 1 through 6 for safety channel No. 3.	_____	_____
4.5.7 Check file for last execution of safety procedure 8A and 8D4. Record dates: 8A ____ 8D4 ____ . Repeat these if it has been longer than 1 month		

Approved by

A. K. Weyman

5I-20
10/4/65

Init. Date/Time

4.5.7 (continued)

since 8A has been done or longer than 1 week since 8D4 was done.

4.5.8 Check rod drop times as follows:

4.5.8.1 Raise No. 1 rod to 50 ln above the rod position where the first lower indicator light lit up.

4.5.8.2 Plug in rod drop times and set to zero.

4.5.8.3 Activate rod scram switch.

4.5.8.4 Repeat for rods No. 2 and No. 3, and record results.

Rod	Start Position	Drop Time (<1 sec)	Init. Date
1			
2			
3			

4.5.9 Check the control rods fidacial zero by procedure given in 4H-12.5.

4.6 Switch drain tank selector to FD-1 and start thawing FV-106.

4.7 Check that FP and OFT bubblers are in service per Step 2.9 and 2.10 and that OFT is empty according to LI-589 and LI-600.

4.8 Check that all neutron instruments are in service and the BF₃ chamber confidence interlock in circuit 174 has been satisfied.

4.9 Check that all three control rods are at the fill position specified by analysis group. Position _____. Initial _____.

4.10 Check that FD-1 temperatures are all above 1100°F (average should be 1175 to 1225°F).

Approved by *R. H. Longman*

5I-21
10/4/65

Init. Date/Time

4.11 Take a 10-minute count on the BF₃ chamber and on both fission chambers. BF₃ should be >10 cps and the fission chamber should be >0.1 cps. Record data in Tables 5I-1, 5I-2, and 5I-3 at Step 0.

NOTE: The ratio between the BF₃ count rate and the fission chamber count rate should be about 100. All nuclear instruments should be observed during the fill. However, the BF₃ instrument will be the most useful during this period. If the BF₃ instrument shows a rapid increase or if the ratio between the BF₃ count rate and the fission chamber count rate is greater than 500 or less than 20, the fill should be stopped.

4.12 When FV-106 is thawed, FP will stop. Push operate button. Light will stay on.

4.13 Set valves as follows:

FD1 vent HCV-573 closed _____

FD1 Eq. HCV-544 open _____

FP vent HCV-533 open _____

FD1 supply HCV-572 closed _____

FD2 Eq. HCV-545* open _____

FFT Eq. HCV-546* open _____

Set FCV-516 at 2.4 l/m on auto. _____

*These can be left closed if conditions in the tanks so dictate.

4.14 Take a complete inventory on check list 12B-5. Identify inventory readings with this step number.

4.15 When ready to fill, set PCV-517A at 20 psig, and close HCV-544.

NOTE: FE-517 will limit the flow to less than 22 scfh with a 40 psi pressure drop. Thermocouples on the piping and vessels may be helpful in following the fill.

Approved by *[Signature]*

5I-22
10/4/65

Init. Date/Time

Do not overfill the fuel pump. The other fuel drain tank, fuel flush tank and fuel storage tank weights should be observed to assure that no salt is flowing to them. The reactor neck flange temperatures TE R-34 and TE R-35 should not exceed 400°F. To avoid unnecessary thermal stress on freeze flanges, do not stop the fill midway of flanges.

- 4.16 As the system is filled, record WR-FD-1 when the upper probe light goes off _____ and when the lower probe light goes off _____.

The reactor will be filled in steps as given in Table 5I-1. (See fuel system calibration curve for pressure differential vs weight of salt necessary to fill to various elevations.) The drain tank weight alarm should be set to annunciate just before the required amount has been transferred. The drain tank helium supply valve (HCV-572) will then be opened for sufficient time to fill to the required elevation. After recording the data in Tables 5I-2 and 5I-3, the next fill step should be started as described above.

Plot CR/CR vs. Salt level (ft) to aid in assuring that the reactor will not go critical during the fill.

- 4.17 After the reactor vessel is full, raise set-point on PIC-517-A and continue filling.
- 4.18 Determine the desired FP fill level for normal operation of 59% ± 3% at 1200°F as follows: Refer to graph of "fuel pump fill and operate level" in the FP section of calibration curve notebook. Estimate the average salt temperature in the fuel system from scanner A at

Approved by *R. W. Johnson*

5I-23
10/4/65

Init. Date/Time

4.18 (continued)

____°F. According to the graph the desired fill level is ____%. Note that fill salt temperature should be between 1150°F and 1225°F.

4.19 As soon as LR-593 indicates salt has reached FP bowl, turn on cooling air to FP shroud. Adjust HIC-903A (TR) for 20 scfm cooling air as indicated on FI-903.

4.20 Note time that FF-101 is filled, ie when level in FP reaches ~ 50% on LR-593.

4.21 Before desired level is reached, close HCV-572. Allow for coast up of ~ 5% on LR-593 after HCV-572 is closed ____.

NOTE: If salt inadvertently overflows to the overflow tank (approximately 90% on LR-593), refer to Section 9I.

4.22 Record the following:

(Main Control Room)

PR-572 _____

PRC-522 _____

LR-593 _____

WR-FDI _____

(Auxillary Control Room)

LI-599B1 _____

LI-600B1 _____

4.23 Freeze FV-103 and record LR-593 ____.

4.24 Test the freeze valve by venting FDI slightly. Open HCV-573 momentarily, while observing LR-593. If it drops too far according to fill level graph, readjust level and refreeze.

4.25 Vent FD-1 through HCV-573 to a pressure such that when HCV-544, 545, and 546 are opened, the equilibrium pressure will be ~ 5 psig.

Approved by *A. W. Seymour*

5I-24
10/4/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 4.26 Close HCV-573 and HCV-533. | _____ | _____ |
| 4.27 Open HCV-544, 545, and 546 and set PCV-522 on auto at 5 psig. | _____ | _____ |
| 4.28 Check that the fission chamber count rate is >2 cps. (Should be 30 to 40 cps). | _____ | _____ |
| 4.29 Fully withdraw the BF ₃ chamber. | _____ | _____ |
| 4.30 Note that lights in circuits 116 and 174 indicate FC confidence. | _____ | _____ |
| 4.31 Wait at least 3 hours after FF-101 was filled with salt. Step 4.20 Start _____
End _____. | _____ | _____ |
| 4.32 Fully insert all three control rods. | _____ | _____ |
| 4.33 While observing the pump motor speed (SI-FPE), amps (EII-FPE), and watts (EWI-FPE) as well as loop temperatures; start the fuel pump. | _____ | _____ |

NOTE: It is desirable to start the pump as soon as possible to avoid freezing salt in a cold spot. With the fuel circulating at zero power, the calculated level at 1200°F should be between 56 and 62%. See chart in calibration curves notebook.

$$\text{Level at } 1200^{\circ}\text{F} = \text{LR } 593\% - .12 (T - 1200^{\circ}\text{F})$$

where; LR-593 is present level in %
T is present reactor outlet in °F.

If not between these levels, consideration should be given to adjustment of level.

(Electric Service Area)

Purge salt from line 103 as follows:

- | | | |
|---|-------|-------|
| 4.34 Check V-519A closed _____. | _____ | _____ |
| 4.35 Push and hold in HS-519A1 _____. | _____ | _____ |
| 4.36 Observe PI-519 _____ (will be sub-atmospheric if DT has been vented). | _____ | _____ |
| 4.37 Throttle open V-519A to introduce small amount of helium into line 519. Close to observe | | |

Approved by *P. W. [Signature]*

5I-25
10/4/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 4.37 (continued)
pressure on PI-519 ____. | _____ | _____ |
| 4.38 Repeat small additions of helium and obser-
vation of pressure change with V-519A closed.
As soon as further additions fail to show
increase in pressure, line 103 has blown
through to the drain tank. | _____ | _____ |
| 4.39 Close V-519A _____. Release HS-519A1 _____. | _____ | _____ |
| 4.40 If necessary, adjust both fuel and coolant
heaters to maintain 1225 F. | _____ | _____ |
| 4.41 Take salt inventory (Check list 12B-5.). | _____ | _____ |
| 4.42 Sample from FP. (Check list 6A-3.) and
make entry in sample log. | _____ | _____ |
| 4.43 With FV-105 in the freeze position, heatup
FV-105 shoulders to normal approximate
temperatures with htr settings as listed
in the building log. FV-105 shoulder
temperatures are controlled by FV-105-1
and FV-105-1A on HCP-9. Temperatures
are indicated by TE FV 105-A4A and TE FV 105-B4A
on TR 3300-3 and 4. | _____ | _____ |
| 4.44 When shoulders are heated to normal temper-
ature, turn FV-105 to thaw. | _____ | _____ |
| 4.45 Adjust FV heaters to control temperature at
~ 1200°F. | _____ | _____ |
| <p>NOTE: When FV-105 and FV-106 are thawed, an emergency
drain will drain to both FDL and FD2. Therefore, if
sufficient time is available before a drain is necessary,
FV-105 should be frozen first.</p> | | |
| 4.46 Push the reset buttons (switches 121, 122,
and 123) on the console which change the
safety chamber control actions from kilowatts
to megawatts (ie they change the rod scram
settings from 15 KW to 15 MW.) | _____ | _____ |

Approved by *[Signature]*

5I-26
10/4/65

Init. Date/Time

NOTE: Whenever the FP stops, the safety interlock settings are automatically lowered by a factor of 1000. When the pump is started, it is necessary to push the reset buttons in order to change to the higher settings. The lights on the console indicate which settings are in service. (Green for kilowatt and red for megawatt.)

5 FILL FUEL SYSTEM WITH FUEL SALT FROM FD-2 (For filling from FD-1, see Section 4.)

5.1 Check that heater H-106-4 is on at normal operating setting. Heatup Procedure 5F calls for all drain line heaters being on with exception of the FV shoulders. Because of the configuration of pipe and heaters in this area, this temperature is dependent also upon FV-105 and FV-106 shoulder heaters. Note that TS FV 105-6A (temperature at the "Tee") must be above 900^oF before valve can be thawed. The temperature of the lower end of line 103 and the "Tee" may be read out on special recorder. See Procedure 5F, Step 26 and Table 5F-6 as used for this heatup. As valve shoulders are heated in the next step, note that temperature gradient is such that the "Tee" reaches melting temperature before the FV shoulders.

5.2 With FV-105 in the freeze position, heat up FV-105 shoulders to approximate operating temperatures with htr settings as listed in the building log. FV-105 shoulder temperatures are controlled by FV-105-1 and FV-105-1A on HCP-9

Approved by

[Signature]

5I-27
10/4/65

Init. Date/Time

5.2 (continued)

and temperatures are indicated by TE FV 105-A4A and TE FV 105-B4A on TR 3300-3 and 4. FV-106 and FV-104 will be kept in deep freeze but above 400°F. While shoulder temperatures are being adjusted, observe TE FV 105-5B on TR 3300-23. Pot temperature must be up to 900°F or valve will not thaw.

5.3 When temperatures of line 103 and the "Tee" are above low alarm setpoint of TR 3500, connect TE's listed in Table 5F-6 of Procedure 5F to their normal readout.

5.4 Check that FV-104, 106, 107, 108, 109, 110, 111, and 112 are deep frozen. This is to prevent inadvertant transfer between tanks or mixing of the fuel and flush salt through the fill lines.

(Main Control Room)

5.5 Check that safety interlocks in circuits 20 and 21 function properly as follows:

5.5.1 Vent fuel system pressure by opening HCV-533.

5.5.2 As soon as lights go on in circuit 20 and 21, close HCV-533. Add helium pressure to fuel system via FCV-516 and bubblers. Note pressure on PI-589A _____ psig when light goes out in circuit 21. Note pressure on PI-592 _____ psig when light goes out in circuit 20.

5.5.3 Above pressures agree with switch tabulation settings of PSS-589A2 _____ psig and PSS-592B2 _____ psig.

Approved by *[Signature]*

5I-28
10/4/65

Init. Date/Time

5.5.4 Prepare for thawing FV-105 by venting fuel system and FD-2. Open HCV-533 _____.
Open HCV-575 _____.

5.5.5 Check prefill rod position switches in circuits 20 and 21 for each rod, and record results in the table below. Compare results with switch tabulation.

Raising rod - lights ON in circuit 20
Sw.

	<u>Tab.</u>	<u>Actual</u>
ZSS N RR1-A2	_____	_____
ZSS NCR2-A2	_____	_____
ZSS NCR3-A2	_____	_____

Raising rod lights ON in circuit 21

ZSS RR1-A1	_____	_____
ZSS CR2-A1	_____	_____
ZSS CR3-A1	_____	_____

5.5.6 Check safety high sensitivity setpoint as follows:

5.5.6.1 The FP must be off, all safety channels in-tripped. Note that the galloping safety lights on console are green indicating high sensitivity mode (15 KW).

5.5.6.2 Set the "current adjust" dial to zero on the "test module" of safety channel No. 1 (on NB2).

5.5.6.3 Push "low current" push button on the test module and hold in while adjusting current adjust dial.

5.5.6.4 Increase setting on current adjust dial until flux amplifier panel meter reads 150%. If it will not go to 150%, it may indicate

Approved by *B. W. Neely*

5I-29
10/4/65

Init. Date/Time

5.5.6.4 (continued)

that the safety flux setting has not been switched to the 15 KW range.

5.5.6.5 Check that the safety channel scram occurs at above setpoint $\pm 2\%$.

5.5.6.6 Reset channel No. 1.

5.5.6.7 Repeat Steps 1 through 6 above for safety channel No. 2.

5.5.6.8 Repeat Steps 1 through 6 for safety channel No. 3.

5.5.7 Check file for last execution of safety procedure 8D. Date ____ has been longer than 1 week since this was done, repeat Step 4 of 8D.

5.5.8 Check rod drop times as follows:

5.5.8.1 Raise No. 1 rod to 50 in. above the rod position where the first lower indicator light lit up.

5.5.8.2 Plug in rod drop times and set to zero.

5.5.8.3 Actuate rod scram switch.

5.5.8.4 Repeat for rods No. 2 and No. 3 and record results.

Rod	Start Position	Drop Time (<1 sec)	Init. Date
1			
2			
3			

5.5.9 Check the control rod fiducial zero by procedure given in 4H-12.5.

5.6 Switch drain tank selector to FD-2 and start thawing FV-105.

Approved by 

5I-30
10/4/65

	<u>Init.</u>	<u>Date/Time</u>
5.7 Check that FP and OFT bubblers are in operation per Steps 2.9 and 2.10 and that OFT is empty according to LI-599 and LI-600.	_____	_____
5.8 Check that all neutron instruments are in service and the BF ₃ chamber confidence interlock in circuit 17 ⁴ has been satisfied.	_____	_____
5.9 Check that all three control rods are at the fill position specified by the analysis group. Position _____. Initial _____.	_____	_____
5.10 Check that FD-2 temperatures are all above 1150°F (average should be 1175 to 1225°F).	_____	_____
5.11 Take a 10-minute count on the BF ₃ chamber and on both fission chambers. BF ₃ should be >10 cps and the fission chamber should be >0.1 cps. Record data in Tables 5I-2 and 5I-3 at Step 0.	_____	_____
<p>NOTE: The ratio between the BF₃ count rate and the fission chamber count rate should be about 100. All nuclear instruments should be observed during the fill. However, the BF₃ instrument will be the most useful during this period. If the BF₃ instrument shows a rapid increase or if the ratio between the BF₃ count rate and the fission chamber count rate is greater than 500 or less than 20, the fill should be stopped.</p>		
5.12 When FV-105 is thawed, FP will stop. Push operate button. Light will stay on.	_____	_____
5.13 Set valves as follows:		
FD2 vent HCV-575 closed _____		
FD2 Eq. HCV-545 open _____		
FP vent HCV-533 open _____		
FD2 supply HCV-574 closed _____		
FD1 Eq. HCV-544* open _____		

Approved by *A. L. ...*

5I-31
10/4/65

Init. Date/Time

5.13 (continued)

FFT Eq. HCV-546* open ____
Set FCV-516 at 2.4 l/m on auto. ____

*These can be left closed if conditions
in the tank so dictate.

5.14 Take a complete inventory on Check List 12B-5
attached. Identify inventory readings with
this step number.

5.15 When ready to fill, set PCV-517A at 20 psig,
and close HCV-545.

NOTE: FE-517 will limit the flow to less than 22 scfh
with a 40 psi pressure drop. Thermocouples on the
piping and vessels may be helpful in following the
fill. Do not overfill the fuel pump. The other
fuel drain tank, fuel flush tank and fuel storage
tank weights should be observed to assure that no
salt is flowing to them. The reactor neck flange
temperatures TE R-34 and RE R-35 should not exceed
400°F. To avoid unnecessary thermal stress on
freeze flanges do not stop the fill midway of flanges.

5.16 As the system is filled, record WR-FD-2 when
the upper probe light goes off ____ and when
the lower probe light goes off ____.

The reactor will be filled in steps as
given in Table 5I-1. (See fuel system cali-
bration curve for pressure differential vs
weight of salt necessary to fill to various
elevations.) The drain tank weight alarm
should be set to annuncaite just before the
required amount has been transferred. The
drain tank helium supply valve (HCV-572)
will then be opened for sufficient time to
fill to the required elevation. After

Approved by *[Signature]*

5I-32
10/4/65

Init. Date/Time

5.16 (continued)

recording the data in Table 5I-2 and 5I-3, the next fill step should be started as described above.

Plot CR/CR vs. Salt level (ft) to aid in assuring that the reactor will not go critical during the fill.

5.17 After the reactor vessel is full, raise set-point on PIC-517A and continue filling.

5.18 Determine the desired FP fill level for normal operation of $59\% \pm 3\%$ at 1200°F as follows: Refer to the graph of "fuel pump fill and operate level" in the FP section of the calibration curve notebook. Estimate the average salt temperature in the fuel system from Scanner A at _____ $^{\circ}\text{F}$. According to the graph the desired fill level is _____%. Note that fill salt temperature should be between 1150 and 1225 $^{\circ}\text{F}$.

5.19 As soon as LR-593 indicates salt has reached FP bowl, turn on cooling air to FP shroud. Adjust HIC-903A (in TR) for 20 scfm cooling air as indicated on FI-903.

5.20 Note time that FF-101 is filled; ie when level in FP reaches ~ 50% on LR-593.

5.21 Before desired level is reached, close HCV-574. Allow for coast up of ~ 5% on LR-593 after HCV-574 is closed _____.

NOTE: If salt inadvertently overflows to the overflow tank (approximately 90% on LR-593) refer to Section 9I.

Approved by *D. W. Kayman*

5I-33
10/4/65

Init. Date/Time

5.22 Record the following:

(Main Control Room)

PR-574 _____

PRC-522 _____

LR-593 _____

WR-FD2 _____

(Auxillary Control Room)

LI-599 _____

LI-600 _____

5.23 Freeze FV-103 and record LR-593 _____. _____

5.24 Test the freeze valve by venting FD2 slightly. _____

Open HCV-575 momentarily while observing
LR-593. If it drops too far according to fill
level graph, readjust level and refreeze. _____

5.25 Vent FD-2 through HCV-575 to a pressure such
that when HCV-544, 545, and 546 are opened,
the equilibrium pressure will be ~ 5 psig. _____

5.26 Close HCV-575 and HCV-533. _____

5.27 Open HCV-544, 545, and 546 and set PCV-522
on auto at 5 psig. _____

5.28 Check that the fission chamber count rate
is >2 cps. (Should be 30 to 40 cps). _____

5.29 Fully withdraw the BF₃ chamber. _____


5.30 Note that lights in circuits 116 and 174
indicate FC confidence. _____

5.31 Wait at least 3 hours after FF-101 was filled
with salt. See Step 5.26. Start _____.
End _____. _____

5.32 Fully insert all three control rods. _____

5.33 While observing the pump motor speed (SI FPE),
amps (EII FPE), and watts (EwI FPE) as well
as loop temperatures; start the fuel pump. _____

Approved by



5I-34
10/4/65

Init. Date/Time

NOTE: It is desirable to start the pump as soon as possible to avoid freezing salt in a cold spot. With the fuel circulating at zero power, the calculated level at 1200°F should be between 56 and 62%. See chart in calibration curves notebook.

Level at 1200°F = LR-593% - .12 (T - 1200°F),
where T is present reactor outlet temperature (°F) and LR-593% is present level.

If not between these limits, consideration should be given to adjustment of level.

(Electric Service Area)

Purge salt from line 103 as follows:

- 5.34 Check V-519A closed _____. _____
- 5.35 Push and hold in HS-519A1 _____. _____
- 5.36 Observe PI-519 _____ (will be sub-atmospheric if DT has been vented). _____
- 5.37 Throttle open V-519A to introduce small amount of helium into line 519. Close to observe pressure on PI-519 _____. _____
- 5.38 Repeat small additions of helium and observation of pressure change with V-519A closed. As soon as further additions fail to show increase in pressure, line 103 has blown through to the drain tank. _____
- 5.39 Close V-519A _____. Release HS-519A1 _____. _____
- 5.40 If necessary, adjust fuel and coolant system heaters to maintain 1225°F. _____
- 5.41 Take salt inventory (Check List 12B-5.). _____
- 5.42 Sample from FP. (Check List 6A-3.) Make entry into sample log. _____
- 5.43 With FV-106 in freeze position, heat up FV-106 shoulders to approximate operating temperature with htr. set tings as listed in building log.

Approved by *[Signature]*

5I-35
10/4/65

Init. Date/Time

5.43 (continued)

FV-106 shoulder temperatures are controlled by FV-106-1 and FV-106-1A on HCP 9. Temperatures are indicated by TE FV 106-A4A and TE FV 106-B4A on TR 3300-5 and 6.

5.44 When shoulders are heated to normal temperature, turn FV-106 to thaw.

5.45 Adjust FV heaters to control temperatures of ~ 1200°F.

NOTE: When FV-105 and FV-106 are thawed, an emergency drain will drain to both FD1 and FD2. Therefore, if sufficient time is available before a drain is necessary, FV-106 should be frozen first.

5.46 Push the reset buttons (switches 121, 122, and 123) on the console which change the safety chamber control actions from kilowatts to megawatts (ie they change the rod scram settings from 15 KW to 15 MW.)

NOTE: Whenever the FP stops, the safety interlock settings are automatically lowered by a factor of 1000. When the pump is started, it is necessary to push the reset buttons in order to change to the higher settings. The lights on the console indicate which settings are in service. (Green for kilowatt and red for megawatt)

Approved by *R. D. Gorman*

5I-36
10/4/65

5I-1 RECOMMENDED STOPPING POINTS
FOR
ROUTINE FILL WITH FUEL SALT

Step*	STOPPING POINT				Initial	Date and Time
	Weight Transferred (lbs)	Z/H	Location	Salt Level (ft)		
0	0	0	Salt in D.T.	---		
1	3500	0.4	---	830.2		
2	4200	0.6	---	831.2		
3	5100	0.8	Bottom of Volute	832.4		
4	6150	0.93	Top of Volute	833.1		
5	6550	1.0	Top of Graphite	833.5		
6	8350	---	Vessel Full	834.5		

*If additional points are needed, record the data at proper places in the table. Decision to take additional will be at the discretion of the shift supervisor or day shift personnel.

Approved by

Klayman

5J-1
9/14/65

5J CRITICALITY AND POWER OPERATION

The fuel and coolant salt will be circulated subcritically in the loops until power operation is desired, at which time the control rods will be withdrawn to obtain criticality.

During normal power operation, programming of the heat removal apparatus and positioning of the control rods will be done by a preset instrumented system. However, if desired for special tests, complete manual control is possible.

1 PREPARATION FOR POWER OPERATION

Prior to taking the reactor critical the system should be checked to assure that all pertinent equipment and instrumentation are functioning properly. The amount of testing depends upon the length of the shutdown prior to startup and what was done during the shutdown. If the reactor has been subcritical for as long as a day, 1.1 through 1.4 should be completed. If the shutdown has been extensive, all items listed below should be completed.

	<u>Init.</u>	<u>Date/Time</u>
1.1 Check rod drop time for each rod to be less than 1 second. (Check List 4H-12.6).	_____	_____
1.2 Check fiducial zero of each rod (Check List 4H-12.5).	_____	_____
1.3 Check flux, period, temperature, and voltage scram on each channel (Check List 8D-4).	_____	_____
1.4 Check that thermocouples on the radiator outlet tubes are plugged into Scanner D and E and that the gain on both scanners is set at 100 so that an alarm will occur at 950 ^o F or 1250 ^o F.	_____	_____
1.5 Complete the entire safety circuits (Check List 8D).	_____	_____
1.6 Complete the neutron instruments (Check List 8A).	_____	_____

Approved by B. N. Ferguson

5J-2
9/14/65

	<u>Init.</u>	<u>Date/Time</u>
1.7 Complete the process monitor's (Check List 8B).	_____	_____
1.8 Complete the personnel monitor's (Check List 8C).	_____	_____
1.9 All annunciators should be clear or approved by the shift supervisor. Shift Supervisor's Approval _____ .	_____	_____

2 STARTING POWER OPERATION USING AUTOMATIC LOAD CONTROL AND ROD SERVO

The rods will be withdrawn manually to attain criticality. When the flux demand setpoint is reached, the servo controller will manipulate the regulating rod to control the power at the setpoint.

To increase the nuclear power, the flux demand will be increased. This may cause the regulating rod to withdraw until the regulating-rod limit is reached. The limit can be changed by operating the regulating-rod drive switch or the shim rods can be manually withdrawn which will cause the regulating rod to insert.

As the flux demand is increased, the nuclear power will cause the system temperatures to rise necessitating removal of heat at the radiator. Number one blower will be started and the resultant ΔP across the radiator will cause the bypass damper to open. Switching the load-demand switch to the "increase" position will cause the radiator doors to open. The reactor-outlet temperature will be maintained constant by manually balancing the load and flux demand. Interlocks prevent automatically raising the power above 1 mw unless the reactor is in "run."

Before pushing the run button, the powers should be between 0.5 and 1 Mw; both range selectors should be in the 1.5 Mw range, and the temperature-demand setpoint should be slightly lower than the outlet temperature. The regulating rod should be in the center portion of its useful range and not at either the insert or withdraw limit. When the reactor is switched to the "run" mode, the range selector will be sealed in the 15 Mw range, and the rod-control

Approved by B. V. Lippman

5J-3
9/14/65

circuitry will be changed from flux servo to temperature servo. Under these conditions, the regulating rod will be automatically inserted or withdrawn to maintain the reactor-outlet temperature constant. The temperature can be changed by adjusting the temperature-demand setpoint. The load-demand switch will be held in the increase position to increase the heat-removal rate at the radiator to the desired power. The sequence of operations, which automatically occur as the heat-removal rate is increased is as follows:

The doors will open completely. This will set up the circuitry to start raising the ΔP setpoint resulting in the bypass damper closing. When the damper is completely closed, No. 3 blower will start automatically. This will increase the ΔP above the ΔP setpoint, and the bypass damper will reopen. Further increase in load demand will increase the ΔP setpoint, and the bypass damper will close. Operation at 10 mw will be reached with both doors open, both blowers in operation and the bypass damper partially closed. If the regulating rod reaches the withdraw limit, No. 2 and No. 3 rod will have to be manually withdrawn or the limit will have to be raised. Rod 2 and 3 should always be withdrawn the same amount (within 1 inch of each other).

Details of the procedure are given below:

	<u>Init.</u>	<u>Date/Time</u>
2.1 Set bypass-damper controller (PdM AD2A) on MB-4 on automatic.	_____	_____
2.2 Manually lower ΔP setpoint (PdIAD2A1) on console to zero using S-27.	_____	_____
2.3 Switch load control to automatic using S-23 on console. Note that light on console indicates load control automatic.	_____	_____
2.4 Note that the bypass dampers are fully open. Check indicator and position light on MB-4 and position indicator on console.	_____	_____

Approved by *A. H. Guyman*

5J-4
9/14/65

	<u>Init.</u>	<u>Date/Time</u>
2.5 Put rod control on servo using servo-mode selector switch (S-16). Note that lights on console indicate that the flux servo control is on.	_____	_____
2.6 Set servo flux channel selector switch (S-17) to No. 1 or No. 2 channel.	_____	_____
2.7 Set flux demand on selected channel as desired using range-selector switch (RXNARCA 5), and flux-demand knob (RXNARC-A6). Do not exceed 100 kw.	_____	_____
2.8 Set other channel range-selector switch at lowest possible range.	_____	_____
2.9 Check that regulating rod is at the upper regulating-rod limit.	_____	_____
2.10 Set fission-chamber selector switch (S-15) as desired. No. 1 _____ No. 2 _____ Both _____	_____	_____
2.11 Set fission-chamber No. 1 mode selector switch (S-13) to automatic (pushed in).	_____	_____
2.12 Set fission-chamber No. 2 mode selector switch (S-14) to automatic (pushed in).	_____	_____
2.13 Withdraw the shim rods (No. 2 and No. 3) to _____ in.	_____	_____
2.14 Switch regulating-rod actuator switch (S-19) to withdraw. This will raise the regulating-rod limit switch allowing the flux servo to withdraw the regulating rod. Continue regulating-rod withdrawal until criticality is attained and desired flux is reached. When critical the regulating rod should be within the range of 8 to 39 inches and should be at least 4" below the shim rods.	_____	_____

NOTE: As flux increases change the range on the alternate picoammeter as required and observe the linear

Approved by *A. V. Layman*

5J-5
9/14/65

Init. Date/Time

flux indicator. Also observe the period meters on the console.

- 2.15 When the flux reaches the flux demand setpoint, the servo will stop withdrawing the regulating rod. The regulating rod actuator switch S-19 should be released when the regulating rod is near the center of the regulating rod limit switches. _____
- 2.16 While maintaining the reactor at this power, take a reactivity balance. Check that the balance indicates a net reactivity of less than \pm _____. Shift Supervisor's permission to increase power _____. _____
- 2.17 Increase the power to ~ 1 Mw and start heat removal at the radiator to maintain the reactor outlet temperature at 1225°F as follows:
- 2.17.1 Increase nuclear flux to approximately 1 Mw by increasing the setting on the selected picoammeter range switch and/or changing the flux demand knob. The alternate picoammeter range switch should also be adjusted as power is increased. _____
- 2.17.2 Start MB-1. _____
- 2.17.3 Switch the load-demand switch to the "increase" position. This will open the inlet and outlet radiator doors. _____
- 2.17.4 Manually adjust the flux demand and the load demand to maintain the reactor-outlet temperature at 1225°F . _____
- 2.18 Adjust the temperature-demand setpoint to 1225°F (or slightly less) using XSNARCA. _____
- 2.19 Check that both range selectors on the picoammeters are in the 1.5 Mw range. _____

Approved by R. H. Youngman

5J-6
9/14/65

	<u>Init.</u>	<u>Date/Time</u>
2.20 Adjust the regulating-rod limit switches so that the regulating rod is approximately in the center of its range.	_____	_____
2.21 Push the run button (S-11). This seals the reactor in run and switch to temperature servo. Check that lights on the console indicate this.	_____	_____
2.22 Increase the radiator power withdrawal to _____ Mw by holding the load-demand switch in the "increase" position. The rod servo controller should manipulate the rods to keep the reactor-outlet temperature at 1225°F. Note that the following occurs:	_____	_____
2.22.1 Both radiator doors open to the upper limit.	_____	_____
2.22.2 The ΔP setpoint increase and the dampers close completely.	_____	_____
2.22.3 MB-3 starts.	_____	_____
2.22.4 The ΔP increases causing the bypass dampers to partially open.	_____	_____
2.22.5 The ΔP setpoint increases causing the bypass damper to close until desired power is attained.	_____	_____

3 MANUAL AND SPECIAL POWER OPERATION

The reactor heat load and flux can be adjusted manually in a number of different ways. These may be desirable for special tests. Details procedures will be written when needed.

The control rods can be manipulated manually to attain criticality and adjust power using the individual actuator switches. The regulating-rod limits have no function when in manual control. Group insertion is possible at all times and group withdrawal can be done when in the start mode. Rods 2 and 3 will normally be withdrawn and inserted the same amount within 1 in. of each other.

Approved by *A. G. G. G. G.*

5J-7
9/14/65

Rod 1 will be kept at least 4" below rod 2 and rod 3 and within the range of 8 to 39 withdrawn.

At very low powers it may be necessary to adjust power removal by adjusting the electrical heaters or it may be advantageous to raise one or both radiator doors with the blower off. At higher power with one or both of the blowers on, fine adjustment may be made by setting the doors at a fixed position and changing the bypass-damper position. The damper control may be set on automatic which will hold a constant radiator ΔP or on manual which will maintain a fixed damper position.



Approved by *A. H. Seymour*

5K-1
9/17/65

5K NORMAL OPERATING CONDITIONS

Normal operation of the reactor is considered to be when fuel salt is circulating in the fuel system and coolant salt in the coolant system. The nuclear power will depend on the experimental program. Normal values for other monitored variables are given in the building logs or on the computer log sheets, details of experiments in progress are outlined in the run instructions, and operating limits are listed in Part VI. A general description of the operations is given below.

The reactor outlet temperature will normally be held at 1225°F and other circulating salt temperatures be allowed to vary with power. The nuclear power and the heat removal rate will be adjusted to attain steady state. Normally the heat load will be adjusted through the auto load-control system. (At times manual control will be exercised over the doors, damper, and blowers.) Nuclear power will normally be controlled by the servo system: below about 1 Mw the system will be in the "start" mode and the servo will hold the power at a selected set-point; at higher powers, the system will normally be in "run" and the servo will adjust the nuclear power as required to maintain the selected reactor outlet temperature. In this mode the nuclear power will be brought to the prescribed level by adjusting the heat load.

Capsules of enriching salt will be added at intervals of approximately one week or longer to compensate for ^{235}U burnup and the slow growth of long-lived fission-product poisons. The regulating rod (under servo control) and the shim rods will be adjusted to compensate for shorter-term effects associated with changes in power level. The shim rods will be adjusted as necessary to keep the regulating rod within its most effective range, 8 to 39-inch withdrawal, and at least 4 inches below the two shim rods. The two shim rods will be kept even with each other. As the regulating rod is automatically inserted or withdrawn, the servo limit switches will be adjusted as necessary to prevent the rod from encountering either limit.

The logger-computer will ordinarily be in service, if not, normal operation can continue but with an increase in manual surveillance and logging. In particular, if the computer is out of service, special

Approved by

R. J. Haymon

5K-2
9/17/65

attention must be given to the reactivity behavior to watch for abnormal behavior. (When the computer is in service, a reactivity balance will be computed every 5 minutes, monitoring for any deviation of the reactivity from the normal behavior.)

The heaters on lines and equipment in the fuel and coolant systems will be kept at approximately the same settings as required to hold the temperatures in the system at 1225°F when subcritical except for the fuel-pump heaters which will be reduced in order to increase their usable life.

FV-103, 204, and 206 will be frozen, but the temperatures will be maintained so that they will thaw upon loss of electrical power in less than 15 min. FV-105 and FV-106 will be thawed, and either drain tank shall have sufficient free space to drain the entire reactor system. FV-104 and 107 through 112 will be deep frozen and will not thaw upon loss of electrical power. However, all salt subjected to high radiation (if in reactor or drain tank cells) will be kept above 400°F to prevent fluorine evolution.

Temperatures in FD-1, FD-2, FFT, and the CDT will be kept above 1000°F. The FST may be cooled to ambient temperature if required. No salt processing will be done while fuel or flush salt is in reactor. All drain lines in the fuel and coolant system will be kept above the freezing point of the salt.

The proper water level will be maintained in the feedwater tank for Nos. 1 and 2 steam drums, and cooling-tower water will be run continuously through the condensers so that the afterheat removal system is in standby condition.

Cover gas and bubbler flows will be maintained to the fuel and coolant pumps. The offgas from the fuel pump will be sent to the main charcoal beds, and the coolant-pump offgas will go directly to the containment-ventilation filters. The equalizer valves HCV-544, 545, and 546 between the fuel drain and the flush tanks and the fuel pump as well as HCV-527 between the coolant-drain tank and the coolant pump will be open. The helium-supply and vent valves on FD-1, FD-2, FFT, and CDT will be closed. The FST will normally be maintained at a slight positive pressure.

Approved by *R. N. Guyman*

5K-3
9/17/65

The fuel system, coolant system, FD-1, FD-2, FFT, and CDT will be maintained at about 5 psig pressure by throttling PCV-522 and PCV-528 in the offgas flow from the pumps. Two sections of the main charcoal beds will be on stream at all times with the others valved off and in standby.

Lubrication and coolant oil will be circulated through the fuel pump using FOP 1 or 2 and through the coolant pump using COP 1 or 2. The pumps will be alternated weekly. The over-pressure on the oil supply tanks will be maintained at 7 psig. The oil level in the supply tank will be maintained above 40%. Upon a gross leak in a pump seal, it is desirable for the oil supply to the bearings to be shut off immediately; however, a small leak can be tolerated indefinitely. It will, therefore, be necessary to periodically change the level setpoint, on LI-OT-1-A3 and LI-OT-2-A3. This should never exceed 2% below indicated level.


The level in the oil catch tanks gives an indication of the leakage through the seals. The large diameter upper portion of the tank is provided for shutdown margin in case of gross seal leakage. Therefore, the oil level in the catch tanks will be kept below the upper portions. (<50% on LI-524 or LI-526).

The cover-gas supply will be from a helium trailer with a bank of 6 standard helium cylinders in standby. One of the main helium dryers and oxygen-removal units will be in service, and the others will be valved off and at reduced temperature in standby. The auxiliary dryer downstream of the main units will be in service.

All leak-detector headers will be pressurized to approximately 100 psig with all valves to in-cell flanges open. All header "A" valves will be open and "B" valves closed.

Component coolant pump No. 1 or No. 2 will be in service for keeping in-cell freeze plugs frozen and for cooling the fuel-pump bowl, control rods, and reactor-access plug. Component coolant pump No. 2 will be operated for the first full (7 day) week of each month to insure proper operation and will be kept in standby to replace CCP No. 1 the rest of the time. The No. 3 component coolant pump will be in operation to keep the freeze valves in the coolant system and transfer lines frozen. (Deep-frozen freeze valves may not require coolant air.) The service

Approved by



5K-4
9/17/65

air compressor provides emergency cooling air and will be operated when needed.

The reactor and drain-tank cell pressure will be held constant at about 12.7 psia, using the component coolant pump No. 1 or No. 2. Valves in the evacuation line (569) will be throttled to hold the pressure within limits. Nitrogen will be continuously added to the cells to keep the oxygen content below 5%. The cell leak rate as indicated by the cell pressures or oxygen balance shall not exceed 1% of the cell volume per day at conditions of the maximum credible accident.

Containment ventilation stack fan No. 1 will be in operation with No. 2 fan in standby. Dampers will be adjusted to maintain air flow from less hazardous to more hazardous locations. All three stack filters will be in service at all times.

The vapor-condensing system water tank will be 2/3 full, and the pressure will be approximately atmospheric.

One cooling-tower pump will be in operation and the other in standby. Each Monday the operating pump will be stopped and the standby pump started and kept in operation for the next week. The cooling-tower fans will be operated as needed to hold the water temperature within limits. During freezing weather, the fans will be alternated to minimize icing of the tower. When the ambient temperature is above freezing and only one fan is required to control the water temperature, the fans will be alternated weekly. One treated-water pump will be in operation, and the other will be in standby. These will be alternated weekly.

The two space coolers in the reactor cell, the one in the fuel drain tank cell, and the two in the coolant cell will be in continuous operation to maintain the temperatures in the cells below 150°F.

Any water accumulating in the sumps of the reactor cell, drain-tank cell, or other cells will be jetted to the waste tank. Accumulated liquid waste will be pumped periodically to the Melton Valley waste disposal plant.

Both radiator-duct blowers (MB 2 and MB 4) will be in operation at all times.

Approved by

R. N. Layman

5K-5
9/17/65

One instrument air compressor and one air dryer will be in operation and the other units in standby. Each Monday the standby air compressor and dryer will be put into operation for the following week and the operating compressor and dryer put in standby. One bank of 6 nitrogen cylinders for emergency instrument air will be floating on the line with another bank of 6 on standby.

The 125 kw ac-dc motor generator (MG 1) will be in operation. This operates the 25 kw dc-ac motor generator (MG 4) and keeps the 250v battery bank charged. The battery bank provides emergency power for MG 4 in case MG 1 fails. MG 4 provides emergency power for the sampler enricher, FOP No. 2, COP No. 2 and the 110v instrumentation.

One 48v ac-dc motor generator, MG 2 or MG 3, will be on line and the other in standby. These provide 48v dc instrument power and keep the 48v battery bank charged. The battery bank supplies emergency instrument power in case both MG 2 and MG 3 fail. The MG sets will be alternated weekly.

The batteries in the 250v and 48v system will be checked periodically to assure that they are in good condition.

The diesel generators will not normally be in operation, but will be tested periodically to assure that they are ready for operation.

A periodic operational check will be made of all safety interlocks.

The five scanners will be used to continuously monitor the system temperatures. Scanners D and E will be set on a gain of 100 and have the reference set at 1100^oF.

All process and personnel radiation monitors will be in service at all times. Periodic checks will be made to determine that they are operating properly.

The coolant stack will be monitored for beryllium at all times. Beryllium sampling stations will be in service and the filtered samples will be removed daily and checked by the industrial hygienist. One beryllium blower will be in operation with the other in standby. These will be alternated weekly.

The jumper board will have no jumpers not authorized by chief or assistant chief of operations. There will be no red indicator lights on jumper board above 1Mw operation (Run mode).



Approved by



6-1
10/26/65

6 SAMPLING AND ADDITIONS

Various systems are sampled and analyzed periodically to determine corrosion rate, build-up of contaminants, loss of corrosion-inhibiting chemicals, etc. Details of sampling and/or additions are given in the following sections.

Table 6-1 lists the various samples routinely taken, giving the normal frequency of analysis, numbering system used, and other pertinent information. Any sample taken which does not logically fit into the categories listed will be considered a miscellaneous sample and will be numbered consecutively and preceded by an "M". (i.e. M-1, M-2, etc.)

When a sample is taken to the analytical laboratory, a "Request for Control Analysis" form X-324 (Figure 6-1) should be filled out as completely as possible and submitted with the sample. Cross out statement regarding fissionable material if it does not apply. If rush analysis is required on a particular analysis, this should be so indicated giving priority if more than one rush analysis is needed. Results from rush analyses will be phoned to the shift supervisor when completed. Pertinent information should be entered in the sample log when sample is taken and when results are received. If results are questionable, advise the analytical laboratory so that they can check their results.

Approved by



TABLE 6-1 SAMPLING SCHEDULE

Material Sampled	Sample Number	Sample Point	Sample Size	Normal Frequency	Sampling Procedure Used	Deliver Sample To		Analysis Normally Requested	Normal Limits
						Bldg.	Chemist		
Fuel Salt	FP-*	Fuel Pump	10 g	Daily	6A	2026	Lamb	⁷ Li ~ 10.3 wt % ^{Be} ~ 6.7 wt % ^{Zr} ~ 11.11 wt % ²³⁸ U ~ 3.0 wt % ²³⁵ U ~ 1.6 wt % Σ U ~ 4.6 wt % ^F ~ 68.9 wt % ^{Fe} <200 ppm ^{Cr} <100 ppm. Cr should increase and Fe and Ni decrease during a run. ^{Ni} <100 ppm ^{Mo} ^O 1100 ± 970 ppm	
Flush Salt	FP-*	Fuel Pump	9g	Weekly	6A	2026	Lamb	⁷ Li ~ 13.1 wt % ^{Be} ~ 9.7 wt % ^{Zr} ²³⁸ U ²³⁵ U Σ U ^F ~ 77.1 wt % ^{Fe} <200 ppm ^{Cr} <100 ppm ^{Ni} <100 ppm ^{Mo} ^O	

* Insert the run number at * and number consecutively for fuel and flush salt during each run (i.e. FP-4-1, FP-4-2, FP-4-3, etc. could be first flush salt sample from Run 4 and the first and second fuel-salt sample).

10/26/65
6-2

Table 6-1 (continued)

Material Sampled	Sample Number	Sample Point	Sample Size	Normal Frequency	Sampling Procedure Used	Deliver Sample To		Analysis Normally Requested	Normal Limits
						Bldg.	Chemist		
Fuel Salt	FST-*	Fuel Storage Tank	10g	As Requested	TM-907 Part VII of Design & Operations Report	2026	Lamb	⁷ Li ~ 10.3 wt % ^{Be} ~ 6.7 wt % ^{Zr} ~ 11.11 wt % ²³⁸ U ~ 3.0 wt % ²³⁵ U ~ 1.6 wt % Σ U ~ 4.6 wt % ^F ~ 68.9 wt % ^{Fe} <200 ppm ^{Cr} <100 ppm. Cr should increase and Fe and Ni decrease during a run. ^{Ni} <100 ppm ^{Mo} ^O 1100 ± 970 ppm	
Flush Salt	FST-*	Fuel Storage Tank	9g	As Requested	TM-907 Part VII of Design & Operations Report	2026	Lamb	⁷ Li ~ 13.1 wt % ^{Be} ~ 9.7 wt % ^{Zr} ²³⁸ U ²³⁵ U Σ U ^F ~ 77.1 wt % ^{Fe} <200 ppm ^{Cr} <100 ppm ^{Ni} <100 ppm ^{Mo} ^O	

*Insert the run number at * and number consecutively for fuel and flush salt during each run (i.e. FP-4-1, FP-4-2, FP-4-3, etc. could be first flush salt sample from Run 4 and the first and second fuel-salt sample).

Approved by 

10/26/65
6-3

Table 6-1 (continued)

Material Sampled	Sample Number	Sample Point	Sample Size	Normal Frequency	Sampling Procedure Used	Deliver To Bldg.	Sample To Chemist	Analysis Normally Requested	Normal Limits
Cooling Tower Water from Circulating System	CTW-**	V-829D	250ml	Note 2	6C	4500	Laing	pH Chromate Hardness CaCO ₃ Fe	7.0 - 8.0 30 - 50 ppm <2x process water <2 ppm
Process Water	PW-**	V-890D	250ml	Note 3	6C	4500	Laing	pH Hardness CaCO ₃ Fe	6.5 - 8.0 <125 ppm (arbitrary) <1 ppm
Condensate	W-**	Condensate Storage Tank No. 1 V-CST-1A	250ml	When filled	6C	4500	Laing	Hardness CaCO ₃	<5 ppm
Condensate	W-**	Condensate Storage Tank No. 2 V-CST-2A	250ml	When filled	6C	4500	Laing	Hardness CaCO ₃	<5 ppm
Reactor and Drain Tank Cell Air	CA-**	V-565B	250ml	Weekly	6D	2026	Lamb	Be O ₂ D/M/ml Gamma Spec	

** Number consecutively (do not include run number).

Note 2: Samples are analyzed daily by operations personnel for pH, chromate, and hardness. Complete analysis is run weekly by Analytical Chemistry.

Note 3: Samples are analyzed twice weekly by operations personnel for pH and hardness. Complete analysis is run weekly by Analytical Chemistry.

Approved by


6-5
 10/26/65

Table 6-1 (continued)

Material Sampled	Sample Number	Sample Point	Sample Size	Normal Frequency	Sampling Procedure Used	Deliver Sample To		Analysis Normally Requested	Normal Limits
						Bldg.	Chemist		
Lube oil Fuel & Coolant	LO-**	703D and 753D (or Drum)	250 ml	Each new drum and when required	6E	2026	Lamb	Carbon Sulphur Moisture Total Solids Bromine number Acid number Flashpoint viscosity at 100°F & 210°F Interfacial tension at 77°F Infrared spectro- photometric and spectrographic analyses	66 SSU at 100°F, 36 SSV at 210°F 322°F
				Weekly during power opera- tion only	6E	2026	Lamb	Acid No. (ASTM-974) Interfacial tension at 77°F	0.06 18 dynes/cm
Fuel and Coolant Pump Lube Oil Cover Gas	LOG-**	Line 535 (or 534)	250 ml	When required	6E	2026	Lamb	D/M/ml Gamma Spec	
Cover Gas	CG-**	He Trailer		Note 4					
Untreated Cover Gas From Trailer	CG-**	Line 548		When required	5F	9735	Sites	O ₂ H ₂ O	<1 ppm <6 ppm

** Number consecutively (do not include run number).

Note 4: The trailer will be analyzed at Y-12 each time after it is filled.

Approved by



6-6
10/26/65

Table 6-1 (continued)

Material Sampled	Sample Number	Sample Point	Sample Size	Normal Frequency	Sampling Procedure Used	Deliver Sample		Analysis Normally Requested	Normal Limits
						Eldg.	To Chemist		
Cover Gas from Dryers & O ₂ Removal Units	CG-**	Line 549		When required	5F	9735	Sites	O ₂ H ₂ O	<1 ppm <6 ppm
Offgas from the FP	OG-**	V-518F		When required	5G				
Liquid from reactor (or drain tank) Cell Sump	CS-**	V-334 (or 344)		When jetted	3J	2026	Lamb	D/M/ml Gamma Spec.	
Liquid from Sumps and the Pump Room Tank	CS-**	Misc. Cell Sumps	250 ml	When required	Dip Sample	2026	Lamb	D/M/ml Gamma Spec	
Liquid in Waste Tank	WT-**	V-305B	250 ml	Before Emptying Tank	3J	2026	Lamb	pH NaOH required to neutralize. Millicuries/ml	>7 <1.3 millicuries/cc

** Number consecutively (do not include run number).

Approved by

R. Longman

10/26/65
6-7

Approved by



6A-1
9/8/65

6A FUEL SYSTEM SAMPLING AND ENRICHING

The main parts of the sampler-enricher are: a transfer tube connected to the pump bowl through which the sample capsule is lowered to obtain a sample, a shielded transfer box on the 852' level, a manipulator used to handle the sample, helium supply and vacuum pumps used for purging, and the transport containers and transport casks. Interlocks are provided to maintain containment and minimize harmful or dangerous operations. A brief description of the manipulation necessary to remove a sample or add an enrichment capsule is given in Section 6A-1 and 6A-2. Precautions are taken to keep moisture and oxygen out of the sample and out of the fuel system and to keep radioactivity in. The purging necessary to do this is not given in the general description but is covered along with other details in the sampling check lists 6A-3 and 6A-4. The checkout and startup of the sampler-enricher after a long shutdown is covered by 6A-5. Securing the sampler-enricher for a long shutdown is covered by 6A-6. Unusual operating conditions are given in 6A-7.

Since sampling is potentially hazardous, two operators are required for most of the manipulations. In general, one person reads out loud each step in the procedure, observes the other operator as he does the operations and then checks off the check list. Where one operator is sufficient, this is indicated on the check lists.

1 GENERAL DESCRIPTION OF SAMPLING THE FUEL SYSTEM

Except for long shutdowns or sampler-enricher maintenance, the sampler-enricher will be in standby condition when not in use. The permissive switch in the control room will be off, and the vacuum pumps will not be running. An empty sample capsule will be hanging on the latch in Area 1C, the operational or maintenance valve will be closed, the access port will be closed, the manipulator cover will be on, and the removal valve will be closed so that a sample can be isolated quickly.

The first step in taking a sample is to turn the permissive switch on. This turns on the instrument control power and permits operation of the vacuum pump used in purging. A check is made to

Approved by



6A-2
9/8/65

assure that all pressures are within limits and all valves are in the proper position. The operational and/or maintenance valve is then opened, and the capsule is inserted into the pump bowl and the sample withdrawn using the capsule-drive motor. When the sample is in Area 1C, the operational or the maintenance valve is closed.

Working in the glove box near the sampler-enricher, a clean capsule is weighed and placed in a decontaminated transport container. The transport container is then lowered through a transport cask on top of the sampler-enricher into the removal seal area. The removal valve is then opened and the transport container lowered into Area 3A. The top of the transport container is unscrewed and then is partially withdrawn, and the removal valve is closed. The capsule is removed from the lower part of the transport container and placed on the floor in Area 3A.

The access port is then opened, and the sample is removed from the latch using the manipulator, and is placed in the bottom portion of the transport container in Area 3A. The empty capsule is hung on the latch, and the access port is closed. The removal valve is opened, the top is lowered back into Area 3A and threaded onto the bottom of the transport container, and it is withdrawn into the carrier cask. The removal valve is then closed, and the permissive switch turned off. The transport cask is loaded onto a truck and taken to the analytical laboratory for analysis.

A decontaminated transport container and a transport cask are brought back to the MSRE on the return trip. The transport container is placed in the glove box, and the cask is placed on top of the sampler-enricher.

2 GENERAL DESCRIPTION OF ADDING ENRICHING CAPSULES TO THE FUEL SYSTEM


The enriching salt as received at the MSRE is in arrays of 7 samples which are in sealed cans. These are stored in an approved safe. The safe should be locked at all times except when removing capsules. The safe can be opened by the head of the operations department, the MSRE engineer responsible for SS accountability or the ORNL shift supervisors. The engineer responsible for SS

Approved by *D. N. Heyman*

6A-3
9/8/65

accountability will take care of the preliminary preparations of the capsules. This will consist of opening the can, weighing the array, cutting the capsules apart, weighing each individual capsule, and attaching a latch key to each. These will then be put back into the safe.

When it is necessary to add a capsule to the system, written instructions will be issued giving the capsule number to be added. This capsule is then removed from the safe and transferred to the glove box. After weighing, holes are drilled through the capsule to allow the salt to drain when inserted into the fuel pump. The capsule is then reweighed and placed in a transport container. The sampler-enricher permissive switch is turned on, and the transport container is lowered through a transport cask on top of the sampler into the removal seal area. The removal valve is then opened, and the transport container lowered into Area 3A. The top of the transport container is unscrewed and then is partially withdrawn, and the removal valve is closed. The access port is then opened, and the empty sampling capsule is removed from the latch and placed in Area 3A. The enriching capsule is hung on the latch, and the access door is closed. The operational and/or the maintenance valve is opened, and the capsule is inserted into the pump bowl. After allowing sufficient time for the salt to melt, the capsule is withdrawn into Area 1C, and the operational or maintenance valve is closed. The access port is then opened. The empty enricher capsule is placed in the bottom part of the transport container, and the empty sample capsule is hung on the latch in Area 1C. The access port is closed, and the removal valve is opened. The top is threaded onto the bottom of the transport container, and it is withdrawn into the carrier cask. The removal valve is then closed, and the permissive switch turned off. The transport cask is loaded onto a truck and taken to the analytical laboratory for weighing of the empty enriching capsule. A decontaminated transport container and a transport cask are brought to the MSRE on the return trip. The transport container is placed in the glove box, and the cask is placed on top of the sampler-enricher.



Approved by *H. J. ...*

6A3-1
8-23-65

6A FUEL SYSTEM SAMPLING AND ENRICHING

Advise Analytical Lab. _____

Sample No. _____ Date _____ Time _____

3 FUEL SYSTEM SAMPLING CHECK LIST

Initial

3.1 Prepare to use sampler-enricher. (One operator can do
3.1.) (Control Room)

3.1.1 Notify shift supervisor (or control room super-
visor) that sampling is ready to start. _____

3.1.1.1 Turn permissive switch on. _____

3.1.1.2 Check prior check list for number of the
capsule that is on the latch. Capsule Number
is _____ Wt. of capsule _____.

(Sampler Enricher)

NOTE: 3.1.2.1 and 3.1.2.2 are to be omitted except for the first
sample taken each week.

3.1.2 Check initial conditions.

3.1.2.1 Read pressures at sampler.

Removal valve buffer (Green pen 670B)

Access port buffer (Red pen 669B) _____

Area 3A (Green pen AR 3A) _____

Area 1C (Red pen 1CE) _____

Operational valve buffer (Red pen 668C)

Maintenance valve buffer (Green pen
655C) _____

PI-590 He supply (hold at 40 ± 1 psig)

PI-664B (#1 Leak Detector) _____

PI-666B (hold at 20 ± 1 psig) _____

PI-644B (#2 leak detector) _____

Approved by *[Signature]*

6A3-2
8-23-65

Initial

PI-522B Pump bowl - must be less than
10 psig before continuing. _____

3.1.2.2 Check valves	<u>Open</u>	<u>Closed</u>	
V-664	_____		
V-686		_____	
V-673	_____		
V-687		_____	
V-641	_____		
V-662	_____		
V-676	_____		
V-661	_____		
V-668	_____		
V-672		_____	
V-666	_____		
V-644		_____	
V-654	_____		
V-642	_____		
V-643	_____		
V-665	_____		
V-640	_____		
V-685		_____	
V-683	_____		
V-645		_____	
V-646		_____	
V-669	_____		
V-670	_____		
V-668		_____	
V-655	_____		
V-657		_____	
V-671		_____	
HS-668B	_____	ZI-668B on	_____
HSV-678A		_____	
HSV-678B2		_____	

Approved by B. N. Ferguson

6A3-3
8-23-65

	Time _____	Initial _____
	Open	Closed

HSV-677A	_____	_____
HSV-667A	_____	_____
HSV-678E	_____	_____
HSV-659B	_____	_____

3.1.2.3 Prepare equipment

Turn illuminator from 50v to 120v _____

Turn vacuum pump #1 on _____

Turn vacuum pump #2 on _____

Adjust manipulator cover pressure PI-680 to
6" Hg vacuum. If high, open V-680 to adjust. _____

Open

V-650 _____ PI-650@ 80 psig

HS-542A _____ ZI-542A on _____

HS-675A _____ ZI-675A on _____

3.2 Isolate sample. (2 operators required)

3.2.1 Purge area 1C.

3.2.1.1 "Off-gas permissive" light on. _____

3.2.1.2 Evacuate area 1C for 2 minutes by opening

HCV-678E _____

HSV-678B2 _____

HSV-678A _____

Check that PR-1C pressure starts decreasing

_____ Time started _____ Stopped _____

3.2.1.3 Close HSV-678A _____

HSV-678B2 _____

HSV-678E _____

3.2.1.4 Pressurize using V-657 until PR-1C reads
15 psia. _____

3.2.2 Insert capsule into pump bowl.

3.2.2.1 Pump bowl pressure PI-522A reads _____

psig. _____

Approved by B. W. [Signature]

6A3-4
8-23-65

- | | Time _____ | <u>Initial</u> |
|---------|--|----------------|
| 3.2.2.2 | Adjust pressure in area 1C to pump bowl pressure ± 1 psi using V-657. Read on PR-1C in <u>psia</u> (14 + psig). | _____ |
| 3.2.2.3 | Manipulator cover on. PI-680 reads 6 in. Hg. vacuum. | _____ |
| 3.2.2.4 | "Removal valve closed" light on. | _____ |
| 3.2.2.5 | "Access port closed" light on. | _____ |
| 3.2.2.6 | Open operational valve by turning switch to open and hold until closed position light goes off. | _____ |
| 3.2.2.7 | Closed position light for maintenance valve must be off. If it is not off, open valve by turning switch to open and holding until closed position light goes off. | _____ |
| 3.2.2.8 | Turn capsule drive motor switch to insert and hold until capsule position indicator reads 17 ft 5 in. or until upper limit goes off, whichever is first. Time _____. | _____ |
| 3.2.3 | Partially withdraw and freeze sample. | |
| 3.2.3.1 | Leave capsule in pump bowl one minute. | _____ |
| 3.2.3.2 | Withdraw capsule 18 ± 1 inches by turning capsule drive motor switch to withdraw until capsule position indicator reads 15 ft 11 in. If position indicator should stop at any time, immediately release switch and notify shift supervisor. Time _____ | _____ |
| 3.2.3.3 | <u>Wait 10 minutes for salt to solidify.</u>
Time start _____ Time stop _____ | _____ |
| 3.2.4 | Finish withdrawal and isolate capsule. | |
| 3.2.4.1 | Finish withdrawing capsule into Area 1C by turning capsule drive motor switch to withdraw and holding. If position indicator should stop at any time, immediately release switch | |

Approved by B. W. [Signature]

6A3-5
8-23-65

- | | Time _____ | <u>Initial</u> |
|-------------------|--|----------------|
| | and notify shift supervisor. Release switch when position indicator reads 0 or lower limit light goes off, whichever is first. | _____ |
| 3.2.4.2 | Close operational valve by turning switch to close and holding until open position light goes off. | _____ |
| 3.2.4.3 | Notify control room that sample is in Area 1C. | _____ |
| 3.2.5 | Prepare to move capsule into Area 3A. | |
| (Glove Box) | | |
| 3.2.5.1 | Obtain a clean capsule and carefully weigh it. Capsule number _____ Weight _____ | _____ |
| 3.2.5.2 | Obtain decontaminated transport container. | _____ |
| 3.2.5.3 | Remove bottom part of transport container. | _____ |
| 3.2.5.4 | Check that O-rings are in good condition. | _____ |
| 3.2.5.5 | Place capsule into bottom piece with cable extending above the sides. | _____ |
| 3.2.5.6 | Insert bottom part containing the capsule into the top and engage about one thread. | _____ |
| (High Bay) | | |
| 3.2.5.7 | Attach removal tool to transport container using gasket to seal the joint. | _____ |
| 3.2.5.8 | Check that the pieces are aligned and tightly joined together. | _____ |
| (Sample Enricher) | | |
| NOTE: | Any time personnel enter restricted area on top of S. E., H. P. procedures must be followed. | |
| 3.2.5.9 | Check that transport cask is in place on top of sampler-enricher. | _____ |
| 3.2.5.10 | Check the alignment. | _____ |
| 3.2.5.11 | Open bottom drawer of transport cask. | _____ |
| 3.2.5.12 | Insert transport container and removal tool into the transport cask. | _____ |

Approved by B. H. Johnson

6A3-6
8-23-65

- | | Time _____ | <u>Initial</u> |
|----------|---|----------------|
| 3.2.5.13 | Lower transport container through removal seal and lock in position. | _____ |
| 3.2.5.14 | Open HCV-666D, removal seal buffer. | _____ |
| 3.2.5.15 | Evacuate removal area for 1 min. using HCV-679A. PI-671B should respond immediately. | _____ |
| 3.2.5.16 | Pressurize removal area to 7 ± 2 psig using V-671. | _____ |
| 3.2.5.17 | Repeat steps 15.
Repeat steps 16. | _____ |
| 3.2.6 | Purge Area 1C. | |
| 3.2.6.1 | "Off-gas permissive" light on. | _____ |
| 3.2.6.2 | Read RI-678C _____ RI-678D _____ | _____ |
| 3.2.6.3 | Purge Area 1C with helium for 5 minutes by opening HSV-667A _____
HSV-678B2 _____
HSV-678A _____
V-657 _____ | _____ |
| (a) | Time started _____ | _____ |
| (b) | After ~ 30 sec. read RI-678C _____,
RI-678D _____ | _____ |
| (c) | After ~ 5 min. read RI-678C _____,
RI-678D _____. If not less than
30 MR/hr notify the shift supervisor. | _____ |
| (d) | Time purge stopped _____. | _____ |
| 3.2.6.4 | Close V-657 _____
HSV-667A _____ | _____ |
| 3.2.6.5 | Evacuate Area 1C for 2 minutes by opening HCV-678E _____
HSV-678B2 _____
HSV-678A _____
Check that PR-1C responds immediately. | _____ |
| 3.2.6.6 | Close HSV-678A _____
HSV-678B2 _____ | _____ |

Approved by *B. H. Johnson*

6A3-7
8-23-65

	Time _____	Initial _____
3.2.6.7	Pressurize through V-657 until PR-1C reads 15 psia.	_____
3.3.1	Purge Area 3A.	_____
3.3.1.1	"Off-gas permissive" light on.	_____
3.3.1.2	Evacuate buffer between boots until PI-682 stops decreasing by opening HV-682 _____.	_____
	Close V-682 _____	_____
3.3.1.3	Evacuate manipulator cover to 8 in. Hg. vacuum by opening V-680 _____.	_____
3.3.1.4	Evacuate Area 3A until PR-3A \leq 2 psia by opening V-680 _____, HCV-678E _____, and HSV-677A _____.	_____
IMPORTANT: Watch boot to see that the pressure differential between cover and 3A does not burst the boots. If boot starts enlarging, close HSV-677A until it starts to collapse.		
3.3.1.5	Close HCV-678E _____	_____
	HSV-677A _____	_____
	V-680 _____	_____
3.3.1.6	Pressurize by opening V-672 _____ and throttling through V-663 _____ until PI-680 reads 0 psig and PR-3A reads 14 psia.	_____
IMPORTANT: Watch boot to prevent it from enlarging too much. If it starts swelling throttle through V-663. When pressurized, boot must not be collapsed against manipulator.		
3.3.1.7	Close V-663 when PI-680 reads 0 psig.	_____
	Close V-672 when PR-3A reads 14 psia.	_____
3.3.2	Move capsule into Area 3A.	_____
3.3.2.1	Evacuate buffer between manipulator boots until PI-682 stops decreasing using V-682.	_____
3.3.2.2	Adjust Area 3A pressure to $0 \pm \frac{0}{1}$ psig.	_____
3.3.2.3	Adjust manipulator cover pressure to 0 psig using V-663 and V-672.	_____
3.3.2.4	Remove manipulator cover.	_____

Approved by *D. J. Guyman*

6A3-8
8-23-65

- | | Time _____ | Initial _____ |
|----------|--|---------------|
| 3.3.2.5 | Remove manipulator arm retainer. | _____ |
| 3.3.2.6 | Check that manipulator arm moves freely through slide. Do not force. If it does not, check that boot is not collapsed against arm. If it is, reduce pressure slightly by opening HCV-678E and HSV-677A briefly. | _____ |
| 3.3.2.7 | "Access port closed" light on. | _____ |
| 3.3.2.8 | "Maintenance or Operating valve" closed light on. | _____ |
| 3.3.2.9 | "Removal seal closed" light on. | _____ |
| 3.3.2.10 | Open removal valve by holding switch to open until close position light goes off. | _____ |
| 3.3.2.11 | Lower transport container into Area 3A. It must fit over cross on floor. Use the manipulator if necessary to guide into position. The transport container should move freely through the seal. | _____ |
| 3.3.2.12 | Open transport container by turning removal tool counterclockwise until the threads are disengaged. | _____ |
| 3.3.2.13 | Carefully withdraw the top of the transport container through the removal valve and lock in position. Check that the bottom part remains on the cross. Use manipulator if necessary. Check that the capsule remains in the bottom. | _____ |
| 3.3.2.14 | Close the removal valve by holding switch to close until open position light goes off. | _____ |
| 3.3.3 | Move full capsule into Area 3A. | |
| 3.3.3.1 | Check that PR-3A is 14 psia. | _____ |
| 3.3.3.2 | Remove empty capsule from transport container. | _____ |
| 3.3.3.3 | Adjust Area 1C pressure to 0 psig. | _____ |

Approved by *B. K. Guymer*

6A3-10
8-23-65

- | | Time _____ | <u>Initial</u> |
|----------|--|----------------|
| 3.3.3.14 | Withdraw manipulator hand from Area 1C so that it will not interfere with shutting door. | _____ |
| 3.3.3.15 | Close access port by turning HS-651 to close and hold for 15 seconds to allow both sets of clamps to close. | _____ |
| 3.3.3.16 | Check that all six clamps are closed. | _____ |
| 3.3.4 | Move capsule out of Area 3A. | |
| 3.3.4.1 | "Operational or Maintenance valve" closed light on. | _____ |
| 3.3.4.2 | "Removal seal closed" light on. | _____ |
| 3.3.4.3 | "Access port closed" light on. | _____ |
| 3.3.4.4 | Open removal valve by turning switch to open and holding until closed position light goes off. | _____ |
| 3.3.4.5 | Slowly insert removal tool into Area 3A observing that the top of the transport container fits over the bottom and the capsule wire remains inside in place. | _____ |
| 3.3.4.6 | Seal the two pieces together by rotating the removal tool handle clockwise until the top touches the stop on the bottom. | _____ |
| 3.3.4.7 | Withdraw removal tool assembly through removal valve and lock in position. (HP surveillance required for steps 3.3.4.7 through 3.3.4.12.) | _____ |
| 3.3.4.8 | Close the removal valve by turning switch to close and holding until open position light goes off. | _____ |
| 3.3.4.9 | Finish withdrawing transport container into cask. Do not pull transport container above the cask. Lock in top position. | _____ |

Approved by *P. K. Hayman*

6A3-11
8-23-65

- | | Time _____ | <u>Initial</u> |
|----------|---|----------------|
| 3.3.4.10 | Close drawer in cask. | _____ |
| 3.3.4.11 | Remove removal tool. | _____ |
| 3.3.4.12 | Lock transport container in cask. | _____ |
| 3.3.4.13 | Close HCV-666D, removal seal buffer. | _____ |
| 3.3.4.14 | Replace retainer on manipulator arm. | _____ |
| 3.3.4.15 | Replace cover on manipulator. | _____ |
| 3.3.4.16 | Adjust manipulator cover to 6" Hg
vacuum using V-680. | _____ |
| 3.3.5 | Purge Area 1C. | |
| 3.3.5.1 | "Off-gas permissive" light on. | _____ |
| 3.3.5.2 | Evacuate Area 1C for 2 minutes by opening
HCV-678E _____
HSV-678B2 _____
HSV-678A _____
PR-1C should respond immediately. | _____ |
| 3.3.5.3 | Close HSV-678A _____
HSV-678B2 _____
HCV-678E _____ | _____ |
| 3.3.5.4 | Pressurize using HV-657 until PR-1C
reads 15 psia. | _____ |
| 3.3 | Prepare for stand-by conditions. (One operator can
do 3.3, 3.4, and 3.5.) | |
| 3.3.1 | Prepare Equipment
Turn illuminator to 50v. _____
Turn off vacuum pump #1. _____
Turn off vacuum pump #2. _____
Turn off HS-542A, HS-675A, V-650A. _____ | _____ |
| 3.3.2 | Notify shift supervisor (or control room
supervisor) that sampling is finished. | _____ |
| 3.3.2.1 | Give time sample isolated. (This is the
time recorded in step 3.2.3.2). | _____ |
| 3.3.2.2 | Give sample number. | _____ |
| 3.3.2.3 | Turn off permissive switch. | _____ |

Approved by A. H. Ferguson

6A3-12
8-23-65

- | | Time _____ | <u>Initial</u> |
|-------|---|----------------|
| 3.4 | Removing sample from MSRE Area. | |
| 3.4.1 | Remove transport cask from top of sampler with crane. Lower the transport cask through the Bilko doors at the south end of High Bay into the special can on truck. | _____ |
| 3.4.2 | Bolt transport cask inside can. | _____ |
| 3.4.3 | Bolt lid in place on top of can. | _____ |
| 3.4.4 | Have H.P. okay removing container from MSRE Area. | _____ |
| 3.4.5 | Take sample to Building 2026. Have HP or another operator follow the sample truck to the analytical lab. If this is not possible, notify control room supervisor upon leaving 7503, and call him immediately on arrival at 2026. If the lapsed time is longer than 10 minutes, the control room supervisor is responsible for immediately determining if difficulty was encountered en route. | _____ |
| 3.5 | Return to 7503. | |
| 3.5.1 | Bring a decontaminated transport container and a transport cask back to 7503. | _____ |
| 3.5.2 | Place transport container in glove box; take it apart and turn on helium purge. | _____ |
| 3.5.3 | Place transport cask on sampler-enricher. | _____ |

Approved by *R. V. Gumpman*

6A4-1
9/2/65

6A FUEL SYSTEM SAMPLING AND ENRICHING

Time _____

Advise Analytical Lab. _____

Initial

4 FUEL SYSTEM ENRICHING CHECK LIST

(Glove Box)

4.1 Prepare enriching capsule (one operator can do
4.1 and 4.2)

4.1.1 Obtain the proper capsule from the safe (re-
lock safe) and place it in the glove box.

4.1.2 Weigh the capsule.

Capsule number ____; Weight _____.

4.1.3 Drill 5 holes in the enriching capsule,
7/32 in. dia in the center of the bottom and 2
rows of 2 holes each 7/32 in. dia in the sides.
The rows shall be about 1-1/2 and 4 in. from the
bottom. Great care must be taken in drilling to
remove as little salt as possible.

4.1.4 Catch all shavings and store as salvage.

4.1.5 Inspect each hole for metal chips. Remove if
found.

4.1.6 Determine and record the weight of the capsule
assembly after drilling the holes. _____g.

4.1.7 Obtain decontaminated transport container.

4.1.8 Remove bottom part of transport container.

4.1.9 Check that O-rings are in good condition.

4.1.10 Place capsule into bottom piece with cable
extending above the sides.

4.1.11 Insert bottom part containing capsule into
top and engage about one thread.

4.2 Prepare to use sampler-enricher.

(Control Room)

4.2.1 Notify shift supervisor (or control room super-
visor) that enriching is ready to start.

4.2.1.1 Turn permissive switch on.

Approved by

[Handwritten Signature]

6A4-2
9/2/65

Time _____

Initial

(High Bay Area)

4.2.2 Prepare equipment.

Turn illuminator from 50v to 120v _____.

Turn vacuum pump #1 on _____.

Turn vacuum pump #2 on _____.

Open:

V-650 _____ PI-650 @ 80 psig _____

HS-542A _____ ZI-542 on _____

HS-675A _____ ZI-675 on _____

4.3 Move capsule into enriching position (2 operators required).

4.3.1 Prepare to move capsule into area 3A.

(High Bay Area)

4.3.1.1 Attach removal tool to transport container using gasket to seal the joint. _____

4.3.1.2 Check that the pieces are aligned and joined together. _____

4.3.1.3 Check that the transport cask is in place on top of sampler-enricher in proper alignment. _____

4.3.1.4 Check the alignment. _____

4.3.1.5 Open bottom drawer of transport cask. _____

4.3.1.6 Insert transport container and removal tool into transport cask. _____

4.3.1.7 Lower transport container through removal seal and lock in position. _____

4.3.1.8 Open HCV-666D, removal seal buffer. _____

4.3.1.9 Evacuate removal area using HCV-679A for about 1 minute. PI-671B should respond immediately. _____

4.3.1.10 Pressurize removal area to 7 ± 2 psig through HV-671. _____

4.3.1.11 Repeat steps 10 _____, 11 _____.

Approved by *[Signature]*

6A4-3
9/2/65

Time _____

Initial

- 4.3.2 Move capsule into area 3A.
 - 4.3.2.1 Evacuate buffer between manipulator boots until PI-682 stops decreasing using V-682. _____
 - 4.3.2.2 Area 3A pressure 0 ± 1 psig. _____
 - (a) If PR-3A is less than 14 psia, adjust by opening V-663 ___ and V-672 until PR-3A is 14 psia. _____
 - (b) If PR-3A is greater than 14 psia adjust by opening HCV-678E _____, HSV-677A _____, and V-680 _____ until PR-3A is 14 psia and PI-680 is 0 psig. _____
 - Close V-680 _____.
 - Close HCV-678E _____.
 - Close HSV-677A _____.
 - 4.3.2.3 Adjust manipulator cover pressure to 0 psig by opening V-663 and V-672. _____
 - 4.3.2.4 Remove manipulator cover. _____
 - 4.3.2.5 Remove manipulator arm retainer. _____
 - 4.3.2.6 Check that manipulator arm moves freely through slide. Do not force. If it does not, check that boot is not collapsed against arm. If it is, reduce pressure in area 3A slightly by opening HCV-678E and HSV-677A momentarily. _____
 - 4.3.2.7 "Access port closed" light on. _____
 - 4.3.2.8 "Main or oper. valve closed" light on. _____
 - 4.3.2.9 "Removal seal closed" light on. _____
 - 4.3.2.10 Open removal valve by holding switch to open until closed position light goes off. _____
 - 4.3.2.11 Lower transport container into area 3A. It must fit over cross on floor. Use the manipulator if necessary to guide into position. The transport container should move freely through the seal. _____

Approved by *R. H. Johnson*

6A4-4
9/2/65

Time _____

Initial

- 4.3.2.12 Open transport container by turning removal tool counterclockwise until the threads are disengaged. _____
- 4.3.2.13 Carefully withdraw the top of the transport container through the removal valve but not the seal. Check that the bottom part remains on the cross. Use the manipulator if necessary. Check that the capsule remains in the bottom. _____
- 4.3.2.14 Lock the removal tool in position. _____
- 4.3.2.15 Close the removal valve by holding switch to close until open position light goes off. _____
- 4.3.3 Move capsule into Area 1C.
- 4.3.3.1 Check that PR-3A is 14 psia. _____
- 4.3.3.2 Adjust Area 1C pressure to 14 psia. _____
- (a) If PR-1C is less than 14 psia, adjust using V-657 until PR-1C reads 14 psia. _____
- (b) If PR-1C is greater than 14 psia, adjust using
- HCV-678E _____
- HSV-678B2 _____
- HSV-678A _____
- until PR-1C reads 14 psia. _____
- 4.3.3.3 "Lo diff. pressure-area 1C" alarm must be off. If on, reduce area 1C pressure per step 4.3.3.2(b). _____
- 4.3.3.4 "Main. or oper. valve closed" light on. _____
- 4.3.3.5 "Removal valve closed" light on. _____
- 4.3.3.6 Open access port by turning HS-671A to open. _____
- 4.3.3.7 Check that access port is open. If access port does not open, see unusual operating procedures (6A6). _____

Approved by R. K. Hymon

6A4-5
9/2/65

Time _____

Initial

- 4.3.3.8 Remove sample capsule from latch and place in Area 3A. _____
- 4.3.3.9 Remove enriching capsule from transport container. Insert enriching capsule key into drive unit latch while the capsule remains outside access port and in Area 3A. Check that key is in vertical position. Then place capsule in Area 1C being certain that key remains in place before capsule is released from manipulator. _____
- 4.3.3.10 Check that key is in the latch and that capsule is hanging straight down. _____
- 4.3.3.11 Withdraw manipulator hand from area 1C so it does not interfere with access port closing. _____
- 4.3.3.12 Close access port by turning HS-651A to close and hold for 15 seconds to allow both sets of clamps to close. _____
- 4.3.3.13 Check that all six clamps are closed. _____
- 4.3.3.14 Replace manipulator arm retainer. _____
- 4.3.3.15 Replace manipulator cover. _____
- 4.3.3.16 Adjust manipulator cover to 6" Hg vacuum by opening V-680. _____
- 4.3.4 Purge Area 1C.
 - 4.3.4.1 "Offgas permissive" light on. _____
 - 4.3.4.2 Evacuate Area 1C for 2 minutes by opening
 - HCV-678E _____
 - HSV-678B2 _____
 - HSV-678A _____
 Area 1C pressure should respond immediately. _____
 - 4.3.4.3 Close HSV-678A _____
 - HSV-678B2 _____
 - HCV-678E _____
 - 4.3.4.4 Pressurize using V-657 until PR-1C reads 14 psia. _____

Approved by B. H. Johnson

6A4-6
9/2/65

Time _____

Initial.

4.4 Add enriching salt.

4.4.1 Insert capsule into pump bowl.

4.4.1.1 Obtain permission of control room supervisor to insert the capsule at this time. _____

4.4.1.2 Pump bowl pressure PI-522A reads _____ psig. _____

4.4.1.3 Adjust pressure in Area 1C to pump bowl pressure ± 1 psi using V-657. Read on PR-1C in psia (14 + psig). _____

4.4.1.4 Manipulator cover on. PI-680 reads 6" Hg vacuum. _____

4.4.1.5 "Removal valve closed" light on. _____

4.4.1.6 "Access port closed" light on. _____

4.4.1.7 Open operational valve by turning switch to open and hold until closed position light goes off. _____

4.4.1.8 Closed position light for maintenance valve must be off. If not, open valve by turning switch to open and holding until closed position light goes off. _____

4.4.1.9 Turn capsule drive motor switch to insert and hold until capsule position indicator reads 17 ft 4 in. or upper limit light goes off whichever is first. Time capsule reaches lower limit _____.

4.4.2 Melt enriching salt from capsule.

4.4.2.1 Leave capsule in pump bowl for five minutes. Start _____ Stop _____
Time capsule removed from pump bowl _____.

4.4.2.2 Withdraw capsule about 12 inches. _____

4.4.2.3 Reinsert the capsule into the pump bowl. _____

4.4.2.4 Leave capsule in pump bowl for one minute. _____

Approved by D. H. [Signature]

6A4-7
9/2/65

Time _____

Initial

- 4.4.3 Withdrawal and isolate capsule.
 - 4.4.3.1 Withdraw capsule into Area 1C by turning capsule-drive-motor switch to withdraw and and holding. If position indicator should stop at any time, immediately release switch and notify shift supervisor. Release switch when position indicator reads 0 or lower limit light goes off whichever is first. _____
 - 4.4.3.2 Close operational valve by turning switch to close and holding until open position light goes off. _____
 - 4.4.3.3 Notify control room supervisor that addition is complete. _____
- 4.4.4 Purge Area 1C.
 - 4.4.4.1 Offgas permissive light on. _____
 - 4.4.4.2 Read RI-678C _____ RI-678D _____.
 - 4.4.4.3 Purge Area 1C with helium for 5 minutes by opening
 - HSV-667A _____
 - HSV-678B2 _____
 - HSV-678A _____
 - V-657 _____
 - (a) Time started _____
 - (b) After ~ 30 sec read RI-678C _____
RI-678D _____.
 - (c) After ~ 5 min. read RI-678C _____
RI-678D _____.
- If not less than 30 MR/hr notify shift supervisor. _____
- (d) Time purge stopped _____
- 4.4.4.4 Close V-675 _____, HSV-667A _____

Approved by *B. K. Johnson*

6A4-8
9/2/65

Time _____

Initial

4.4.4.5 Evacuate area 1C for 2 minutes by opening:

- HCV-678E _____
- HSV-678B2 _____
- HSV-678A _____

PR-1C should respond immediately. _____

4.4.4.6 Close HSV-678A ____, HSV-678B2 ____.

4.4.4.7 Pressurize using V-657 until PR-1C
reads 14 psia. _____

4.4.5 Purge Area 3A.

4.4.5.1 "Offgas permissive" light on. _____

4.4.5.2 Evacuate buffer between boots until PI-682
stops decreasing using V-682 ____.

4.4.5.3 Evacuate manipulator cover to 8 in. Hg
vacuum by opening V-680 ____.

4.4.5.4 Evacuate area 3A until PR-3A <2 psig
using V-680, ____, HCV-678E ____ and HSV-677A
_____.

IMPORTANT: Watch boot to see that the pressure differential
between cover and 3A does not burst the boots. If
boot starts enlarging, close HSV-677A until it starts
to collapse.

4.4.5.5 Close HCV-678E ____, HSV-677A ____,
V-680 ____.

4.4.5.6 Pressurize Area 3A by opening V-672 ____
and throttling through V-663 ____ until
PI-680 reads 0 psig and PR-3A reads 14 psia. _____

IMPORTANT: Watch boot to prevent it from enlarging too much.
If it starts swelling, throttle through V-663. When
pressurized, boot must not be collapsed against
manipulator.

4.4.5.7 Close V-663 when PI-680 reads 0 psig.
Close V-672 when PR-3A reads 14 psia. _____

Approved by B. H. Johnson

6A4-9
9/2/65

Time _____

Initial

- 4.5 Remove capsule from sampler.
- 4.5.1 Move capsule into area 3A.
 - 4.5.1.1 Area 3A pressure 0 ± 1 psig
(PR-3A = 14 psia) (see section 4.3.2.2
if adjustment necessary). _____
 - 4.5.1.2 Evacuate buffer between manipulator boots
until PI-682 stops decreasing using V-682. _____
 - 4.5.1.3 Remove manipulator cover. _____
 - 4.5.1.4 Remove manipulator arm retainer. _____
 - 4.5.1.5 Area 1C pressure 0 ± 1 psig (see
Section 4.3.3.2 if adjustment necessary). _____
 - 4.5.1.6 "Lo differential pressure-area 1C"
alarm off. _____
 - 4.5.1.7 "Removal valve closed" light on. _____
 - 4.5.1.8 "Operational or maintenance valve closed"
light on. _____
 - 4.5.1.9 Open access port by turning switch to
open. _____
 - 4.5.1.10 Check that access port is open. _____
 - 4.5.1.11 Life capsule out of Area 1C into Area 3A. _____
 - 4.5.1.12 Release capsule key from latch. _____
 - 4.5.1.13 Does the capsule contain salt? ____
If "Yes" notify shift supervisor. _____
 - 4.5.1.14 Place the capsule into bottom of trans-
port container upside down. _____
 - 4.5.1.15 Attach empty sample capsule to latch
being certain capsule key is properly locked
in place and the capsule is hanging properly. _____
 - 4.5.1.16 Close access port by turning switch to
close and holding for 15 sec to allow both
sets of clamps to close. _____
 - 4.5.1.17 Check that all six clamps did close. _____

Approved by 

6A4-10
9/2/65

Time _____

Initial

- 4.5.2 Move capsule into transport cask.
 - 4.5.2.1 "Operational or maintenance valve closed"
light on. _____
 - 4.5.2.2 "Removal seal closed" light on. _____
 - 4.5.2.3 "Access port closed" light on. _____
 - 4.5.2.4 Open removal valve by turning switch to
open and holding until closed position
light goes out. _____
 - 4.5.2.5 Slowly insert removal tool into Area 3A
observing that the top of the transport
container fits over the bottom. _____
 - 4.5.2.6 Seal the two pieces together by rotating
the removal tool handle clockwise until the
top touches the stop at the bottom. _____
 - 4.5.2.7 Withdraw removal tool assembly through
removal valve, but not removal seal, lock
in position. (HP surveillance required for
steps 4.5.2.7 through 4.5.2.12) _____
 - 4.5.2.8 Close the removal valve by turning switch
to close and holding until open position
light goes out. _____
 - 4.5.2.9 Finish withdrawing transport container
into cask. Do not pull the transport con-
tainer above the cask! Lock in top position. _____
 - 4.5.2.10 Close drawer in cask. _____
 - 4.5.2.11 Remove removal tool. _____
 - 4.5.2.12 Lock transport container in cask. _____
 - 4.5.2.13 Close HCV-666D, removal seal buffer. _____
 - 4.5.2.14 Replace retainer on manipulator arm. _____
 - 4.5.2.15 Replace cover on manipulator. _____
- 4.5.3 Purge Area 1C.
 - 4.5.3.1 "Offgas permissive" light on. _____

Approved by *R. H. Longman*

6A4-11
9/2/65

Time _____

Initial

- 4.5.3.2 Evacuate Area 1 C for 2 minutes by opening
HCV-678E ____, HSV-678B2 ____, HSV-678A ____.
PR-1C should respond immediately. _____
- 4.5.3.3 Close HSV-678A ____, HSV-678B2 ____,
HSV-678E _____. _____
- 4.5.3.4 Pressurize using V-657 until PR-1C
reads 15 psia. _____
- 4.6 Prepare for standby conditions. (One operator can
do 4.6, 4.7 and 4.8.)
- 4.6.1 Prepare equipment.
- Turn illuminator to 50v ____.
- Turn off vacuum pump #1 ____.
- Turn off vacuum pump #2 ____.
- Turn off HS-542A, HS-675A, V-650A ____.
- 4.6.2 Notify shift supervisor (or control room
supervisor) that enriching is finished.
- 4.6.2.1 Give time salt added _____. (This is
time recorded in 4.4.2.1.) _____
- 4.6.2.2 Give Capsule No. _____
- 4.6.2.3 Turn off permissive switch. _____
- 4.7 Removing sample from MSRE Area.
- 4.7.1 Remove transport cask from top of sampler with
crane. Lower the transport cask through the
Bilko Doors at the south end of high bay into the
special can on truck. _____
- 4.7.2 Bolt transport cask inside can. _____
- 4.7.3 Bolt lid in place on top of can. _____
- 4.7.4 Have HP okay removing container from MSRE Area. _____
- 4.7.5 Take empty capsule to Building 2026 for
weighing. Have HP or another operator follow the
sample truck to the analytical lab. If this is not
possible, notify control room supervisor upon
leaving 7503, and call him immediately on arrival _____

Approved by W. H. Grayman

6A4-12
9/2/65

Time _____

Initial

4.7.5 (continued)

at 2026. If the lapsed time is longer than 10 minutes, the control room supervisor is responsible for immediately determining if difficulty was encountered en route.

4.8 Return to 7503.

4.8.1 Bring a decontaminated transport container and a transport cask back to 7503.

4.8.2 Place transport container in glove box; take it apart and turn on helium purge.

4.8.3 Place transport cask on sampler-enricher.

Approved by *[Signature]*

6A5-1
9/29/65

Date _____ Time _____

Init.

6A FUEL SYSTEM SAMPLING AND ENRICHING

5 FUEL SYSTEM SAMPLER STARTUP

If the sampler enricher has been shut down for long periods or extensive maintenance has been performed on the sampler, a thorough check should be made to assure that it is in condition to take samples.

5.1 Startup Check List

(Control Room)

5.1.1 Notify shift supervisor of the start of start-up procedures.

(High Bay Area)

5.1.2 Check that no work is in progress in the sampler-enricher panel boards or junction boxes. All junction box covers should be closed.

(Control Room)

5.1.3 Energize the following circuits and remove the "do not operate" tags:

- IPP A3 Cir 2 (Foxboro ECI power)
- IPP 5 Cir 21 (vacuum pumps)
- IPP 5 Cir 25, 27, 29 (208v 3 ϕ power)
- IPP 1 Cir 10 (48v DC power)
- IPP 2 Cir 16, 18 (Control power)

(High Bay Area)

5.1.4 Open the following valves:

- | | | | | | |
|-------|-----|-------|-----|-------|-----|
| V-664 | ___ | V-644 | ___ | V-683 | ___ |
| V-673 | ___ | V-654 | ___ | V-669 | ___ |
| V-641 | ___ | V-642 | ___ | V-670 | ___ |
| V-662 | ___ | V-643 | ___ | V-668 | ___ |
| V-676 | ___ | V-665 | ___ | V-655 | ___ |
| V-661 | ___ | V-640 | ___ | | |
| V-688 | ___ | | | | |

Approved by *R. K. ...*

6A5-2
9/29/65

Init.

5.1.5 Reset the following:

RM-678C _____

RM-678D _____

RM-675A light 1A 377 on _____

RM-675A light 1B 377 on _____

5.1.6 Turn on HS-668B light ZI 668B on _____

5.1.7 Purge area 1C per check list 6A3 sec. 3.2.1. _____

5.1.8 Purge area 3A per check list 6A3 sec. 3.3.1. _____

5.1.9 Check that the vacuum pump is turned off . _____

5.1.10 Check out all instrumentation per section 4H. _____

Approved by *[Signature]*

6A6-1
9/29/65

Date _____ Time _____

Init.

6A FUEL SYSTEM SAMPLING AND ENRICHING

6 FUEL SYSTEM SAMPLER SHUTDOWN

If the sample enricher is to be shut down for long periods or extensive maintenance is to be done on the sampler, precautions should be taken to assure that the sampler is adequately secured.

6.1 Shutdown Check List

(Control Room)

6.1.1 Notify shift supervisor of the start of shutdown procedures. _____

(High Bay Area)

6.1.2 Close the maintenance valve by holding HS-MV at close until the open position light goes off. _____

6.1.3 Check that the operational and removal valves are closed and the access port is shut. _____

6.1.4 Adjust the pressure in area 1C to 0 psig. _____

6.1.5 Adjust the pressure in area 3A and the manipulator cover to 0 psig. _____

6.1.6 Close all hand valves that are located in the sampler-enricher panel boards. _____

(Control Room)

6.1.7 Turn off the following electrical circuits and tag each "do not operate".


IPP A3 Cir 2 (Foxboro ECI power) _____

IPP 5 Cir 21 (vacuum pumps) _____


IPP 5 Cir 25, 27, 29 (208v 3φ power) _____

IPP 1 Cir 10 (48v DC power) _____

IPP 2 Cir 16, 18 (Control power) _____



Approved by

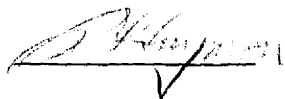

6A7-1
10/20/65

6A7
UNUSUAL OPERATING CONDITIONS
for the
SAMPLER-ENRICHER

During operation of the sampler-enricher, one or more of the components may fail to operate properly. The following procedure attempts to list the failures most likely to occur and gives operator action to be used to overcome the difficulty. Whenever corrective action is required, an entry should be made in the console log describing action taken.

7.1 The access port fails to open when HS-651A is turned to "open".

7.1.1 If all six Knu-Vise operators have opened and the access port remains closed, increase the pressure in Area 1C to about 2 psi above the pressure in Area 3A using V-657. Should the port still remain closed, check again for some obstruction in Area 3A that would prevent opening.

7.1.2 If one or more of the Knu-Vise operators fail to open when HS-651A is turned to "open", turn the switch to "closed" and hold it for 15 sec to allow all operators to close. Wait about 2 minutes for the pressure in line 650 to build up through FE-650D. Then, turn HS-651A to "open" again. If the operators still fail to open, gently push the knob on the center pin of the operator linkage which remained closed with the manipulator while holding HS-651A at "open". The operator should open easily.


7.1.3 If all six operators fail to open, check that all interlock circuits are satisfied: "removal valve closed" light on, "operational or maintenance valve closed" light on, "1C pressure greater than 3A" alarm off, and fuel-pump bowl pressure is less than 10 psig. Next, check that PI-650B indicates at least 75 psig. Check that HSV-651A, 652A, and 653A function properly. Failure of any of these to seat or to open properly will cause a malfunction of the operators. Also check that HSV-675A1 is open.

Approved by *P. H. Lyman*

6A7-2
10/20/65

- 7.2 The access port fails to close when HS-651A is turned to "close".
 - 7.2.1 If the Knu-Vise operators fail to close properly, check that PI-650B indicates at least 75 psig, HSV-651A, 652A, and 653A are seating and opening properly, HSV-675A1 is open, and there are no obstructions in the way.
- 7.3 The access port buffer pressure fails to increase properly when the access port is closed.
 - 7.3.1 If the buffer pressure fails to increase properly, turn HS-651A to "close" and hold for 15 sec to seal any operators that had failed to lock shut.
 - 7.3.2 If step 7.3.1 fails to correct the difficulty, open the access port and check for dirt or damage on the sealing surface on the gaskets.
- 7.4 Removal valve fails to open or close.
 - 7.4.1 If the removal valve fails to open when HS-RV-A is turned to open, check that all interlocks are satisfied: "removal seal buffer pressure" light on, "access port closed" light on, and "operational or maintenance valve closed" light on. If the interlocks are satisfied, check the HCV-RV-A1 and HCV-RV-A2 are operating properly. A flow of air from the vent port indicates a valve failure. Another possible cause of trouble would be slipping of the air operator on the valve body. Failure of the limit switches would indicate improper valve operation when it is actually working satisfactorily.
 - 7.4.2 If the valve fails to close properly, check for an obstruction in the valve.
- 7.5 The buffer gas pressure to the maintenance or the operational valve decreases slowly during standby.
 - 7.5.1 The pressure should bleed down only if the supply is blocked. Block valves in the helium lines to the operational and maintenance valves close upon receiving high radiation in the sampler offgas and/or high fuel-pump bowl pressure (>10 psig). If radiation caused the trip, reset the monitors by pushing reset

Approved by

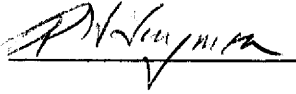

6A7-3
10/20/65


7.5.1 (continued)

buttons S-113 and/or S-114. If the radiation level is low this will reopen the valves. If the FP bowl pressure is high, the pressure receding below 10 psig will automatically reopen the valves.

- 7.6 Failure of the manipulator-boot buffer to hold a vacuum indicates a leak in the buffer system. If all tubing fittings are leak tight, one or both boots have a hole and must be replaced.
- 7.7 High radiation in the containment areas which will be detected by RE-675A and RE-675B indicates a release of gaseous activity to the building ventilation system. Block valves on all sources of gaseous activity close when either element trips. The following valves close: HSV-678A; HSV-678B2; HSV-677A; HSV-542A; HSV-675A; HSV-659B; HSV-657D; HSV-668B; and HSV-655B. To determine the source of activity, close the hand switches controlling each of these valves. When the radiation level area 4A decreases sufficiently, reset the circuits using S-113 and S-114. Lights 1A-377 and 1B-377 must be on. Then open each possible source of activity one at a time waiting to see if that was the one. A suggested order to use is HS-668B which opens HSV-668B, HSV-655B, HSV-657D, and HSV-657D, then HS-675A, HS-659B, HS-542A, and HS-675A. HS-678B and HS-677 should be opened one at a time with HS-678A closed. Corrective action will be determined by the source of activity.



Approved by

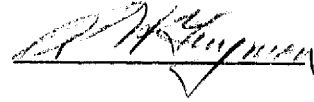

6B-1
9/29/65

6B COOLANT SYSTEM SAMPLING

The coolant sampler is designed to allow sampling without contaminating the salt with moisture or oxygen or endangering personnel due to beryllium release. The primary components of the coolant sampler are: a glove box located above the coolant cell, a transfer tube connected to the coolant pump bowl, helium supply and vacuum pumps to be used for purging, and a sample carrier which attaches to the top of the glove box for inserting empty capsules and extracting full capsules.

Interlocks are provided to minimize dangerous operations. The interlocking system is a "key interlock" system in which one key must be inserted and turned before the key necessary for the next operation can be removed. The keys and locks are color coded to aid the operator.

A brief description of the manipulations necessary to remove a sample is given in Section 6A 1. Purging operations which are utilized are not covered in this description but are given in detail in the sampling check list 6A 2. Startup of the coolant sampler is covered in startup check list 6B 3, and shutdown of the coolant sampler for a sustained duration is covered in 6B 4.

Since coolant sampling is considerably less hazardous than fuel sampling, one operator is considered sufficient for normal coolant sampling operations.

1 GENERAL DESCRIPTION OF SAMPLING THE COOLANT SYSTEM

Except for long reactor shutdowns or sampler maintenance, the coolant sampler will be in standby condition when not in use. The key which must be used to start the sampling operations will be in a lock switch on the main control board. An empty capsule will be hanging on the latch in the glove box. The glove port access will be locked closed, and the vacuum pump and light will be turned off.

At the start of the sampling operation, the key is removed from the main board. At the coolant sampler, a check is made to insure that pressures and valves are set properly to start the sampling. Lights and vacuum pump are turned on.

Approved by

[Handwritten Signature]

6B2-1
9/29/65

6B COOLANT SYSTEM SAMPLING

Sample No. _____ Date _____ Time _____

Advise Analytical Lab. _____

Init. _____

2 COOLANT SYSTEM SAMPLING CHECK LIST

2.1 Preparation For Sampling

(Control Room)

2.1.1 Notify shift supervisor (or control room supervisor) of start of sampling. _____

2.1.2 Obtain Kl from lock on MB-6. _____

2.1.3 Read pump bowl pressure PI-528 _____ psig. Pump bowl pressure must be between 4 and 6 psig before proceeding. _____

2.1.4 Check prior check list for number of the capsule that is on the latch. Capsule No. _____
Weight of capsule _____

(Hi Bay Area)

2.1.5 At the coolant pump sampler record the following pressures:

PI-CS-A _____

PI-C651 _____

2.1.6 Close red valves C-654 _____
C-657 _____
C-661 _____

2.1.7 Turn on light and start the vacuum pump. _____


2.1.8 Obtain capsule from glove box.

Capsule No. _____ Capsule Weight _____

2.1.9 Open ball valve on carrier, push 1/4" rod down until hook is through valve, hang capsule on hook, withdraw rod and capsule into carrier, and close ball valve. _____

2.1.10 Place sample carrier in place above V-3. _____

2.1.11 Connect flexible line (C-664) to valve C-669 and open valve C-669 and ball valve on carrier. _____

Approved by 

6B2+2
9/29/65


Init.

- 2.1.12 Evacuate carrier for about 1 minute by opening valves C-664 and C-662. _____
- 2.1.13 Close valve C-664 and watch PIC-664. An increase in pressure indicates a leak either at the sliding seal or the connection between the ball valves. Stop leaks. _____
- 2.1.14 Pressurize carrier to about 5 psig using valve C-670. _____
- 2.1.15 Close valves C-669, C-670, C-662, and carrier ball valve. _____

2.2 Sampling

- 2.2.1 To purge glove box atmosphere ending with box at pump bowl pressure:
 - 2.2.1.1 Insert K1 in V1, unlock open V1, lock open with K2, and remove K2. _____
 - 2.2.1.2 Insert K2 in V2, unlock, and open V2. _____
 - 2.2.1.3 Open blue valve C-662. _____
 - 2.2.1.4 Evacuate for 4 minutes. Start _____
Stop _____.
 - 2.2.1.5 Close blue valve C-662. _____
 - 2.2.1.6 Close V2, lock closed with K2, remove K2. _____
 - 2.2.1.7 Insert K2 in V1, unlock, close, lock closed with K1, and remove K1. _____
 - 2.2.1.8 Pressurize glove box to pump bowl pressure ± 0.2 psig using red and blue valve C-650. Read on PI-CS-A _____.
- 2.2.2 In order to insert capsule into pump bowl:
 - 2.2.2.1 Insert K1 into No. 2 lock switch, unlock, and remove K4. _____
 - 2.2.2.2 Insert K4 in V4, unlock, open V4, lock open with K5 and remove K5. _____
 - 2.2.2.3 Insert K5 in V5, unlock, open V5 slowly, lock open with K6, and remove K6. _____

Approved by

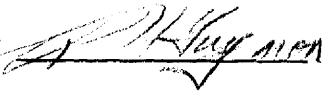

6B2-3
9/29/65

Init.

- 2.2.2.4 Insert K6 in No. 3 lock switch and unlock. _____
- 2.2.2.5 Insert capsule into pump bowl by turning capsule drive switch clockwise to insert. _____
Watch cable during insertion. If cable does not remain straight, stop inserting, withdraw partly and reinsert. Lower limit switch will stop motor when capsule is fully inserted. _____
Release switch when cable stops moving. _____
- 2.2.3 Leave capsule in pump bowl one minute. _____
- 2.2.4 Withdraw capsule until amber light comes on (~ 25 seconds required). Time withdrawal started _____. _____
- 2.2.5 Allow at least 10 minutes for salt to solidify. _____
Start _____ Stop _____.
- 2.2.6 To withdraw capsule into glove box:
 - 2.2.6.1 Turn drive unit motor switch counterclockwise to withdraw. Watch cable. If it stops moving before being fully withdrawn, immediately release switch and notify shift supervisor. _____
 - 2.2.6.2 Lock No. 3 lock switch with K6 and remove K6. _____
 - 2.2.6.3 Insert K6 in V5, unlock, close, lock closed with K5, and remove K5. _____
 - 2.2.6.4 Insert K5 in V4, unlock, close, lock closed with K4, and remove K4. _____
 - 2.2.6.5 Insert K4 in No. 2 lock switch, lock switch, and remove K1. _____
- 2.2.7 In order to purge glove box atmosphere ending with box at 0 psig:
 - 2.2.7.1 Insert K1 in V1, unlock, open V1, lock open with K2, and remove K2. _____
 - 2.2.7.2 Insert K2 in V2, unlock, and open V2. _____
 - 2.2.7.3 Open blue valve C-662. _____

Approved by

[Signature]

6B2-4
9/29/65

Init.

- 2.2.7.4 Evacuate for 4 minutes. Start _____
Stop _____
- 2.2.7.5 Close blue valve C-662. _____
- 2.2.7.6 Close V2, lock closed with K2, remove K2,
and insert in No. 1 lock switch on glove port. _____
- 2.2.7.7 Pressurize glove box to $3 \pm 1/2$ inches
vacuum using red and blue valve C-650. Read
on PI-CS-A _____. _____
- 2.2.7.8 Vent glove port by opening blue valve
C-665 until PI-CS-A indicates $0 \pm 1/2$ psig. _____
- 2.2.7.9 Close blue valve C-665. _____
- 2.2.8 To remove capsule and seal in sample carrier:
 - 2.2.8.1 Unlock No. 1 lock switch, remove K3, and
insert in V3. _____
 - 2.2.8.2 Open glove port. Lower all three parts
carefully into their open position. _____
 - 2.2.8.3 Unlock and open V3. _____
 - 2.2.8.4 Open ball valve on capsule carrier. _____
 - 2.2.8.5 Push $1/4$ " rod through packing gland until
about 14 " of rod remain exposed. _____
 - 2.2.8.6 Using the glove open the Plexiglas door,
remove capsule from latch, hang it on the rod. _____
 - 2.2.8.7 Look at capsule. Does it contain salt?
_____ Notify S.S. if no salt is in capsule. _____
 - 2.2.8.8 Remove empty capsule from the rod, hang it
on the latch and close the Plexiglas door. _____
 - 2.2.8.9 Check capsule on latch to be certain key
is secure in latch and the capsule is hanging
straight down. _____
 - 2.2.8.10 Withdraw $1/4$ " rod into carrier. _____
 - 2.2.8.11 Close ball valve on bottom of carrier. _____
 - 2.2.8.12 Close V3 and lock closed with K3. _____
 - 2.2.8.13 Close glove port cover being certain glove

Approved by 

6B-2-5
9/29/65

Init.

2.2.8.13 (continued)

is inside and cover fits over dowel pin.
Pull clamps together until lock blocks are
about 1/16" apart.

2.2.8.14 Remove K3 from V3, insert in No. 1 lock
switch, lock shut, and remove K2.

2.2.9 To purge glove box atmosphere ending with box at
pump bowl pressure:

2.2.9.1 Insert K2 in V2, unlock, and open V2.

2.2.9.2 Open blue valve C-662.

2.2.9.3 Evacuate for 4 minutes. Start _____
Stop _____.

2.2.9.4 Close blue valve C-662.

2.2.9.5 Close V2, lock closed with K2, and remove
K2.

2.2.9.6 Insert K2 in V1, unlock, close, lock closed
with K1, and remove K1.

2.2.9.7 Pressurize glove box to pump bowl pressure
± 0.2 psig using red and blue valve C-650.
Read on PI-CS-A _____.

2.3 Preparing The Sampler For Standby Condition

2.3.1 Turn off vacuum pump.
light.

2.3.2 Open red valve C-654 _____
C-657 _____
C-661 _____

2.3.3 Adjust buffer header pressure to 40 psig by
opening red valve C-651.

2.3.4 Close red valve C-651. PIC-651 reads _____.

2.3.5 Return K1 to lock on MB-6 and notify shift super-
visor (or control room supervisor) of completion
of sampling.

Approved by A. W. Johnson

6B236
9/29/65

Init.

IMPORTANT: Do not leave carrier on top of sampler with rod withdrawn. The rod interferes with the operation of the overhead crane.

2.3.6 Remove sample carrier from sampler and cover opening above V3 with pipe cap.

Date _____ Time _____

2.4 Handling Of Sample And Carrier

2.4.1 Deliver the assembly to analytical chemistry (Bldg. 4500). Date and time delivered _____

2.4.2 Using analytic chemistry's procedures, remove the sample from the carrier and return the carrier to Bldg. 7503. _____

Approved by *[Signature]*

6B391
9/29/65

Date _____ Time _____

Init.

6B COOLANT SYSTEM SAMPLING

3 COOLANT SYSTEM SAMPLER STARTUP

If the coolant sampler has been shutdown for long periods or extensive maintenance has been done on the sampler, a thorough check should be made to assure that it is in condition to take samples.

3.1 Startup Check List

(Control Room)

- 3.1.1 Notify shift supervisor of startup. _____
- 3.1.2 Check that no work is in progress connected with the sampler. _____
- 3.1.3 Turn on circuit breaker No. 14 in IPP-2 and remove tag. _____

(At Sampler)

- 3.1.4 Record PI-651 _____
PI-CS-A _____
- 3.1.5 Connect line C-664 to valve C-669. _____
- 3.1.6 Close valve C-669. _____
- 3.1.7 Start vacuum pump. _____
- 3.1.8 Open valves C-662 _____
C-664 _____
C-670 _____
C-651 _____
C-661 _____
C-653 _____
C-652 _____
C-654 _____
C-656 _____
C-655 _____
C-657 _____
C-658 _____

Approved by *[Signature]*

6B342
9/29/65

- | | <u>Init.</u> |
|---|-------------------------|
| 3.1.9 Evacuate buffer header for 10 minutes.
Start _____ Stop _____ | _____ |
| 3.1.10 Close valves C-670 _____
C-664 _____
C-662 _____ | _____

_____ |
| 3.1.11 Stop vacuum pump. | _____ |
| 3.1.12 Open main helium supply valve V-515. (Near
<u>Sampler-Enricher</u>). | _____ |
| 3.1.13 When PI-651 reads 40 psig, close valve C-651.
Date _____ Time _____ | _____ |

Approved by *[Signature]*

6B4-1
9/29/65

Date _____ Time _____

Init.

6B COOLANT SYSTEM SAMPLING

4 COOLANT SYSTEM SAMPLER SHUTDOWN

If the coolant sampler is to be shut down for long periods or extension maintenance is to be done on the sampler, precautions should be taken to assure that the sampler is adequately secured.

4.1 Shutdown Check List

(Control Room)

4.1.1 Notify operations chief and control room supervisor of shutdown of sampler. _____


4.1.2 Close main helium supply valve V-515. (Near sampler-enricher) _____

(At Coolant Sampler)

- 4.1.3 Close valves C-661 _____
- C-653 _____
- C-652 _____
- C-654 _____
- C-656 _____
- C-655 _____
- C-657 _____
- C-658 _____
- C-651 _____

4.1.4 Read PI-651 _____
PI-CS-A _____

4.1.5 Turn off circuit breaker in Panel No. 2.
Circuit No. 14 in control room and tag off. _____



Approved by R. W. Johnson

6C-1
10/21/65

6C WATER SYSTEM

The water system is sampled and analyzed as listed in Table 6-1 to assure that the proper concentration of chemicals are present for corrosion protection. The sample lines should be flushed before each sample is taken. Use one-pint or 2 sample-line volumes (whichever is largest). Due to possible induced activity, the treated water and nuclear penetration water should be handled as contaminated waste. The sample points are located as follows:

Treated Water System	V-826B	Diesel House
Nuclear Instrument Penetration	V-848F	High Bay
Tower Water	V-829D	Diesel House
Process Water	V-890D	Cooling Tower
CST-1	V-CST-1A	Water Room
CST-2	V-CST-2A	Water Room

The analytical procedures to be used by the MSRE operators are described in the following sections:

- Total Inhibitor - Section 6C-4
- Chromate - Section 6C-5
- Total Hardness - Section 6C-6
- PH - Section 6C-7

Init. Date/Time

1 TREATMENT OF TREATED WATER OR NUCLEAR PENETRATION WATER

1.1 If analysis indicates that the total inhibitor is low (Section 6C-4), chemical adjustments are calculated as follows:

NOTE: Always add the calculated amount of both chemicals to the system.

Treated Water System (4000 gallons capacity)

Pounds of KNO_2 to add = $0.0225[1900 - \text{Total inhibitor (ppm)}]$ = _____

Pounds of $K_2B_4O_7 \cdot 5H_2O$ to add = $0.375 \times$

pounds of KNO_2 added = _____.

Approved by W. J. Neumann

6C-2
10/21/65

Init. Date/Time

Nuclear Penetration Water (1700 gallons capacity)

Pounds of KNO_2 to add = 0.0096 [1900 - total inhibitor (ppm)] = _____

Pounds of $K_2B_4O_7 \cdot 5H_2O$ to add = 0.375 x pounds KNO_2 added = _____

1.2 If either boron (B^{---}) or nitrite (NO_2^-) from the Lab analyses are low based on curves of Figure 6C-1, adjustments can be calculated as follows:

Treated Water System (4000 gallons capacity)

Pounds of $K_2B_4O_7 \cdot 5H_2O$ to add = 0.0075 [total inhibitor (ppm) - $\frac{B^{---}(ppm) \times 2000}{57}$] = _____

Pounds of KNO_2 to add = 0.0225 [total inhibitor (ppm) - $\frac{NO_2^-(ppm) \times 2000}{812}$] = _____

Nuclear Penetration (1700 gallons capacity)



Pounds of $K_2B_4O_7 \cdot 5H_2O$ to add = 0.0032 [total inhibitor (ppm) - $\frac{B^{---}(ppm) \times 2000}{57}$] = _____

Pounds of KNO_2 to add = 0.0096 [total inhibitor (ppm) - $\frac{NO_2^-(ppm) \times 2000}{812}$] = _____

1.3 If pH, Fe, or Al analysis are above limits or if turbidity appears in samples, notify the responsible chemist (Paul Neumann or R. Thoma). _____

6C-3
10-21-65

Figure 6C1 Boron + NO_2 vs Total Inhibitor

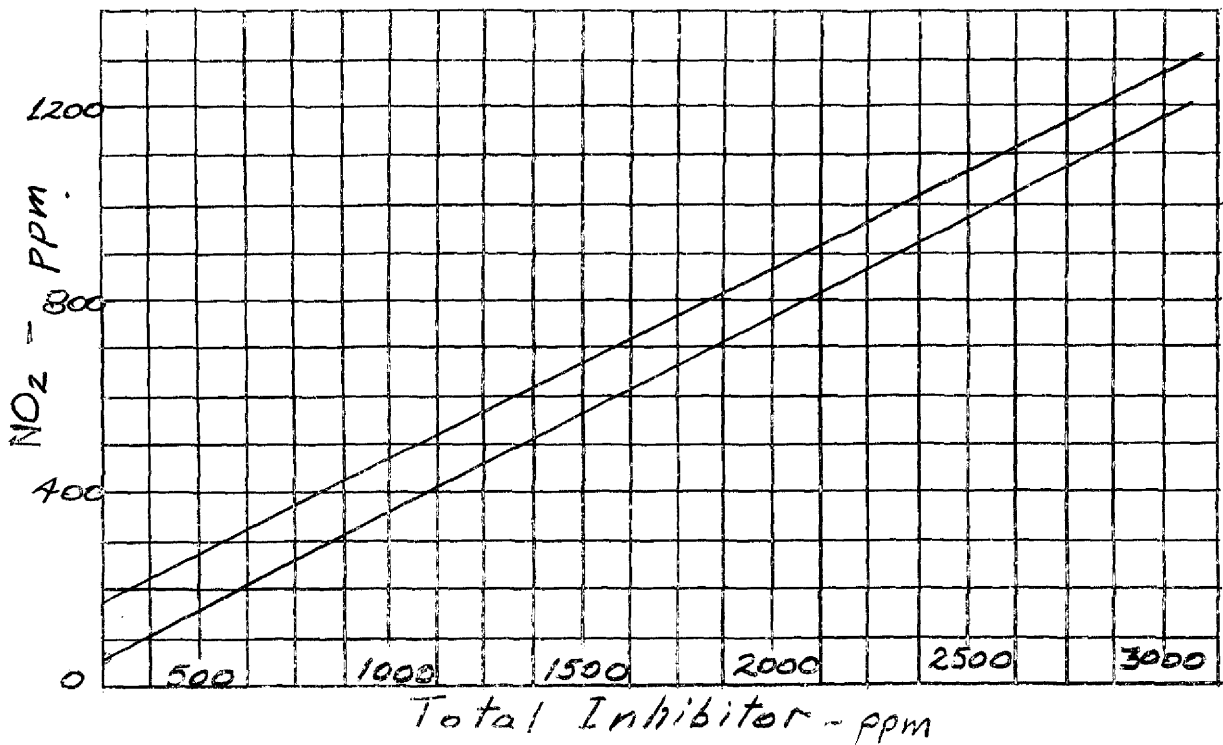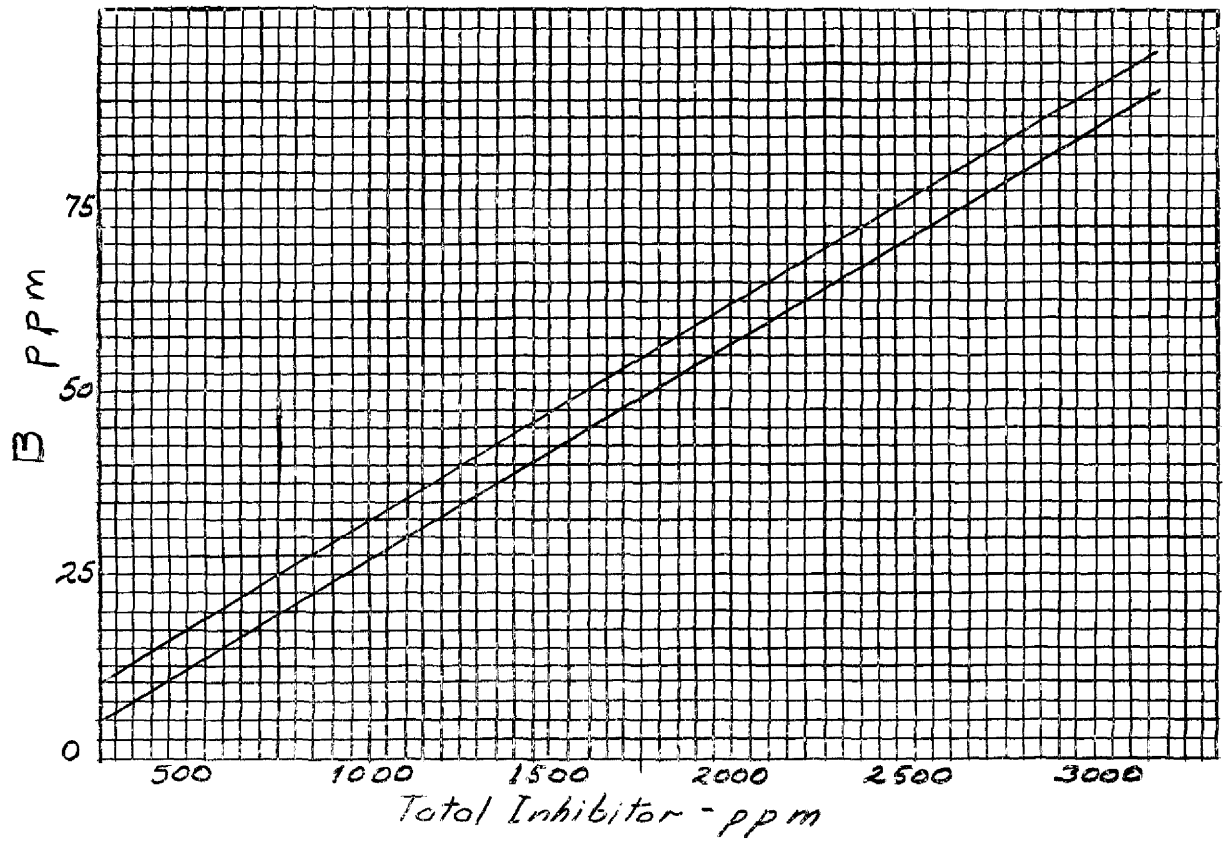

Approved by Paul Neumann

6C-4
10/21/65

Init. Date/Time

2 TREATMENT OF COOLING TOWER WATER

2.1 Add two balls of Nalco 360 to basin addition tube each day after sampling. If chromate analysis is low, add an extra chromate ball (Nalco 360) to addition tube. If >100 ppm chromate, add only one chromate ball instead of two.

2.2 If total hardness is greater than 2 x total hardness of raw water, increase blowdown from tower basin to maintain a ratio near 2:1.

2.3 If pH, or Fe are out of limits when hardness is within limits, notify the responsible chemist (Paul Neumann or Roy Thoma). The process water analysis is used as a guide for CTW limits.

2.4 Check cooling tower for algae. If algae are present as indicated by green growth on cooling tower, add one ball of Nalco No. 21S to basin.

3 CONDENSATE

3.1 Condensate samples should be analyzed before use. If the total hardness exceeds the limit, the tank should be drained. The source of the hardness, probably a leaking condenser tube, should be located and repaired as soon as possible.

4 PROCEDURE FOR TOTAL INHIBITOR ANALYSIS USING CS ANALYSIS KIT

4.1 Add water sample to the mark on bottle (10ml).

4.2 Add 1 dipperful of CS Reagent No. 1A, cap bottle, and mix until reagent is dissolved (2 grams).

Approved by *[Signature]*

6C-5
10/21/65

Init. Date/Time

4.3 Immediately add CS Reagent No. 2 rapidly a drop at a time with dropper vertical, swirling bottle after each drop. Continue addition until the pink color remains for one-half minute.

4.4 The number of drops required times 200 equals ppm Corrosion Inhibitor CS present in the water.

5 PROCEDURE FOR CHROMATE ANALYSIS USING NALCO CHROMATE TEST KIT

5.1 Determine the proper size of sample from the table below:

<u>Expected Chromate Content</u>	<u>Sample Size</u>
20 ppm	200 ml
<u>50 ppm</u>	<u>100 ml</u>
100 ppm	50 ml
200 ppm	25 ml
400 ppm	12.5 ml

5.2 Using the 50 ml graduate, measure out the sample into the Erlenmeyer flask.


5.3 Add 5 ml C-1 (Sol 290) to the sample, using the 2.5 ml pipette dropper, * and mix well.

5.4 Add 5 ml C-2 (Sol 291) to the sample, using the 2.5 ml pipette dropper, * and mix.

5.5 Add 1 ml C-3 (Sol 292) with pipette dropper.*

5.6 While agitating the sample in the flask, add C-4 (Sol 293) one drop at a time * with the pipette held in a vertical position. Count the drops used until the sample just loses its blue or blue-black color. The color of the sample will then be near its original color.

*NOTE: Care should be taken to prevent pipette dropper from touching the flask containing the sample.

Approved by 

6C-6
10/21/65

Init. Date/Time

5.7 Chromate content of the sample in ppm as

CrO_4 may be calculated as follows:

- 200 ml sample - multiply drops C-4 used by 2.5
- 100 ml sample - multiply drops C-4 used by 5
- 50 ml sample - multiply drops C-4 used by 10
- 25 ml sample - multiply drops C-4 used by 20
- 12.5 ml sample - multiply drops C-4 used by 40

6 PROCEDURE FOR HARDNESS ANALYSIS USING COLORIMETRIC
HARDNESS KIT

- 6.1 Take 50 ml sample of clear water at room temperature. Filter if necessary and add to clean casserole or to the 250 ml flask.
- 6.2 Add 1 ml of H-2 (Sol. 275) solution, mix and add H-3 (Sol. 277), indicator power. The correct quantity of indicator will be obtained by inverting the special container over casserole with a single "salt shaker" motion.
- 6.3 Titrate with H-1 (Sol. 274). The color change is from red to blue with an intermediate purple color. The end point is obtained when the last purple coloration is just discharged. Thorough mixing or stirring is necessary after the addition of each reagent and during the titration.
- 6.4 The number of milliliters of H-1 solution used multiplied by 20 equals parts per million total soluble hardness as calcium carbonate.

Approved by *[Signature]*

6C-7
10/21/65

Init. Date/Time

7 pH MEASUREMENT

Measure the pH of water samples using the instructions on the pH meter and the following:


7.1 Rinse electrodes with condensate and wipe dry with tissue before use.

7.2 Standardize the pH meter with a standard buffer solution. For TW and NIP water use buffer with pH of 10. For CTW and condensate use buffer with pH of 7.

7.3 Be sure to rinse beaker with condensate and then rinse twice with small portions of the sample before measuring pH.

7.4 After measuring pH, rinse and leave electrodes standing in a beaker of condensate.

7.5 Leave pH meter in neutral after use.



Approved by P.H. Guymon

6D-1
7/26/65

6D CELL AIR

During nuclear operations the in-cell atmosphere will be controlled to give it a low O₂ content, 5% by volume or less. A continuous oxygen analyzer is installed to determine the O₂ content. To check the analyzer and to determine the type of activity in case of accidents, the cell air will be sampled periodically. The sample station is located in the vent house and is a part of lines 569 and 565. A portable sample bomb with a valve at each end will be used to take the sample. The details of sampling are given below.

	<u>Init.</u>	<u>Date/Time</u>
1. Connect the sample bomb between valves V-565B and V-569C.	_____	_____
2. Open the valves at the ends of the bomb.	_____	_____
3. Open V's 565B and 569C. Close V-569A and check closed V-565C.	_____	_____
4. After 5 minutes, close the valves at the ends of the bomb.	_____	_____
5. Open V-569A and close V-565B and V-569C.	_____	_____
6. Remove the sample from the sample station and submit for analysis.	_____	_____

NOTE: Be sure that the cell is being evacuated during sampling as indicated by FqI-569.

Approved by

R. W. Johnson

6E-1
10/6/65

6E LUBE OIL SYSTEM

1 SAMPLING OF NEW OIL AS RECEIVED

The lubricating oil (Gulfspin 35) for both the fuel and coolant systems will be sampled (~ 500 ml per sample) on arrival at MSRE. Before use each drum of oil will be analyzed chemically for carbon, sulfur, bromine number, acid number, flash point, and moisture; viscosity determinations will be made at 100°F and 210°F. Interfacial tension of the oil will be determined at 77°F. Also spectrographic and infrared spectrophotometric analyses will be made before approval for use is given by the operations chief. Each drum will be tagged with a waterproof covered tag showing identification, sample number, analysis, certification and current inventory. The oil will be stored in the Flammable Materials Storage Building, west of the offgas vent stack.

The acid number (a measure of the oxidation inhibition in the oil) and the interfacial tension at 77°F will be determined on a weekly basis during power operations whereas the remainder of the analyses listed above will be made annually or when required.

2 SAMPLING AT OIL PACKAGES

The lube oil in the fuel and coolant system will be sampled weekly during power operation into 250 ml bottles from V-703D and V-753D. (depleting each oil system ~ 3 gal~yr). In the event of radioactive contamination of the lube oil, the entire lube oil package will be shielded with lead bricks. The oil will be sampled with HP surveillance into an evacuated metal container equipped with an autoclave fitting and a compound gage. The valves, autoclave fittings, and sample container may require extended handles or additional shielding for the sampling operation. Details of procedure are given below.

Init. Date/Time

(Service Tunnel)

- 2.1 Attach evacuated sample bomb to autoclave fitting at V-703.D (V-753D).

Approved by W. V. ...

6E-2
10/6/65

	<u>Init.</u>	<u>Date/Time</u>
2.2 Open valve on evacuated sample bomb and check that pressure in bomb does not increase. If pressure increases, disconnect, re-evacuate and repeat Steps 1 and 2.	_____	_____
2.3 Open V-703D (V-753D).	_____	_____
2.4 Slowly throttle V-703C (V-753C) until bomb pressure increases to 2 in. Hg.	_____	_____
2.5 Close V-703C (V-753C) when pressure reaches 2 in. Hg.	_____	_____
2.6 After 10 minutes drainage time close V-703D (753D).	_____	_____
2.7 Close valve on sample bomb and disconnect at autoclave fitting.	_____	_____
2.8 Record sample number on bomb, in sample log, and in console log.	_____	_____
2.9 Readjust alarm and control setpoints on LI OT-1 (LI OT-2) according to building log.	_____	_____

3 ADDITION OF LUBE OIL TO THE OIL PACKAGES

Since the oil system is considered secondary containment, addition of oil to the lube oil system during operation will be made with HP surveillance and without opening the system to the atmosphere. Details of procedure are given below.

3.1 Mount a hand-operated barrel pump onto the oil supply drum.	_____	_____
3.2 Connect metering pump discharge to quick disconnect 711 (761).	_____	_____
3.3 Open V-711 (V-761).	_____	_____
3.4 Add oil until LI OT-1 or (-2) reads 60% while pump is running (95% when pump is off).	_____	_____
3.5 Close V-711 (761).	_____	_____
3.6 Remove oil drum from oil package at quick	_____	_____

Approved by *B. H. ...*

6E-3
10/6/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 3.6 (continued)
disconnect. Drain oil from horizontal line
between quick disconnect and CV-711 (CV-761)
into a catch pan. | _____ | _____ |
| 3.7 Record on oil drum inventory card and in con-
sole log the amount of oil (gal.) transferred.
_____. | _____ | _____ |

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

Approved by *R. W. Hayman*

6F-1
9-1-65

6F SAMPLE COVER GAS

The Cover Gas System will be sampled for spectrographic analysis each time a new trailer of helium is obtained. Two samples should be collected, one from L-548 and one from L-549.

<u>1</u>	<u>SAMPLE FROM LINE 548</u>	<u>Initial</u>	<u>Date/Time</u>
1.1	Evacuate a 30 ml sample bomb to <500 μ and close the valve at each end of the bomb.	_____	_____
1.2	Close analyzer valves (V-548-A) red and blue.	_____	_____
1.3	Close analyzer valves (V-548-B) red and blue.	_____	_____
1.4	Install evacuated bomb between valves (548-A) and (548-B).	_____	_____
1.5	Open valve (548-A) - red and upstream bomb valve.	_____	_____
1.6	After bomb is pressurized open down stream bomb valve and check fittings for leaks.	_____	_____
1.7	Open analyzer valves (548-B) red and blue and adjust moisture analyzer and O ₂ analyzer flows to 100 cc/min.	_____	_____
1.8	Purge through bomb until moisture analyzer reaches equilibrium (~ 8 - 24 hrs).	_____	_____
1.9	Isolate the sample by closing: Analyzer valves (548-A) red and blue _____ Analyzer valves (548-B) red and blue _____ Bomb inlet valve _____ outlet valve _____	_____	_____
1.10	Disconnect bomb and submit for spectrographic analysis, H ₂ O, O ₂ , N ₂ , CO ₂ content.	_____	_____
<u>2</u>	<u>SAMPLE FROM LINE 549</u>		
2.1	Evacuate a 30 ml sample bomb to <500 μ and close the valve at each end of the bomb.	_____	_____
2.2	Close analyzer valves (548-A) red and blue.	_____	_____
2.3	Close analyzer valves (548-B) red and blue.	_____	_____
2.4	Install evacuated bomb between valves (548-A) and (548-B).	_____	_____

Approved by *S. H. Lyman*

6F-2
9-1-65

	<u>Initial</u>	<u>Date/Time</u>
2.5 Open valve (548-A) blue and upstream bomb valve.	_____	_____
2.6 After bomb is pressurized open down stream bomb valve and check fittings for leaks.	_____	_____
2.7 Open analyzer valves (548-B) red and blue and adjust moisture analyzer and O ₂ analyzer flows to 100 cc/min.	_____	_____
2.8 Purge through bomb until moisture analyzer reaches equilibrium (~ 8 - 24 hrs).	_____	_____
2.9 Isolate the sample by closing: Analyzer valves (548-A) red and blue _____ Analyzer valves (548-B) red and blue _____ Bomb inlet valve _____ outlet valve _____	_____	_____
2.10 Disconnect bomb and submit for spectrographic analysis, H ₂ O, O ₂ , N ₂ , CO ₂ content.	_____	_____

Approved by *P. K. Sullivan*

6G-1
8/30/65

6G SAMPLING OFFGAS SYSTEM

Normal samples of the offgas system shall be taken at the "line 518" sampling station in the vent house. The offgas samples will be radioactive so special precautions must be taken when removing the samples.

Init. Date/Time

1 TO ISOLATE A SAMPLE

1.1 At least 1 week before a sample is to be isolated, check the following valves:

Tag open

V-518-A _____

V-518-E _____ V-518-D _____

V-518-B* _____ V-518-C* _____

*Tag open the B and C valves to the volume holdup which is to be used.

Close

V-522-B _____, V-518-F _____, V-518-G _____,

V-518-H _____ and the remaining 518 B and

C valves V-518-B _____, V-518 C _____

V-518-B _____, V-518C _____.

1.2 In order to isolate a sample, merely close the valves on both sides of the holdup volume.

Tag closed:

V-518-B _____

V-518-C _____

Open

V-522-B _____

2 TO REMOVE A SAMPLE FROM THE SYSTEM

NOTE: The following procedure must be done one item at a time in the order listed.

2.1 Evacuate the carrier sample bomb to less than 500 microns and close V-518-K _____. Attach

Approved by *R. W. Hayman*

6G-2
8/30/65

Init. Date/Time

- 2.1 (continued)
the bomb to line 518 at the special fitting. _____
- 2.2 Have helium cylinder attached downstream of
V-518-H _____. _____
- 2.3 Before proceeding further, health physics
coverage is necessary.
H. P. man present _____.
- 2.4 Open or check open V-522-B _____.
Close or check closed:
V-518-A _____ V-518-G _____
V-518-E _____ V-518-F _____
V-518-D _____ V-518-H _____
V-518-B1 _____ V-518-C1 _____
V-518-B2 _____ V-518-C2 _____
V-518-B3 _____ V-518-C3 _____
- 2.5 Open V-518-F ____, V-518-G ____, and
V-518-H _____.
Using helium bottle, pressurize this section
of line to 25 psig.
Close V-518-F _____ and V-518-G _____
Open V-518-E ____, and V-518-D _____
Close V-518-E ____, and V-518-D _____.
Repeat step 2.5 five (5) times.
1 ____, 2 ____, 3 ____, 4 ____, 5 _____. _____
- 2.6 In order to reduce the pressure between valves
518-G and 518-K close V-518-H _____.
Open V-518-G and V-518-F _____. Leave open
a few seconds then close V-518-F and V-518-G
_____. Open V-518-D and V-518-E _____. Leave
open a few seconds, then close V-518-D and
V-518-E _____. Repeat step 2.6 three times.
1 ____, 2 ____, 3 _____. _____

Approved by *B. K. Symon*

6G-3
8/30/65

Init. Date/Time

2.7 Check the following valves closed.

V-518-B1 _____	V-518-C1 _____		
V-518-B2 _____	V-518-C2 _____		
V-518-B3 _____	V-518-C3 _____		
V-518-D _____	V-518-E _____		
V-518-H _____	V-518-K _____	_____	_____

2.8 Open:

V-518-F _____

V-518-G _____

V-518-C (1, 2, or 3 depending on which sample bomb the sample is to taken from.) Note which _____

2.9 Open V-518-K _____ and leave open ~ 10 seconds.


Close V-518-K _____, V-518-G _____, V-518-F _____.

Close the "C" valve which was opened in step 2.8 _____. The sample is now in the sample carrier bomb. _____

2.10 Repeat steps 2.5 _____ and 2.6 _____ in order to purge the radioactive gasses from line 518. _____


2.11 While wearing masks and with close health physics surveillance, disconnect the carrier sample bomb at the special connection and transport the sample to the lab. Cap both ends of line disconnected. _____

Approved by



7. HEAT BALANCE

Heat balances will be taken periodically to determine the thermal power that is generated by the reactor. The heat balance results will be used to keep a close check on the calibration of more direct methods of power indication, i.e. flow times ΔT of the coolant salt, and the various neutron level instruments.



Approved by



7A-1
8/4/65

7A GENERAL DESCRIPTION

The heat balance will be made by considering the walls of the Reactor and Drain Tank Cells as an envelope into which heat is added or from which heat is taken. The net heat removal, whether positive or negative, represents the thermal power of the reactor. Terms in the heat balance, either heat sources or heat sinks, may vary from a few watts, as is the case with control rod drive motors, to ~ 10 megawatts which may be removed by the coolant salt at full power. The terms are many and varied in value so only the most significant ones are calculated, i.e. those greater than about 5 to 10 kilowatts. There are other terms, especially heat sink terms, which cannot be measured directly, i.e. heat losses through the cell walls to the earth, concrete, etc. The terms that are not evaluated individually will be evaluated collectively as a single correction term which will be called "heat losses."

There will be a total of nine terms to be evaluated for the heat balance. These terms will be listed here and described later. Heat sink terms will be:

1. Heat removal from the reactor cell by the coolant salt, 0.1 \rightarrow 10 Mw. (Computer notation QCSRC)
2. Heat removal by cooling water (treated), 0.1 \rightarrow 0.5 Mw. (Computer notation QCWT)
3. Heat removal by component cooling air, 0.02 \rightarrow 0.06 Mw. (Computer notation QCCA)
4. Heat removal by fuel pump oil system, both lube and shield cooling, 0.005 \rightarrow 0.01 Mw. (Computer notation QFP \emptyset)
5. Heat losses, this will be a collection of unevaluated terms which will be used as a correction term for the overall heat balance, -0.1 \rightarrow 0.5 Mw. (Computer notation QL \emptyset S)

Approved by



7A-2
8/4/65

Heat Source terms will be:

1. Power added by the fuel pump, 0.027 → 0.035 Mw.
(Computer notation PFP)
2. Total power added by electric heaters, 0.0 → 0.2 Mw.
(Computer notation QRCH)
3. Heat energy added by coolant pump impeller, 0.02 → 0.03 Mw.
(Computer notation QCP)
4. Power added by the space cooler motors, _____ Mw.
(Computer notation PSC)

1. Heat Balance Terms

1.1 Heat Removed by the Coolant Salt. At any significant power this will be the largest and therefore the most important term in the heat balance calculation. Since this is true, considerable effort has been made to provide reliable and precise instrumentation for the measurement of this term. Thermocouples located in wells at the inlet and outlet of the radiator will be used to calculate average radiator inlet (ARAIT) and average radiator outlet (ARAOIT) temperatures. A venturi flow meter is located just upstream of the radiator; information from this device will be used in the calculation of the coolant flow rate. Knowing the heat capacity of the salt, the flow rate, and the temperature difference across the radiator, the total heat removed at the radiator may be calculated.

1.2 Heat Removed by Cooling Water. Five significant heat sinks are included in this term. They comprise heat removed by cooling water from:

1. Drain-Tank-Cell Air Cooler (DTCAC),
2. Reactor-Cell Air Cooler #1 (RCAC1),
3. Reactor-Cell Air Cooler #2 (RCAC2),
4. Fuel-Pump Motor Cooler (FPMC) and
5. Thermal Shield (TSC).

In each of these five cases the temperature rise of the cooling water is measured, the cooling water flow rate is set and assumed

Approved by



7A-4
8/4/65

term in question. This term will be evaluated several times both before and after power operation has begun. By the time this measurement has been made several times the value should be known with good statistical confidence.

- 1.6 Heat Added by the Fuel Pump Motor. The power that is required by the fuel pump will contribute to the total heat in the reactor cell. This quantity may be read directly from the fuel pump watt meter, E_w M-FPD.
- 1.7 Heat Added by the Electric Heaters. The total heat input to the Reactor and Drain Tank Cells and to the coolant salt loop outside the Reactor Cell will be taken into account in a heat balance. A value for this heat source will be obtained by tabulating the current drawn by the heaters that are in service. Any changes in heater settings or in heaters in or out of service will affect the heat balance results. In general, this will be considered as a constant with a correction for variation in line voltage.
- 1.8 Heat Added by the Coolant Pump. Only that heat which is introduced to the coolant salt as work will be considered. The power that is used by the coolant pump will be read from E_w M-CPD. Some fraction of this value will be used. The value of the fraction will be established.
- 1.9 Heat Added by the Space Coolers. The heat that is added to the system by the space cooler motors (3) will be determined by measuring the power required under normal conditions, for the operation of each motor. This will be done by using a "clamp-on" ammeter to measure the current. This will be done several times to establish the power, then the value will be rechecked periodically.

Approved by

R. K. Seymour

7B-1
8/4/65

7B Computer Heat Balance

1. Routine Calculation.

A heat balance will be calculated routinely by the on-line computer every 4 hours. The results will consist of one line on the preprinted form in typer number 2 and will include, in the order stated, the following (The nomenclature used for each term on the preprinted form is given in parentheses.):

- 1) Time
- 2) Net power (Power)
- 3) Average radiator inlet temperature (ARAIT)
- 4) Average radiator outlet temperature (ARAOT)
- 5) Radiator ΔT (RADT)
- 6) Coolant salt flow rate (CSFL ϕ)
- 7) Heat removed by the radiator (QCSRA)
- 8) Heat removed by cooling water (treated) (QCWT)
- 9) Heat removed by component cooling air (QCCA)
- 10) Heat removed by fuel pump oil system (QFP ϕ)
- 11) Fuel salt flow rate (FSFL ϕ)

The next seven entries will be ratios of Net Power (item 2 above) to the power indicated by the each of the following nuclear instrument channels.

- 12) Linear power #1 (NPFL1)
- 13) Linear power #2 (NPFL2)
- 14) Log power #1 (NPPF1)
- 15) Log power #2 (NPPF2)
- 16) Safety channel #1 (NPFS1)
- 17) Safety channel #2 (NPFS2)
- 18) Safety channel #3 (NPFS3)

2. Requested Calculation.

A heat balance may be requested at any time and as often as one might wish to do so. The requested heat balance will not interfere with the calculation of the routine heat balance. The

Approved by *R. H. G. M. C. M.*

7B-2
8/4/65

results of the requested heat balance will consist of two lines of data, without identifiers, on typer number 3. The first line will have the same order and content as listed above under "Routine Calculation", the second line will include, in the order stated, the following:

- 19) Radiator inlet ΔT (difference between two thermocouples in the same well)
- 20) Radiator outlet ΔT (difference between two thermocouples in the same well)
- 21) Heat removed by drain-tank-cell air cooler
- 22) Heat removed by reactor-cell air cooler #1
- 23) Heat removed by reactor-cell air cooler #2
- 24) Heat removed by fuel pump motor cooler
- 25) Heat removed by thermal shield cooler
- 26) Component-cooling-air flow rate
- 27) Heat removed by fuel-pump lube oil
- 28) Heat removed by fuel-pump shield cooling oil
- 29) Radiator air flow rate
- 30) Heat added by electric heaters
- 31) Heat added by fuel circulating pump
- 32) Heat added by cell air cooler motors
- 33) Heat added by coolant circulating pump
- 34) Heat lost from the Reactor and drain tank cells.

3. Operator Requirements.

The computer will read many variables for each heat balance and use these variables together with constants that have been established to complete the calculation. Many of the constants that are used for the computer calculation are controllable by the reactor operators, for example: the various treated cooling water flow rates are assumed by the computer to be set at some constant value, in reality this value may drift or be changed by an operator thus yielding an erroneous result.

Approved by



7B-3
8/4/65

The following is a list of flow rates that are assumed by the computer (these will be modified if the operating conditions change.):

FIA-836	60 gpm
FIA-840	60 gpm
FIA-838	60 gpm
FIA-830	5 gpm
FI -844	60 gpm
FI -873	20 gpm

The computer also assumes that some constant amount of power is being added by heaters. If a heater fails or if heater current settings are changed then the power added by the heaters changes and an erroneous heat balance results. The total power added to the system by heaters will be about 200 kw.

The computer also assumes that all three cell air coolers are in operation. These should be checked "on".

Routine heat balances are calculated six times daily beginning at 0230 and every 4 hours thereafter. The operator must check and if necessary adjust water flows approximately 15 minutes before the heat balance is made. He must also note if any heater settings have been changed and if any of the cell air coolers are off.

.

f

.

.

.

.

.

.

.

.

.

.

.

.

Approved by R. V. Gayman

7C-1
8/4/65

7C MANUAL HEAT BALANCE

Manual calculation of heat balances will be done to check out the operation of the computer. It may also be necessary to make several manual heat balances during the zero power experiments since the computer may not be in full operation by that time. The calculations necessary are identical to those done by the computer, those calculations are described in the "Computer Systems Report." The part of the manual heat balance that has the greatest importance to the operator is the taking of data necessary for its calculation. The following list is to be used for collecting this data.

Run No. _____ Date _____ Time _____ Initials _____

ELECTRIC POWER

Switch House

TVA bus voltage #1 _____ #2 _____ #3 _____

Main Control Room

POWER TO SPACE COOLER MOTORS

Check Space Coolers "On"

DTCAC _____

RCAC#1 _____

RCAC#2 _____

POWER TO PUMPS

Fuel Pump Power EWR-FPD _____ kw

Coolant Pump Power EWR-CPD _____ kw

Heater Panel

POWER TO HEATERS

Heater Current

CR-1, Amps

1. _____

2. _____

3. _____

CR-2, Amps

1. _____

2. _____

3. _____

Approved by W. H. Heymon

7C-2
8/4/65

CR-3, Amps

- 1. _____
- 2. _____
- 3. _____

CR-4, Amps

- 1. _____
- 2. _____
- 3. _____

CR-5, Amps

- 1. _____
- 2. _____
- 3. _____

CR-6, Amps

- 1. _____
- 2. _____
- 3. _____

CR-7, Amps

- 1. _____
- 2. _____
- 3. _____

CR-8, Amps

- 1. _____
- 2. _____
- 3. _____

H-200-13, Amps

- 1. _____
- 2. _____
- 3. _____

H-201-12, Amps

- 1. _____
- 2. _____
- 3. _____

Approved by *B. N. Heyman*

7C-3
8/4/65

H-202-2, Amps

1. _____
2. _____
3. _____

Heaters Powerstat Setting and Current

H-200-14

Setting _____
Amps _____

H-200-15

Setting _____
Amps _____

H-201-10

Setting _____
Amps _____

H-201-11

Setting _____
Amps _____

H-201-13

Setting _____
Amps _____

H-202-1

Setting _____
Amps _____

H-204-2

Setting _____
Amps _____

H-205-1

Setting _____
Amps _____

FV-204-3

Setting _____
Amps _____

Approved by R. W. Hayman

7C-4
8/4/65

FT-201A-1
Setting _____
Amps _____

FT-201A-3
Setting _____
Amps _____

FT-201A-2
Setting _____
Amps _____

FT-201A-4
Setting _____
Amps _____

FT-201B-1
Setting _____
Amps _____

FT-201B-3
Setting _____
Amps _____

FT-201B-2
Setting _____
Amps _____

FT-201B-4
Setting _____
Amps _____

LE CP 1
Setting _____
Amps _____

LE CP 2
Setting _____
Amps _____

FV-204-1
Setting _____
Amps _____

Approved by *A. N. [Signature]*

7C-5
8/4/65

FV-204-2	Setting	_____	FV-204-A2	Setting	_____
	Amps	_____		Amps	_____
FV-206-1	Setting	_____	FV-206-A2	Setting	_____
	Amps	_____		Amps	_____
FV-206-2 (SP-16)	Setting	_____			
	Amps	_____			
H-204-1	Amps	_____			
H-206-1	Amps	_____			
CP-1	Setting	_____			
	Amps	_____			
CP-2	Setting	_____			
	Amps	_____			
H-200-1	Setting	_____			
	Amps	_____			
H-200-11	Setting	_____			
	Amps	_____			
H-200-12	Setting	_____			
	Amps	_____			
H-201-1	Setting	_____			
	Amps	_____			
H-201-2	Setting	_____			
	Amps	_____			

Approved by RD Seymour

7C-6
8/4/65

H-201-9
Setting _____
Amps _____

H-100-1
Setting _____
Amps _____

RCH-1 (Amps)
1. _____
2. _____
3. _____

RCH-2 (Amps)
1. _____
2. _____
3. _____

RCH-3 (Amps)
1. _____
2. _____
3. _____

RCH-4 (Amps)
1. _____
2. _____
3. _____

H-100-2
Setting _____
Amps _____

H-101-2
Setting _____
Amps _____

H-101-3
Setting _____
Amps _____

Approved by *P. H. Grayman*

7C-7
8/4/65

RCH-5, Amps
1. _____
2. _____
3. _____

RCH-6, Amps
1. _____
2. _____
3. _____

RCH-7, Amps
1. _____
2. _____
3. _____

H-102-2, Amps
1. _____
2. _____
3. _____

R-1, Amps
1. _____
2. _____
3. _____

R-2, Amps
1. _____
2. _____
3. _____

R-3, Amps
1. _____
2. _____
3. _____

HX-1, Amps
1. _____
2. _____
3. _____

Approved by *A H Lyman*

7C-8
8/4/65

HX-2, Amps

- 1. _____
- 2. _____
- 3. _____

HX-3, Amps

- 1. _____
- 2. _____
- 3. _____

FP-1, Amps

- 1. _____
- 2. _____
- 3. _____

FP-2, Amps

- 1. _____
- 2. _____
- 3. _____

RAN-1

Setting _____
Amps _____

RAN-2

Setting _____
Amps _____

H-102-3

Setting _____
Amps _____

H-102-1

Setting _____
Amps _____

H-102-4

Setting _____
Amps _____

H-102-5

Setting _____
Amps _____

Approved by *P. H. Guymon*

7C-9
8/4/65

H-103

Setting _____

Amps _____

FV-103

Setting _____

Amps _____

H-104-1

Setting _____

Amps _____

FFT-1, Amps

1. _____

2. _____

3. _____

FFT-2, Amps

1. _____

2. _____

3. _____

FD-1-1, Amps

1. _____

2. _____

3. _____

FD-1-2, Amps

1. _____

2. _____

3. _____

FD-2-1, Amps

1. _____

2. _____

3. _____

FD-2-2, Amps

1. _____

2. _____

3. _____

Approved by *R. W. Ferguson*

7C-10
8/4/65

FV-104-1	Setting	_____
	Amps	_____
FV-104-3	Setting	_____
	Amps	_____
H-104-5	Setting	_____
	Amps	_____
H-104-6	Setting	_____
	Amps	_____
FV-105-1	Setting	_____
	Amps	_____
FV-105-3	Setting	_____
	Amps	_____
H-105-1	Setting	_____
	Amps	_____
H-105-4	Setting	_____
	Amps	_____
FV-106-1	Setting	_____
	Amps	_____
FV-106-3	Setting	_____
	Amps	_____
H-106-1	Setting	_____
	Amps	_____

Approved by *[Signature]*

7C-11
8/4/65

H-106-4
Setting _____
Amps _____
H-104-2
Amps _____
H-104-3
Amps _____
H-104-4
Amps _____
H-105-2
Amps _____
H-105-3
Amps _____
H-104-7
Amps _____
H-106-2
Amps _____
H-106-3
Amps _____
H-110-2
Amps _____
H-110-3
Amps _____
H-107-1
Setting _____
Amps _____
H-107-2
Setting _____
Amps _____
H-107-3
Setting _____
Amps _____

FV-104-1A
Setting _____
Amps _____
FV-105-1A
Setting _____
Amps _____
FV-106-1A
Setting _____
Amps _____

Approved by PAH

7C-12
8/4/65

FV-107-1	Setting	_____
	Amps	_____
FV-107-3	Setting	_____
	Amps	_____
H-108-1	Setting	_____
	Amps	_____
H-108-2	Setting	_____
	Amps	_____
H-108-3	Setting	_____
	Amps	_____
FV-108-1	Setting	_____
	Amps	_____
FV-108-3	Setting	_____
	Amps	_____
H-109-1	Setting	_____
	Amps	_____
H-109-2	Setting	_____
	Amps	_____
H-109-3	Setting	_____
	Amps	_____
FV-109-1	Setting	_____
	Amps	_____

Approved by *A. K. Guyman*

7C-13
8/4/65

FV-109-3
Setting _____
Amps _____
H-110-1
Setting _____
Amps _____

THERMOCOUPLES

	Thermocouple	Jack Panel No.	Temperature °F
COOLANT SALT TEMPERATURES			
Radiator Inlet	TE-201-A-1A	805	_____
Radiator Inlet	TE-201-A-1B	806	_____
Radiator Outlet	TE-201-A-2A	807	_____
Radiator Outlet	TE-201-A-2B	808	_____
COMPONENT COOLING AIR TEMPERATURES			
Component cooling air at outlet of cooler	TE-917	898	_____
Component cooling air at inlet to cooler	TE-916	897	_____
Component cooling air at inlet to system	TE-922	899	_____
OIL SYSTEM TEMPERATURES			
Lube and Shield cooling oil inlet	TE-702-1B	872	_____
Lube Oil outlet	TE-705-1A	873	_____
Shield cooling oil outlet	TE-707-1A	875	_____
TREATED COOLING WATER TEMPERATURES			
Cooling water in	TE-826-1	887	_____
Outlet from Drain Tank cell cooler	TE-837-1	890	_____
Outlet from Reactor cell cooler #1	TE-846-1	893	_____
Outlet from Reactor cell cooler #2	TE-841-1	891	_____
Outlet from Fuel Pump cooler	TE-831-1	886	_____
Outlet from Thermal Shield	TE-845-1	892	_____
Outlet from Component air cooler	TE-874-1	895	_____

Approved by

B. B. Hayman
✓

8-1
10/22/65

8 PERIODIC INSTRUMENT CALIBRATION
AND
CIRCUIT CHECKS

During each startup of the MSRE the instrumentation will be tested to assure that it is functioning properly as described in Section 4H. These startup tests will include a thorough checkout of all instrumentation and circuitry. Due to the importance of some instruments or circuits, they will also be tested periodically during operation. Details of these tests are given in the following section. The frequency of testing is given in Table 8-1.

If the tests indicate that the instrumentation has failed in an unsafe manner, consideration should be given to manually actuating the safety action. In the case of 2 out of 3 circuitry, this will not interfere with normal operation. It will require extra steps during the testing of the other two channels. In the case of one out of two channels, it may be possible to increase the frequency of testing of the other channel and using other administrative controls. In most cases the operations chief should be consulted.

Approved by 

8-2
10/22/65

TABLE 8-1
PERIODIC ON-LINE CHECKING OF INSTRUMENTATION

PROCEDURE	INSTRUMENTATION	REMARKS	FREQUENCY
8A-1	Nuclear Wide Range Counting Channel	Instrument Calibration	Monthly
8A-1.3, 1.4, 1.7 and 1.8	Log Count Rate, Log Power and Period	Instrument Calibration	Weekly
8A-2	Nuclear Safety Channels	Instrument Calibration	Monthly
8A-3	Linear Power Channels	Instrument Calibration	Monthly
8B	Process Radiation GM Tubes	Surveillance Check	8 Hours
8B	Process Radiation GM Tubes	Instrument Calibration	8 Hours
8B	Process Radiation ION Chamber	Surveillance Check	8 Hours
8B	Process Radiation ION Chamber	Zero Check	8 Hours
8B-2	Process Radiation GM Tubes RM 557	Source Check	Weekly
8B-3	Process Radiation GM Tubes RM 528	Source Check	Weekly
8B-4	Process Radiation GM Tubes RM 565	Source Check	Weekly
8B-5	Process Radiation GM Tubes RM 500	Source Check	Weekly
8B-6	Process Radiation GM Tubes RM 596	Source Check	Weekly
8B-7	Process Radiation ION Chamber RM 827	Source Check	Weekly
8B-8	Process Radiation GM Tube RM OT 1 and 2	Source Check	Weekly
8C-1	Personnel Monitors	Source Check	Weekly
8C-2	Personnel Monitors	Alarm Matrix Check	Monthly
8C-3	Personnel Monitors	Evacuation Alarm Check	Biannually


Approved by *D. Hymen*

8-3
10/22/65

TABLE 8-1
(continued)

PROCEDURE	INSTRUMENTATION	REMARKS	FREQUENCY
8C-4	Containment Stack Monitors	Source Check	Weekly
8D-1	FP and OFT Pressure	Electronic Simulation Check and Surveillance Check	Weekly
8D-2	Helium Supply Pressure	Relay Check	Weekly
8D-3	FP and OFT Bubblers	Flow and Level Checks	Weekly
8D-4	Rod Scram	Fast Trip Comparator Checks	Daily
8D-5	Emergency Drain	Simulated Temperature and Levels Checks	Weekly
8D-6	Reactor Cell Pressure	Simulated Pressure Checks	Weekly
8D-7	Coolant Pump Speed and Coolant Flow	Relay Check	Weekly
8D-8	Sampler	Interlocks Check	Monthly
8D-9	Exercise Control Rods	Surveillance Check	Weekly

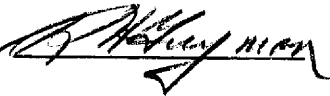

Approved by 

8A-1
10/28/65

8A NEUTRON LEVEL

Due to the complexity of the nuclear instrumentation and the possibility of it drifting, all components are given periodic on line tests. These tests as described in this section are done mainly by instrument technicians; however, operational personnel should follow the work closely. No jumpers should be installed without the prior approval of the operations chief.

Obtain Shift Supervisor's permission before starting this procedure

Init. Date/Time

1 WIDE RANGE COUNTING CHANNELS

Since only one counting channel is required, the following tests can be performed on a single channel while the reactor is in service. The other channel should be in service before starting this check if reactor power is less than 1 Mw.

1.1 Reference Voltages Channel 1

Measure all DC voltages with a digital voltmeter at the tests points indicated. If adjustments are required, follow the procedure given in the individual module manual. The regulated supply voltages should be adjusted only when measured in drawer W-2 (RX-NCC 1-A4).

1.1.1 Make sure channel to be tested is not the one selected for operation.

1.1.2 Drawer W-2 (RX NCC1-A4) (Reference drawing RCl3-13-57A)

<u>Test Blk</u>	<u>Voltage</u>	<u>Ground</u>	<u>Rdng.</u>	<u>Adj. Rdng.</u>
A-1	+10v ± 10mv	± 0v Reg.	_____	_____
A-3	-10v ± 10mv	± 0v Reg.	_____	_____
A-5	-15v ± 10mv	± 0v Reg.	_____	_____
A-7	-25v ± 10mv	± 0v Reg.	_____	_____
A-9	+15v ± 10mv	± 0v Reg.	_____	_____

Approved by *P. W. King*

8A-2
10/28/65

Init. Date/Time

1.1.2 (continued)

<u>Test Blk</u>	<u>Voltage</u>	<u>Ground</u>	<u>Rdng.</u>	<u>Adj. Rdng.</u>		
A-11	+25v ± 10mv	± 0v Reg.	_____	_____		
A-17	+32v ± 100mv	± 0v Batt.	_____	_____		
A-19	-32v ± 100mv	± 0v Batt.	_____	_____	_____	_____

1.1.3 Drawer W-3 (RX-NCCL-A6) (Reference drawing RC13-13-58A)

<u>Test Blk</u>	<u>Voltage</u>	<u>Ground</u>	<u>Rdng.</u>		
TP4-9	-10v ± 10mv	± 0v Reg.	_____		
TP4-16	+10v ± 10mv	± 0v Reg.	_____		
TP4-12	-15v ± 10mv	± 0v Reg.	_____		
TP4-18	+15v ± 10mv	± 0v Reg.	_____		
TP4-14	-25v ± 10mv	± 0v Reg.	_____		
TP4-20	+25v ± 10mv	± 0v Reg.	_____		
TP4-4	-32v ± 100mv	± 0v Batt.	_____	_____	_____

Measure the preamp and fission chamber supply voltages at the test points located in the transformer shield enclosure mounted on the rear panel. Adjust per procedure given in Q-2617-5 manual (RX-NCCL-A7).

<u>Test Point</u>	<u>Voltage</u>	<u>Reading</u>	<u>Adj. Reading</u>		
1	0v*	_____	_____		
2	-22v	_____	_____		
3	0v**	_____	_____		
4	+110v	_____	_____		
5	+300v	_____	_____	_____	_____

*Return for -22v

**Return for 110 and 300v

Measure chopper supply voltage (6.3 v ac ± 0.5) between TP6-3 and TP6-6 with Triplett meter or equal.

1.2 Operational Amplifier Balance Channel 1

Balance each operational amplifier by

Approved by



8A-3
10/28/65

Init. Date/Time

1.2 (continued)

depressing "Bal" push button on top of the module and adjusting the adjacent trim potentiometer until the meter in the left rear corner of the drawer indicates zero. All operational amplifiers are located in drawer W-3 (RX-NCCL-A6). These are RM NCCL-A5, A6, A7, A8, A9, and A10.

1.3 Log Count Rate and Log Power Calibration

Channel 1

1.3.1 Place channel 2 switch (S-14) in automatic mode and turn chamber selector switch (S-15) to position 2.

1.3.2 Place channel 1 in manual mode.

1.3.3 Position "operate-calibrate" switch located on pulse amplifier to "10 cps" position; note output of "reactor power" amplifier ____, measured between TP5-19 and HQ ground. The "log count rate" panel meter should indicate 10 cps ____, and the output of the "log count rate" amplifier should measure -2 volts between TP3-6 (W-3) and H. G. ground ____.

1.3.4 Position "operate-calibrate" switch to "10⁴ cps ____, and the "log count rate" amplifier output should be -8 volts _____. The "reactor power" amplifier output should increase by +3 volts ____, while the "reactor power" panel meter indication goes up 3 decades ____.

1.3.5 Measure the counting rate using the scaler with the 10 and 10⁴ cps test signal applied:

Approved by



8A-4
10/28/65

Init. Date/Time

1.3.5 (continued)

<u>Test Signal</u>	<u>Scaler Rdg.</u>	<u>Time</u>	<u>Scaler cps</u>		
10 cps	_____	_____	_____		
10 ⁴ cps	_____	_____	_____		

1.4 Fast-Trip Comparator Set Points

The fast-trip comparator (Q-2609) set points may be visually checked by verifying the reference potentiometer settings as tabulated below. (Dial reads directly in volts.)

	<u>Fast Trip Comparator</u>	<u>Potentiometer Dial Setting</u>	<u>Check</u>
RXS-NCCL-A2	1 (<50 K cps)	9.4	_____
RXS-NCCL-A1	2 (>2 cps)	0.6	_____
RXS-NCCL-A6	3 (<200 kw)	7.3	_____
RXS-NCCL-A7	4 (>500 kw)	7.7	_____
RXS-NCCL-A8	5 (>1.5 Mw)	8.18	_____
RXS-NCCL-A3	6 (<10 sec)	5.71	_____
RXS-NCCL-A4	7 (<20 sec)	3.57	_____
RXS-NCCL-A5	8 (>30 sec)	2.86	_____

1.4.1 Log Count Rate FTC's

The counting rate may be adjusted over the instruments entire range by adjustment of the pulse amplifier gain and/or the discriminator level.

With the digital voltmeter connected between TP3-13 in drawer W-4 (RX-NCCL-A8) and H. G. ground, increase the counting rate, by increasing the pulse amplifier gain and decreasing the PHS setting, until the 50 kcps fast-trip comparator changes state (RXS-NCCL-A2). Voltmeter should indicate -9.4v ± 0.05v _____. Decrease

Approved by *P. N. Ferguson*

8A-5
10/28/65

1.4.1 (continued) Init. Date/Time
the counting rate by decreasing the pulse amplifier gain and increasing the PHS setting until the 2 cps fast-trip comparator operates (RXS-NCCL-A1) voltmeter should indicate $-0.6v \pm 0.05v$ _____. Return PHS dial to proper setting record: _____.

1.4.2 Log Power FTC's

The set point of the power fast-trip comparator is determined by applying a calibrated voltage to their inputs. This signal is adjusted with a potentiometer located inside drawer W-1 (RX-NCCL-A5). The output of the potentiometer is applied to the log power amplifier.

Connect digital voltmeter between TP3-15 and H. Q. ground in drawer W-4 (RX-NCCL-A8). Set "operate-calibrate" switch to "period." Depress "power test" push button inside drawer W-1 (RX-NCCL-A5). Adjust adjacent potentiometer to check trip points as tabulated below:

	<u>Trip</u>	<u>Voltmeter Indication</u>	<u>Pot. Setting</u>
200 Kw	RXS-NCCL-A6	$7.3 \pm 0.05v$ _____	_____
500 Kw	RXS-NCCL-A7	$7.7 \pm 0.05v$ _____	_____
1.5 Kw	RXS-NCCL-A8	$8.18 \pm 0.05v$ _____	_____

1.4.3 Period FTC's

The period trips are tested by applying calibrated voltage ramps to the function generator amplifier. These ramps are selected to generate period signals slightly larger than the set points.

Connect digital voltmeter between TP3-17 in drawer W-4 (RX-NCCL-A8) and H. G.

Approved by

[Handwritten Signature]

8A-6
10/28/65

Init. Date/Time

1.4.3 (continued)

ground. Set "operate-calibrate" switch to "period." Set "test" selector switch inside drawer W-1 (RX-NCCL-A5) to the desired period (10, 20, or 30 sec.).

	<u>Trip</u>	<u>Voltmeter Indication</u>
10 sec.	RXS-NCCL-A3	~ + 6.0 _____
20 sec.	RXS-NCCL-A4	~ + 3.7 _____
30 sec.	RXS-NCCL-A5	~ + 3.0 _____

1.5 Reference Voltages Channel 2

Measure all DC voltages with a digital voltmeter at the tests points indicated. If adjustments are required, follow the procedure given in the individual module manual. The regulated supply voltages should be adjusted only when measured in drawer W-2 (RX-NCC2-A4).

1.5.1 Make sure channel to be tested is not the one selected for operation.

1.5.2 Drawer W-2 (RX-NCC2-A4) (Reference drawing RCL3-13-57A)

<u>Test Blk</u>	<u>Voltage</u>	<u>Ground</u>	<u>Rdng.</u>	<u>Adj. Rdng.</u>
A-1	+10v ± 10mv	± 0v Reg.	_____	_____
A-3	-10v ± 10mv	± 0v Reg.	_____	_____
A-5	-15v ± 10mv	± 0v Reg.	_____	_____
A-7	-25v ± 10mv	± 0v Reg.	_____	_____
A-9	+15v ± 10mv	± 0v Reg.	_____	_____
A-11	+25v ± 10mv	± 0v Reg.	_____	_____
A-17	+32v ± 100mv	± 0v Batt.	_____	_____
A-19	-32v ± 100mv	± 0v Batt.	_____	_____

1.1.3 Drawer W-3 (RX-NCC2-A6) (Reference drawing RCL3-13-58A)

Approved by

R. H. Seymour

8A-7
10/28/65

Init. Date/Time

1.1.3 (continued)

<u>Test Blk</u>	<u>Voltage</u>	<u>Ground</u>	<u>Rdng.</u>
TP4-9	-10v ± 10mv	± 0v Reg.	_____
TP4-16	+10v ± 10mv	± 0v Reg.	_____
TP4-12	-15v ± 10mv	± 0v Reg.	_____
TP4-18	+15v ± 10mv	± 0v Reg.	_____
TP4-14	-25v ± 10mv	± 0v Reg.	_____
TP4-20	+25v ± 10mv	± 0v Reg.	_____
TP4-4	-32v ± 100mv	± 0v Batt.	_____

Measure the preamp and fission chamber supply voltages at the test points located in the transformer shield enclosure mounted on the rear panel. Adjust per procedure given in Q-2617-5 manual (RX-NCC2-A7).

<u>Test Point</u>	<u>Voltage</u>	<u>Reading</u>	<u>Adj. Reading</u>
1	0v*	_____	_____
2	-22v	_____	_____
3	0v**	_____	_____
4	+110v	_____	_____
5	+300v	_____	_____

*Return for -22v

**Return for 110 and 300v

Measure chopper supply voltage (6.3 v ac ± 0.5) between TP6-3 and TP6-6 with Triplet meter or equal.

1.6 Operational Amplifier Balance Channel 2

Balance each operational amplifier by depressing "Bal" push button on top of the module and adjusting the adjacent trim potentiometer until the meter in the left rear corner of the drawer indicates zero. All operational amplifiers are located in

Approved by *[Signature]*

8A-8
10/28/65

Init. Date/Time

1.6 (continued)

drawer W-3 (RX-NCC2-A6). These are
RM NCC 2-A5, A6, A7, A8, A9, and A10.

1.7 Log Count Rate and Log Power Calibration

Channel 2

1.7.1 Place channel 2 switch (S-14) in
automatic mode and turn chamber selector
switch (S-15) to position 2.

1.7.2 Place channel 1 in manual mode.

1.7.3 Position "operate-calibrate" switch
located on pulse amplifier to "10 cps"
position; note output of "reactor power"
amplifier _____, measured between TP5-19
and HQ ground. The "log count rate" panel
meter should indicate 10 cps _____, and the
output of the "log count rate" amplifier
should measure -2 volts between TP3-6
(W-3) and H. G. ground _____.

1.7.4 Position "operate-calibrate" switch to
"10⁴ cps _____, and the "log count rate"
amplifier output should be -8 volts
_____. The "reactor power" amplifier
output should increase by +3 volts _____,
while the "reactor power" panel meter
indication goes up 3 decades _____.

1.7.5 Measure the counting rate using the
scaler with the 10 and 10⁴ cps test
signal applied:

<u>Test Signal</u>	<u>Scaler Rdg.</u>	<u>Time</u>	<u>Scaler cps</u>
10 cps	_____	_____	_____
10 ⁴ cps	_____	_____	_____

1.8 Fast-Trip Comparator Set Points Channel 2

The fast-trip comparator (Q-2609) set

Approved by



8A-9
10/28/65

Init. Date/Time

1.8 (continued)

points may be visually checked by verifying the reference potentiometer settings as tabulated below. (Dial reads directly in volts.)

	<u>Fast Trip Comparator</u>	<u>Potentiometer Dial Setting</u>	<u>Check</u>
RXS-NCC2-A2	1 (<50 K cps)	9.4	_____
RXS-NCC2-A1	2 (>2 cps)	0.6	_____
RXS-NCC2-A6	3 (<200 kw)	7.3	_____
RXS-NCC2-A7	4 (>500 kw)	7.7	_____
RXS-NCC2-A8	5 (>1.5 Mw)	8.18	_____
RXS-NCC2-A3	6 (<10 sec)	5.71	_____
RXS-NCC2-A4	7 (<20 sec)	3.57	_____
RXS-NCC2-A5	8 (>30 sec)	2.86	_____

1.8.1 Log Count Rate FTC's

The counting rate may be adjusted over the instruments entire range by adjustment of the pulse amplifier gain and/or the discriminator level.

With the digital voltmeter connected between TP3-13 in drawer W-4 (RX-NCC2-A8) and H. G. ground, increase the counting rate, by increasing the pulse amplifier gain and decreasing the PHS setting, until the 50 kcps fast-trip comparator changes state (RXS-NCC2-A2). Voltmeter should indicate $-9.4v \pm 0.05v$ _____. Decrease the counting rate by decreasing the pulse amplifier gain and increasing the PHS setting until the 2 cps fast-trip comparator operates (RXS-NCC2-A1) voltmeter should indicate $-0.6v \pm 0.05v$ _____.

Return PHS dial to proper setting record:

Approved by



8A-10
10/28/65

Init. Date/Time

1.8.2 Log Power FTC's

The set point of the power fast-trip comparator is determined by applying a calibrated voltage to their inputs. This signal is adjusted with a potentiometer located inside drawer W-1 (RX-NCC2-A5). The output of the potentiometer is applied to the log power amplifier.

Connect digital voltmeter between TP3-15 and H. Q. ground in drawer W-4 (RX-NCC2-A8). Set "operate-calibrate" switch to "period". Depress "power test" push button inside drawer W-1 (RX-NCC2-A5). Adjust adjacent potentiometer to check trip points as tabulated below:

<u>Trip</u>	<u>Voltmeter Indication</u>	<u>Pot. Setting</u>
200 Kw RXS-NCC2-A6	7.3 ± 0.05v _____	_____
510 Kw RXS-NCC2-A7	7.7 ± 0.05v _____	_____
1.5 Kw RXS-NCC2-A8	8.18 ± 0.05v _____	_____

1.8.3 Period FTC's

The period trips are tested by applying calibrated voltage ramps to the function generator amplifier. These ramps are selected to generate period signals slightly larger than the set points.

Connect digital voltmeter between TP3-17 in drawer W-4 (RX-NCC2-A8) and H. G. ground. Set "operate-calibrate" switch to "period." Set "test" selector switch inside drawer W-1 (RX-NCC2-A5) to the desired period (10, 20, or 30 sec.)

Approved by

B. W. Johnson

8A-11
10/28/65

Init. Date/Time

1.8.3 (continued)

	<u>Trip</u>	<u>Voltmeter Indication</u>
10 sec.	RXS-NCC2-A3	~ + 6.0 _____
20 sec.	RXS-NCC2-A4	~ + 3.7 _____
30 sec.	RXS-NCC2-A5	~ + 3.0 _____

2 NUCLEAR SAFETY CHANNELS

2.1 Since the MSRE safety system has three separate channels connected in a 2/3 arrangement, the following tests may be performed on a single channel while the reactor is in service; however, it is imperative that all three safety channels are in the untripped condition before testing is started since the channel under test must be tripped.

2.2 Reference Voltages: Channel 1

2.2.1 Drawer S-1 (RX-NSC1-A1) (Reference drawing RCL3-9-56A)

Measure the supply voltage at the indicated test points with a digital voltmeter. Adjust the regulators as required, following the adjustment procedure described in the individual module manual.

<u>Test Block A</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdg.</u>	<u>Adj. Rdg.</u>
Pin 18	+32v ± 100mv	± 0v Batt	_____	_____
Pin 19	-32v ± 100mv	± 0v Batt	_____	_____
Pin 1	+10v ± 10mv	± 0v Reg.	_____	_____
Pin 3	-10v ± 10mv	± 0v Reg.	_____	_____
Pin 5	-15v ± 10mv	± 0v Reg.	_____	_____
Pin 7	-25v ± 10mv	± 0v Reg.	_____	_____
Pin 10	+15v ± 10mv	± 0v Reg.	_____	_____
Pin 11	+25v ± 10mv	± 0v Reg.	_____	_____

Approved by

B. H. Johnson

8A-12
10/28/65

Init. Date/Time

2.2.2 Drawer S-2 (RX-NSV1-A6) (Reference drawing RCL3-9-57A)

Measure the supply voltages at the indicated test points with a digital voltmeter.

<u>Test Block</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdng.</u>
TP1-A	+32v ± 100mv	± 9v Batt (TP1-K)	_____
TP1-U	-32v ± 100mv	± 0v Batt	_____
TP1-F	+10v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-N	-10v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-R	-15v ± 10mv	± 0v Reg. (TP1-H)	_____
TP2-6	-25v ± 10mv	± 0v Reg. (TP1-H)	_____
TP1-D	+15v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-B	+25v ± 10mv	± 0v Reg (TP1-H)	_____

2.2.3 Chamber High Voltage Supply

Measure the chamber high voltage supply with a Triplet meter at the test points located in the module. The white point (TP3) is ground; the red point is the high-voltage output test point (TP2). The voltage should read +250v ± 25v.

2.3 Instrument Balance Channel 1

The instruments requiring balancing are the Flux Amplifier (RM-NSC1-A1) and the Period Safety Module (RM-NSC1-A3).

2.3.1 Flux Amplifier Balance

A zero-center balance meter on the top of the module is visible with the drawer pulled out. The meter is used with the zero push button and zero adjustment located at the edge of the printed circuit board to correct for drift. Depress the zero push button and observe balance meter.

Approved by *R. W. Hayman*

8A-13
10/28/65

2.3.1 (continued) Init. Date/Time

If the meter reads anywhere on scale with the pushbutton depressed, the balance is satisfactory. If adjustment is necessary, turn zero-adjustment. _____

2.3.2 Period Safety Balance

With the drawer withdrawn, there are visible on top of the module, five test points, and three "Bal" potentiometers.

2.3.2.1 Place a jumper between TP1 and TP2 (Brown) and measure the voltage between TP3 and TP4 (Black) with a Triplet meter. Operations Chief's approval _____.
Adjust "Bal 1" until the voltage is zero. _____

2.3.2.2 Place jumper between TP3 and TP4 (Black) and TP6 (Yellow). Operations Chief's approval _____. Adjust "Bal 2" until the voltage between TP5 (Red) and TP6 (Yellow) is zero. _____

2.3.2.3 The period amplifier may be zeroed by adjusting "Bal 3" until the front-panel meter indicates " ∞ ."

2.3.2.4 Remove jumpers. Shift Supervisor's approval _____.

2.4 "Reverse" Fast-Trip Comparator (RSS-NSC1-A2)
Channel 1 and "Level Scram" Fast-Trip Comparator
(RSS-NSC1-A3) Calibration.

The purpose of this section is to check the trip point of the above comparators. It is assumed that the safety system is in the low sensitivity mode (15 Mw scram).

Approved by *R. W. Johnson*

8A-14
10/28/65

Init. Date/Time

2.4 (continued)

This test injects a test current into the Flux amplifier which is adjusted to cause the comparators to just operate. The potentiometer and push button referred to hereafter are located on the Monitor and Test Unit (RM-NSC1-A2).

Connect the digital voltmeter to the Flux Amplifier output, (TP1-W and H. Q. ground). With the "current adjust" potentiometer set to zero, depress the "high current" push button, adjust the potentiometer and observe at what voltage the comparators change state.

<u>Fast Trip</u> <u>Comparator</u>	<u>Potentiometer</u> <u>Dial Setting</u>	<u>Flux Ampl.</u> <u>Output at</u> <u>Trip Point</u>	<u>Rdg.</u>	<u>Ad.</u>	<u>Rdg.</u>
1 (scram)	7.50	-715v ± 0.05v	_____	_____	_____
2 (reverse and load set- back)	6.00	-6.0v ± 0.05v	_____	_____	_____

Return potentiometer to zero setting.

2.5 Period Calibration Test Channel 1

Depressing the "period calibration" test button on the test module causes a voltage ramp to be applied to the log current amplifier. Differentiation of this ramp by the period amplifier produces a constant voltage output for the duration of the ramp. Two ramp rates are available: one produces a period of approximately 2 sec and one a period slightly shorter than 1 sec.

2.5.1 Connect a digital voltmeter between TP2-3 (period output) and H. Q. ground.

Approved by *R. H. Johnson*

8A-15
10/28/65

Init. Date/Time

2.5.2 Depress the "2 sec period" push button.
The "period" front panel meter should show
an approximate 2 sec indication. Record
period _____. Record voltage (should
be 500 mv \pm 50) _____.

2.5.3 Depress the "1 sec period" push button
and record period indicated _____.
Record voltage (should be 1.1v \pm 100mv).
_____.

2.6 "Period" Fast-Trip Comparator Channel 1

2.6.1 Depress the "1 sec period" push
button and observe that the "period
scram" fast-trip comparator does change
state (trip).

2.6.2 Observe that when the "2 sec period"
push button is depressed that the trip
comparator does not remain tripped
after the initial transient. (Momentary
trip).

2.7 Caution Before proceeding to the next channel
or section, make sure that all channels are
reset (untripped). In addition, observe that
all meters are indicating correctly and all
latch lights are reset.

2.8 Reference Voltages: Channel 2

2.8.1 Drawer S-1 (RX-NSC2-A1) (Reference
drawing RC13-9-56A)

Measure the supply voltage at the
indicated test points with a digital
voltmeter. Adjust the regulators as
required, following the adjustment pro-
cedure described in the individual module
manual.

Approved by *P. W. Seymour*

8A-16
10/28/65

Init. Date/Time

2.8.1 (continued)

<u>Test Block A</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdg.</u>	<u>Adj.</u>	<u>Rdg.</u>
Pin 18	+32v ± 100mv ± 0v	Batt	_____	_____	_____
Pin 19	-32v ± 100mv ± 0v	Batt	_____	_____	_____
Pin 1	+10v ± 10mv ± 0v	Reg.	_____	_____	_____
Pin 3	-10v ± 10mv ± 0v	Reg.	_____	_____	_____
Pin 5	-15v ± 10mv ± 0v	Reg.	_____	_____	_____
Pin 7	-25v ± 10mv ± 0v	Reg.	_____	_____	_____
Pin 10	+15v ± 10mv ± 0v	Reg.	_____	_____	_____
Pin 11	+25v ± 10mv ± 0v	Reg.	_____	_____	_____

2.8.2 Drawer S-2 (RX-NSV2-A6) (Reference drawing RC13-9-57A)

Measure the supply voltages at the indicated test points with a digital voltmeter.

<u>Test Block</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdng.</u>
TP1-A	+32v ± 100mv ± 9v	Batt (TP1-K)	_____
TP1-U	-32v ± 100mv ± 0v	Batt	_____
TP1-F	+10v ± 10mv ± 0v	Reg (TP1-H)	_____
TP1-N	-10v ± 10mv ± 0v	Reg (TP1-H)	_____
TP1-R	-15v ± 10mv ± 0v	Reg (TP1-H)	_____
TP2-6	-25v ± 10mv ± 0v	Reg (TP1-H)	_____
TP1-D	+15v ± 10mv ± 0v	Reg (TP1-H)	_____
TP1-B	+25v ± 10mv ± 0v	Reg (TP1-H)	_____

2.8.3 Chamber High Voltage Supply

Measure the chamber high voltage supply with a Triplet meter at the test points located in the module. The white point (TP3) is ground; the red point is the high-voltage output test point (TP2). The voltage should read 250v ± 25v.

Approved by

D.W. Seymour

8A-17
10/28/65

Init. Date/Time

2.9 Instrument Balance Channel 2

The instruments requiring balancing are the Flux Amplifier (RM-NSC2-A1) and the Period Safety Module (RM-NSC2-A3).

2.9.1 Flux Amplifier Balance

A zero-center balance meter on the top of the module is visible with the drawer pulled out. The meter is used with the zero push button and zero adjustment located at the edge of the printed circuit board to correct for drift. Depress the zero push button and observe balance meter. If the meter reads anywhere on scale with the pushbutton depressed, the balance is satisfactory. If adjustment is necessary, turn zero-adjustment.

2.9.2 Period Safety Balance

With the drawer withdrawn, there are visible on top of the module, five test points, and three "Bal" potentiometers.

2.9.2.1 Place a jumper between TP1 and TP2 (Brown) and measure the voltage between TP3 and TP4 (Black) with a Triplet meter. Operations Chief's approval _____. Adjust "Bal 1" until the voltage is zero.

2.9.2.2 Place jumper between TP3 and TP4 (Black) and TP6 (Yellow). Operations Chief's approval _____. Adjust "Bal 2" until the voltage between TP5 (Red) and TP6 (Yellow) is zero.

Approved by

[Signature]

8A-18
10/28/65

Init. Date/Time

2.9.2.3 The period amplifier may be zero by adjusting "Bal 3" until the frontpanel meter indicates "∞".

2.9.2.4 Remove jumpers. Shift Supervisor's check _____.

2.10 "Reverse" Fast-Trip Comparator (RSS-NSC2-A2)

Channel 2 and "Level Scram" Fast-Trip Comparator (RSS-NSC2-A3) Calibration.

The purpose of this section is to check the trip point of the above comparators. It is assumed that the safety system is in the low sensitivity mode (15 Mw scram).

This test injects a test current into the Flux amplifier which is adjusted to cause the comparators to just operate. The potentiometer and push button referred to hereafter are located on the Monitor and Test Unit (RM-NSC2-A2).

Connect the digital voltmeter to the Flux Amplifier output. (TPl-W and H. Q. ground). With the "current adjust" potentiometer set to zero, depress the "high current" push button, adjust the potentiometer and observe at what voltage the comparators change state.

<u>Fast Trip Comparator</u>	<u>Potentiometer Dial Setting</u>	<u>Flux Ampl. Output at Trip Point</u>	<u>Rdg.</u>	<u>Ad.</u>	<u>Rdg.</u>
1 (scram)	7.50	-715v ± 0.05v	_____	_____	_____
2 (reverse and load set-back)	6.00	-6.0v ± 0.05v	_____	_____	_____
Return potentiometer to zero setting.					

Init. Date/Time2.11 Period Calibration Test Channel 2

Depressing the "period calibration" test button on the test module causes a voltage ramp to be applied to the log current amplifier. Differentiation of this ramp by the period amplifier produces a constant voltage output for the duration of the ramp. Two ramp rates are available: one produces a period of approximately 2 sec and one a period slightly shorter than 1 sec.

2.11.1 Connect a digital voltmeter between TP2-3 (period output) and H. Q. ground.

2.11.2 Depress the "2 sec period" push button. The "period" front panel meter should show an approximate 2 sec indication. Record period _____. Record voltage (should be 500 mv \pm 50) _____.

2.11.3 Depress the "1 sec period" push button and record period indicated _____. Record voltage (should be 1.1v \pm 100 mv). _____.

2.12 "Period" Fast-Trip Comparator Channel 12

2.12.1 Depress the "1 sec period" push button and observe that the "period scram" fast trip comparator does change state (trip) . _____

2.12.2 Observe that when the "2 sec period" push button is depressed that the trip comparator does not remain tripped after the initial transient. (Momentary trip.) _____

2.13 Caution Before proceeding to the next channel or section make sure that all channels are reset (untripped). In addition, observe that all meters are indicating correctly and all latch lights are reset.

Approved by *R. N. Gayman*

8A-20
10/28/65

Init. Date/Time

2.14 Reference Voltages: Channel 3

2.14.1 Drawer S-1 (RX-NSC3-A1) (Reference drawing RCL3-9-56A)

Measure the supply voltage at the indicated test points with a digital voltmeter. Adjust the regulators as required, following the adjustment procedure described in the individual module manual.

<u>Test Block A</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdg.</u>	<u>Adj.</u>	<u>Rdg.</u>
Pin 18	+32v ± 100mv	± 0v Batt	_____	_____	_____
Pin 19	-32v ± 100mv	± 0v Batt	_____	_____	_____
Pin 1	+10v ± 10mv	± 0v Reg	_____	_____	_____
Pin 3	-10v ± 10mv	± 0v Reg	_____	_____	_____
Pin 5	-15v ± 10mv	± 0v Reg	_____	_____	_____
Pin 7	-25v ± 10mv	± 0v Reg	_____	_____	_____
Pin 10	+15v ± 10mv	± 0v Reg	_____	_____	_____
Pin 11	+25v ± 10mv	± 0v Reg	_____	_____	_____

2.14.2 Drawer S-2 (RX-NSV3-A6) (Reference drawing RCL3-9-57A)

Measure the supply voltages at the indicated test points with a digital voltmeter.

<u>Test Block</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdng.</u>
TP1-A	+32v ± 100mv	± 9v Batt (TP1-K)	_____
TP1-U	-32v ± 100mv	± 0v Batt	_____
TP1-F	+10v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-N	-10v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-R	-15v ± 10mv	± 0v Reg (TP1-H)	_____
TP2-6	-25v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-D	+15v ± 10mv	± 0v Reg (TP1-H)	_____
TP1-B	+25v ± 10mv	± 0v Reg (TP1-H)	_____

Approved by

S. W. Chapman

8A-21
10/28/65

Init. Date/Time

2.14.3 Chamber High Voltage Supply

Measure the chamber high voltage supply with a Triplet meter at the test points located in the module. The white point (TP3) is ground; the red point is the high-voltage output test point (TP2). The voltage should read 250 v \pm 25v.

2.15 Instrument Balance Channel 3

The instruments requiring balancing are the Flux Amplifier (RM-NSC3-A1) and the Period Safety Module (RM-NSC3-A3).

2.15.1 Flux Amplifier Balance

A zero-center balance meter on the top of the module is visible with the drawer pulled out. The meter is used with the zero push button and zero adjustment located at the edge of the printed circuit board to correct for drift. Depress the zero push button and observe balance meter. If the meter reads anywhere on scale with the pushbutton depressed, the balance is satisfactory. If adjustment is necessary, turn zero-adjustment.

2.15.2 Period Safety Balance

With the drawer withdrawn, there are visible on top of the module, five test points, and three "Bal" potentiometers.

2.15.2.1 Place a jumper between TP1 and TP2 (Brown) and measure the voltage between TP3 and TP4 (Black) with a Triplet meter. Operations Chief's

Approved by AKaymon

8A-22
10/28/65

	<u>Init.</u>	<u>Date/Time</u>
2.15.2.1 (continued) approval _____. Adjust "Bal 1" until the voltage is zero.	_____	_____
2.15.2.2 Place jumper between TP3 and TP4 (Black) and TP6 (Yellow). Oper- ations Chief's approval _____. Adjust "Bal 2" until the voltage be- tween TP5 (Red) and TP6 (Yellow) is zero.	_____	_____
2.15.2.3 The period amplifier may be zero by adjusting "Bal 3" until the frontpanel meter indicates "00".	_____	_____
2.15.2.4 <u>Remove jumpers.</u> Shift Super- visor's check _____.	_____	_____

2.16 "Reverse" Fast-Trip Comparator (RSS-NSC1-A2)
Channel 3 and "Level Scram" Fast-Trip Comparator
(RSS-NSC3-A3) Calibration.

The purpose of this section is to check the trip point of the above comparators. It is assumed that the safety system is in the low sensitivity mode (15 Mw scram).

This test injects a test current into the Flux amplifier which is adjusted to cause the comparators to just operate. The potentiometer and push button referred to hereafter are located on the Monitor and Test Unit (RM-NSC1-A2).

Connect the digital voltmeter to the Flux Amplifier output. (TP1-W and H. Q. ground). With the "current adjust" potentiometer set to zero, depress the "high current" push button, adjust the potentiometer and observe at what voltage the comparators change state.

Approved by B. N. Haymon

8A-23
10/28/65

Init. Date/Time

2.16 (continued)

<u>Fast Trip</u> <u>Comparator</u>	<u>Potentiometer</u> <u>Dial Setting</u>	<u>Flux Ampl.</u> <u>Output at</u> <u>Trip Point</u>	<u>Rdg.</u>	<u>Ad. Rdg.</u>		
1 (scram)	7.50	-715v ± 0.05v	_____	_____	_____	_____
2 (reverse and load set- back)	6.00	-6.0v ± 0.05v	_____	_____	_____	_____
Return potentiometer to zero setting.						_____

2.17 Period Calibration Test Channel 3

Depressing the "period calibration" test button on the test module causes a voltage ramp to be applied to the log current amplifier. Differentiation of this ramp by the period amplifier produces a constant voltage output for the duration of the ramp. Two ramp rates are available: one produces a period of approximately 2 sec and one a period slightly shorter than 1 sec.

2.17.1 Connect a digital voltmeter between TP2-3 (period output) and H. Q. ground.

2.17.2 Depress the "2 sec period" push button. The "period" front panel meter should show an approximate 2 sec indication. Record period _____. Record voltage (should be 500 mv ± 50) _____.

2.17.3 Depress the "1 sec period" push button and record period indicated _____. Record voltage (should be 1.1v ± 100 mv). _____.

2.18 "Period" Fast-Trip Comparator Channel 3

2.18.1 Depress the "1 sec period" push button and observe that the "period scram" fast-trip comparator does change state (trip). _____

Approved by *R. H. Youngman*

8A-24
10/28/65

Init. Date/Time

2.18.2 Observe that when the "2 sec period" push button is depressed that the trip comparator does not remain tripped after the initial transient. (Momentary Trip)

2.19 Caution Before proceeding to the next channel or section, make sure that all channels are reset (untripped). In addition, observe that all meters are indicating correctly and all latch lights are reset.

2.20 General: Channels 1, 2, and 3

The purpose of this section is to determine that when a single channel is tripped, the proper two branches of the relay matrices are opened. This test is also designed to detect partial shorts around the matrix relay contacts. The front panel meters on the coincidence matrix monitors (drawer S-3) (RX-NSC1-A7) indicate the total clutch current as well as the current through each branch of the matrix. At all times the total clutch current must equal the sum of the three currents through the individual matrix, as indicated by the panel meters. The following table gives the proper meter indication for all conditions. Any deviation from the values may indicate improper opening or closing of relay contacts. Record currents.

2.20.1 Trip the channel by depressing the "test" push button on the Relay Safety Element.

CAUTION: Make sure all channels are reset before pushing the test button.

Approved by *P. N. Hayman*

8A-25
10/28/65

Init. Date/Time

2.20.1 (continued)

Tripped Channel	Total Clutch Current ma		
	Rod 1	Rod 2	Rod 3
None	150 _____	150 _____	150 _____
1	133 _____	133 _____	133 _____
2	133 _____	133 _____	133 _____
3	133 _____	133 _____	133 _____

Tripped Channel	Rod 1 Clutch Current ma			
	Total	Branch Currents		
		AB	BC	CA
None	150 _____	50 _____	50 _____	50 _____
1	133 _____	0 _____	133 _____	0 _____
2	133 _____	0 _____	0 _____	133 _____
3	133 _____	133 _____	0 _____	0 _____

Tripped Channel	Rod 2 Clutch Current ma			
	Total	Branch Currents		
		AB	BC	CA
None	150 _____	50 _____	50 _____	50 _____
1	133 _____	0 _____	133 _____	0 _____
2	133 _____	0 _____	0 _____	133 _____
3	133 _____	133 _____	0 _____	0 _____

Approved by *W. J. ...*

8A-26
10/28/65

Init. Date/Time

2.20.1 (continued)

Tripped Channel	Rod 3 Clutch Current ma			
	Total	Branch Currents		
		AB	BC	CA
None	150	50	50	50
1	133	0	133	0
2	133	0	0	133
3	133	133	0	0

3 LINEAR POWER CHANNELS

3.1 Reference Voltages

3.1.1 Drawer R-1 (RX-NARC-A2)

Reference drawing RCL3-12-56A

Measure the supply voltages at the indicated test points with a digital voltmeter. Adjust as required.

<u>Test Block A</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdng.</u>	<u>Adj.</u>	<u>Rdng.</u>
Pin 18	+32v ± 100mv ± 0v Batt		_____		_____
Pin 19	-32v ± 100mv ± 0v Batt		_____		_____
Pin 1	+10v ± 10mv ± 0v Reg		_____		_____
Pin 3	-10v ± 10mv ± 0v Reg		_____		_____
Pin 5	-15v ± 10mv ± 0v Reg		_____		_____
Pin 7	-25v ± 10mv ± 0v Reg		_____		_____
Pin 10	+15v ± 10mv ± 0v Reg		_____		_____
Pin 11	+25v ± 10mv ± 0v Reg		_____		_____

Adjust the regulators as required, follow procedure given in individual module manual. _____

3.1.2 Drawer R-2 (RX-NARC-A1)

Reference drawing RCL3-12-57A.

Measure the supply voltages at the indicated test points with a digital voltmeter.

Approved by SR Kayman

8A-27
10/28/65

3.1.2 (continued)

<u>Test Point</u>	<u>Voltage</u>	<u>Return</u>	<u>Rdg.</u>	<u>Init.</u>	<u>Date/Time</u>
TP2-15	-32v ± 100mv	± 0v Batt (TP2-10)	_____		
TP3-3	+25v ± 10mv	± 0v Reg	_____		
TP2-1	+15v ± 10mv	± 0v Reg	_____		
TP3-5	-25v ± 10mv	± 0v Reg	_____		
TP2-3	-15v ± 10mv	± 0v Reg	_____		
TP2-19	+10v ± 10mv	± 0v Reg	_____		
TP3-1	-10v ± 10mv	± 0v Reg	_____		

Measure the chopper supply voltage with a Triplet meter or equivalent, between test point TP1-1 and TP1-3. Voltage should be approximately 6.3 VAC. ± 0.5v.

3.1.3 Chamber High Voltage Supply


Observe the chamber high voltage as indicated on front panel meters of the supply. (Supplies are located in Nuclear Board 4).

	CH 1	CH 2
+HV-----600 volts	_____	_____
-HV-----300 volts	_____	_____

3.2 Operational Amplifier Balance

List amplifier by number. Balance each operational amplifier by depressing the "Bal" push buttons on top of the module and adjusting the adjacent trim potentiometer until the meter in the left rear corner of the drawer indicates zero.

RM-NARC-A1	_____
RM-NARC-A2	_____
RM-NARC-A3	_____
RM-NARC-A4	_____



Approved by



8B-1
10/22/65

8B CALIBRATION CHECK
OF
PROCESS RADIATION MONITORS

INTRODUCTION

It will be necessary to check periodically the calibration of the process radiation monitors and associated equipment to insure their reliability for the protection of personnel and as a warning system of radioactive escape. Two methods are used for checking this system. One method is a frequent check of the readout instruments, and the other is a check of the entire system using a known source.

A finite reading on the readout instruments, from both the G-M tubes and ion chambers, is usually an indication that the system is operating properly. The readings of these instruments are checked periodically as well as the calibration of the G-M tubes and the zero on the electrometers.

The system check-out using a source will consist of removing a plug from the shield around the detectors, inserting a source, and checking that the appropriate readings and alarms are received. Details are given below. Frequency of testing is given in Table 8-1.

Init. Date/Time

1 PREPARATION

- | | | | |
|-----|--|-------|-------|
| 1.1 | Obtain permission from shift supervisor to test calibration of process radiation equipment. Shift Supervisor's initials _____. | _____ | _____ |
| 1.2 | Check and adjust if necessary the calibrate and alarm setpoints on all radiation monitors (Q-1916-1R3). | _____ | _____ |
| 1.3 | Obtain source in lead carrier from instrument shop. Read the specifications carefully. The source is Cobalt-60 which has a half-life of $\approx 5 \frac{1}{3}$ years. | _____ | _____ |
| 1.4 | Establish communications between Auxillary Control Room and sensor location. | _____ | _____ |

Approved by

[Handwritten Signature]

8B-2
10/22/65

Init. Date/Time

2 RADIATION MONITOR 557 (OFF GAS FROM CHARCOAL BEDS)

VENT HOUSE

- 2.1 Push alarm buttons on RM-557-A and RM-557-B and check that alarm settings are 20 mr/hr. Adjust if necessary. _____
- 2.2 When the source is inserted to give the alarm on RE-557, control action will close HCV-557-C1, PCV-510-A2 and PCV-513-A2. Before proceeding further, make certain that this will not adversely affect operations. _____
- 2.3 Remove the source plug from the shield. _____
- 2.4 Place position plug in place of the source plug. _____
- 2.5 Insert source fully and record readings indicated on RI-557 A and B. Readings should be 25-35 mr/hr above background. Check that this causes alarms on XA-4043-3 in ACR and XA 4010-2 in MCR. _____

SENSOR	READING	CHECK THAT			
		ALARMS OCCUR	HCV 557 C1 CLOSES	PCV 510 A2 CLOSES	PCV 513 A2 CLOSES
RM-557-A					
RM-557-B					

- 2.6 Remove source and position plug from lead shield. _____
- 2.7 Replace source plug. _____
- 2.8 Reset RM-557-A and RM-557-B and check that alarms clear and HCV-557-C1, PCV-510-A2 and PCV-513-A2 open. _____

Approved by *[Signature]*

8B-3
10/22/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| <u>3 RADIATION MONITOR 528 (COOLANT SYSTEM OFF GAS)</u> | | |
| VENT HOUSE | | |
| 3.1 Check that alarm settings on RM-528-B and RM-528-C are 20 mr/hr by pressing alarm buttons. Adjust if necessary. | _____ | _____ |
| 3.2 When the source is inserted to test RE-528-B and RE-528-C, control action will instigate an emergency drain and will stop the fuel pump. Before proceeding further, make certain that this will not adversely affect operations. Insert jumpers around RE-528 in ECC 147. | _____ | _____ |
| 3.3 Remove the shield plug from the lead shield. | _____ | _____ |
| 3.4 Place position plug in place of the source plug. | _____ | _____ |
| 3.5 Insert source fully and record readings indicated on RI-528-B and RI-528-C. Readings should be between 25-35 mr/hr above background. Check that this causes alarms on XA-4043-4 in ACR and XA-4010-2 in MCR. | _____ | _____ |

SENSOR	READING	CHECK THAT	
		ALARMS OCCUR	EMERGENCY DRAIN INITIATED*
RM-528-B			
RM-528-C			

*As indicated by lights going out in Ckt. 18 and 19.

- | | | |
|---|-------|-------|
| 3.6 Remove source and position plug from lead shield. | _____ | _____ |
| 3.7 Replace source plug. | _____ | _____ |
| 3.8 Reset RM-528-B and RM-528-C and check that alarms clear. Ckt. 18 and 19 is made up. | _____ | _____ |

Approved by A. W. Hayward

8B-4
10/22/65

Init. Date/Time

3.9 Remove jumpers from ECC 147.

4 RADIATION MONITOR 565 (CELL OFF GAS)

VENT HOUSE

4.1 Check that alarm settings on RM-565-B and RM-565-C are 20 mr/hr by pressing alarm buttons. Adjust if necessary.

4.2 When the source is inserted to test RE-565-B and RE-565-C, control action will instigate an emergency drain, close HCV 565, close HCV-915-A1 which shuts off cooling air to the control rods, and close RC oxygen analyzer block valves HCV-566-A1 and HCV-566-A3. Before proceeding further, make certain that this will not adversely affect operations.

CAUTION: This section of the procedure should be performed as quickly as possible to insure that the control rods do not overheat.

4.3 Remove the shield plug from the lead shield.

4.4 Insert source fully and record readings indicated on RI-565-B and RI-565-C. Readings should be 30-40 mr/hr above background. Check that this causes alarms on XA-4043-5 in ACR and on XA-4010-2 in MCR.

SENSOR	READING	CHECK THAT			
		ALARMS OCCUR	EMERGENCY DRAIN IS INITIATED*	HCV 565 CLOSES	HCV 566 A1 AND A3 CLOSE
RM-565-B					
RM-565-C					

*As indicated by lights going out in Ckt. 18 and 19.

Approved by *A. K. Layman*

8B-5
10/22/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 4.5 Remove source from lead shield. | _____ | _____ |
| 4.6 Replace source plug. | _____ | _____ |
| 4.7 Reset RM-565-B and RM-565-C and check that alarms clear. Ckt. 18 and 19 is made up and HCV 565 opens. | _____ | _____ |

5 RADIATION MONITOR 500 (MAIN HELIUM SUPPLY)

WATER ROOM

- | | | |
|--|-------|-------|
| 5.1 Check that alarm setting on RM-500D is set on 20 mr/hr by pressing alarm button. Adjust if necessary. | _____ | _____ |
| 5.2 Remove the shield plug from the lead shield. | _____ | _____ |
| 5.3 Place position plug in place of the source plug. | _____ | _____ |
| 5.4 Insert source fully and record reading indicated on RI-500-D. Reading should be 25-35 mr/hr above background. This should cause alarm on XA-4043-2 in ACR and on XA-4010-2 in MCR. | _____ | _____ |

SENSOR	READING	<u>CHECK THAT</u> ALARMS OCCUR
RM-500-D		

- | | | |
|---|-------|-------|
| 5.5 Remove source and position plug from lead shield. | _____ | _____ |
| 5.6 Replace source plug. | _____ | _____ |
| 5.7 Check that alarms clear. | _____ | _____ |

6 PROCESS MONITOR 596 (OUTSIDE TRANSMITTER ROOM)

- | | | |
|---|-------|-------|
| 6.1 Push alarm buttons on RM-596-A, RM-596-B, and RM-596-C. Check that the alarm setpoints are at 20 mr/hr. | _____ | _____ |
|---|-------|-------|

Approved by *P. H. Kuyman*

8B-6
10/22/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 6.2 These three elements are checked individually and should not give control action. If two elements are set off, the helium supply to the fuel pump and overflow tank bubblers will be blocked. | _____ | _____ |
| 6.3 Check that shield is completely assembled. | _____ | _____ |
| 6.4 Insert source in a hole and record the reading indicated on that channel. Reading should be 28 ± 5 mr/hr above background. Check that this channel causes an alarm on XA-4043-1 in ACR and on XA-4010-2 in MCR. | _____ | _____ |
| 6.5 Remove the source. | _____ | _____ |
| 6.6 Reset the monitor and check that alarms clear. | _____ | _____ |
| 6.7 After alarms clear and readings have returned to their previous value, repeat 6.4 through 6.6 on the other two channels. | _____ | _____ |

Sensor	Reading	<u>CHECK THAT</u> <u>Alarms Occur</u>
RM-596-A		
RM-596-B		
RM-596-C		

7 PROCESS MONITOR 827 (TREATED WATER)

WATER ROOM

- | | | |
|---|-------|-------|
| 7.1 Check that the alarm setpoints (red pointers) on RM-827-A, B and C are indicating a current that is equivalent to 20 mr/hr. | _____ | _____ |
| 7.2 Control action is initiated by two of the three monitors going into alarm condition. This should not happen, but if it does it will close block valves in all return water lines which are from in-cell components. | _____ | _____ |

Approved by R. N. Symon

8B-7
10/22/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 7.3 Check that shield is completely assembled before proceeding. | _____ | _____ |
| 7.4 Insert the source in one hole and record the reading indicated on that channel. Reading should be _____. Check that this channel causes an alarm on XA-4042-1 in ACR and XA-4010-2 in MCR. | _____ | _____ |
| 7.5 Remove the source. | _____ | _____ |
| 7.6 Reset the electrometer and check that alarms clear. | _____ | _____ |
| 7.7 After alarms clear and readings return to their original value, repeat 7.4 through 7.6 on the other two channels. | _____ | _____ |

Sensor	Reading	<u>CHECK THAT</u> <u>Alarms Occur</u>
RM-827-A		
RM-827-B		
RM-827-C		

8 OIL SYSTEM PROCESS MONITORS (SERVICE TUNNEL)

- | | | |
|--|-------|-------|
| 8.1 Check that alarm settings on RM-OT-1B and RM-OT-2B (located in service room) are set at 20 mr/hr. Adjust if necessary. | _____ | _____ |
| 8.2 Place source in special source support beside the detector at OT-1B. RM-OT-1B should read 25 to 30 mr/hr with the source 1 3/4" from the detector. Record reading. Alarms should be received on XA-4042-1 in the ACR and XA-4042-2 in the MCR. | _____ | _____ |
| 8.3 Repeat 8.2 at OT-2. RM-OT-2B should read 25-30 mr/hr with the source 1 3/4" from the detector. Record reading and check that the same alarms are received as before. | _____ | _____ |

Approved by _____

8B-8
10/22/65

Init. Date/Time

8.4 Check that alarms clear when source is removed. _____

Sensor	Reading	CHECK THAT Alarms Occur
RM-OT-1B		
RM-OT-2B		

Approved by *B. H. Hymon*

8C-1
9/10/65

8C CALIBRATION OF PERSONNEL MONITORS AND STACK MONITORS

It will be necessary to periodically check the calibration and operability of all fixed radiation monitors, personnel radiation alarm units, and the evacuation alarm system. This will be done in conjunction with the health physics department. The calibration and operability of the stack monitor will be checked in conjunction with the Laboratory Facilities Department. Details of the tests and data to be taken are described below.

<u>1</u>	<u>ROUTINE SOURCE CHECK</u>	<u>Init.</u>	<u>Date/Time</u>
1.1	Have Health Physicist test each fixed radiation monitor with a source to assure that each responds properly and gives local and/or control room alarms. Record data in Table 8C1-1.	_____	_____
1.2	Reset alarm after each test.	_____	_____
<u>2</u>	<u>ALARM MATRIX CHECK</u>		
	The following test requires that the evacuation alarm system be disabled. Therefore, if two radiation monitors alarm, (other than those activated by the test), the evacuation alarm should be manually actuated.		
2.1	Shift supervisor's permission to proceed. _____.	_____	_____
2.2	Notify the emergency control center, then turn the key operated switch to disable. Operations Chief's permission to disable. _____.	_____	_____
2.3	Have Health Physicist activate the monitor in the control room (RE-7011) with a source.	_____	_____
2.4	Have the Health Physicist activate each of the other monitors (see Table 8C2-1) with a source and note that the matrix would have caused an evacuation as indicated by the	_____	_____

Approved by DPH Johnson

8C-2
9/10/65

Init. Date/Time

- 2.4 (continued)
evacuate light in the auxiliary control room.
Reset the module before the next instrument
is tested. Do not reset RE-7011. Record
results in Table 8C2-1. _____
- 2.5 When finished reset RE-7011. _____
- 2.6 Have Health Physicist activate the office
CAM (RE-7002) with a source. _____
- 2.7 Have the Health Physicist activate each of the
other CAM's (see table 8C2-2) with a source
and note that the matrix would have caused
an evacuation as indicated by the evacuate
light in the auxiliary control room. Do
not reset RE-7002. Record results in
Table 8C2-2. _____
- 2.8 When finished, reset RE-7002. _____
- 2.9 Switch key switch from disable to normal and
put key in drawer of console. _____

3 EVACUATION ALARM TEST

- 3.1 Operations Chief _____ and
Shift Supervisor _____
approval to proceed. _____
- 3.2 Have a spare nitrogen cylinder located at
each evacuation horn. _____
- 3.3 Notify the emergency control center. _____
- 3.4 Manually sound evacuation alarm. _____
- 3.5 Note that all 4 horns alarmed and that
everyone evacuated. _____
- 3.6 Reset and valve in standby nitrogen cylinder. _____
- 3.7 Announce all clear. _____
- 3.8 Replace used nitrogen bottles. _____

Approved by *A. H. Haysmon*

8C-3
9/10/65

Init. Date/Time

4 CONTAINMENT STACK MONITOR TESTS

4.1 Have Laboratory Facilities Department
 personnel check each monitor with a source
 and note that the recorder responds properly
 and that an alarm occurs in the control room.
 Record data in Table 8C4-1.

4.2 Reset alarm after each test.

Approved by *A. H. Hymon*

8C-4
9/10/65

TABLE 8C1-1
SOURCE CHECK OF FIXED RADIATION MONITOR

Type	Number	Location	Local Check Satisfactory	Proper Aux. Control Room Alarm	Control Room Alarm (XA-4010-1)	Reset Alarm
Monitron	RE-7011	Control Room				
"	RE-7012	High Bay - South				
"	RE-7013	High Bay - West				
"	RE-7014	840' level -North				
"	RE-7015	Transmitter Room				
"	RE-7016	Basement - Center				
"	RE-7017	Service Tunnel				
CAM	RE-7000	High Bay - West				
"	RE-7001	High Bay - South				
"	RE-7002	Offices				
"	RE-7003	Basement - North				
"	RE-7004	Transmitter Room				
"	RE-7005	Service Tunnel				
"	RE-7006	Mobile Unit		XXXX	XXXX	XXXX
Q-2091		7 instruments		XXXX	XXXX	XXXX
Q-1939		7503 Hall		XXXX	XXXX	XXXX

Approved by *R. J. Gorman*

8C-5
9/10/65

TABLE 8C2-1

MONITRON ALARM MATRIX CHECK

Monitron Number	Matrix Functioned Properly	Alarm Was Reset
RE-7012		
RE-7013		
RE-7014		
RE-7015		
RE-7016		
RE-7017		

TABLE 8C2-2

CAM ALARM MATRIX CHECK

CAM Number	Matrix Functioned Properly	Alarm Was Reset
RE-7003		
RE-7004		
RE-7005		

Approved by B. K. [Signature]

8C-6
9/10/65

TABLE 8C4-1

STACK RADIATION MONITOR CHECKS

Type	Number	Counts per Minute	Proper Aux. Control Room Alarm	MCR Alarm	Alarm
				XA-4003-1	
Beta Gamma	RM S1-A				
Alpha	RM S1-B				
Iodine	RM S1-C				

Approved by

[Signature]

8D-1
10/26/65

8D SAFETY CIRCUIT CHECKS

Additional periodical on-line checks will be made of the safety instrumentation. Details of these tests are described in this section.

Init. Date/Time

1 FUEL PUMP AND OVERFLOW TANK PRESSURE

1.1 Record system pressures.

- PRC-522-A ____ (MB-8)
- PI-522-A ____ (S-E Panel 3)
- PI-589-A1 ____ (AB-8)
- PI-589-A2 ____ (TB-5)
- PI-592-B ____ (AB-8)

1.2 Depress test button on PM-589 and PM-592 (in ACR) one at a time, and note that actions listed below occur.

	TEST BUTTON DEPRESSED	
	PM-589	PM-592
XA-4006-5 annunciates		
Second light out in ECC 18	XXXX	
Second light out in ECC 19		XXXX
FV-103 starts to thaw*		
FV-105 or 106 starts to thaw**		
HCV-573, 575, and 577 open (MB Lights)		
HCV-533 open (MB Lights)		

*Check TR 3600

**Both may be in thawed condition; if so, it is not necessary to check this.

1.3 Reduce system pressure from 5 psig to 4.5 psig, as indicated by PRC-522-A. Record:

- PRC-522-A ____
- PI-522-A ____

Approved by *[Signature]*

8D-2
10/26/65

Init. Date/Time

- 1.3 (continued)
- PI-589-A1 _____
- PI-589-A2 _____
- PI-592-B _____


- 1.4 Note that each changed at least 0.5 psig from Step 1.1. _____
- 1.5 Reset PRC-522-A to 5 psig. _____

2 HELIUM SUPPLY PRESSURE

- 2.1 While observing relay K-46, have HV-500-N1 A and B opened and observe that relay K-46 opens. _____
- 2.2 Close HV-500-N1 A and B and note that relay closes. _____
- 2.3 While observing relay K-47, have HV-500-N2 A and B opened and observe that relay K-47 opens. _____
- 2.4 Close HV-500-N2 A and B and note that relay closes. _____
- 2.5 While observing relay K-48, have HV-500-N3 A and B opened and observe that relay K-48 opens. _____
- 2.6 Close HV-500-N3 A and B and note that relay K-48 closes. _____

3 FP AND OFT BUBBLERS

- 3.1 Switch OFT test switch S-38 to No. 1 equalizer and note that OFT level indicators LI-599-B and LI-599-B2 to approximately zero and return to original value when test switch is released. _____
- 3.2 Switch OFT test switch S-38 to No. 2 equalizer and note that OFT level indicators LI-600-B and LI-600-B2 to approximately zero and return to original value when test switch is released. _____
- 3.3 Actuate HS-599 and note that LI-599 increases and emergency drain is initiated as indicated by lights in ECC 19 at ~ 20% level. Record

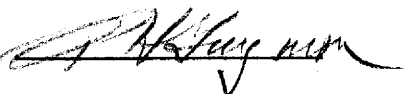Approved by 

8D-3
10/26/65

	<u>Init.</u>	<u>Date/Time</u>
3.3 (continued) level _____.	_____	_____
3.4 Actuate HS-600 and note that LI-600 increases and emergency drain is initiated as indicated by lights in ECC 18 at ~ 20% level. Record level _____.	_____	_____
3.5 Switch fuel pump selector switch S-36 to record LT-596.	_____	_____
3.6 Switch fuel pump test switch S-37 to No. 2 block and note that valve closes as indicated by FI-593-A increasing to line pressure.	_____	_____
3.7 Release test switch and note that pressure on FI-593-A returns to normal.	_____	_____
3.8 Switch FP test switch S-37 to reference block and note that valve closes as indicated by FI-592-A increasing to line pressure.	_____	_____
3.9 Release test switch and note that pressure on FI-592-A return to normal.	_____	_____
3.10 Switch fuel pump selector switch S-36 to record LT-593.	_____	_____
3.11 Switch FP selector switch S-37 to No. 1 block and note that valve closes as indicated by FI-596-A increasing to line pressure.	_____	_____
3.12 Release test switch and note that pressure on FI-596-A returns to normal.	_____	_____
3.13 Switch overflow tank test switch S-38 to No. 1 block and note that valve closes as indicated by FI-599-A increasing to line pressure.	_____	_____
3.14 Release test switch and note that pressure on FI-599-A returns to normal.	_____	_____
3.15 Switch OFT test switch to Reference block and note that valve closes as indicated by FI-589-A increasing to line pressure.	_____	_____

Approved by J. W. Kingman

8D-4
10/26/65

	<u>Init.</u>	<u>Date/Time</u>
3.16 Release test switch and note that pressure on FI-589-A returns to normal.	_____	_____
3.17 Switch OFT test switch to No. 2 block and note that valve closes as indicated by FI-600-A increasing to line pressure.	_____	_____
3.18 Release test switch and note that pressure on FI-600-A returns to normal.	_____	_____
<u>4 ROD SCRAM CIRCUITS</u>		
4.1 Check that all three safety channels are untripped.	_____	_____
4.2 Push HS-100-A1 and note that safety channel No. 1 trips at approximately 1300°F. Record temperature _____.	_____	_____
4.3 Reset safety channel No. 1.	_____	_____
4.4 Push HS-100-A2 and note that safety channel No. 2 trips at approximately 1300°F. Record temperature _____.	_____	_____
4.5 Reset safety channel No. 2.	_____	_____
4.6 Push HS-100-A3 and note that safety channel No. 3 trips at approximately 1300°F. Record temperature _____.	_____	_____
4.7 Reset safety channel No. 3.	_____	_____
4.8 Push voltage monitor test switch on RM-NSC1-A2 (Monitor and Test Unit) and note that safety channel trips.	_____	_____
4.9 Push reset on RM-NSC1-A2, RSS-NSC1-4 and on RSS-NSC1-A6.	_____	_____
4.10 Push test switch on RM-NSC2-A2 and note that safety channel trips.	_____	_____
4.11 Push reset on RM-NSC2-A2, RSS-NSC2-A4 and on RSS-NSC2-A6.	_____	_____
4.12 Push test switch on RM-NSC3-A2 and note that safety channel trips.	_____	_____

Approved by



8D-5
10/26/65

	<u>Init.</u>	<u>Date/Time</u>
4.13 Push reset on RM-NSC3-A2, RSS-NSC3-A4 and on RSS-NSC3-A6.	_____	_____
4.14 Push "test" on RSS-NSC1-A4 and note that all "A" control rod amps. go to zero.	_____	_____
4.15 Reset RSS-NSC1-A4.	_____	_____
4.16 Push "test" on RSS-NSC2-A4 and note that all "B" control rod amps. go to zero.	_____	_____
4.17 Reset RSS-NSC2-A4.	_____	_____
4.18 Push "test" on RSS-NSC3-A4 and note that all "C" control rod amps. go to zero.	_____	_____
4.19 Reset RSS-NSC3-A4.	_____	_____
4.20 Push "1 sec. period" on RSS-NSC1-A2 and check that ~ 1 sec period will trip RSS-NSC1-A6.	_____	_____
4.21 Reset RSS-NSC1-A4 and A6.	_____	_____
4.22 Push "1 sec. period" on RSS-NSC2-A2 and check that ~ 1 sec. period will trip RSS-NSC2-A6.	_____	_____
4.23 Reset RSS-NSC2-A4 and A6.	_____	_____
4.24 Push "1 sec. period" button on RSS-NSC3-A2 and check that ~ 1 sec. period will trip RSS-NSC3-A6.	_____	_____
4.25 Reset RSS-NSC3-A2 and A6.	_____	_____
4.26 Push "high current" button on RSS-NSC1-A2. Adjust "adjust knob" on RSS-NSC1-A2, and note that RSS-NSC1-A3 trips at ~ 150% on RM-NSC1-A1.	_____	_____
4.27 Record vernier setting on RSS-NSC1-A2.	_____	_____
4.28 Reset all channel No. 1 trips.	_____	_____
4.29 Push "high current" button on RSS-NSC2-A2. Adjust "adjust knob" on RSS-NSC2-A2, and note that RSS-NSC2-A3 trips at ~ 150% on RM-NSC2-A1.	_____	_____
4.30 Record vernier setting on RSS-NSC2-A2.	_____	_____
4.31 Reset all channel No. 2 trips.	_____	_____
4.32 Push "high current" button on RSS-NSC3-A2.	_____	_____

Approved by *[Signature]*

8D-6
10/26/65

Init. Date/Time

4.32 (continued)

Adjust "adjust knob" on RSS-NSC3-A2, and note that RSS-NSC3-A3 trips at ~ 150% on RM-NSC3-A1.

4.33 Record vernier setting on RSS-NSC3-A2.

4.34 Reset all channel No. 3 trips.

5 EMERGENCY FUEL DRAIN

Initiate an emergency fuel drain by the following procedures, and check that the actions listed occur. Keep the time of drain test to a minimum to avoid thawing FV-103 and venting drain tanks. Monitor the freeze valves temperatures on TR 3600 to assure that this does not occur.

5.1 Switch the emergency drain switch on the console to drain, and note the following:

5.1.1 Lights go out in circuits 18 and 19.

5.1.2 The drain tank vent valves, HCV-573-A1, HCV-575-A1 and HCV-577-A1, open (Check lights on MB 8, 9, and 10.).

5.1.3 The drain tank bypass valves, HCV-544-A1, HCV-545-A1 and HCV-546-A1 are closed, check that they open.

5.1.4 If the drain tank helium supply valves, HCV-572-A1, HCV-574-A1, HCV-576-A1 and PCV-517-A1 are open, check that they close.

5.1.5 The air block valves to FV-103, HCV-919-A1, HCV-919-B1, close as indicated by FV 103 temperature.

5.2 Check high temperature scram as follows.

5.2.1 Push HS 100-A1 and hold in. Note that temperature indicates above 1300^oF.

5.2.2 Push HS 100-A2 and note that lights in ECC 18 and 19 go out when temperature

Approved by *D. H. H. H. H. H.*

8D-7
10/26/65

Init. Date/Time

- 5.2.2 (continued)
 indication reaches 1300^oF. Record temperature _____.

- 5.2.3 Release HS 100-A1 and depress HS 100-A3.
 Note that lights in ECC 18 and 19 go out when temperature indication reaches 1300^oF.
 Record temperature _____.

- 5.2.4 Release HS 100-A2 and depress HS 100-A1.
 Note that the lights in ECC 18 and 19 go out when temperature reaches 1300^oF.
 Record temperature _____.

- 5.2.5 Release HS 100-A1 and A3 and note that lights in ECC 18 and 19 are on.

- 5.2.6 Observe FV 103 temperatures until conditions are normal.

- 5.3 Push OFT level test switches HS-599-B and HS-600-B, one at a time, and note that lights in ECC 18 and 19 go off when level exceeds 20%. Record LI-599-B1 and LI-600-B1. _____

6 HIGH/LOW REACTOR CELL PRESSURE

- 6.1 Reactor cell pressure <10.5 psia on 2/3 of PSS-RC-H, PSS-RC-J and PSS-RC-K causes the following control actions to occur:
 - 6.1.1 CCP No. 1 and CCP No. 2 to stop.
 - 6.1.2 Cell evacuation valve HCV-565-A1 to close.
- 6.2 Reactor cell pressure >16.7 psia on 2/3 of PSS-RC-B, PSS-RC-F and PSS-RC-G causes the following control actions to occur:
 - 6.2.1 Emergency containment block which closes instrument air line block valves and liquid waste block valves.

Approved by B. A. Hayman

8D-8
10/26/65

Init. Date/Time

6.2.2 Cell evacuation valve HCV-565-A1 to open
(or stay open).

6.3 Reactor cell pressure <10.5 psia:

6.3.1 At the valve panel in the North Electric Service Area, slowly open HV-RC-K and raise the pressure on PSS-RC-K until XA-4002-5 alarms. (Do not exceed 5 psig on PI-RC-K.) _____

6.3.2 Slowly open HV-RC-H and raise the pressure on PSS-RC-H. (Do not exceed 5 psig on PI-RC-H.) Note that CCP 1 or CCP 2 stops _____ and reactor cell evacuation valve(HCV-565-A1) closes _____ when the difference between DP back pressure + cell pressure is 4 psi. (PI-RCH minus PI-RC-B = _____).

6.3.3 Close HV-RC-H _____. Start CCP No. 1 or No. 2 _____.

6.3.4 Slowly open HV-RC-J and raise pressure on PSS-RC-J. (Do not exceed 5 psig on PI-RC-J.) Note that CCP 1 or CCP 2 stops _____ and reactor cell evacuation valve (HCV-565-A1) closes _____ when the difference between DP back pressure and cell pressure is 4 psi. (PI-RC-J minus PI-RC-B = _____.)

6.3.5 Close HV-RC-K. Start CCP No. 1 or No. 2 _____.

6.3.6 Slowly open HV-RC-K and raise pressure on PSS-RC-K. (Do not exceed 5 psig on PI-RC-K.) Note that CCP 1 or CCP 2 stops _____ and reactor cell evacuation valve (HCV-565-A1) closes _____ when the difference between DP back pressure and cell pressure is 4 psi. (PI-RC-K minus PI-RC-B = _____.) _____

Approved by *P. H. [Signature]*

8D-9
10/26/65

	<u>Init.</u>	<u>Date/Time</u>
6.3.7 Close HV-RC-J and HV-RC-H and note that XA-4002-5 clears.	_____	_____
6.3.8 Start CCP No. 1 or No. 2 _____.	_____	_____
6.4 Reactor cell pressure 16.7 psia:		
6.4.1 Slowly open HV-RC-G and increase pressure on PI-RC-G until XA-4002-5 alarms _____.		
(Do not exceed 5 psig on PI-RC-G.)		
Record PI-RC-G _____. Note that PI-9013-1A4 drops to zero _____ and all other gages in the 9013 series do not change _____.		
Slowly open HV-RC-B and increase pressure on PI-RC-B (Do not exceed 5 psig on PI-RC-B.) until HCV-9013-1A1 and 9013-1A2 operate _____.		
Record PI-RC-B _____.		
Note that the following actions occur:		
6.4.1.1 Instrument air line block valves close _____. (PI-9013-1A6 goes to zero _____.)		
6.4.1.2 Liquid waste block valves close: FCV-333-A1 _____ FCV-343-A1 _____ FCV-333-A2 _____ FCV-343-A2 _____		
6.4.1.3 Reactor cell evacuation valve HCV-565-A1 opens (or remains opened) _____.		
6.4.2 Close HV-RC-B _____. Slowly open HV-RC-F and increase pressure on PI-RC-F (Do not exceed 5 psig on PI-RC-F.) until HCV-9013-1B1 and 9013-1B2 operate. Record PI-RC-F _____. Note that the actions listed in 6.4.1.1 through 6.1.4.3 occur:		
6.4.1.1 _____		
6.4.1.2 _____		
6.4.1.3 _____	_____	_____

Approved by PH Longman

8D-10
10/26/65

Init. Date/Time

6.4.3 Close HV-RC-G _____. Slowly open HV-RC-B and increase pressure on PI-RC-B (Do not exceed 5 psig on PI-RC-B.) until HCV-9013-1A1 and 9013-1A2 operate _____. Record PI-RC-B _____. Note that the actions listed in 6.4.1.1 through 6.4.1.3 occur:

- 6.4.1.1 _____
- 6.4.1.2 _____
- 6.4.1.3 _____

6.4.4 Close HV-RC-F and HV-RC-B _____ and note that XA-4002-5 clears and that all pressure gages in the 9013 series read about 50 psig _____.

7 COOLANT PUMP SPEED AND COOLANT SALT FLOW

7.1 Actuate the following test switches one at a time and observe that the corresponding relays drop out:

<u>SWITCH</u>	<u>RELAY</u>
HS-202-A	K4 _____
HS-202-B	K5 _____
HS-202-C	KA6 and KB6 _____
HS-201-A	K7 _____
HS-201-B	K8 _____

7.2 Push the calibrate buttons on the following instruments one at a time and observe that the corresponding relays drop out:

<u>INSTRUMENT</u>	<u>RELAY</u>
SI-CP-G1	K9 _____
SI-CP-G2	K10 _____

8 SAMPLER-ENRICHER

8.1 Check that the permissive lights in the main control room and at the sampler enricher panel

Approved by *Alvin M. ...*

8D-11
10/26/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 8.1 (continued)
are actuated by the permissive switch on MB-8.
Leave on. | _____ | _____ |
| 8.2 Close capsule access port (HS-651-A) ____,
removal valve (HS-RV-A) ____, operational
valve (HS-OV-A) ____, and HSV-678-A ____.
Maintenance valve should be open ____, cable
drive fully withdrawn ____, fuel pump bowl
pressure less than 10 psig ____, cover on
manipulator ____, and area 1C at the same
pressure as area 3A _____. RE-675-A and
RE-675-B must not be in alarm condition ____.
Buffer pressure should be applied to RV, OV,
MV, and AP _____. | _____ | _____ |
| 8.3 Note that removal valve will not open. | _____ | _____ |
| 8.4 Insert transport container through removal
seal and open HCV-666-D. After "removal
seal closed" light comes on (ZI-666-E),
note that removal valve can be opened. | _____ | _____ |
| 8.5 Close removal valve. Before buffer pressure
reaches 50 psia (PR-670-B), note that access
port and operational valve will not open. | _____ | _____ |
| 8.6 After "removal valve closed" light (ZI-670-B)
comes on, note that access port will open. | _____ | _____ |
| 8.7 Close access port. Note that there is a 15-
second time delay on HSV-653-A. | _____ | _____ |
| 8.8 Before buffer pressure reaches 50 psia
(PR-669-B), note that removal valve and
operational valve will not open. | _____ | _____ |
| 8.9 Increase pressure in area 1C to pump bowl
pressure using HV-657 or until PdS-1C-E
alarms XA-4036-5 and XA-4008-2 whichever
is higher. Note difference in pressure | _____ | _____ |

Approved by B. N. Geyman

8D-12
10/26/65

Init. Date/Time

- 8.9 (continued)
between area 3A and area 1C at which alarm sounds. Record ΔP ____.
- 8.10 Note that access port will not open when PdS-1C-E is in alarm condition. _____
- 8.11 Note that capsule drive motor will not insert. _____
- 8.12 After "access port closed" light (ZI-669-B) comes on, open operational valve until closed light (ZI-OV-A2) goes off. _____
- 8.13 Note that capsule drive motor will operate when closed light on operational valve (ZI-OV-A2) and on maintenance valve (ZI-MV-A2) are off. _____
- 8.14 Insert cable more than 6 inches. Note that operational and maintenance valves will not close ____.
- IMPORTANT: Should either or both valves start to close, release the switch immediately or there will be permanent damage to drive unit cable and to valve. _____
- 8.15 Withdraw cable and note that drive motor stops automatically and lower limit light (ZI-CD-A3) goes off. _____
- 8.16 Close maintenance valve leaving operational valve open. Before buffer pressure reaches 35 psia (PR-655-C), note that HSV-678-A will not open. _____
- 8.17 Before PR-655-C reaches 50 psia, note that access port and removal valve will not open and cable drive will not insert. _____
- 8.18 After "operational or maintenance valve closed" light comes on (ZI-OV-MV-C), open and close removal valve. Before buffer pressure reaches 50 psia (PR-670-B), note that maintenance valve and access port will not operate. _____

Approved by



8D-13
10/26/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 8.19 Reduce pressure in area 1C to that of area 3A through HSV-678-A. Note that alarm XA-4036-5 clears. | _____ | _____ |
| 8.20 After "removal valve closed" light (ZI-670-B) comes on, open and close access port. Before buffer pressure reaches 50 psia (PR-669-B) note that maintenance valve and removal valve will not open. | _____ | _____ |
| 8.21 Open HSV-678-A. Note that it will close when either the operational or maintenance valve is opened. | _____ | _____ |
| 8.22 Pressurize area 1C until PS-1C-E activates XA-4037-1 and XA-4008-2 per switch tabulation. Record pressure reading of PR-1C-E _____. | _____ | _____ |
| 8.23 Pressurize area 3A, and manipulator cover until PS-AR-3A activates XA-4037-2 and XA-4008-2 per switch tabulation. Record pressure reading of PE-AR-3A _____. | _____ | _____ |
| 8.24 Activate RS-678-C and RS-678-D, one at a time, with a source. Note that XA-4037-6 and XA-4008-2 annunciate each time. | _____ | _____ |
| 8.25 Activate RS-675-A and RS-675-B, one at a time, with a source. Note that XA-4037-5 and XA-4008-2 annunciate _____ and HSV-678-A _____, HSV-678-B2 _____, HSV-677-A _____, FSV-542-A _____, HSV-668-B _____, HSV-655-B _____, HSV-657-D _____, HSV-680-B _____, HSV-675-A2 _____, and HSV-659-B _____, close each time. | _____ | _____ |
| 8.26 Check with Operations Chief before proceeding: Increase fuel pump bowl pressure until PS-522-A3 alarms XA-4037-4 and XA-4008-2 per switch tabulation. Note that HSV-668-B _____, HSV-655-B _____, HSV-657-D _____, and HSV-680-B _____ close | _____ | _____ |

Approved by *A. H. Ferguson*

8D-14
10/26/65

Init. Date/Time

8.26 (continued)

and that access port ____, operational valve
____, and maintenance valve ____ will not
open.

8.27 In area 3B carefully close HV-542 ____.

NOTE: This is a soft-seated valve.

Open HSV-678-A ____, HSV-678-B1 ____, HCV-667-A
____, and ESV-542-A _____. Pressurize area 1C
and note that PSS-542-B and PSS-542-C both
operate to close ESV-542-A per switch tabulation.
Record pressure _____. Open HV-542.

9 EXERCISE CONTROL RODS

9.1 Record control rod position.

Rod No. 1 _____ Rod No. 2 _____ Rod No. 3 _____


9.2 While observing control rod motor current in
NESA, raise rod No. 2 and No. 3 approximately
2 inches. Adjust rod No. 1 (manually or by
servo) to maintain reactivity constant. Record
control rod motor currents while rods are
moving.

Rod No. 1 _____ Rod No. 2 _____ Rod No. 3 _____

9.3 Record control rod positions

Rod No. 1 _____ Rod No. 2 _____ Rod No. 3 _____

9.4 Readjust rods to desired positions.

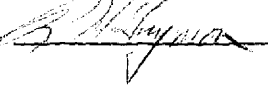Approved by 


9-1
10/4/65

9 UNUSUAL OPERATING CONDITIONS

During operation difficulties of various kinds and severity may be encountered. To plan in advance for all possible troubles would be impractical. In this section an attempt is made to anticipate some of the more probable or more serious ones; and suggest remedial actions. Conditions at the time may alter the action to be taken. In some cases it may be possible to instigate strict administrative control as a substitute for control or even safety interlocks. In this case it will usually be desirable to consult the Operations Chief.

The sections are written as check lists to aid in recording the action taken. However they need not be filled out until the situation is under control.

All personnel should be thoroughly familiar with the suggested corrective action.



Approved by



9A-1
10/1/65

9A LOSS OF ELECTRICAL POWER

Various degrees of loss of electrical power are possible at the MSRE. The operator actions required and control actions which will occur are given in the sections below.

1 LOSS OF PREFERRED TVA FEEDER

If power is lost on the preferred feeder (line 234), the motor-operated pole-line switch No. 129 will open. Following a 6-second delay the alternate feeder (line 294) motor-operated pole-line switch No. 229 will close and power will be resumed. It will be necessary to restart some of the equipment as described in section 3A 3.1. After this, operation can continue until voltage return on the preferred feeder. To avoid overloading the alternate feeder, the radiator blowers should not be operated at this time.

2 COMPLETE LOSS OF TVA POWER - ALL DIESELS OPERABLE

If power is lost on both TVA feeders, the two motor-operated pole-line switches (No. 129 and 229) will open. The operator should proceed as follows:

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 2.1 Start all three diesel generators and restart the equipment as given in section 3A 3.2. The radiator blowers cannot be operated on the generators. The scanners, chart drives and control room clock will be automatically transferred to motor generator 4. | _____ | _____ |
| 2.2 Continue operation at heat loss power or lower until the voltage from the 250v battery bank drops below acceptable limits. At which time, the fuel and coolant systems should be drained, and if necessary, the afterheat removal system put into service. | _____ | _____ |
| 2.3 Since the life expectancy of the 250v batteries is approximately 2 hours, reduce all unnecessary load. | _____ | _____ |

Approved by



9A-2
10/1/65

Init. Date/Time

(Main Control Room)

2.3.1 Stop FOP-2 and COP-2 and start FOP-1 and COP-1. This will transfer 4-8kw to the diesel generator.

(Outside Battery Room)

2.3.2 Open the 250 VDC light breaker in the 250v distribution panel. This will remove the emergency DC lights from the batteries. This amounts to approximately 4 kw. (A portable battery operated light should be in the control room at this time.)

3 FAILURE OF DIESEL GENERATOR NO. 3 DURING A TVA POWER OUTAGE

If diesel generator No. 3 cannot be started or fails during operation, the operator should proceed as follows:

(Outside Battery Room)

3.1 The fuel and coolant pumps will not be operable.

Refer to section 9C for details of operation.

3.2 Close the 250v Dc light breaker in the 250v distribution panel to supply emergency Dc lighting if lights are not already on.


(Main Control Room)

3.3 Check that FOP-2 is in operation. (FOP-1 cannot be operated unless diesel generator No. 3 has power.)

3.4 Stop COP-2 and start COP-1. This will conserve 250v battery life.

3.5 Where alternate equipment is powered by both diesel generator No. 3 and No. 4, start the equipment on diesel generator No. 4 (Sec. 3A, Table VI).

(Switch House)

Approved by 

9A-3
10/1/65

	<u>Init.</u>	<u>Date/Time</u>
3.6 Check that the drain-tank space-cooler DCC transfer switch (located near entrance to M G room) is set to MCC-G4. Restart DCC if necessary.	_____	_____
3.7 Since component coolant pump No. 3 will not be operable, emergency air from the auxiliary air compressor will be needed to keep FV-204 and 206 frozen as well as fuel processing freeze valves if they are not deep frozen.	_____	_____
(Diesel House)		
3.7.1 Start the service air compressor.	_____	_____
(Water Room)		
3.7.2 Open V-967A.	_____	_____
3.7.3 Set PCV-967 to 8 psig.	_____	_____
3.8 Since one of the reactor cell space coolers (RCC 1) will not be in operation, the cell temperature will increase with resulting increase in pressure. Operator should proceed as follows:		
(Water Room)		
3.8.1 Close V-838A to shut off the water flow to RCC 1.	_____	_____
3.8.2 Open V-840A, V-836A and V-873A to give maximum water flow to RCC 2 and DCC and the component coolant heat exchanger.	_____	_____
(Vent House)		
3.8.3 If the cell pressure increases due to the temperature rise, increase the rate of evacuation by opening V-569A and V-569B or V-565C to control pressure at 12.7 psia.	_____	_____

NOTE: When TVA power is resumed or when diesel generator

Approved by



9A-4
10/1/65

Init. Date/Time

No. 3 is in operation, RCC-1 can be put back in service. The water flow (V-838A) should be increased gradually in order to avoid pulling too high a vacuum on the cell. Flow to RCC 2, DCC and component coolant heat exchanger should be decreased to normal flow rate (V-840A, 836A and 873-A).

3.9 When the voltage from the 250v battery drops to 212v or the cell air temperature rises to 200 degrees F, the fuel and coolant systems should be drained.

3.10 One of the tower fans, TF 1, will not be in operation. During periods of high heat load during the summer this could increase the cooling tower water temperature and subsequently heat the treated water. All equipment should be watched for overheating.

(See section 9B.)

4 FAILURE OF DIESEL GENERATOR NO. 4 DURING A TVA POWER OUTAGE

If diesel generator No. 4 cannot be started or fails during operation, the operator should proceed as follows:

(Main Control Room)

4.1 The fuel pump will not be operable. Refer to section 9C for details of operation.

4.2 Check that COP-2 is in operation (COP-1 cannot be operated unless diesel generator buss No. 4 has power.).

4.3 Stop FOP-2 and start FOP-1. This will conserve 250v battery life.

4.4 Where alternate equipment is powered by generator No. 3 and No. 4, start the equipment on generator No. 3. (See section 3A, Table V.)

Approved by *A. W. Hayden*

9A-5
10/1/65

Init. Date/Time

(Switch House)

- 4.5 Check that DCC transfer switch (located near entrance to MG room) is set to MCC-G3. Restart DCC if necessary. _____
- 4.6 Since one of reactor cell coolers (RCC-2) will not be in operation, the cell temperature will increase with a resulting increase in pressure. The operator should proceed as follows: _____

(Water Room)

- 4.6.1 Close V-840A to shut off water to RCC-2. _____
- 4.6.2 Open V-838A, V-836A, and V-873A to give a maximum flow to RCC-1, DCC and component coolant heat exchanger. _____
- 4.6.3 If the cell pressure increases due to the temperature rise, increase the rate of cell evacuation by opening V-569A and V-569B or V-565C to control pressure at 12.7 psia. _____

NOTE: When TVA power is resumed or when diesel generator No. 4 is in operation, RCC-2 can be put back in service. The water flow (V-840A) should be throttled and increased gradually to avoid pulling too high a vacuum on the cell. Flow to RCC-1, DCC and component cooling heat exchanger should be decreased to the normal flow rate (V-838A, V-836A and V-873A).

- 4.7 When the 250v battery drops to 212v or the cell air temperature rises to 200 degrees F, the fuel and coolant systems should be drained. _____
- 4.8 One of the tower fans, TF-2, will not be in operation. During periods of high heat load during the summer, this could increase the cooling tower water temperature and subsequently heat the treated water. All equipment _____

Approved by *R. H. Johnson*

9A-6
10/1/65

Init. Date/Time

4.8 (continued)

should be watched for overheating. (See section 9B.)

5 FAILURE OF DIESEL GENERATOR NO. 5 DURING A TVA POWER OUTAGE

This diesel furnishes all emergency electrical heat to the process system. Continued operation on emergency power without diesel generator No. 5 would endanger the ability to drain the system by cooling the thawed FV in the reactor system drain line and FV's in the coolant system.

The operator should proceed as follows:

5.1 If diesel generator No. 5 cannot be started within two minutes after a power outage, switch FV-103, FV-204, and FV-206 to thaw.

5.2 Continue to try and start diesel generator No. 5. If diesel generator No. 5 starts or TVA power is regained before the drain begins, freeze FV-204, 206 and 103 and resume operation.

5.3 Since the life expectancy of the 250v batteries is approximately 2 hours, reduce all unnecessary load.

(Main Control Room)

5.3.1 Stop FOP-2 and COP-2 and start FOP-1 and COP-1. This will transfer 4-8 kw to the diesel generator.

(Outside Battery Room)

5.3.2 Open the 250v Dc light breaker in the 250v distribution panel. This will remove the emergency Dc lights from the batteries.

This amounts to approximately 4 kw.

6 FAILURE OF DIESEL GENERATOR NO. 3 AND DIESEL GENERATOR NO. 4 DURING A TVA POWER OUTAGE

Approved by *[Signature]*

9A-7
10/1/65

Init. Date/Time

6.1 This automatically drains both systems as no cooling air is provided to keep the FV's frozen.

6.2 Continue attempts to start these diesels to get equipment back into operation (See section 9A3 and 9A4.).

7 FAILURE OF DIESEL GENERATOR 3 AND DIESEL GENERATOR 5 OR DIESEL GENERATOR 4 AND DIESEL GENERATOR 5 DURING A TVA POWER OUTAGE

7.1 Start a drain of both fuel and coolant system if DG No. 5 fails to start within two minutes.

7.2 Operator should switch FV-204, 206, and 103 to thaw (section 9A5).

7.3 Operate equipment on DG No. 3 or No. 4 depending on which is operating. (See Section 9A3 or 9A4.)

NOTE: If operating on Diesel Emergency power if possible do not transfer to TVA alternate line, Feeder 294. Wait until preferred line is restored, then return to TVA as outlined in section 3A 3.3.1.

8 LOSS OF 250v Dc SYSTEMS

8.1 Loss Of 13.8 KV Control Power

If the 13.8 KV control power is lost, no operation of the preferred or alternate feeder switches can be made from the ACR panel 11.

If the 13.8 KV control power is lost and there is an outage on the preferred feeder, the operator should proceed as follows:

8.1.1 Start all three diesel generators and restart the equipment as given in Section 3A 3.2 "Complete Loss Of TVA Power."

8.1.2 Continue operation on diesel emergency power if possible. If it is necessary to

Approved by



9A-8
10/1/65

Init. Date/Time

8.1.2 (continued)

transfer to the alternate feeder, call the electrical utility group to make the transfer to the alternate feeder manually at pole E after permission to make the transfer has been given by the switch house group.


8.1.3 Transfer load from Generator 3 and 4 without loss of power to bus No. 3 and No. 4. After transfer shut down generator 3 and 4. Transfer load from Generator 5 to bus 5. Continue operation on alternate feeder until voltage is restored on the preferred feeder.

8.2 Loss Of 250v DC Trip Power For Process Power Breakers

If the 250v DC trip power is lost, the following breakers will have to be tripped manually at the switch house until the 250v DC voltage is restored. Since the control circuits will not function, consideration should be given to stopping MB1, MB3, FP and CP.

<u>Breaker</u>	<u>Equipment</u>
Q	MB No. 3
P	MB No. 1
R	TVA Bus Main Breaker
Z	Bus No. 5 Tie Breaker
AA	Gen. No. 5-2 MCC
CC	Gen. No. 5-1 MCC

Approved by

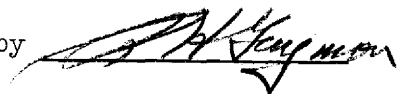

9A-9
10/1/65

Init. Date/Time

<u>Breaker</u>	<u>Equipment</u>
D	Fuel Pump
E	C. C. P. No. 2
H	C. C. P. No. 1
K	Coolant Pump
A-1	Bus No. 3 Tie Breaker
A-2	Bus No. 4 Tie Breaker
A-3	Gen. No. 4 Main Breaker
A-4	Gen. No. 5 Main Breaker
A-5	Gen. No. 3 Main Breaker

8.3 Loss Of 250v DC To Motor Generator No. 4

The loss of 250v DC to motor generator No. 4 will stop the generator, thus causing the loss of the emergency 120/240v AC power. FOP No. 2 and COP No.2 will stop and the instrument power panel No. 2 and No. 3 will be automatically transferred to TVA. FOP No. 1 and COP No. 1 will automatically start due to low oil pressure. Check and restart required equipment listed in Tables IV, V, and VI, Section 3A that was operating before the momentary loss of control power. Use control room and walking logs to determine equipment to be restarted.

9 LOSS OF INSTRUMENT POWER

The many possible combinations of loss of instrument power make it difficult to recommend corrective action. The following is a list of various instrument breakers and the instruments which they serve. This can be used as a guide in restoring instrument power.

Instrument power is supplied from 9 panels. Instrument power panel No. 1 and No. A1 are supplied from 48v DC system. Instrument power panel No. 2, No. 3, and No. A3 are supplied from MG No. 4 with

Approved by *B. H. Johnson*

9A-10
10/1/65

9 (continued)

automatic transfer to MCC-G4. To transfer back to MG No. 4, push reset button mounted above transfer switch. Instrument power panel No. 4, No. A4, No. 5, and No. 6 are supplied from MCC-G3. System supplied from individual breakers are as follows:

9.1 Instrument Power Panel No. 1 (48v DC)

<u>Breaker No.</u>	<u>System</u>
1	Safety Circuits
2	Safety Circuits
3	Safety Circuits
4	Safety Circuits
5	IPP A1
6	Safety Circuits
7	Safety Circuits Channel No. 3
8	Control Circuits
9	Control Circuits
10	Sampler-Enricher
11	Spare
12	Spare
13	Spare
14	Spare

9.2 Instrument Power Panel A1 (48v DC to 120v AC)

<u>Breaker</u>	<u>System</u>
1	Process Radiation Monitors Channel No. 3
2	Radiator Outlet Temp. Modules Reactor Outlet Temp. Modules Coolant Salt Flow Meters
3	Recorder Drives Control Room Clock Control Room Scanner Standby Power
4	Spare

Approved by B. A. Luyman

9A-11
10/1/65

9.3 Instrument Power Panel No. 2 (115v AC - Reliable)

<u>Breaker No.</u>	<u>System</u>
1	Control Circuit FV 103, 104, 105, 106
2	Control Circuit FV 107, 108, 109, 110, 111, and 112
3	Control Circuit FV 204, 206
4	Control Circuit AC No. 1, FOP No. 1, COP No. 1
5	Control Circuit AC No. 2, FOP No. 2, COP No. 2
6	Spare
7	Safety Circuits Channel No. 1
8	Radiator Load Control
9	Rod Drives Interlock Relays
10	Rochester Alarms Substation Power Supplies
11	Annunciators Main Board and TS FOP 1 and 2, TS COP 1 and 2
12	Indicator Lamps
13	Annunciators (Aux., Nuclear, and TSP Boards)
14	Coolant Salt Sampler
15	Annunciators Fuel System
16	Sampler-Enricher
17	Control Circuits Fuel System
18	Annunciators Sampler-Enricher
19	Spare
20	Bell Telephone Intercom System

Approved by



9A-12
10/1/65

9.4 Instrument Power Panel No. 3 (115v AC - Reliable)

<u>Breaker No.</u>	<u>System</u>
1	Beryllium Monitor Oxygen Analyzer
2	TM 202 A5-B5-C5 TM 100 A11-A21-A31
3	Temperature Scanner Standby Power
4	Spare
5	Spare
6	FV Temp. Switches, High Level Gamma Monitors Fuel Pump Speed, Coolant Pump Level
7	RX NC1-A, RX NC2-A
8	IPP A3
9	Nuclear Instrument
10	ECI Power Supplies Safety Channel No. 1
11	Nuclear Instrument
12	Spare
13	Nuclear Instrument
14	Spare
15	Chemical Processing
16	Spare
17	Spare
18	Spare
19	Spare
20	Spare

9.5 Instrument Power Panel No. A3 (Regulated 115v AC)

<u>Breaker No.</u>	<u>System</u>
1	Process Radiator Monitors Safety Channel No. 1
2	Sampler-Enricher
3	Safety Channel No. 1
4	ECI Control
5	Spare
6	Spare

Approved by 

9A-13
10/1/65

9.6 Instrument Power Panel No. 4 (115v AC - TVA Bus)

<u>Breaker No.</u>	<u>System</u>
1	Safety Circuit Channel No. 2
2	IPP A4
3	Power Supplies Safety Channel No. 2
4	Cabinet Lights
5*	Recorder Drives Control Room Clock Control Room Scanner Normal Power
6**	Temperature Scanner Normal Power
7	Safety Circuits O ₂ Analyzer Block Valves
8	Coolant Drain Cell Sump Pump
9	HCV-934A
10	Reactor "On" Lights
11	??
12	Spare
13	Spare
14	Spare
15	Spare
16	??
17	Spare
18	Spare
19	Spare
20	Spare

* IPP No. 4 - Breaker No. 5 normal supply, with automatic transfer to IPP No. A1 - Breaker No. 3 on loss of voltage on load side of IPP No. 4 - Breaker No. 5. Will automatically transfer back when voltage is restored to IPP No. 4 - Breaker No. 5.

** IPP No. 4 - Breaker No. 6 normal supply, with automatic transfer to IPP No. 3 - Breaker No. 3 on loss of voltage on load side of IPP No. 4 -- Breaker No. 6. Will automatically transfer back when voltage is restored to IPP No. 4 - Breaker No. 6.

Approved by



9A-14
10/1/65

9.7 Instrument Power Panel No. A4 (Regulated 115v AC)

<u>Breaker No.</u>	<u>System</u>
1	Process Radiation Monitors Safety Channel No. 2
2	ECI Connectors Safety Channel No. 2
3	RQ NCC1A RQ NCC 2A
4	Spare

9.8 Instrument Power Panel No. 5 (120/208v AC 3 ϕ - TVA)

<u>Breaker No.</u>	<u>System</u>
1	RM-7015-A2
2	RM-7016-A2
3	RM-7017-A2
4	RM-7011-A2
5	RM-7012-A2
6	RM-7013-A2
7	RM-7014-A2
8	RM-7000-A2
9	RM-7001-A2
10	RM-7002-A2
11	RM-7003-A2
12	RM-7004-A2
13	RM-7005-A2
14	RA-7025 Alarm Buzzer
15	Stack Light Stack Receptacle Stack Tape Deck Receptacle
16	Stack Sample Pump Receptacle
17	Stack Sample Pump Receptacle
18	Stack Sample Pump Receptacle
19	RM-SIA-2A RM-SIB-2A RM-SIC-2A
20	Coolant Sampler Vacuum Pump

Approved by R. K. Simpson

9A-15
10/1/65

9.8 (continued)

<u>Breaker No.</u>	<u>System</u>
21	Sampler-Enricher Controls
22	Spare
23	Spare
24	Spare
25, 27, 29*	Maintenance and Operational Valve Motors
26	Spare
28	Spare
30	Spare

* Breaker handles linked together for 3 ϕ circuit.

9.9 Instrument Power Panel No. 6 (120/208v AC - 3 ϕ - TVA)

<u>Breaker No.</u>	<u>System</u>
1, 3, 5**	Tape Drive
2, 4, 6**	Tape Drive
7	Spare
8	Spare
9	Input - Output No. 1
10	Spare
11	X-Y Plotter
12	Logger No. 2 and No. 3
13	Spare
14	Blank
15	Blank
16	Spare
17	Tape Punch and Console
18	Loggers No. 1 and No. 4
19, 20, 21, 22	Spare
23	Core Memory
25	Core Memory
24, 26, 28**	Main
27	Blank

** Each a 3-pole breaker.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

Approved by



9B-1
7/28/65

9B LOSS OF COOLING WATER

1 TREATED WATER SYSTEM

The loss of all treated water flow could lead to serious damage to equipment if operation were continued too long. On loss of flow the operator should proceed as follows:

- 1.1 Start standby pump.
- 1.2 Determine reason for failure of first pump. Put repair request on punch list or proceed to get pump back in service.
- 1.3 If both treated water pumps are out of service, take necessary steps to repair the less damaged one as soon as possible.
- 1.4 Determine time needed for repairs and proceed to protect the equipment listed below within the time limit specified.
 - 1.4.1 Fuel Pump and Coolant Pump Motors can be run without cooling for ~ 10-15 minutes. After this time the flow switch will stop the pumps. Keep a check on system temperatures and drain systems if freezing appears to be possible.
 - 1.4.2 Reactor Cell and Drain Tank Cell Space Coolers can be without water for ~ 20 minutes before the cell temperature reaches 200 degrees F. During this period the cell can be kept below atmospheric pressure by evacuating through L-569 or L-565. When cell reaches 200 degrees F drain the system and turn off all heaters in RC and DTC. Close V-836A, V-838A, V-840A. Do not allow salt to freeze in the drain or flush tanks. Periodically turn on heaters or transfer salt to the fuel storage tank if necessary. When water flow is restarted, throttle flow to the space coolers and put one cooler in service at a time to prevent over-evacuating the cells. Increase nitrogen purge and if necessary to avoid evacuating cell below 10 psia add air to the cells through sump jet supply. Keep discharge from jets closed. Stop cell evacuation until cell temperature returns to normal.

Approved by



9B-2
7/28/65

1.4.3 Thermal Shield water can be off ~ 110 minutes at full power or 270 minutes at zero power before boiling starts. If at power take the reactor subcritical. If water flow cannot be restored within time limit, drain the system and shut off heaters in reactor cell.

1.5 Radiation Block

Radiation in the cooling water would block all flow to the RC and DTC equipment. The operator should proceed as follows:

- 1.5.1 Take reactor to heat loss power.
- 1.5.2 Determine which water line contains the source of radiation. Isolate this system by closing hand valves in the supply and discharge lines.
- 1.5.3 Reset RIA 827 and FSV-844A1 to allow block valves to open and restore circulation to other equipment.
- 1.5.4 Observe time limits in step 1.4 to various equipment for continued operation.

2 COOLING TOWER WATER

Although the cooling tower water is less critical than the treated water, certain equipment cannot be kept in operation after loss of cooling tower water flow. Therefore both pumps should be kept in good operating condition. On loss of flow the operator should proceed as follows:


- 2.1 On loss of one pump, the stand-by pump should be started immediately. As soon as possible repairs should be made to the damaged pump.
- 2.2 On loss of both pumps determine the time needed for repairs. Based on the repair time, proceed as follows:
 - 2.2.1 Check and adjust water flow to Drain Tank Condensers, V-810 and V-812 in water room. (Transfer to process water is automatic.)
 - 2.2.2 Manually transfer instrument air compressor to process water. Close V-880 and open V-872 in Diesel House.

Approved by 

9B-3
7/28/65

2.2.3 The Fuel and Coolant Tube Oil Packages can be without cooling for 10-20 minutes. If water will be off longer than this, shut down reactor and drain fuel and coolant system. Do not shut off lube oil pumps.

2.2.4 With tower water off the treated water would heat at ~ 2 degrees F/minute and the charcoal beds ~ 1/4 degrees F/minute. This could cause some heating of equipment in treated water system, see Sect. 9B 1. If charcoal bed is fully loaded the increasing temperature could cause some increase in stack activity. If stack activity exceeds allowable limits, open standby charcoal bed and isolate operating bed.



Approved by 

9C-1
7/26/65

9C LOSS OF FUEL OR COOLANT PUMP

1 LOSS OF FUEL PUMP

1.1 Causes of loss of fuel pump

- 1.1.1 Loss of fuel pump level. This could be caused by low salt temperature, loss of pump bubble helium flow, bubbler switch in the off position or a leak in the system.
- 1.1.2 Loss of coolant pump - see Section 9C-2.
- 1.1.3 Loss of treated cooling water flow - see Section 9B-1. Low cooling water flow could be caused by mis-operation of throttling valves, or a plugged line. A time delay relay will allow the pump to operate for 15 minutes without water.
- 1.1.4 Electrical trouble. This could include accidental pushing of the stop button or opening breaker D on switchgear Bus #4. Other electrical trouble should be investigated and traced to its source.
- 1.1.5 Coolant off-gas activity. This would indicate a leak in the fuel heat exchanger (or malfunction of the radiation monitor) and automatically would initiate an emergency drain.
- 1.1.6 Thawing of FV-103. This could be caused by loss of FV cooling air supply, failure of HCV-919A or HCV-919B in air lines, or malfunction in the FV control circuits, ECC 640-660.

1.2 Alarm and control action


- 1.2.1 Any of these items will give an alarm.
- 1.2.2 Loss of fuel pump will cause a rod scram if above 15 kw, take reactor out of run mode and automatic load control.

1.3 Operator Action

While determining and correcting the cause of the pump failure the operator should proceed as follows:

- 1.3.1 Turn on Scanner A and scan all points for low temperature. Keep loop temperature balanced in preparation for restarting pump. This can be done with loop heaters. Drain fuel system if temperatures indicate salt may freeze.

Approved by



9C-2
7/26/65

1.3.2 Following coolant system off-gas activity which initiates an emergency fuel drain, the coolant system should be drained after fuel is below HX.

2 LOSS OF COOLANT PUMP

2.1 Causes of loss of coolant pump

- 2.1.1 Low coolant pump level. This could be caused by loss of bubbler helium flow, bubbler selector switch being off, by low salt temperature or coolant salt leak. Thawing of FV-204 and 206 would cause low level and drain system. This could be initiated by failure of CCP #3 or valves HCV-906 or HCV-907, or malfunction of control circuits.
- 2.1.2 Low cooling water flow. This could be caused by misoperation of throttling valve or loss of treated cooling water, Section 9B-1.
- 2.1.3 Electrical trouble. This includes accidental pushing stop button or opening breaker K on Switchgear Bus #3. Any real electrical trouble should be investigated and repairs made.

2.2 Alarm and Control Action

- 2.2.1 Any of these items will give an alarm.
- 2.2.2 Loss of coolant pump will stop the fuel pump, Section 9C-1 and cause a load scram and put load control on manual.

2.3 Operator Action

While determining and correcting the difficulty, the operator should proceed as follows:

- 2.3.1 Start and operate Scanners A and B, D, E, F. Adjust heaters on fuel and coolant system to keep loop temperatures balanced.
- 2.3.2 If temperature indicates salt may freeze in any portion of the system the fuel and or coolant system should be drained.



9D LOSS OF INSTRUMENT AIR

The instrument air system consists of an operating Joy Compressor and a stand-by unit which starts automatically on low supply pressure. On loss of both instrument air compressors, the service air compressor can be manually put on stream. If it should also fail, two banks of nitrogen cylinders with a capacity of 20 to 30 minutes will supply gas to critical pneumatic instruments.

1 AIR COMPRESSOR ELECTRICAL DIFFICULTIES

The electrical power for AC No. 1 is from MCC-G3 (TVA or DG3) and for AC No. 2 is from Bus MCC-G4 (TVA or D64). The control power is normally from IPP2 (MG4) but is transferred to MCC-G4 (TVA or DG4) on loss of MG4. Loss of either primary power or control power will stop the compressors.

Operator action in case of various power loses is given below:

	<u>Init.</u>	<u>Date/Time</u>
1.1 After momentary loss of power, restart the desired air compressor.	_____	_____
1.2 If only DG4 is operating, start AC No. 2.	_____	_____
1.3 If only DG3 is operating, start AC No. 1. MG4 must be operating to supply control power.	_____	_____
1.4 If MG4 is lost the air compressor will stop before the control power is transferred to MCC-G4. Restart either air compressor.	_____	_____

2 OTHER AIR COMPRESSOR DIFFICULTIES

2.1 If the operating instrument air compressor stops, start the other one.	_____	_____
2.2 If neither of the instrument air compressors will operate, start the service air compressor and valve it in.	_____	_____
2.3 If the pressure at the compressors decreases below the setpoint, the compressors cannot be restarted from the control room. Push		

Approved by *J. W. Hayman*

9D-2
9/29/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 2.3 (continued)
the reset button on the south wall of the diesel house and then restart. | _____ | _____ |
| 2.4 If all three compressors are out of service emergency nitrogen will supply critical instruments. | | |
| 2.4.1 Check that valves are set properly to supply nitrogen to the emergency air header. | _____ | _____ |
| 2.4.2 Change cylinders as required until reactor has been drained. | _____ | _____ |

3 EFFECTS OF LOSS OF INSTRUMENT AIR

Loss of instrument air will initiate a drain by closing the air valves which keep FV's 104, 105 and 106 frozen (FV 104 is deep frozen during normal operation.). In addition to this, air-operated valves will go to their fail position, all air line block valves will close, and the pneumatic instruments will not function. This will include weigh cells, cell sump level indicators' pressure controller and some cooling water flow indicators. The operator should take the following steps to assure a drain before salt freezes.

- | | | |
|---|-------|-------|
| 3.1 Scram the rods. | _____ | _____ |
| 3.2 Switch to emergency drain. | _____ | _____ |
| 3.3 Increase the heat on FV 103, 204 and 206 if necessary. | _____ | _____ |
| 3.4 If FV 103, 204, or 206 do not thaw, turn off CCP No. 1, No. 2, and No. 3. | _____ | _____ |

Approved by *A.W. Seymour*

9E-1
9/21/65

9E RADIATION INCREASES

Due to the hazardous nature of radiation, any radiation increases should be given prompt and careful consideration, and if necessary, action taken to insure that no harm is incurred by personnel. The following procedure will attempt to guide the operating personnel in case of high and/or increasing radiation as indicated on the personnel monitors, process radiation monitors, and stack monitors.

1 PERSONNEL MONITORS

The handling of radiation increases is described in the Safety Procedures and Emergency Plans (Part IX of Design and Operations Report). The general philosophy to be followed is given below.

	<u>Init.</u>	<u>Date/Time</u>
1.1 The person discovering a high and/or increasing radiation field should:		
1.1.1 Evacuate personnel from the immediate area.	_____	_____
1.1.2 Take any local action which would alleviate the hazard.	_____	_____
1.1.3 Notify the control room as rapidly as possible.	_____	_____
1.2 The control room operator upon receiving notification of high and/or increasing radiation should:		
1.2.1 Notify the shift supervisor and other members of the local emergency squad.	_____	_____
1.2.2 Maintain control of the reactor, making changes in operation as required by the situation.	_____	_____
1.2.3 Take any other action necessary to insure personnel safety (such as actuating the evacuation alarm).	_____	_____
1.3 The shift supervisor should:		
1.3.1 Direct the efforts of all operating		

Approved by

A. W. Ferguson

9E-2
9/21/65

Init. Date/Time

1.3.1 (continued)
personnel to determine the source of activity, prevent the spread of contamination and/or reduce the intensity or area of the radiation zone.

1.3.2 Set up contamination and radiation zones immediately. If entry is necessary, a change area should be established with clear instructions posted describing in detail what precautions are necessary, where the contamination zone ends and the clean area begins.

1.3.3 Direct the cleanup operations.

2 PROCESS RADIATION DETECTORS

2.1 RM-827 (Treated Water) (2 out of 3 monitors causes control action.)

A rapid large increase in treated water activity would probably be caused by a major component failure in-cell. In case of treated water activity increase, the operator should proceed as follows:

2.1.1 Evacuate non-operating personnel from the water room. Use the P. A. System.

2.1.2 Try resetting the instruments. This would correct the problem if it were caused by an instrument power surge. If possible have instrument mechanic check the instrument.

NOTE: Electrometers will not indicate above the alarm set point. Therefore, to determine the actual radiation level, change to a less sensitive scale and push the reset button.

Approved by



9E-3
9/21/65

Init. Date/Time

2.1.3 Check other process radiation monitors.

In case of a major in-cell release, RM-565 (cell offgas) should respond. Personnel monitors (cams and monitrons) may also show increases. Check the FP level. A system leak might be seen here.

2.1.4 If other radiation monitors show significant increases, see the section of this procedure which deals with the monitor of interest.

2.1.5 After these preliminary actions are taken, refer to Procedure 9B, Step 1.5, which gives operator action for a radiation block of water to in-cell components.

2.2 RM-565 (Cell Air) (1 out of 2 monitors causes control action.)

Any large changes in radiation in the cell could be reflected by small changes in the cell offgas activity. (Note that changes in power should only produce slight changes in cell air activity.)

Any fast or large increases of activity (>20 mr/hr) in the offgas may be a sign of serious component failure. The operator should proceed as follows:

2.2.1 Initiate an emergency drain if the control circuits have failed to do this.

2.2.2 Actuate the evacuation horn to remove non-operating personnel from the area.

2.2.3 If possible have an instrument mechanic check the instrument.

2.2.4 If the instrument is at fault and can be corrected quickly, try to reset the

Approved by

B. W. May

9E-4
9/21/65

Init. Date/Time

2.2.4 (continued)

alarms and stop the drain. If it is truly radiation, allow the system to drain.

2.2.5 Take any steps possible to reduce the leakage such as reducing the pressure on various components or stopping the fuel pump.

2.2.6 Take data which might be used in determining the location of the leak such as levels, weights, effects of pressure changes, etc.

2.2.7 When the system indicates that it has drained, switch the freeze valves to freeze. Any action beyond this point will have to be determined at the time and will depend upon the situation.

2.3 RM-528 (Coolant System Offgas) (1 out of 2 causes control action.)


Significant increases in coolant offgas activity (>20 mr/hr) would probably be caused by a leak in the primary heat exchanger. Activity in the coolant offgas should automatically give an emergency drain and stop the fuel pump.

Upon notification of coolant offgas activity, the operator should proceed as follows:

2.3.1 Check that an "emergency fuel drain" has been initiated and the fuel pump stopped. If not, the operator should instigate these actions.

2.3.2 Drain the coolant system after the fuel system has drained.

Approved by

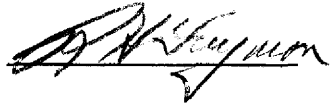

9E-5
9/21/65

Init. Date/Time

2.3.3 Further action will be determined at the time of the incident. The next actions would probably be concerned with checking the heat exchanger for a leak. A method which might be used for this would be to pressurize the coolant systems and watch for pressure buildup in the fuel system.

2.4 RM-500 (Main Helium Supply) (Alarms Only)

Activity in the line at RM-500 would indicate a failure in the containment system. This may necessitate shutting down the helium system which in turn destroys the reliability of level indication in both the pump bowls and the overflow tank. Since the overflow tank level is considered safety, loss of it requires a reactor shutdown.

In case of high and/or increasing activity at RM-500, the operator should:

2.4.1 Make a hasty check to determine if the indication is real. Take a portable radiation detector and measure the activity at the line, and have an instrument mechanic check the instruments.

2.4.2 Any actual activity in the line would probably be caused by high pressure in the system involved or low supply pressure. If possible adjust pressures, purge out the lines and valve off the system or component involved.

2.4.3 If source of activity cannot be located and isolated, consider taking the reactor subcritical and stopping the fuel and coolant pumps.

Approved by *A. H. Gump*

9E-6
9/21/65

Init. Date/Time

2.4.4 If it is necessary to stop the helium flow to the FP bubblers, a reliable level indication in the pump bowls and overflow tank will be lost. This necessitates draining both the fuel and coolant systems.

2.4.5 Continue efforts to determine which line allowed the backflow of activity.

2.5 RM-596 (Helium Supply To FP Bubblers) (1 out of 2 monitors causes control action.)

Activity in the line at RM-596 indicates a breakdown in containment. High radiation level at RM-596 automatically closes the block valves in the bubbler lines. This destroys the reliability of the fuel salt level indicators in both the pump bowl and the overflow tank. The overflow tank level is considered part of the safety system, and loss of this necessitates a shutdown.

Upon receiving high radiation indication on RM-596, the operator should proceed as follows:

2.5.1 Quickly attempt to determine if the activity is real. Using a portable radiation instrument, measure the activity of the lines next to the process monitor, and have an instrument mechanic check the instruments.

2.5.2 If the activity is real, take the reactor subcritical and stop the fuel pump. Adjust pressures to prevent further backup of activity.

2.5.3 Switch the fuel pump bubbler switch to "off" position.

Approved by PA Seymour

9E-7
9/21/65

	<u>Init.</u>	<u>Date/Time</u>
2.5.4 Close all of the fuel system bubbler A and B valves.	_____	_____
2.5.5 Since it would be necessary to violate containment to replace or repair the check valves in the bubbler lines with salt in the pump bowl, proceed with a normal drain of the fuel system.	_____	_____
2.5.6 Upon completion of the drain, freeze the freeze valves.	_____	_____
<u>2.6 RM-OT-1 and RM-OT-2 (Lube Oil Tanks) (Alarms only)</u>		
Activity in OT-1 may increase as the approach to full power is made. This would probably be due to fission product diffusion across the pump seals into the oil stream. This increase in radiation should be small unless the pump seals start leaking excessively. In case of high and/or increasing radiation at either or both of the lube oil packages, the operator should proceed as follows:		
2.6.1 Check with a portable radiation instrument to verify the indications received on the monitors.	_____	_____
2.6.2 Check the level of the oil catch tank which is attached to the system of interest. A seal leaking badly enough to allow rapid radiation increases in the oil tank may cause an increase of oil level in the oil catch tank.	_____	_____
2.6.3 If the oil catch-tank level is increasing, refer to Procedure 9H.	_____	_____

Approved by 

9E-8
9/21/65

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 2.6.4 Check that the main helium flow to the pump in question (line 512 or 516) is set at the value given in the building log. The bulk of the gas flowing through these lines flows down the pump shafts and should help prevent fission product gasses from reaching the oil seals. | _____ | _____ |
| 2.6.5 If it is verified that the radiation indicated is real and reading above limits at the tank, take the reactor subcritical and stop the salt pump. | _____ | _____ |
| 2.6.6 If RM-557 increases close valves in the offgas lines from the oil system to prevent automatic closing of RCV-557. | _____ | _____ |
| 2.6.7 If there is an abnormal increase in the OCT level, proceed as described in 9H. Consideration should be given to reducing the shield oil flow rate to minimize suction from the shield oil outlet jet. | _____ | _____ |
| 2.6.8 If there is no abnormal oil leakage as indicated by OCT level, continue oil flow to the pump bearings. | _____ | _____ |
| 2.6.9 To prevent over heating of the fuel pump, keep an oil flow to the shield plug until the reactor is drained or until the amount of activity in the oil system endangers personnel. | _____ | _____ |

2.7 RM-557 (Main Offgas To Stack Filters)

The three most likely methods by which activity might reach RM-557 are; a breakthrough in the charcoal beds, a fuel pump seal failure, or a heat exchanger failure

Approved by PH Thompson

9E-9
9/21/65

Init. Date/Time

allowing fuel salt to get into the coolant salt system.

If high and/or increasing radiation is noted on RIA-557A or RIA-557B, the operator should proceed as follows:

2.7.1 Check with a portable radiation instrument to determine if the activity indication is real. Have an instrument mechanic check the instruments.

2.7.2 If the activity increases above limits, check that the control circuits close HCV-557, PCV-513-A2, and PCV-510-A2. If the control circuits fail, close these manually.

2.7.3 Check RM-528A and B. If these are reading high, consult Section 9E 2.3 of this procedure.

2.7.4 Check RM-OT-1 and RM-OT-2. If these are reading high, consult Section 9E 2.6 of this procedure.

2.7.5 Try to determine the source of the activity. Use a portable radiation indicator and check the following lines individually.

- 562 - from auxillary charcoal bed
- 557 - from main charcoal beds
- 560 - from oil system and coolant system.

2.7.6 Close the hand valve in the line which shows activity. Then try to reset RM-557A and B. If these will reset, operations using the other lines may continue. However, if the activity is from the coolant

Approved by R. H. Gentry

9E-10
9/21/65

Init. Date/Time

2.7.6 (continued)

system or the main charcoal beds, operation will continue only long enough to shut down.

2.7.7 If the activity is from the main charcoal beds and/or if HCV-557 will not reopen, take the reactor subcritical and consider stopping the fuel pump. If necessary stop the helium flow to the pump. The bubblers may remain in operation until pressure starts building up in the charcoal beds.

2.7.8 If repairs are needed or an excessive amount of time is involved before the situation can be corrected, it may be desirable to drain the system.

3 HIGH STACK ACTIVITY

It is conceivable that highly radioactive contaminants could be expelled to the stack, then on to the atmosphere. This is a particularly hazardous situation because the entire surrounding area could be involved.

Instrumentation is provided on the offgas stack for detecting beta, gamma, and alpha activity. A charcoal trap is also provided to aid in the detection of iodine. These detectors are all of the type which collect contaminants on filter paper or in the charcoal; therefore, they may continually show a slight increase in activity. It is fast and/or large increases in the detector readings which should warn the operator of trouble.

The stack monitors are set to alarm upon receiving an increase of 20% on the beta-gamma detector, 30% on the alpha detector, and 80% on the iodine detector. These are percentages of full scale with full scale normally being 250 count/min. The scale may be changed to meet the operating conditions; however, when the scale

Approved by

R. N. Vanjiman

9E-11
9/21/65

needs to be changed, notify the stack monitoring group before making the switch except in emergency cases. Under unusual conditions the Laboratory Facilities Department may request MSRE personnel to change ranges. If the shift supervisor agrees, these requests should be complied with.

The percentages of increase listed previously must be within a 15 minute period before the Laboratory Facilities Department will notify the operator of abnormal release. If this increase persists for another 30 minutes, the laboratory shift supervisor will be notified, and he may request a reactor shutdown. His requests must be followed to insure the safety of the entire ORNL Area.

The tapes of these detectors are advanced every 8 hours. The percentage of increase listed previously (20% for Beta-gamma, 30% for alpha, 80% for iodine) within this time period will cause the respective module to go into alarm condition. Even though a slow increase over an 8-hour period would not be considered hazardous, each stack activity alarm must be investigated promptly.

It seems logical to expect that stack increases will be either very rapid or very slow. The following steps are to aid the operator for these cases. Any intermediate increases should be handled in such a way as to insure personnel safety. The shift supervisor should assess the situation and made decisions concerning operations with this in mind.

Init. Date/Time

3.1 High Stack Activity Check List

Upon receiving a stack activity alarm or notification of high stack activity, the operator should check the chart of the instrument giving the high activity indication. Verify the reading by contacting the stack monitoring group. Phone No. 3-6234. If the activity is increasing rapidly (greater than alarm set point in 15 minutes) with no signs of leveling off, assume that hazardous quantities of activity are being released, and

Approved by *B. W. Simpson*

9E-12
9/21/65

	<u>Init.</u>	<u>Date/Time</u>
proceed as follows:		
3.1.1 Take the reactor subcritical.	_____	_____
3.1.2 Report the incident to the Emergency Control Center (Phone No. 3-6358).	_____	_____
3.1.3 Ask the Emergency Control Center to send Health Physics Surveyors if surveyors are not already on hand.	_____	_____
3.1.4 Announce the emergency over the P. A. and request all personnel (except those involved in combating the emergency) to assemble at the northwest corner of the 7503 building basement (840-ft level), if this action appears necessary.	_____	_____
3.1.5 Dispatch two Emergency Squad Members equipped with assault masks and portable radiation meters to check outside the building and assess the nature and extent of the hazard. Further action depends upon the assessment of the hazard.	_____	_____
3.1.6 In case the activity is increasing slowly (greater than the set point in 4 hours), the operator should proceed as follows:		
3.1.6.1 Ask the stack monitoring group to advance the tape. This should reduce the chart to background.	_____	_____
3.1.6.2 Keep a careful watch on the instrument for further increases.	_____	_____

Approved by *A. H. Gayman*

9F-1
8/11/65

9F CONTROL ROD DRIVE DIFFICULTY

Due to the dependence placed on control rod reliability, any anomalous control rod behavior must be considered very serious in nature. If any irregularity in control rod behavior is noted, the reactor should be taken subcritical by inserting all rods and the cause of the malfunction should be corrected if possible. If repairs can not be made a reactor drain may be necessary.

Suggested corrective actions to be taken under various circumstances are given below:

	<u>Init.</u>	<u>Date/Time</u>
1 INABILITY TO WITHDRAW ROD(s)		
1.1 If a control rod will not withdraw, check the jumper board. If control action is inhibiting the withdrawal, change the operating conditions to satisfy the interlocks.	_____	_____
1.2 If control action is not preventing the rods from withdrawing, insert all rods to their lower limit. If necessary, scram the rods.	_____	_____
1.3 If any rod fails to insert to lower limit, consider draining the fuel system.	_____	_____
1.4 If all rods drop to lower limit, determine the cause of the difficulty and take necessary action to correct it.	_____	_____
2 INABILITY TO INSERT ROD(s)		
2.1 If a control rod does not insert upon request, when not already on lower limit, <u>scram the rods</u> . Failure of a control rod to insert is a potentially dangerous situation.	_____	_____
2.2 After scrambling the rods check that all rods dropped to the lower limit. If all did not, consider draining the fuel system.	_____	_____

Approved by R. H. Hymon

9F-2
8/11/65

	<u>Init.</u>	<u>Date/Time</u>
2.3 If all rods drop to lower limit, determine the cause of the difficulty and take necessary action to correct it.	_____	_____

3 SERVO DIFFICULTY

3.1 If the servo were to start oscillating excessively, fail to withdraw or insert, or in any other manner become erratic or unreliable in behavior, the operator should switch to manual control.	_____	_____
--	-------	-------

3.2 Determine the cause of the difficulty and correct it.	_____	_____
---	-------	-------

CAUTION: Erratic servo behavior could possibly be caused by some anomalous nuclear behavior so the operator should be especially watchful for excursions, etc.

4 UNCONTROLLED ROD ACTION

4.1 Control rod withdrawal or insertion due to an unknown reason may indicate trouble in the circuitry. Insert the rods immediately.	_____	_____
--	-------	-------

4.2 Correct the trouble if possible and test the rods one at a time to regain confidence in them.	_____	_____
---	-------	-------

4.3 Consider draining the reactor if unable to correct the difficulty.	_____	_____
--	-------	-------

Approved by

B. H. Johnson

9G-1
9/20/65

9G LOSS OF COMPUTER

One normally-operating component which is operated in conjunction with the reactor is the "on-line" computer, a Bunker-Ramo 340. When in operation, the computer will log system data, scan selected variables to see that they remain within limits, and perform routine calculations such as heat balances. It is estimated that the computer will be "on line" about 99% of the time. During the time when the computer is not in operation, part of its duties must be performed manually. There are two hours of maintenance scheduled for the computer every two weeks. This is not considered abnormal, and with the exception of being especially alert for abnormalities, the operator will not normally have any added duties at this time.

Init. Date/Time

1 CHECK LIST WHEN COMPUTER IS ABNORMALLY SHUT DOWN

It is especially important to make log entries as thorough and exact as possible since some information normally on the logger will not be available.

1.1 Start taking the abnormal control-room log (12A-2B). _____

1.2 Start using the addendum to the check lists 12B 1.1 (shift supervisor's check list) as well as the regular check lists. This addendum includes such things as calculating heat balances and reactivity balances. _____

1.3 If the anticipated shutdown of the computer is to be longer than 2 days, transfer the following thermocouples to the special recorders so they may be watched closely. Finish filling out the following table. For short periods when the computer is shut down, these will be recorded periodically on the building log. These will be read out by momentarily plugging each into T 13200 or a portable readout instrument. _____

TE NUMBER	JACK PANEL NUMBER	NORMAL READOUT		SPECIAL READOUT		INITIAL	DATE AND TIME
		INSTRUMENT	P. P. NUMBER	RECORDER	POINT		
826-1	887	Logger	363				
831-1	888	Logger	364				
833-1	889	Logger	373				
837-1	890	Logger	367				
841-1	891	Logger	360				
845-1	892	Logger	368				
846-1	893	Logger	371				
851-1	894	Logger	361				
707-1A	875	Logger	349				
757-1A	881	Logger	346				
R-2	2	Logger	391				
R-26A	39	Logger	239				
R-27A	41	Logger	254				
R-28A	43	Logger	258				
R-29A	45	Logger	243				
R-30A	47	Logger	262				
R-31A	49	Logger	240				
R-49	20	Logger	227				
R-50	28	Logger	224				
R-51	36	Logger	228				

Approved by

96-2
9/20/65

Approved by R. V. Haymon

9H-1
9/20/65

9H LUBE OIL SYSTEM DIFFICULTIES

Due to the importance of the lube oil supply to the pumps, considerable redundancy has been built into the system. Suggested corrective action for some of the difficulties which could be encountered are given below:

1 COOLANT SALT PUMP LUBE SYSTEM FAILURE

The operator should connect the fuel pump, lube oil system to the coolant salt pump as follows:

	<u>Init.</u>	<u>Date/Time</u>
(Service Tunnel)		
1.1 Record LI-OT1-A2 _____ LI-OT2-A2 _____.	_____	_____
1.2 Lower set points on LI-OT1-A3 ~ 20%.	_____	_____
1.3 Close V-753A (downstream of filter).	_____	_____
1.4 Open breather interconnection V-601.	_____	_____
1.5 Close breather valve V-591.	_____	_____
1.6 Close oil return V-756.	_____	_____
1.7 Open return interconnection V-712A.	_____	_____
1.8 Open supply interconnection V-762A.	_____	_____
1.9 Adjust flows per walking log.		
Fl 703 _____		
Fl 704 _____		
Fl 753 _____		
Fl 754 _____	_____	_____
1.10 Record LI-OT1-A2 _____ LI-OT2-A2 _____.	_____	_____
1.11 Adjust level setpoints per walking log.		
LI-OT1-A3 red (alarm) _____		
purple (operates valve) _____		
LI-OT2-A3 red (alarm) _____		
purple (operates valve) _____	_____	_____
1.12 Check oil levels frequently for leakage from one system to the other. Check oil and cooling water temperatures to maintain oil supply temperature <150° F.	_____	_____

Approved by *B. W. Simpson*

9H-2
9/20/65

2 FUEL SALT PUMP LUBE SYSTEM FAILURE

The operator should connect the coolant lube oil system to the fuel salt pump as follows:

	<u>Init.</u>	<u>Date/Time</u>
(Service Tunnel)		
2.1 Record LI-OT1-A2 ____ LI-OT2-A2 ____.	_____	_____
2.2 Lower setpoints on LI-OT2-A3 ~ 20%.	_____	_____
2.3 Close V-703A (downstream of filter).	_____	_____
2.4 Open breather inter-connection V-601.	_____	_____
2.5 Close breather valve V-590.	_____	_____
2.6 Close oil return valve V-706.	_____	_____
2.7 Open return inter-connection V-712A.	_____	_____
2.8 Open supply inter-connection V-762A.	_____	_____
2.9 Adjust flows per walking log.		
FI-703 ____		
FI-704 ____		
FI-753 ____		
FI-754 ____		
2.10 Record LI-OT1-A2 ____ LI-OT2-A2 ____.	_____	_____
2.11 Adjust level setpoints per walking log..		
LI-OT1-A3 red (alarm) ____		
purple (operates valve) ____		
LI-OT2-A3 red (alarm) ____		
purple (operates valve) ____	_____	_____
2.12 Check oil levels frequently for leakage from one system to the other. Check oil and cooling water temperatures to maintain oil supply temperature <150° F.	_____	_____

3 TOTAL OIL SYSTEM FAILURE

In event of loss of all lube and coolant oil flow at both oil packages, initiate emergency drain of fuel and coolant salts. Turn off heaters CP-1, CP-2, FP-1, FP-2 immediately after salt drains from pump bowls.

Approved by *R. G. Hymon*

9H-3
9/20/65

Init. Date/Time

4 EXCESS OIL SEAL LEAKAGE

4.1 Normal oil seal leakage is 0 to 40 cc/day; however, a larger seal leakage can be tolerated. If the oil leakage across the seal exceeds 100 cc/day, notify the operations chief and prepare for a normal reactor shutdown per Procedure 10A.

4.2 Should a gross leak develop (>1000 cc/hr), drain reactor per Procedure 10B (special shutdown).

NOTE: Assuming that the syphon pot is full and the lower section of the OCT is 1/2 full, a leak rate of 1000 cc/hr allows ~ 2 shifts for fuel drain refill with flush salt and drain before OCT's is full.

In addition, the operator should do the following:

4.2.1 Reduce pressure differential between oil supply tank and salt system to zero psi.

4.2.2 Reduce bearing oil flow (FI-703, 753) to ~ 1 gpm.

4.2.3 Turn off fuel or coolant pump heaters when pump bowl is empty.

4.2.4 Turn off oil flow to pump bearings when thermocouples at bottom and side of pump bowl drop below 400°F or when OCT indicates full, whichever occurs first.

47

48

•

•

•

•

•

•

•

•

•

•

•

•

Approved by *[Signature]*

9I-1
9-2-65

9I SALT IN OVERFLOW TANK

Fuel salt can enter the OFT by overfilling the pump bowl, by splash-
ing during pump operation and by a volume expansion due to a temperature
excursion. Whenever the 10% level alarm point of the OFT or the FP low
level alarm point is reached, the salt must be emptied from the OFT.
If the reactor is at power, it must first be reduced to zero by the
procedure in Section 10A of the Operating Procedures. The OFT off-gas
line will then be closed and the bubbler gas will build up pressure and
force the salt to the pump bowl. If the FP stops when the gas pressure
in the OFT is released through the overflow line into the pump bowl,
the pump should be restarted.

Init. Date/Time

1 DETAILED PROCEDURE FOR EMPTYING THE OFT

1.1 Reduce the reactor power level to zero by Procedure 10A. Do not stop the FP. Fully insert all three control rods. After-heat generation will continue to heat the fuel salt; therefore, the reactor outlet temperature must be observed and the coolant system operated in such a manner as to prevent overheating. Raising the outlet radiator door should be sufficient to remove this heat. If not, raise the inlet door as required after the outlet door is full open. Observe the reactor and radiator outlet temperatures repeatedly and make the necessary changes in operating conditions to prevent overheating or overcooling either system.

1.2 Transmitter Room Record

LI-593 _____ LI-599 _____
LI-596 _____ LI-600 _____

Approved by *B. A. Heyman*

9I-2
9-2-65

	<u>Init.</u>	<u>Date/Time</u>
1.3 Control Room Record		
LR-593 Switch 36 Position 2	_____	_____
LR-593 Switch 36 Position 3	_____	_____
1.4 Install the jumper tube in air line to HCV-523 and close HCV-523.	_____	_____
1.5 When the pressure builds up sufficiently to force gas into the FP bowl, the FP will probably stop. Restart it.	_____	_____
1.6 Repeat Step 1.5	_____	_____
1.7 Transmitter Room		
1.7.1 Open HCV-523, remove the jumper tube and cap the open ends of the air line.	_____	_____
1.7.2 Record LI-599 _____ LI-600 _____ LI-593 _____ LI-596 _____	_____	_____
1.8 Control Room Record		
LR-593 Switch 36 Position 2 _____	_____	_____
LR-593 Switch 36 Position 3 _____	_____	_____

9J LOSS OF He PURGE TO THE CIRCULATING PUMPS

Loss of He purge to the circulating pumps could result from low supply pressure which closes the supply valves, radioactivity in the FP bubbler lines which closes the block valves, or failure of the valves or valve operators.

1 LOSS OF FLOW THROUGH LINE 516

The most critical situation occurs when flow through line 516, the FP purge line, stops during power operation. Radioactive gas could migrate up the annulus around the shaft to the bearing lube oil and salt mist could migrate up the annulus and freeze. This could clog the annulus and seize the pump rotary element. The pump should not be operated longer than 1/2 hour or after the radioactivity level in the lube oil exceeds 20 mr/hr., the low level alarm point. If the reactor is at power, it should be taken to the zero power level by the normal shutdown procedure section 10A, before stopping the pump. The system temperatures must be observed carefully after stopping the pump and the system drained if it appears they will exceed 1300°F. Drain the fuel system only and do not flush at this time.

2 LOSS OF FLOW TO THE OVERFLOW TANK BUBBLERS

A loss of flow to the overflow tank bubblers will be annunciated in the control room. Unless flow can be reestablished the fuel system should be drained.

3 LOSS OF FLOW TO THE FP BUBBLERS

If flow is lost to one of the FP bubblers, the other bubbler can be selected and normal operation can continue. However, if both bubblers are inoperative the system must be shut down and drained. Drain fuel system only and do not flush.

4 LOSS OF FLOW THROUGH LINE 512

If flow stops in line 512 and can not be reestablished, the coolant pump should be stopped within 1/2 hour. The power should be

Approved by *B. K. Lyman*

9J-2
9/14/65

reduced to zero. If the system temperatures exceed 1300°F, drain the fuel system but do not flush.

5 LOSS OF FLOW TO THE COOLANT PUMP BUBBLERS

If flow is lost to both bubblers, operation can continue by selecting the float level element. If no level indicator is operable on the coolant pump, the power should be reduced until a level element is in operation.

Approved by



9K-1
8/10/65

9K LOSS OF COMPONENT COOLING BLOWERS

1 LOSS OF EITHER CCP-1 or CCP-2

The loss of the operating CCP will be indicated by low ΔP on PdI 960 and/or low CCP oil pressure. These are annunciated on MB-2.

On loss of one CCP, the alternate blower should be started. The stop button of the malfunctioning blower may have to be pushed before starting the stand-by unit.

A delay in starting the stand-by unit will contribute to the following actions:

1. Thermocycle of fuel pump bowl.
2. Damage to control rod drive motors.
3. Thawing FV-103 and draining the fuel system.
4. Loss of cooling to reactor neck and control rods.

After starting the stand-by blower, the Chief of Operations should be notified. Continued operation without an alternate blower will be an administrative decision.


2 LOSS OF CCP-1 and CCP-2

Loss of both blowers will initiate a drain when FV-103 thaws.

Since loss of cooling air can damage the control rod motors and pump bowl an effort should be made to get at least one of the blowers back in service as soon as possible.

3 LOSS OF CCP #3

Loss of this blower will cause thawing of FV-204 and FV-206 which will drain the coolant system and terminate operations. Service air from AC-3 (or Instrument Air Compressors) should be valved into line 906 at V-967A. PCV-967 should be set at 8 psig to maintain normal air flow to the freeze valves.



Approved by B. H. Heyman

9L-1
9/9/65

9L REMOVAL OF WATER FROM THE STEAM DOMES

If water from the FWT's is inadvertently dumped into the steam domes it could cause the fuel salt to freeze. The presence of the water will be indicated by the steam dome level indicators on the main instrument panels, by the FWT level indicators in the water room and a decrease in temperature in the drain tanks. The operator should remove the water from the steam domes and refill the feed water tanks in the following manner; a radiation survey meter should be used to monitor the operation.

1 DETAILED PROCEDURE FOR REMOVING WATER FROM STEAM DOMES

	<u>Init.</u>	<u>Date/Time</u>
1.1 Determine which steam dome the water is in. Steam Drum No. _____	_____	_____
(NESA)		
1.2 Check V-806-3 closed and open V-806-2 if the water is in Steam Dome No. 1 (FD-1) or V-807-2 if it is in Steam Dome No. 2 (FD-2).	_____	_____
1.3 Start the steam dome water removal pump, and pump the water to the drum.	_____	_____
1.4 Monitor the drum into which the water is being pumped with the radiation survey meter.	_____	_____
1.5 When the steam dome is empty stop the pump.	_____	_____
1.6 Close or check closed V-806-2 and 807-2.	_____	_____
1.7 If the water shows no activity, open V-806-3 and drain the tank, and then close this valve.	_____	_____
1.8 If there is radioactivity in the water, take a sample and dispose of it as directed by the Operations Chief.	_____	_____
1.9 Determine and correct the trouble.	_____	_____
1.10 Refill the FWT's by Section 4C-5.	_____	_____

Approved by *PA Guy*

9M-1
7/26/65

9M REGENERATION OF HELIUM DRYER

When the water concentration in the helium cover gas from the purification system exceeds 1 ppm the molecular sieve (helium dryer) must be regenerated. The regeneration consists of putting the stand-by purification system in service, then heating and back-purging the dryer which needs regeneration.

Details of the regeneration procedure are as follows:

NOTE: The procedure is written for regeneration of #1 dryer. To regenerate #2 dryer, use the number in parenthesis.

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 1. Prepare the No. 1 (No. 2) Dryer, Pre-Heater and O ₂ .
Remove for operation by the procedure given in
Section 5B. | _____ | _____ |
| 2. Open V-503A and V-503C (V-500B and V-500D). | _____ | _____ |
| 3. Close V-500B and V-500D (V-503A and V-503C). | _____ | _____ |
| 4. Connect a helium supply cylinder to line 500 (503)
at V-500C (V-503B) with a pressure regulator
and gauge having a range of 0 to 100 psi. Purge
the line thoroughly as the connection is being
made. Check for leaks with leak detector solution. | _____ | _____ |
| 5. Open V-505 (V-504) and bleed pressure off system by
setting needle valve on FI-505 wide open then
close V-505 (V-504). | _____ | _____ |
| 6. Open V-500C (V-503B) and set the regulator on the
helium cylinder at 5-10 psig. | _____ | _____ |
| 7. Set the temperature controller on Dryer, TIC DR-1
(TIC DR-2). | _____ | _____ |
| 8. Open V-505 (V-504) adjust purge of approximately
1.0 l/min as indicated by FI-505 (full scale)
using FI-505 needle valve. | _____ | _____ |
| 9. Check the dryer and preheater temperatures at 30-
minute intervals and continue the purge for at
least 2 hours after the dryer reaches 500 degrees F.
Record time temperature reached 500 degrees F. | _____ | _____ |

Approved by A. H. Yuyman

9M-2
7/26/65

	<u>Init.</u>	<u>Date/Time</u>
10. When 2 hour purge is finished, close V-505 (V-504).	_____	_____
11. Turn off heater to dryer.	_____	_____
12. Close V-500C (V-503B) and slowly open V-500B (V-503A) to bring pressure up to 250 psig.	_____	_____

CAUTION: Do not place regenerated bed on stream until TICA DR-1 (DR-2) returns to room temperature.



9N HIGH CELL LEAK RATE INDICATION

A high RC leak rate indication could result from a high leak rate, an increase in cell ambient temperature or water leaking into the cell and vaporizing. A rise in the RC pressure will be indicated by an alarm and pressure indication in the main control room.

The cell evacuation rate should be increased to maintain a negative pressure and the cause of the difficulty investigated and corrective action taken as given below:

1 SALT LEAKING INTO THE CELL

This would be indicated by high cell air activity or a loss of fuel salt level (FV-103 still frozen) or a loss of coolant salt level (FV-204 and 206 still frozen). The operator should drain the fuel and/or coolant systems immediately. See Section 10B of the MSRE Operating Procedures.

2 WATER LEAKING INTO THE CELL

This would be indicated by the reactor or drain tank sump bubbler and/or sump level probes. There would also be a decrease in level in the condensate tank in use or in the treated water surge tank. The operator should valve off the leaking line and proceed accordingly.

- 2.1 If a cell space cooler water line is leaking, proceed as described in 9N-3.
- 2.2 If the water line to the fuel pump motor is leaking, the motor may overheat. Monitor the thermocouple on the motor TE-FPM-1 and drain the fuel system to prevent the temperature from exceeding 150^oF. If it is necessary to shut off the motor, it can probably be restarted after draining the pump to aid in afterheat removal. The power required to circulate helium is a small fraction of that required to circulate salt; therefore, the motor should not require as much cooling.
- 2.3 If the leak is in the water lines to the thermal shield, the reactor should be drained and the fuel system cooled .

Approved by BK Gungor

9N-2
9/8/65


3 LOSS OF REACTOR OR DRAIN TANK SPACE COOLERS

This would be indicated by a loss of cooling water flow, lights at the motor starter for the space coolers or high cell temperatures. The operator should monitor the cell temperatures while trying to correct the trouble. If the average cell temperature reaches 200°F, the reactor should be drained and as many heaters shut off as possible. If it is necessary to keep the RC pressure below atmospheric while correcting the trouble, evacuate through line 565 by opening V-565-C in the VH. When the cell cooler is restarted, observe the cell pressure carefully. To avoid depressurizing the cell below -3 psig, connect a N₂ cylinder to line 332 in the water room and add N₂ to the cell through it, or if necessary, add compressed air through line 332.

4 ACTUAL HIGH CELL LEAK RATE

This would be indicated by the cell pressure increasing and the inability to find any reason for this such as given above. The operator should take the reactor subcritical by the procedure of Section 10A and start evacuating through line 565 to maintain a -2 psig in the RC. He should attempt to locate the source of the leak and repair it if possible without draining the system. Otherwise, he should continue with the shutdown as given in Section 10A.

Approved by



7/26/65

SECTION 10

REACTOR SHUTDOWN

Periodical normal shutdowns are planned for the reactor to sample the graphite, make equipment modifications and change fuel salt composition. The shutdowns may be necessary due to equipment failures or abnormal conditions. Shutdown, as described in this section, consists of storing the molten fuel salt in the drain tanks and freezing the freeze valves to isolate it from the fuel system.

TX 3573
(7-64)

4

4

.

.

.

.

.

.

.

.

.

.

.

.

10A NORMAL SHUTDOWN

Normal shutdown as described in this section consists of lowering the reactor power from 10 Mw, draining the salt to the drain tanks, flushing the fuel system with flush salt, and cooling the fuel and coolant systems to ambient temperature. Salt in the drain tanks will normally be kept molten. Freeze valves will be frozen to isolate each tank from the rest of the system. If it is necessary to quickly drain the reactor without removing the afterheat, follow procedure given in LOB.

1 POWER REDUCTION AND GOING SUBCRITICAL

The power removal rate will be lowered by lowering the air flow through the radiator. The nuclear power will be reduced to maintain a constant reactor outlet temperature. The manipulations necessary depend on the mode of operation. Two possible modes are described below.

1.1 Load Control Automatic and Control Rods on Servo Control

Under these conditions the power removal rate is reduced by switching the load control switch to decrease. The servo controller will manipulate the rods to maintain a constant outlet temperature. The radiator doors will not go below the intermediate limit (corresponding to approximately 1 Mw). Manual load control and rod manipulation will be necessary below this level. Steps involved are listed below:

	<u>Init.</u>	<u>Date/Time</u>
1.1.1 Switch load demand (S24) to decrease load and hold. Note that the ΔP set point will lower causing the bypass dampers to open until fully opened. The ΔP set point will stop changing and the automatic blower will stop. This will cause the ΔP to decrease below the set point. The dampers will start closing and the ΔP set point start decreasing. When ΔP and ΔP set point are equal, the ΔP set point will		

Approved by 

10A-2
8-12-65

	<u>Init.</u>	<u>Date/Time</u>
1.1.1 (continued) continue to decrease which will cause the dampers to reopen. When they are fully open again, the inlet and outlet doors will start lowering. When they reach the intermediate position, they will stop. During this time, check that the servo control manipulates the rods to maintain a constant reactor outlet temperature. Manually adjust the shim rods as necessary.	_____	_____
1.1.2 Switch the load control mode selector switch (S23) to manual.	_____	_____
1.1.3 Push the "run off" button (S-12) which will put the reactor in the "start" mode. This will switch the rod servo to flux servo and will control the flux at 1 Mw or at the flux demand if both pico ammeter range switches are in the 1.5 Mw range.	_____	_____
1.1.4 Check that both pico ammeter range switches are in 1.5 Mw range and adjust flux demand to hold the outlet temperature constant.	_____	_____
1.1.5 Manually turn off the operating radiator blower.	_____	_____
1.1.6 Fully insert all three control rods and manually adjust the outlet and/or inlet doors to maintain the fuel and coolant systems at approximately 1225°F. If temperature decreases it may be necessary to increase the input to the electrical heaters.	_____	_____

Approved by *A. W. Haymon*

10A-3
8-12-65

	<u>Init.</u>	<u>Date/Time</u>
1.1.7 Continue salt circulation for 5 hours to take care of the afterheat and avoid overheating the graphite.	_____	_____
1.1.8 Take a fuel sample.	_____	_____
<u>1.2 Load Control Manual and Control Rod Servo Off.</u>		
Under these conditions the power removal rate can be decreased by various sequences of operation of the dampers, doors, or blowers. Steps for the preferred sequence are given below.		
1.2.1 Manually open the bypass damper and manipulate control rods to maintain the reactor outlet temperature approximately constant.	_____	_____
NOTE: Keep the two shim rods approximately equal and the regulating rod at least 6" lower.		
1.2.2 Stop one of the main radiator blowers and manipulate the control rods to maintain the reactor outlet temperature approximately constant.	_____	_____
1.2.3 Manually lower both radiator doors to the intermediate position and manipulate control rods to maintain the reactor outlet temperature approximately constant.	_____	_____
1.2.4 Push the "run off" button (S-12) which will put the reactor in the "start" mode.	_____	_____
1.2.5 Manually turn off the other main radiator blower.	_____	_____
1.2.6 Fully insert all three control rods and manually adjust the outlet and/or inlet doors to maintain the fuel and		

Approved by *D. Hayman*

10A-4
8-12-65

Init. Date/Time

1.2.6 (continued)

coolant systems at approximately 1225°F.
If temperature decreases it may be necessary to increase the input to the electrical heaters.

1.2.7 Continue salt circulation for 5 hours to take care of the afterheat and avoid overheating the graphite.

1.2.8 Take a fuel sample.

2 DRAINING AND FLUSHING FUEL SYSTEM

The fuel will be drained to the selected drain tank, and the fuel system will be flushed with flush salt. No flush is provided for the coolant system. Details of the procedure are given below:

2.1 Take a complete inventory (check list 12B-5).

2.2 Check that FV-105 or 106 to selected drain tank is thawed. FV-105 _____ or FV-106 _____.

2.3 Deep freeze FV-106 or 105 to other drain tank. FV-106 _____ or FV-105 _____.

2.4 Check that all other FV's are deep frozen. FV-104 _____, FV-107 _____, FV-108 _____, FV-109 _____, FV-110 _____, FV-111 _____, FV-112 _____.

2.5 Check that HCV-544 _____, HCV-545 _____, and HCV-546 _____ are open.

2.6 Thaw FV-103 by switching drain switch to "drain" and allow the salt to flow to the selected drain tank.

2.7 Check that the fuel pump stops on low level. (The coolant pump should continue to operate.)

Approved by



10A-5
8-12-65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 2.8 When the FP stops, close HCV-903 (set HIC-903 to maximum) to shut off the air to the FP shroud. | _____ | _____ |
| 2.9 Continuously scan the fuel system for cold spots or hot spots from fission products. | _____ | _____ |
| 2.10 When the bulk of the salt has drained (approximately 40 minutes), switch FV-103 to thaw and the drain switch to "off." | _____ | _____ |
| 2.11 Jumper the prefill mode in ECC-147 and run the Fuel Pump for a few minutes to shake off the salt. Permission to insert jumper _____. | _____ | _____ |
| 2.12 Shut Fuel Pump off and remove jumper. | _____ | _____ |
| 2.13 Raise the control rods to the fill position. | _____ | _____ |
| 2.14 Close HCV-544 or 545. (Equalizer on Tank containing fuel). Specify _____. | _____ | _____ |
| 2.15 Open HCV-573 or 575. (Vent on Tank containing fuel). Specify _____. | _____ | _____ |
| 2.16 Continue purging through FCV-516 and the bubblers until all of the salt has blown down to the drain tank. | _____ | _____ |
| 2.17 Close FCV-516 and the bubblers and allow pressures to come to equilibrium. | _____ | _____ |
| 2.18 Close HCV-573 or 575 and pressurize FD-1 or FD-2 (tank containing fuel) approximately 1/2 psi higher than at equilibrium. | _____ | _____ |
| 2.19 Deep freeze FV-105 and FV-106. | _____ | _____ |
| 2.20 When valves indicate frozen, reactor will drop out of operate mode and CP will stop. Push prefill mode button and start coolant pump. | _____ | _____ |
| 2.21 Set up flows through FCV-516 and bubblers to increase FP pressure to 2 psig and open | _____ | _____ |

Approved by *R. W. Guyman*

10A-6
8-12-65

	<u>Init.</u>	<u>Date/Time</u>
2.21 (continued) HCV-573 or 575 to reduce drain tank pressure to test Freeze Valves.	_____	_____
2.22 Close HCV-573 or 575 and open HCV-544 or 545.	_____	_____
2.23 Take a complete inventory (check list 12B-5).	_____	_____
NOTE: If drain tank afterheat removal system is in service, the water in the steam domes will be included in the drain tank weight.		
2.24 Adjust the drain tank heaters to maintain the temperature at $1200 \pm 100^{\circ}\text{F}$. If temperatures continue to rise, it will be necessary to put the drain tank cooling system into operation. This will occur automatically when the drain tank temperature (FD-1-19B or 20B or FD-2-19B or 20B) exceeds 1300°F . Check that sufficient water is available and cooling water to heat exchanger is at value given in building log.	_____	_____
2.25 If the inventory is satisfactory, fill the fuel system with flush salt as outlined in Section 5I-2.	_____	_____
2.26 Sample the flush salt after 1 to 2 hrs of circulation.	_____	_____
2.27 Check that the equalizing valves (HCV-544, 545, and 546) are open, FFT pressure and pump bowl pressure are approximately equal and FV-104 is thawed. (FV-105 through FV-112 should be deep frozen.)	_____	_____
2.28 Thaw FV-103 by switching "drain" switch to drain and allow the salt to flow to the FFT.	_____	_____
NOTE: The coolant system can also be drained at this time. (See section 3 below.)		

Approved by AKHymon

10A-7
8-12-65

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 2.29 Check that the fuel pump stops on low level.
(The coolant pump should continue to operate.) | _____ | _____ |
| 2.30 When the FP stops set HIC-903 to maximum to shut off the air to the FP shroud. | | |
| 2.31 Continuously scan the fuel system for cold spots or hot spots from fission products. | _____ | _____ |
| 2.32 When the bulk of the salt has drained (approximately 40 min.), switch FV-103 to thaw and the drain switch to "off." | _____ | _____ |
| 2.33 Jumper the prefill mode in ECC-147 and run the fuel pump for a few minutes to shake off the salt. Permission to insert jumper _____. | _____ | _____ |
| 2.34 Shut fuel pump off and remove jumper. | _____ | _____ |
| 2.35 Raise the rods to the fill position. | _____ | _____ |
| 2.36 Close HCV-546. | _____ | _____ |
| 2.37 Open HCV-577. | _____ | _____ |
| 2.38 Continue purging through FCV-516 and the bubblers until all of the salt has been blown down to the drain tank. | _____ | _____ |
| 2.39 Close FCV-516 and the bubblers and allow pressure to come to equilibrium. | _____ | _____ |
| 2.40 Close HCV-577 and pressurize FFT approximately 1/2 psi higher than at equilibrium. | _____ | _____ |
| 2.41 Deep freeze FV-104. | _____ | _____ |
| 2.42 When valves indicate frozen, reactor will drop out of operate mode and coolant pump will stop. Push prefill mode button and start coolant pump if coolant drain is not in progress. | _____ | _____ |
| 2.43 Set up flows through FCV-516 and bubblers to increase FP pressure and open HCV-577 to reduce fuel flush tank pressure to test | | |

Approved by *P. H. Faymon*

10A-8
8-12-65

	<u>Init.</u>	<u>Date/Time</u>
2.43 (continued) freeze valves.	_____	_____
2.44 Close HCV-577 and open HCV-546.	_____	_____
2.45 Take a complete inventory (Check List 12B-5)	_____	_____
2.46 Start fuel pump and maintain normal helium flows and pressures in fuel system and fuel drain tank system.	_____	_____
<u>3 DRAINING COOLANT SYSTEM</u>		
3.1 Check that HCV-527 is open and CDT pressure and CP pressures are approximately equal.	_____	_____
3.2 Switch coolant drain switch to drain. This will thaw FV-204 and FV-206 and drain the coolant salt to the coolant drain tank. Since the system will be in the prefill mode, the coolant pump will not stop on low level and must be manually stopped.	_____	_____
3.3 When the bulk of the coolant salt has drained (approximately 30 minutes), run the coolant pump for a few minutes to shake off the salt. Then stop the pump.	_____	_____
3.4 Close HCV-527 and open HCV-547.	_____	_____
3.5 Continue purging through FCV-512 and the bubblers until all of the salt has been blown down to the drain tank.	_____	_____
3.6 Close FCV-512 and the bubblers and allow pressures to come to equilibrium.	_____	_____
3.7 Close HCV-547 and pressurize CDT approximately 1/2 psi higher than that at equilibrium.	_____	_____
3.8 Deep freeze FV-204 and 206.	_____	_____
3.9 When freeze valves indicate frozen set up flows through FCV-512 and the bubblers to increase CP pressure to 2 psig and open	_____	_____

Approved by B. H. Myrman

10A-9
8-12-65

Init. Date/Time

3.9 (continued)
HCV-547 to reduce CDF pressure to test
freeze valves.

3.10 Close HCV-547 and open HCV-527.

3.11 Take a complete inventory (Check List
12B-5)

3.12 Start CP and maintain normal flows and
pressures.

4 COOLDOWN OF FUEL AND COOLANT SYSTEMS

Lower the heater settings or turn off the heaters to cool down the fuel and coolant systems. The circulating pumps will be used to circulate helium during cooldown to help equalize temperature and cool down the graphite. Cooldown rate should be limited to approximately 300°F per hour to allow time for the graphite to cool. Helium purge rate will be kept maintained to avoid a vacuum on the systems. The drain tanks will not normally be cooled. If maintenance is necessary on them, precautions will be necessary in safely storing the salt. Special instructions will be issued when needed.

4.1 If inventories are satisfactory, check that the CP and FP are in operation.

4.2 Maintain FIC-516 and 512 at normal rate. See Building Log. Increase flows if necessary to avoid pulling a vacuum.

4.3 Turn off reactor heaters listed in Table 5F-1, 2, 3, and 4; and allow the system to cool. Put individual heaters back in service if necessary to maintain all temperatures within $\pm 300^\circ\text{F}$, to hold the cooling rate to a maximum of 300°F per hour and to avoid pulling

Approved by RD Simpson

10A-10
8-12-65

Init. Date/Time

- 4.3 (continued)
a vacuum on the fuel or coolant systems.
Minimize temperature gradients at the penetrations. _____
- 4.4 When the radiator annulus and coolant system temperatures are less than 500°F, turn off the radiator annulus blowers No. 2 and No. 4. _____
- 4.5 When all temperatures have been less than 200°F for at least four hours, turn off the CP and FP and all heaters which have been put back into service. _____

5 SHUT DOWN OF REMAINING EQUIPMENT

The lube oil systems can be shut down at this time, and the helium purge can be turned off from the fuel and coolant systems and the drain tanks if desired. Details are given below:

- 5.1 Shut off the lube oil pumps (FOP-1, FOP-2, COP-1, and COP-2). _____
- 5.2 Leave the pressure on the oil tanks (OT-1 and OT-2) at normal (PIC-513A and 510A). _____
- 5.3 Adjust the fuel system and fuel drain tank system pressure at 1 to 5 psig to prevent inleakage of moisture. Unless maintenance is to be done on either system, they should be inter-connected. Set valves as follows:

Control Room

HCV-572 closed___ HCV-573 closed___ HCV-544 open___
HCV-574 closed___ HCV-575 closed___ HCV-545 open___
HCV-576 closed___ HCV-577 closed___ HCV-546 open___
FCV-516 closed___ HCV-533 closed___

Approved by PH Gwynon

10A-11
8-12-65

Init. Date/Time

NESA

HCV-519 closed _____

Transmitter Room

V-592A closed _____ V-589A closed _____

V-593A closed _____ V-599A closed _____

V-596A closed _____ V-600A closed _____

Vent House

V-522B closed _____

(Maintain pressures by periodically opening
FCV-516 or HCV-573, 574, or 575) _____

5.4 Adjust the coolant system and coolant drain
tank system pressure at 2 to 5 psig to prevent
inleakage of moisture. Unless maintenance
is to be done on either system, they should
be inter-connected. Set valves as follows:

Control Room

FCV-512 closed _____ HCV-547 closed _____

HCV-536 closed _____ HCV-511A closed _____

HCV-527 open _____

Transmitter Room

V-594A closed _____

V-595A closed _____


V-598A closed _____

Vent House

V-560B closed _____

Maintain pressures by periodically opening
HCV-511A or HCV-547 and V-560B. _____

5.5 When afterheat removal is no longer needed
in the drain tank steam domes, drain all
water from the steam domes by the procedure
given in Section 9L. _____



Approved by *B. W. Chapman*

10B-1
9/7/65

10B SPECIAL SHUTDOWNS

There are a number of known conditions which will cause some degree of automatic shutdown (see Part II on process instrumentation) or which will make it desirable to take some action toward shutting down the reactor (see Section 9 of this part). If it is necessary to quickly drain the reactor without removing the afterheat, the procedure is somewhat different than a normal shutdown. Details of the procedure are given below:

1 POWER REDUCTION AND GOING SUBCRITICAL

If an automatic or manual emergency drain has been initiated, FV-103, 105, and 106 will start to thaw and the vent valves on the drain and flush tanks will open. When fuel salt starts to drain, the fuel pump will stop which will scram the control rods if the power is greater than 15 kw. The coolant radiator outlet temperatures will decrease causing a load scram and coolant drain. After a drain request has been initiated there will be 10 or 15 minutes before FV-103 thaws. The operator should do the following:

	<u>Init.</u>	<u>Date/Time</u>
1.1 Determine the cause of the drain request and remedy the situation if possible. If not possible, record all information which might aid in future evaluation of the difficulty.	_____	_____
1.2 Isolate a fuel sample.	_____	_____
1.3 Record FD-1 and FD-2 weigh cell readings.	_____	_____
1.4 Scram the control rods and note that they are fully inserted.	_____	_____
1.5 Lower power removal by stopping both blowers (MB-1 and 3) and closing both radiator doors.	_____	_____
1.6 Adjust radiator doors if necessary to remove afterheat.	_____	_____

Approved by *D. K. Hymon*

10B-2
9/7/65

Init. Date/Time

2 DRAINING AND FLUSHING The FUEL SYSTEM

If time permits, Section 10A-2 should be followed including flushing with flush salt. In addition the following should be done.

2.1 Check temperatures of FV-103 to determine that the valve is thawing. If it appears that component cooling air is still on to the valve, shut off both component coolant pumps until the valve thaws. Then restart a component coolant pump to restore cooling to the other freeze valves and control rods.

NOTE: Stopping the component coolant pumps should be avoided if possible because it thermal cycles the pump bowl. Close HCV-903 (set HIC-903 at maximum) before starting component coolant pumps.

2.2 The drain tank cooling system will automatically go into operation if the drain tank temperature exceeds 1300°F. However, the following should be done to assure proper operation. Check that adequate condensate is available in the feed water tanks and cooling water to the drain tank condensers.

2.3 Check that the drain tank temperatures are controlled between 1350°F and 900°F.

2.4 Take a complete inventory (check list 12B-5) if possible. At least record FD-1 and FD-2 manometers when drain is complete.


2.5 If it is not possible to flush the system with flush salt, switch to prefill and start the fuel pump to circulate helium, which will aid in the removal of afterheat. The fuel system temperatures should be continuously scanned for hot spots from fission products.

Approved by *R. N. Kayman*

10B-3
9/7/65

3 SHUTDOWN OF REMAINING EQUIPMENT

As soon as possible drain the coolant system and shut down the remaining equipment as described in Section 10B-2.



Approved by




11-1
9/7/65

11. SHUTDOWN OPERATIONS

During periods when the reactor is shut down, a variety of operations may be necessary. Due to the fact that these are not done routinely and that the manner of accomplishing them may change from shutdown to shutdown, it is extremely important that the operating crew be alert to all possible hazardous or otherwise undesirable conditions. As during operation, the shift supervisor is in charge of and is responsible for all work done in the area. As the daily cost of shutdown is quite high, all unnecessary delays should be avoided. However, it should be emphasized that a wrong decision made hastily may be costly in time or money.

During shutdown an abbreviated log will be taken. This should be used as a guide only, and the person taking the log should be alert to undesirable conditions which might exist.

Detailed procedures are given below for some of the foreseeable shutdown operations. Remote maintenance procedures are given in Part IX of the MSRE Design of Operations Report.



Approved by [Signature]

11A-1
8/5/65

11A FUEL OR FLUSH SALT TRANSFERS

No salt transfers will be made while the reactor is in operation or when there is salt in the fuel system. Most transfers will be made with the reactor and drain tank cells at 12.7 psia; however, transfers can be made with the seal pans removed but with all lower cell blocks in place. Controlled ventilation would then serve as the secondary containment. No fuel should be transferred to FST until 4 days after a drain to allow for Xenon decay.

The transfer operations consist of:

- (a) Heating the transfer lines and tanks,
- (b) Taking inventory,
- (c) Thawing or freezing the necessary freeze valves,
- (d) Pressurizing the supply tank and venting the receiver tank until the transfer is complete,
- (e) Blowing the salt out of the transfer lines,
- (f) Freezing the freeze valves,
- (g) Taking another inventory.

Details of the transfer operations are given below. Descriptions are given for transferring to and from FD-1, FD-2, FFT, and FST. Instructions for fuel or flush salt removal to the waste storage tank or removal of coolant salt will be issued at the time this is to be done.

The following procedures are based on the assumption that the transfer lines contain no salt other than that at or near the freeze valves. If salt is known to be in the lines, special instructions will be issued.

Init. Date/Time

1 PREPARATION FOR TRANSFERS

1.1 Check that the reactor has been drained.
 FV-104, 105, and 106 are deep frozen and reactor is in the prefill mode.

1.2 Heat up the two tanks involved in the transfer to 1200°F. Details of the heatup as well as a listing of the heaters and thermocouples are given in paragraph 5C for tanks in the drain tank cell and paragraph 11A-14 for the fuel storage tank.

Approved by *B. H. Johnson*

11A-2
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
1.3 Heat up the transfer lines as described below. This section covers the heatup of L-107, 108, 109, 110, 111 in the area isolated by the freeze valves in these lines.	_____	_____
1.3.1 Check to see that records indicate that no salt is in the lines other than at the freeze valves.	_____	_____
1.3.2 Check that the following FV's are set in the freeze position and frozen. FV-107 _____ FV 110 _____ FV-108 _____ FV-111 _____ FV-109 _____	_____	_____
1.3.3 Plug in the thermocouples listed in Table 11A-1 into a readout device and record readout in Col. 3 & 4.	_____	_____
1.3.4 Set S-4 to receiver tank selected for the transfer and S-5 to the supply tank.	_____	_____
1.3.5 Check Syphon Break Temperatures on FV-107, 108, 109, 110, and 111 to be >900°F (These are heated with tanks in- volved, see step 1.2).	_____	_____
1.3.6 Turn on shoulder heaters to the re- ceiver tank freeze valve and heat to _____°F.	_____	_____
1.3.7 When shoulder temperatures of receiver tank freeze valve exceeds 900°F, thaw Receiver Tank Freeze Valve to vent gas from heatup of lines.	_____	_____
1.3.8 Turn on heaters listed in Table 11A-1 to 10% of normal value.	_____	_____
1.3.9 Increase controllers to heat transfer lines to 1200°F. Set controllers at 30%, 75%, 90%, and 105% of 1200°F setting. Do not exceed 200°F/hr. The A4 and B4	_____	_____

Approved by *[Signature]*

11A-3
8/5/65

Init. Date/Time

1.3.9 (continued)

thermocouples on the freeze valves
should be heated above 950°F.

1.3.10 When transfer lines reach 1200°F
freeze Receiver Tank Freeze Valve.

1.4 Check that shield blocks are in place on
reactor cell, drain tank cell, and fuel pro-
cessing cell and no maintenance work is in
progress in these cells. Set FV-103 to freeze
and monitor FV-103 temperatures to assure
that no salt is transferred to the reactor.
Shift Supervisor's approval to proceed.

2 TRANSFER FROM FD-1 TO FST

2.1 After completing 11A-1, take a complete inven-
tory. (Check list 12B-5).

2.2 Check that the switches for FV-106, 107, 108,
109, 111, and 112 are in the frozen position
and the temperatures indicate that they are
frozen (all associated alarms cleared).

2.3 Check that HCV-692 is open and the FST
pressure (PR-608) is less than 2 psig. Check
that FST has been purged of air.

2.4 Close HV-607B ____, HV-608B ____, HCV-530 ____,
and HCV-690 ____.

2.5 If FD-1 pressure (PR-572) is greater than
2 psig, vent through line 573 and then close
HCV-573.

2.6 Close HCV-544 ____, HCV-545 ____, and HCV-546 ____.

2.7 Set S-4 to FST (Receiver). ____
Set S-5 to FD-1 (Supply Tank). ____
Thaw FV-109 and FV-110. ____

2.8 Check all rods at the fill position.

Approved by *B. J. Jayman*

11A-4
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
2.9 Check pump bowl pressure <1 psi (PRC-522A)	_____	_____
2.10 Adjust PIC-517, open HCV-572 and pressurize FD-1 to transfer the salt. (A ΔP of 20 psi is needed to start the transfer and 29 psi when FD-1 is empty and FST contains ~ 70 ft ³ of fuel salt.)	_____	_____
2.11 When transfer is complete, reduce FD-1 pressure ~ 1/2 psi through HCV-573 and freeze FV-110.	_____	_____
2.12 Take system inventory. (Check list 12B-5)	_____	_____
2.13 FV-109 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____
2.14 Vent FD-1 pressure to 5 psig through HCV-573.	_____	_____
<u>3 TRANSFER FROM FD-2 TO FST</u>		
3.1 After completing 11A-1 take a complete inventory. Check list 12B-5.	_____	_____
3.2 Check that the switches for FV-105, 107, 108, 109, 111, and 112 are in the frozen position and the temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____
3.3 Check that HCV-692 is open and FST pressure PR-608 is less than 2 psig.	_____	_____
3.4 Close HV-607B, HV-608B, HCV-530, and HCV-690.	_____	_____
3.5 If FD-2 pressure (PR-574) is greater than 2 psig, vent through line 575 and then close HCV-575.	_____	_____
3.6 Close HCV-544 ____, HCV-545 ____ and HCV-546 ____.	_____	_____
3.7 Set S-4 to FST (Receiver). Set S-5 to FD-2 (Supply Tank). Thaw FV-108 and 110.	_____	_____
3.8 Check all rods at the fill position.	_____	_____
3.9 Check PRC-522 <1 psig.	_____	_____

Approved by S. J. Gayman

11A-5
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
3.10 Pressurize FD-2 and transfer the salt (A Δ P of 20 psi is needed to start the salt transfer and 29 psi when FD-2 is empty and FST contains approximately 70 ft ³ of fuel salt.)	_____	_____
3.11 When the transfer is complete, reduce FD-2 pressure ~ 1/2 psi through HCV-575 and freeze FV-110.	_____	_____
3.12 Take system inventory, Check list 12B-5.	_____	_____
3.13 FV-108 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____
3.14 Vent FD-2 pressure to 5 psig through HCV-573.	_____	_____
<u>4</u> <u>TRANSFER FROM FFT TO FST</u>		
4.1 After completing 11A-1, take a complete inventory, Check list 12B-5.	_____	_____
4.2 Check that the switches for FV-104, 107, 108, 109, 111 are in the frozen position and the temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____
4.3 Check that HCV-629 is open and FST pressure (PR-608) is less than 2 psig.	_____	_____
4.4 Close HV-607B, HV-608B, HCV-530, and HCV-690.	_____	_____
4.5 If FFT pressure (PR-576) is greater than 2 psig, vent through line 577 and then close HCV-577.	_____	_____
4.6 Close HCV-544 ____, HCV-545 ____ & HCV-546 ____.	_____	_____
4.7 Set S-4 to FST (Receiver) Set S-5 to FFT (Supply Tank) Thaw FV-107 and 110.	_____	_____
4.8 Check all control rods at the fill position.	_____	_____
4.9 Check PRC-522 <1 psig.	_____	_____
4.10 Pressurize FFT and transfer the salt. (A Δ P of 17 psi is needed to start the transfer and 25 psi when FFT is empty and FST contains approximately 70 ft ³ of flush salt.)	_____	_____

Approved by [Signature]

11A-6
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
4.11 When transfer is complete, reduce FFT pressure ~ 1/2 psi through HCV-577 and freeze FV-110.	_____	_____
4.12 Take system inventory, check list 12B-5.	_____	_____
4.13 FV-107 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____
4.14 Vent FFT pressure to 5 psig through HCV-577.	_____	_____
<u>5 TRANSFER FROM FST TO FD-1</u>		
5.1 After completing 11A-1, take a complete inven- tory, check list 12B-5.	_____	_____
5.2 Check that the switches for FV-106, 107, 108, 110, 111, and 112 are in the frozen position and temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____
5.3 Check that HCV-544 and HCV-533 are open and FD-1 pressure (PR-572) and FP pressure (PR-522) are less than 1 psig.	_____	_____
5.4 If FST pressure (PR-608) is greater than 2 psig, vent through line 692 and then close HCV-692.	_____	_____
5.5 Close HV-607A, HV-608A, and HCV-530 and HCV-690.	_____	_____
5.6 Set S-4 to FD-1 (receiver). Set S-5 to FST (supply). Thaw FV-110 and 109.	_____	_____
5.7 Pressurize FST by adjusting PCV-530 to opening HCV-530, and transfer the salt. (A ΔP of 16 psi is needed to start the transfer and then it should continue unless the syphon is lost or the back pressure equals the salt head of 20 psi.	_____	_____
5.8 When the transfer is complete, reduce FST pressure ~ 1/2 psi through HCV-692 and freeze FV-109.	_____	_____

Approved by *B. W. Guyman*

11A-7
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
5.9 Take a system inventory, Check list 12B-5.	_____	_____
5.10 FV-110 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____
5.11 Vent pressure in FST to 5 psig through HCV-692.	_____	_____
<u>6 TRANSFER FROM FST TO FD-2</u>		
6.1 After completing 11A-1 take a complete inventory, Check List 12B-5.	_____	_____
6.2 Check that the switches for FV-105, 107, 109, 110, 111, and 112 are in the frozen position and temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____
6.3 Check that HCV-545 and HCV-533 are open and FD-2 pressure (PR-574) and FP pressure (PR-522) are less than 1 psig.	_____	_____
6.4 If FST pressure (PR-608) is greater than 2 psig, vent through line 692, and then close HCV-692.	_____	_____
6.5 Close HV-607A, HV-608A, HCV-530, and HCV-690.	_____	_____
6.6 Set S-4 to FD-2 (Receiver) Set S-5 to FST (Supply Tank) Thaw FV-110 and 108.	_____	_____
6.7 Pressurize FST by adjusting PCV-530 and opening HCV-530 and transfer the salt. (A ΔP of 16 psi is needed to start the transfer and then it should continue unless the syphon is lost or the back pressure equals the salt head (20 psi).	_____	_____
6.8 When the transfer is complete, reduce FST pressure $\sim 1/2$ psig through HCV-692 and freeze FV-108.	_____	_____
6.9 Take a system inventory, Check List 12B-5.	_____	_____
6.10 FV-110 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____

Approved by *B. H. Guymon*

11A-8
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
6.11 Vent pressure in FST to 5 psig through HCV-692.	_____	_____
<u>7 TRANSFER FROM FST TO FFT</u>		
7.1 After completing 11A-1, take a complete inventory, Check List 12B-5.	_____	_____
7.2 Check that the switches for FV-104, 108, 109, 110, 111, and 112 are in the frozen position and temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____
7.3 Check that HCV-546 and HCV-533 are open and FFT pressure (PR-576) and FP pressure (PR-522) are less than 1 psig.	_____	_____
7.4 If FST pressure (PR-608) is greater than 17 psia, vent through line 692 and then close HCV-692.	_____	_____
7.5 Close HV-607A, HV-608A, HCV-530, and HCV-690.	_____	_____
7.6 Set S-4 to FFT (Receiver) Set S-5 to FST (Supply Tank) Thaw FV-110 and 107.	_____	_____
7.7 Pressurize FST by adjusting PCV-530 and opening HCV-530 and transfer the salt. (A ΔP of 14 psi is needed to start the transfer and then it should continue unless the syphon is lost or the back pressure is greater than the salt head (17 psi).	_____	_____
7.8 When the transfer is complete, reduce FST pressure $\sim 1/2$ psi through HCV-592 and freeze FV-107.	_____	_____
7.9 Take a system inventory, Check List 12B-5.	_____	_____
7.10 FV-110 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____
7.11 Vent pressure in FST to 5 psig through HCV-592.	_____	_____

Approved by *A. W. [Signature]*

11A-9
8/5/65

	<u>Init.</u>	<u>Date/Time</u>
<u>8</u> <u>TRANSFER FROM FD-1 TO FD-2</u>		
8.1 After completing 11A-1, take a complete inventory, Check List 12B-5.	_____	_____
8.2 Check that the switches for FV-105, 106, 107, 109, and 110 are in the frozen position and the temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____
8.3 Check that HCV-575 is open and FD-2 pressure (PR-574) is less than 2 psig.	_____	_____
8.4 If FD-1 pressure (PR-573) is greater than 2 psig, vent through line 573 and then close HCV-573.	_____	_____
8.5 Close HCV-544 ____, HCV-545 ____, & HCV-546 ____.	_____	_____
8.6 Set S-4 to FD-2 (Receiver) Set S-5 to FD-1 (Supply) Thaw FV-108 and 109.	_____	_____
8.7 Check all control rods at the fill position.	_____	_____
8.8 Pressurize FD-1 and transfer the salt (A ΔP of 7 psi is needed to start the transfer and 11 psi to complete transfer.)	_____	_____
8.9 When the transfer is complete, reduce FD-1 pressure $\sim 1/2$ psi through HCV-573 and freeze FV-108.	_____	_____
8.10 Take a system inventory, Check List 12B-5.	_____	_____
8.11 FV-109 should be frozen at this time if the transfer lines are not to be deep frozen.	_____	_____
8.12 Vent pressure in FD-1 to 5 psig through HCV-573.	_____	_____
<u>9</u> <u>TRANSFER FROM FD-2 TO FD-1</u>		
9.1 After completing 11A.1, take a complete inventory, Check List 12B-5.	_____	_____
9.2 Check that the switches for FV-105, 106, 107, 108, and 110 are in the frozen position and the temperatures indicate that they are frozen (all associated alarms cleared).	_____	_____

Approved by B. W. Kingman

11A-10
8/5/65
Date/Time

- | | <u>Init.</u> | <u>Date/Time</u> |
|---|--------------|------------------|
| 9.3 Check that HCV-573 is open and FD-1 pressure (PR-572) is less than 2 psig. | _____ | _____ |
| 9.4 If FD-2 pressure (PR-574) is greater than 2 psig, vent through line 575 and then close HCV-575. | _____ | _____ |
| 9.5 Close HCV-544 ____, HCV-545 ____, HCV-546 ____. | _____ | _____ |
| 9.6 Set S-4 to FD-1 (Receiver)
Set S-5 to FD-2 (Supply)
Thaw FV-108 and 109. | _____ | _____ |
| 9.7 Check all control rods at the fill position. | _____ | _____ |
| 9.8 Pressurize FD-2 and transfer the salt. (A ΔP of 2 psi is needed to start the transfer and 11 psi to complete transfer.) | _____ | _____ |
| 9.9 When the transfer is complete, reduce FD-2 pressure $\sim 1/2$ psi through HCV-575 and freeze FV-109. | _____ | _____ |
| 9.10 Take a system inventory, Check List 12B-5. | _____ | _____ |
| 9.11 FV-108 should be frozen at this time if the transfer lines are not to be deep frozen. | _____ | _____ |
| 9.12 Vent pressure in FD-2 to 5 psig through HCV-576. | _____ | _____ |

10 HEATUP OF FST

This section covers the heatup of FST, line 110 to the surge pot of FV-110, line 111 to FV-111, includes both surge pots of FV-110 and H-110-7 on both sides of FV-110.

- | | | |
|---|-------|-------|
| 10.1 Check that oxygen has been purged from the system. | _____ | _____ |
| 10.2 Check to see that records indicate that no salt is in the lines other than at the freeze valves. | _____ | _____ |
| 10.3 Check that the following FV's are set in the freeze position and frozen.
FV-110 ____, FV-111 ____, FV-112 ____. | _____ | _____ |
| 10.4 Open HCV-692. | _____ | _____ |

Approved by *B. H. Johnson*

11A-11
8/5/65

Init. Date/Time

- 10.5 Set V-608B to maintain a flow of 0.5 l/m on FIA-608. This will purge the tank and will prevent activity from backing up the line. _____
- 10.6 Check that the thermocouples listed in Table 11A-2 are plugged into a readout instrument and that these are in operation. Record Inst. No. and T.E. Readout Points. _____
- 10.7 Set controllers listed in Table at 10% of their maximum setting and start heating the system. (Push start button on induction regulators.) _____
- 10.8 Using the heater calibration curves as guides, heat the system at approximately 100°F per hour. Maintain temperatures within ± 100°F of each other if possible. _____
- 10.9 Adjust controllers to level out the temperatures at approximately 1200°F. _____
- 10.10 Close V-608 and HCV-692. Maintain PR-608 at 1 to 5 psig. _____

11 HEATUP OF FILL LINE 111

This section covers the heatup of the fill line from the disconnect flange to FV-111. Details of the procedure are given below.

- 11.1 Check to see that the line does not contain any salt. _____
- 11.2 Connect the thermocouples listed for the fill line in Table 11A-3 to a readout inst. Record instrument and point number in Table 11A-3. _____
- 11.3 Increase the setting on the controllers given in Table 11A-3 to give approximately 200°F/hr heatup. _____
- 11.4 Adjust the controllers to level out the temperature at approximately 1200°F. _____

12 HEATUP OF WASTE LINE 112

This section covers the heatup of L-112 from the tee in L-110 to the capped penetration.

Approved by S. H. Kingman

11A-12
8/5/65

Init. Date/Time

- 12.1 Check L-110 empty of salt or salt molten. _____
- 12.2 Connect the TE's listed in Table 11A-4 to a read out instrument. Record instrument and point number in Table 11A-4. _____
- 12.3 Adjust heater control H-112-1 to heat line. Since line will contain salt do not heat up faster than 50°F/hr. _____
- 12.4 Adjust controller to level temperature out at 1200°F. _____

13 HEATUP OF FILL LINE 203

This section covers the heatup of the fill line from the disconnect flange to the CDT.

- 13.1 Check to see that the line does not contain any salt. _____
- 13.2 Connect line 203 to the CDT. Open HCV-511B to purge L-203. CAUTION: Line may contain salt which could present a beryllium hazard. Take proper precautions. Then blank the top end of the line to exclude oxygen or have it connected to a shipping container. Close HCV-511B. _____
- 13.3 Connect the thermocouples listed for the fill line in Table 11A-5 to a readout instrument. Record instrument and point number in Table 11A-5. _____
- 13.4 Increase the setting on the controllers given in Table 11A-5 to give approximately 200°F/hr heatup. _____
- 13.5 Adjust the controller to level out the temperatures at approximately 1200°F. _____

14 HEATUP OF TRANSFER AND SALT ADDITION FREEZE VALVE ASSEMBLIES

When a freeze valve is frozen to obstruct flow, only a small volume of salt near the center of the valve is frozen. Occasionally it will be desirable

Approved by *P. H. Layman*

11A-13
8/5/65

Init. Date/Time

14 (continued)

or necessary to cool the surge pots and piping associated with the freeze valve. Since it is not possible to remove all of the salt (except for FV-103), special precautions must be taken to prevent rupturing the pipe due to expansion of the salt as it is heated. The outside areas are heated first to melt the salt so that there is room for expansion. In all cases it is assumed that the adjacent pipe does not contain salt or that the salt is molten. Interlocks on TE's prevent thawing of the FV's if the pot temperatures are less than 950°F. Other interlocks prevent thawing FV's under certain conditions.

14.1 Heatup of Freeze Valve Assemblies FV-107, 108, 109, 110, 111, and 112.

To prevent possible rupture of the assemblies, the freeze valve Syphon break on adjacent lines should be heated to above 900°F before thawing the valve. The valve heater controllers will then have to be adjusted for normal operation (See Section 4I).

The thermocouples and heaters involved are listed below:

<u>FV No.</u>	<u>TE No.</u>	<u>Heater No.</u>	<u>Controller No.</u>	<u>HCP</u>
107	FV-107-A4 & B4	FV-107-2A, B, C, D	FV-107-3	10
108	FV-108-A4 & B4	FV-108-2A, B, C, D	FV-108-3	11
109	FV-109-A4 & B4	FV-109-2A, B, C, D	FV-109-3	11
110	FV-110-A4 & B4	FV-110-2A, B, C, D	FV-110-3	12
111	FV-111-A4 & B4	FV-111-2A, B, C, D	FV-111-3	12
112	FV-112-A4 & B4	FV-112-2A, B, C, D	FV-112-3	12

Approved by B. W. Hayman

11A-14
8/5/65

Init. Date/Time

14.2 Heatup of Freeze Valve Assemblies FV-204 and 206.

The vertical sections of the lines near the freeze valves must be heated before the freeze valve shoulders. These lines will normally be heated as the coolant system is heated (see Section 5F) and the FV pot is heated with the CDT (See Section 5C). Details of the procedure is given below.

14.2.1 Check to see that temperatures at TE-204-6, TE-206-6, and TE-FV-204-5B are above 1100°F.

14.2.2 Heat up shoulders of FV-204 and 206 by raising the setting on controllers FV-204-2 and 206-2.

14.2.3 When the temperatures at TE FV-204-A4, B4 and TE FV-206-A4, B4 are above 1000°F on TR-3300, the freeze valves can be operated without rupturing the lines. It will be necessary to adjust the freeze valve heaters for normal operation (See Section 3I).

Approved by *[Signature]*

11 A-15
8/5/65

Table 11 A-1

TRANSFER LINE THERMOCOUPLES AND HEATER CONTROL

TE NO.	PATCH PNL NO.	TE READOUT		HEATER NO.	CONTROLLER NO.	HCP NO.
		Inst	Point			
FV 107-A4	296	TRA 3300	7	FV 107-1A, B	FV 107-1	10
FV 107-B4	297	"	8	FV 107-3A, B	FV 107-3	
FV 108-A4	308	"	9	FV 107-1C, D	FV 107-1	
FV 108-B4	309	"	10	FV 107-3C, D	FV 107-3	11
FV 109-A4	320	"	11	FV 108-1A, B	FV 108-1	
FV 109-B4	321	"	12	FV 108-3A, B	FV 108-3	
FV 110-A4	332	"	13	FV 108-1C, D	FV 108-1	12
FV 110-B4	333	"	14	FV 108-3C, D	FV 108-3	
FV 111-A4	344	"	15	FV 109-1A, B	FV 109-1	
FV 111-B4	345	"	16	FV 109-3A, B	FV 109-3	12
108-7	433			FV 109-1C, D	FV 109-1	
109-7	441			FV 109-3C, D	FV 109-3	
110-1	443			FV 110-2A, B	FV 110-2	12
110-2	444			FV 110-3A, B	FV 110-3	
110-A3	445			FV 110-2C, D	FV 110-2	
110-B3	471			FV 110-3C, D	FV 110-3	10
110-C3	472			FV 111-2A, B	FV 111-2	
110-4A	446			FV 111-3A, B	FV 111-3	
110-5A	448			FV 111-2C, D	FV 111-2	12
110-6	450			FV 111-3C, D	FV 111-3	
110-7	451			H 111-1-1	H 111-1	
110-8	452			H-110-1-1A	H 110-1	11
110-9	453			H-110-1-2A	H 110-1	
110-A10	454			H 110-2-1A	H 110-2	
110-B10	464			H 110-2-2A	"	10
111-7	463			H 110-2-3A	"	
				HL10-3-1A	110-3	
				H 110-3-2A	"	10
				H 110-4	H-100-4	
				H 110-5	H 110-5	
				H 110-6-1	H-110-6	12
				H 110-6-2	"	
				H 110-6-3	"	
				H 110-6-4	"	"
				H 110-7-1	H 110-7	
				H 110-7-1	"	
				H 110-7-1	"	"
				H 110-7-1	"	

Approved by [Signature]

11 A-16
8/5/65

Table 11 A-2

FUEL STORAGE TANK THERMOCOUPLES AND HEATER CONTROLLERS

TE NO.	PATCH PNL NO.	TE READOUT		HEATER No.	CONTROLLER NO.	HCP No.
		Inst	Point			
FST - 1A	214			FST-4	FST-4	13
FST - 1B	215	TR 3002	11	1A, B, 2A; B	↓	
FST - 2A	216			"		
FST - 2B	217	TR 3002	12	"		
FST - 3A	218					
FST - 4A	220					
FST - 4B	221	TR 3002	14		FST-3	13
FST - 5	222			FST-3	↓	
				1A, B		
FST - 8	225			2A, B		
				3A, B	↓	
FST - 6	223	TR 3002	15	"		
FST - 9	226			"	FST-2	13
				FST-2	↓	
FST - 7	224			1A, B		
				2A, B		
FST - 10	227			3A, B		
				4A, B	↓	
FST - 11	228				FST-1	
FST - 12	229			FST-1	"	
				1-8	"	
FST - 13	230	TR 3002	16	"	"	
110-A10	454			110-7-1	H-110-7	12
110-B10			1	110-7-1	↓	
111-7	463			110-7-1		
110-11	455			110-7-2		12
110-12	456				↓	

Approved by *[Signature]*

11 A-17
8/5/65

Table 11A-3

LINE 111 THERMOCOUPLES AND HEATER CONTROL

TE NO.	PATCH PNL NO.	TE READOUT		HEATER NO.	CONTROLLER NO.	HCP NO.
		Inst	Point			
111-1	457			111-2-2	H-111-2	#12
111-2	458			111-2-1	"	
111-3	459					
111-4	460			111-1-3	H-111-1	12
111-5	461			111-1-2	"	
111-6	462			111-1-1	"	

Table 11A-4

LINE 112 THERMOCOUPLES AND HEATER CONTROLS

TE NO.	PATCH PNL NO.	TE READOUT		HEATER NO.	CONTROLLER NO.	HCP NO.
		Inst	Point			
112-A1	464			H 112-1-1	H 112-1	#12
112-B1				H 112-1-2	"	
112-B2	466			H 112-1-3	"	
112-B3	467			H 112-1-4	"	
FV 112-5B				FV 112-3A,B	FV 112-3	

Approved by A. K. Kingman

11 A-18
8/5/65

Table 11A-5

LINE 203 THERMOCOUPLES AND HEATER CONTROLLERS

TE NO.	PATCH PNL NO.	TE READOUT		HEATER NO.	CONTROLLER NO.	HCP NO.
		Inst	Point			
203-1	821			H 203-1A	H 203-1	4
203-2	822			H 203-1B	"	"
203-3	823			H 203-1C	"	"
203-4	824			H 203-1D	"	"
203-5	825			H 203-1E	"	"
203-6	826			H 203-1F	"	"
203-7	827			H 203-2	H 203-2	3

Approved by



11B-1
9/20/65

11B OPENING REACTOR CELL, DRAIN TANK
CELL AND COOLANT CELL

After a power operation considerable radioactivity may be present in the reactor cell, drain tank cell and coolant cell. Therefore, great care must be exercised when opening the shields. The fuel should be drained into one of the drain tanks. Since a rupture in the drain tank afterheat-removal thimbles could cause a release of considerable steam and radioactivity, it is desirable to allow sufficient time after shutdown so that cooling is no longer required. The cooling thimbles should be boiled dry and the water stored in the FWT's. The coolant salt should also be drained. All heaters except those required to keep the salts molten in the tanks should be off if the shutdown is to be a lengthy one.

Since secondary containment is provided by inflow of air when the shields are opened, the stack must run continuously. In order to maintain the required 100 ft/min flow into the cells, the maximum open area is restricted to approximately 130 sq ft.

Each shutdown will involve different operations, and it is difficult to write specific instructions in advance. Therefore, it is especially important for the operator to be alert for hazards or other items which have been overlooked. It is desirable to shut off all electrical power not required in order to reduce shock hazard during maintenance operations. Other equipment and systems such as water and oil systems should be shut down if not needed. "Do not operate" tags should be attached to all valves and breakers involved. These tags should state that the reason for tagging is a reactor shutdown. Shift supervisor's permission should be given as the condition required to remove them. In case a specific piece of equipment is to be worked on, an additional tag should be attached giving the work request number.

The white slips should be attached to a copy of this section of the Operating Procedures and should be removed at the end of the shutdown when the shield is closed.

Care should be taken to valve out the leak detector to any flange before it is opened. When it is closed, a leak check should be started immediately.

Approved by *P. H. ...*

11B-2
9/20/65

The following is a check list covering most of the operations which may be required before opening the shield. Do only parts which apply depending on the maintenance which is to be done.

			<u>Init.</u>	<u>Date/Time</u>
<u>1</u>	<u>RC HEATER SHUTDOWN CHECK LIST</u>			
	Open and tag distribution breakers which apply.			
1.1	Heater FV-103	G5-1-A4-2	_____	_____
1.2	Heater H-103	G5-1-A4-4	_____	_____
1.3	Heater RAN-1	G5-1-A5-1	_____	_____
1.4	Heater RAN-2	G5-1-A5-2	_____	_____
1.5	Heater RCH-3	T-1-A-6	_____	_____
1.6	Heater FP-1	T-1-A-10	_____	_____
1.7	Heater FP-2	T-1-A-8	_____	_____
1.8	Heater RCH-4	T-1-B-6	_____	_____
1.9	Heater HX1	T-1-B-9	_____	_____
1.10	Heater HX2	T-1-B-10	_____	_____
1.11	Heater HX3	T-1-B-8	_____	_____
1.12	Heater RCH-1	T-1-C-7	_____	_____
1.13	Heater RCH-2	T-1-C-9	_____	_____
1.14	Heater RCH-5	T-1-C-10	_____	_____
1.15	Heater RCH-6	T-1-C-8	_____	_____
1.16	Heater RCH-7	T-1-C-5	_____	_____
1.17	Heater H-102-2	T-1-C-6	_____	_____
1.18	Heater H-200-15	T-2-V1-22	_____	_____
1.19	Heater H-200-16	T-2-V1-17	_____	_____
1.20	Heater H-201-10	T-2-V1-18	_____	_____
1.21	Heater H-201-14	T-2-V1-19	_____	_____
1.22	Heater H-101-2	T-2-V1-9	_____	_____
1.23	Heater H-100-1	T-2-V1-1	_____	_____
1.24	Heater H-100-2	T-2-V1-5	_____	_____
1.25	Heater H-101-3	T-2-V1-13	_____	_____
1.26	Heater R1	T-2-Y-3	_____	_____
1.27	Heater R2	T-2-Y-5	_____	_____
1.28	Heater R3	T-2-Y-6	_____	_____

Approved by R. H. Johnson

11B-3
9/20/65

			<u>Init.</u>	<u>Date/Time</u>
1.29	Heater H-200-14	T2-W1-2	_____	_____
1.30	Heater H-201-11	T2-W1-5	_____	_____
1.31	Heater H-200-1	T2-W2-2	_____	_____
1.32	Heater H-200-11	T2-W2-6	_____	_____
1.33	Heater H-200-12	T2-W2-10	_____	_____
1.34	Heater H-201-1	T2-W2-14	_____	_____
1.35	Heater H-201-2	T2-W2-18	_____	_____
1.36	Heater H-201-9	T2-W2-17	_____	_____
1.37	Heater H-102-5	T2-W2-13	_____	_____
1.38	Heater H-102-1	T2-W2-5	_____	_____
1.39	Heater H-102-4	T2-W2-9	_____	_____

2 DTC HEATER SHUTDOWN CHECK LIST

Open and tag distribution breakers which apply.

2.1	Heater FV-103	G5-1-A4-2	_____	_____
2.2	Heater H-104-1	G5-1-A1-1	_____	_____
2.3	Heater FV-104-1	G5-1-A1-9	_____	_____
2.4	Heater FV-104-1A	G5-1-A4-1	_____	_____
2.5	Heater FV-104-3	G5-1-A1-11	_____	_____
2.6	Heater H-104-5	G5-1-A1-3	_____	_____
2.7	Heater H-104-6	G5-1-A1-5	_____	_____
2.8	Heater FV-105-1	G5-1-A1-6	_____	_____
2.9	Heater FV-105-1A	G5-1-A1-10	_____	_____
2.10	Heater FV-105-3	G5-1-A1-8	_____	_____
2.11	Heater H-105-1	G5-1-A1-2	_____	_____
2.12	Heater H-105-4	G5-1-A1-4	_____	_____
2.13	Heater FV-106-1	G5-1-A2-5	_____	_____
2.14	Heater FV-106-1A	G5-1-A4-3	_____	_____
2.15	Heater FV-106-3	G5-1-A2-7	_____	_____
2.16	Heater FV-106-1	G5-1-A2-1	_____	_____
2.17	Heater H-106-4	G5-1-A2-3	_____	_____
2.18	Heater H-107-1	G5-1-A2-2	_____	_____
2.19	Heater H-107-2	G5-1-A2-4	_____	_____
2.20	Heater H-107-3	G5-1-A2-6	_____	_____

Approved by *R. W. Szymon*

11B-4
9/20/65

			<u>Init.</u>	<u>Date/Time</u>
2.21	Heater FV-107-1	G5-1-A2-8	___	___
2.22	Heater FV-107-3	G5-1-A2-12	___	___
2.23	Heater H-108-1	G5-1-A3-1	___	___
2.24	Heater H-108-2	G5-1-A3-3	___	___
2.25	Heater H-108-3	G5-1-A3-5	___	___
2.26	Heater FV-108-1	G5-1-A3-11	___	___
2.27	Heater FV-108-3	G5-1-A3-7	___	___
2.28	Heater H-109-1	G5-1-A3-2	___	___
2.29	Heater H-109-2	G5-1-A3-4	___	___
2.30	Heater H-109-3	G5-1-A3-6	___	___
2.31	Heater FV-109-1	G5-1-A3-12	___	___
2.32	Heater FV-109-3	G5-1-A3-8	___	___
2.33	Heater H-110-1	G5-1-A3-9	___	___
2.34	Heater H-104-2	G5-1-C1-1	___	___
2.35	Heater H-104-3	G5-1-C1-3	___	___
2.36	Heater H-104-4	G5-1-C1-5	___	___
2.37	Heater H-105-2	G5-1-C1-4	___	___
2.38	Heater H-105-3	G5-1-C1-6	___	___
2.39	Heater H-104-7	G5-1-C1-7	___	___
2.40	Heater H-110-2	G5-1-C1-2	___	___
2.41	Heater H-110-3	G5-1-C1-8	___	___
2.42	Heater H-106-2	G5-1-C2-2	___	___
2.43	Heater H-106-3	G5-1-C2-7	___	___
2.44	Heater FFT-1	G5-BB-6	___	___
2.45	Heater FD1-1	G5-BB-10	___	___
2.46	Heater FD2-1	G5-BB-8	___	___
2.47	Heater FFT-2	T-1-B-7	___	___
2.48	Heater FD1-2	T-1-B-3	___	___
2.49	Heater FD2-2	T-1-B-5	___	___

3 CC HEATER SHUTDOWN CHECK LIST

Open and tag distribution breakers which apply.

3.1	Heater H-203-1	G5-1-C2-8	___	___
3.2	Heater H-204-1	G5-1-C2-6	___	___

Approved by 

11B-5
9/20/65

			<u>Init.</u>	<u>Date/Time</u>
3.3	Heater H-206-1	G5-1-C2-5	___	___
3.4	Heater CDT-1	G5-1-C2-4	___	___
3.5	Heater H-204-2	G5-1-C3-5	___	___
3.6	Heater FV-204-1	G5-1-C3-5	___	___
3.7	Heater FV-204-1A		___	___
3.8	Heater FV-204-2	G5-1-C3-4	___	___
3.9	Heater FV-204-3	G5-1-C3-6	___	___
3.10	Heater FV-206-1	G5-1-C3-1	___	___
3.11	Heater FV-206-1A		___	___
3.12	Heater FV-206-2	G5-1-C3-3	___	___
3.13	Heater CR1	G5-BB-3	___	___
3.14	Heater CR2	G5-BB-5	___	___
3.15	Heater CR3	G5-BB-7	___	___
3.16	Heater CR4	G5-BB-9	___	___
3.17	Heater CR5	G5-2-Y-3	___	___
3.18	Heater CR6	G5-2-Y-4	___	___
3.19	Heater CR7	G5-2-Y-5	___	___
3.20	Heater CR8	G5-2-Y-6	___	___
3.21	Heater H-200-13	T-1-A-5	___	___
3.22	Heater H-201-12	T-1-A-7	___	___
3.23	Heater H-202-2	T-1-A-9	___	___
3.24	Heater H-201-13	T2-W1-9	___	___
3.25	Heater H-202-1	T2-W1-20	___	___
3.26	Heater H-205-1	T2-W1-18	___	___
3.27	Heater FT-201A-1	T2-W1-2	___	___
3.28	Heater FT-201A-2	T2-W1-4	___	___
3.29	Heater FT-201A-3	T2-W1-6	___	___
3.30	Heater FT-201A-4	T2-W1-8	___	___
3.31	Heater FT-201B-1	T2-W1-10	___	___
3.32	Heater FT-201B-2	T2-W1-12	___	___
3.33	Heater FT-201B-3	T2-W1-14	___	___
3.34	Heater FT-201B-4	T2-W1-16	___	___
3.35	Heater H-203-2	T2-W1-17	___	___

Approved by

R. W. G. [Signature]

11B-6
9/20/65

			<u>Init.</u>	<u>Date/Time</u>
3.36	Heater CDT-2	T-2-VI-2	_____	_____
3.37	Heater CDT-3	T-2-VI-6	_____	_____
3.38	Heater CP1	T-2-VI-10	_____	_____
3.39	Heater CP2	T-2-VI-14	_____	_____
<u>4</u>	<u>COOLING WATER SHUTDOWN CHECK LIST</u>			
	Close and tag those that apply.			
	(WR, BH, CC, SER)			
4.1	Fuel Pump	V-830-A	_____	_____
4.2	Fuel Pump	V-831	_____	_____
4.3	Thermal Shield	V-844-A	_____	_____
4.4	Thermal Shield	V-844C-A	_____	_____
4.5	Thermal Shield	V-845	_____	_____
4.6	RC Cooler No. 1	V-840-A	_____	_____
4.7	RC Cooler No. 1	V-846-A	_____	_____
4.8	RC Cooler No. 2	V-838-A	_____	_____
4.9	RC Cooler No. 2	V-841-A	_____	_____
4.10	Drain Cell Cooler	V-836-A	_____	_____
4.11	Drain Cell Cooler	V-837-A	_____	_____
4.12	Coolant Pump	V-832-A	_____	_____
4.13	Coolant Pump	V-833-A	_____	_____
4.14	Gas Cooler	V-873-A	_____	_____
4.15	Gas Cooler	V-874-A	_____	_____
4.16	CCP No. 1			
	(Lube Oil)	V-875-D	_____	_____
4.17	CCP No. 1			
	(Lube Oil)	V-876	_____	_____
4.18	CCP No. 2			
	(Lube Oil)	V-886	_____	_____
4.19	CCP No. 2			
	(Lube Oil)	V-887	_____	_____
<u>5</u>	<u>FREEZE VALVES SHUTDOWN CHECK LIST</u>			
	Deep freeze valves that apply per Section 3I.4.			
5.1	FV-104		_____	_____

Approved by

R. W. Johnson

11B-7
9/20/65

	<u>Init.</u>	<u>Date/Time</u>
5.2 FV-105	_____	_____
5.3 FV-106	_____	_____
5.4 FV-107	_____	_____
5.5 FV-108	_____	_____
5.6 FV-109	_____	_____
5.7 FV-110	_____	_____
5.8 FV-111	_____	_____
5.9 FV-112	_____	_____
5.10 FV-204	_____	_____
5.11 FV-206	_____	_____

6 COMPONENT COOLING AIR TO COMPONENTS SHUTDOWN CHECK

LIST

Shut off and tag cooling air supply valves that apply.

(TR)

6.1 Fuel Pump	HCV-903	_____	_____
6.2 Reactor Neck	HCV-962	_____	_____
6.3 Reactor Neck	HCV-963	_____	_____
6.4 Graphite Sampler	HCV-961	_____	_____
6.5 Control Rod Drives	HCV-915	_____	_____
6.6 FV-103	Close HIC-919-A1 _____, HIC-919-A2 _____	_____	_____
6.7 FV-104	Close HIC-908-A1 _____, HIC-908-A2 _____	_____	_____
6.8 FV-105	Close HIC-909-A1 _____, HIC-909-A2 _____	_____	_____
6.9 FV-106	Close HIC-910-A1 _____, HIC-910-A2 _____	_____	_____
6.10 FV-107	Close HIC-911-A1 _____, HIC-911-A2 _____	_____	_____
6.11 FV-108	Close HIC-912-A1 _____, HIC-912-A2 _____	_____	_____
6.12 FV-109	Close HIC-913-A1 _____, HIC-913-A2 _____	_____	_____
6.13 FV-204	Close HIC-906-A1 _____, HIC-906-A2 _____	_____	_____
6.14 FV-206	Close HIC-907-A1 _____, HIC-907-A2 _____	_____	_____

7 COMPONENT COOLING PUMPS SHUTDOWN CHECK LIST

(Breaker House and SER)

7.1 CCP-1	Open and Tag Breaker _____	_____	_____
7.2	Close and Tag V-922 _____	_____	_____
7.3	Close and Tag V-916 _____	_____	_____

Approved by

[Handwritten Signature]

11B-8
9/20/65

Init. Date/Time

7.4 CCP-2 Open and Tag Breaker _____

7.5 Close and Tag V-923 _____

7.6 Close and Tag V-921 _____

8 ELECTRICAL BREAKERS SHUTDOWN CHECK LIST

Open or rack out the breakers and tag those which apply.

(Breaker House)

8.1 Fuel Pump Bus 4 Breaker D _____

8.2 Reactor Cell Cooler No. 1 G3-10 _____

8.3 Reactor Cell Cooler No. 2 G4-24 _____

8.4 FOP-1 (Local) _____

8.5 FOP-2 (Local) _____

8.6 Drain Tank Cell Cooler G3-5 and G4-5 _____

8.7 Component Cooling Pump No. 1 Bus 3-H _____

8.8 Component Cooling Pump No. 2 Bus 4-E _____

8.9 Coolant Pump _____

8.10 Coolant Cell Cooler No. 1 G3-17 _____

8.11 Coolant Cell Cooler No. 2 G4-17 _____

8.12 Radiator Door Drive T2-X _____

8.13 COP-1 (Local) _____

8.14 COP-2 (Local) _____

8.15 Control Rod Drive No. 1 (Process Power Panel
No. 2) _____

8.16 Control Rod Drive No. 2 (Process Power Panel
No. 2) _____

8.17 Control Rod Drive No. 3 (Process Power Panel
No. 2) _____

9 OPENING RC AND DTC

If the RC or DTC is to be opened proceed as follows:


9.1 Close V-565C, V-965C and 966C. Open V's 955A
and B and raise the cell pressure to atmospheric
as indicated by PIA-RC-A, then close V's 955-A
and B. _____

9.2 Check that the steam drums have been boiled dry. _____

Approved by *B. N. Seymour*

11B-9
9/20/65

	<u>Init.</u>	<u>Date/Time</u>
9.3 Open HCV's 930-A and B.	_____	_____
9.4 Remove the necessary blocks of the top layer.	_____	_____
9.5 Close HCV-935 ~ half.	_____	_____
9.6 Have HP survey made to assure it is safe to work on membrane.	_____	_____
9.7 Remove that portion of the membrane seal as necessary for the removal of the lower plugs or shield blocks.	_____	_____
9.8 Close HCV-935A and with HP approval, remove the plugs or blocks needed for maintenance.	_____	_____
9.9 When remote maintenance shield has been installed, adjust HCV-935A as required.	_____	_____
<u>10 OPENING THE COOLANT CELL</u>		
If the coolant cell is to be entered, proceed as follows:		
10.1 Open dampers in ducts 933 and 934.	_____	_____
10.2 Remove the caulking from the shield blocks as required.	_____	_____
10.3 With HP approval remove shield blocks and open doors as required. Have IH take air samples to check for Be. Wear masks and protective clothing as required by HP and IH when entering the cell. Keep the number and size of the openings in the cell to a minimum.	_____	_____



Approved by *R. H. [Signature]*

11C-1
9/20/65

11C GRAPHITE SAMPLING

At times to be specified, a graphite sample will be removed from the reactor core through the 2 1/2 inch opening provided for this purpose. This section gives the procedure for preparing the system for this operation.

1 DETAILS OF THE PREPARATION FOR GRAPHITE SAMPLING ARE AS FOLLOWS.

	<u>Init.</u>	<u>Date/Time</u>
1.1 Shut down the reactor as described in Section 10A.	_____	_____
1.2 Prepare for opening the shield by Section 11B through Step 1.9.6.	_____	_____
1.3 Remove the standpipe cover plate and plug under it. While this is in progress, proceed with Step 1.4, 1.5, and 1.6 of this section.	_____	_____
(SER)		
1.4 Check that V-918A is closed.	_____	_____
1.5 With HP and IH coverage, remove the blank flanges from line 918 and install the spool piece. Gas masks are required for this operation.	_____	_____
(SER and ST)		
1.6 Open V-918A and 918B.	_____	_____
(HB and ST)		
1.7 After the special work plug has been put in place and the purge gas line connected, start the purge gas flow and the standpipe evacuating blower at about the same time.	_____	_____
1.8 Maintain the purge on the standpipe throughout the sampling operation.	_____	_____
1.9 When the sampling is complete, allow the purge to continue 1/2 hour after all operations inside the special work shield have been complete.	_____	_____
(HB and ST)		

Approved by *S. W. Layman*

11C-2
9/20/65

	<u>Init.</u>	<u>Date/Time</u>
1.10 Stop the purge and standpipe evacuating blower, and close V-918B.	_____	_____
(SER)		
1.11 Close V-918A and with HP and IH coverage remove the spoolpiece in L-918 and blank off the openings. Gas masks are required for this operation.	_____	_____
1.12 Remove the special work shield, replace the plug and the standpipe cover plate, and leak test by the procedure of Section 4E.	_____	_____

Approved by

A. W. [Signature]
11D ROUTINE INSPECTION AND TESTING OF EQUIPMENT

11D-1
8/5/65

Periodically all pressure containing equipment will be inspected and tested to insure the safety of personnel, prevent spread of contamination, prevent damage to equipment, and reduce the number of unnecessary shut downs.

1. PROCESS SYSTEMS

The process systems will be tested by gas pressurizing to 65 psig at temperature of 1200°F as outlined in Operating Procedure, Section 5H.

2. AUXILIARY SYSTEMS

All systems and components will be hydrostatically tested where safety or equipment integrity requires such a test. The requirements of Section VIII of the ASME Unfired Pressure Vessel Code will be adhered to. See Table 1. Commercial gas equipment will be tested or returned to the supplier for testing by procedures governed by plant policy and I.C.C. No. 73.34 J.

3. PRESSURE RELIEF VALVES

Table 2 lists all pressure relief valves that are protective devices, the normal setting, test limits and frequency of testing. Valves affecting personnel safety will be tested annually and valves protecting only equipment will be tested biannually.

4. RUPTURE DISCS

The rupture discs in the MSRE are tabulated in Table 3. Unless frequent pressure fluctuations are observed which might affect the accuracy of the discs, all rupture discs will be changed after every two years of operation.

5. R. C. and D. T. C. CONTAINMENT VESSELS

The Reactor Cell and Drain Tank Cell were hydrostatically tested upon completion to 48 psig and pneumatically tested to 20 psig.

Approved by


R. W. J. Moran

11D-2
8/5/65

With equipment now installed, it is impossible to hydrostatically test the cells again. However, the cell leak rate (at a -2 psig pressure differential) is monitored continuously during operation, and the cells will be tested at 20 psig after each time they are opened. The vapor condensing system will be pneumatically tested along with the reactor and drain tank cells.

6. SECONDARY CONTAINMENT VESSELS

All small secondary containment vessels which are isolated from the main cells will be tested about every two years with a pneumatic test to 1.25 times the design pressure, see containment vessels, Table 4.

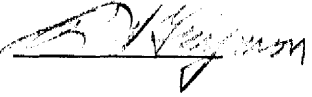Approved by 

11-D-3
8/5/65

Table 1

ROUTINE PRESSURE TEST OF EQUIPMENT

EQUIPMENT	SYSTEM	DESIGN		TEST AND INSPECTION		
		Press.	Temp.	Type	Press.	Freq.
Air Compressor 1,2,3	Inst. Air	100	100	Hydro	150	Biannual
Air Receiver 1,2,3	Inst. Air	100	100	Hydro	150	Biannual
Air Dryer, 1,2	Inst. Air	100	100	Hydro	150	Biannual
Diesel #5 Air Comp. & Tank	Electrical	250	100	Hydro	375	Biannual
Helium Trailer	Cover Gas	2400	80	Hydro	3600	5 years
Helium Cylinders, emergency	Cover Gas	2400	80	Hydro	3600	5 years
Helium Dryer	Cover Gas	400	70	Pneu.	500	Biannual
Helium O ₂ Remover	Cover Gas	1400	1000	Pneu.	700	Annual
He Storage	Cover Gas	500	80	Pneu.	310	Biannual
Oil Tank 1,2	Lube Oil	75	200	Pneu.	65	Biannual
Surge Tank	Water	50	120	Hydro	85	Biannual
Treated Water Cooler	Water	50	120	Hydro	85	Biannual
Feed Water Tank 1,2	Heat Removal	50	298	Pneu.	31	Biannual
Drain Tank Condenser 1,2	Heat Removal	50	298	Pneu.	31	Biannual
Steam Domes 1,2	Heat Removal	25	298	Pneu.	31	Biannual
N ₂ Cylinders	Inst. Air	2400	80	Hydro	3600	5 years

Approved by 50/7/11.11

11-D-4
8/5/65

TABLE 2 PRESSURE RELIEF VALVES TABULATION

P. R. V. Valve No.	Setting	Limits	Test	Frequency
<u>INST. AIR SYSTEM</u>				
9110	90	+ 3 psi		Annual
9120	90	+ 3 psi		Annual
Rec #1	90	+ 3		Annual
Rec #2	90	+ 3		Annual
9006 A	90	+ 3		Biannual
9006 B	90	+ 3		Biannual
9005-1	30	+ 2		Biannual
9002-1	40	+ 2		Biannual
9002-2	25	+ 2		Biannual
9001-1	30	+ 2		Biannual
9007-1	30	+ 2		Biannual
9007-2	40	+ 2		Biannual
9008-1	25	+ 2		Biannual
9009-1	40	+ 2		Biannual
9010-1	40	+ 2		Biannual
9010-2	25	+ 2		Biannual
9011-1	25	+ 2		Biannual
9011-2	25	+ 2		Biannual
9011-3	40	+ 2		Biannual
9011-4	25	+ 2		Biannual
<u>DIESEL #5 AIR SYSTEM</u>				
Rec	275	+ 8		Biannual
<u>COMPONENT AIR SYSTEM</u>				
CCP-1	12	+ 2		Annual
CCP-2	12	+ 2		Annual
CCP-3	10	+ 2		Annual

Approved by *[Signature]*

11-D-5
8/5/65

P. R. V. Valve No.	Setting	Limits	Test	Frequency
<u>COVER GAS SYSTEM</u>				
508	40	<u>± 2</u>		Biannual
<u>COOLING WATER SYSTEM</u>				
837	100	<u>± 3</u>		Biannual
841	100	<u>± 3</u>		Biannual
846	100	<u>± 3</u>		Biannual
847	100	<u>± 3</u>		Biannual

Approved by AKayman

11-D -6
8/5/65

TABLE 3 MSRE RUPTURE DISC TABULATION


Location	Rating	Op. Press	Inspection Change Freq.
<u>VENTILLATION SYSTEM</u>			
L 980-3"	20 psig	-2 psig	2 years
L 980-10"	20 psig	-2 psig	2 years
<u>COVER GAS SYSTEM</u>			
L 508	50	40	2 years
L 507	350	250	2 years
L 506	350	250	2 years
<u>COOLING WATER</u>			
L 845	18	10.5	1 year
L 844	18	12	1 year

Approved by _____


11-D-7
8/5/65

TABLE 4 CONTAINMENT TANKS

TANK	LOCATION	DESIGN		TYPE	TEST	
		PRESS	TEMP		PRESS	FREQ.
Cont. Enclos. 1	Sp. Eq. Room	40	80	Pneu.	50	Biannual
" " 2	Sp. Eq. Room	40	150	Pneu.	50	Biannual
" " 3	No. E. S. A.	40	80	Pneu.	50	Biannual
" " 4	No. E. S. A.	40	80	Pneu.	50	Biannual
" " 5	No. E. S. A.	40	80	Pneu.	50	Biannual
" " 6	No. E. S. A.	40	80	Pneu.	50	Biannual
V T-1	So. of Bldg.	40		Pneu.	20	Annually
V T-2	So. of Bldg.	40		Pneu.	20	Annually
Sampler Enricher	High Bay	40	80	Pneu.	50	Annually
Sampler Enricher V. Box	High Bay	40	80	Pneu.	50	Annually



Approved by

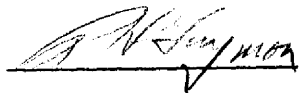


12-1
10/13/65

SECTION 12
ROUTINE OBSERVATIONS

The most important functions of the operating crew are to carry out the prescribed program in a logical manner and record adequate data.

The acquisition of data can be accomplished in a number of different ways; however, with an operation such as the MSRE, which is manned on all three shifts, it is necessary to standardize this as much as possible. The following describes the method to be used at the MSRE.



Approved by

[Signature]

12A-1
10/13/65

12A LOGS

1 CONTROL ROOM LOG BOOK

The control room log book is a journal in which the time and nature of all operations are recorded. This log provides a record of operations for evaluation of the performance of the reactor, for keeping operating personnel mutually informed, and particularly for providing each oncoming shift (and day supervision) with a record of what the previous shifts have done.

The log is normally kept by a control room technician; however, each member of the operating crew must be sure that a record of all significant operations which he performs or observes is adequately entered in the log. Each entry should begin with the time the operation took place, and should be initialed.

The log must be a complete record of all significant operations, but be as free as possible of unnecessary details. It is better to put too much in the log than to leave out details which may later prove to be significant. Operations personnel are responsible for adequately recording all activities that occur on each shift. This includes activities of non-operating personnel.

At the start of each shift, enter in the log the personnel assignments for the shift, and the reactor conditions at shift change. Enter the date and shift at the top of each page. This makes it convenient to find who worked a given shift and what work was in progress. Conclude the shift entries with a "status," which should include a summary of the reactor operating conditions for the previous 8 hours, a list of all important changes in operations, and sufficient information about operations in progress to enable the next shift to take over smoothly.

New log books are kept in the operations file cabinet. Since the page numbering continues from log to log, care should be taken that the proper new log book is selected. Completed logs are also filed in the operations office. A carbon copy is made for use by non-operating personnel and is filed in the operations office.

Approved by



12A-2
10/13/65

Xerox copies are provided for the coordinator and the department head.

The shift supervisor is responsible for reviewing the log at the end of his shift to be certain that all significant occurrences are adequately recorded.

1.1 Items which should be included in the log are:

Equipment started or stopped.

Valves opened or closed.

Switches or breakers opened or closed.

Procedures or parts of procedures started, worked on, or completed.

Changes in settings of controls or valves.

Major changes in settings of heater controllers.

Annunciations, and action taken.

Abnormal conditions or malfunctioning equipment found.

Purpose of a given series of operations, unless obvious or routine.

Observations, interpretations, and conclusions drawn from operating results.

Samples taken.

Significant maintenance and other non-operational jobs done.

1.2 Items which need not be recorded in this log are:

Those which are recorded elsewhere except for especially important items which may be repeated for emphasis.

Details of operations covered by a written procedure or check list. Any exception to the procedure should be noted as well as time references and results if of significance.

2 CONTROL ROOM AND BUILDING LOGS

All pertinent temperatures, flows, pressures, etc., not recorded elsewhere are recorded on the control room and building logs. When the computer is not in operation, it is necessary to manually record some items normally recorded by the computer. These extra items are on the control room log. Therefore, 2 control room log forms are provided. Since the building log does not change, only one

building log form is required.

12A-2A Control Room Log (Computer in Operation), 12A-2B
Control Room Log (Computer not in Operation), 12A-3 Building
Log.

Where possible the normal reading for each item is given at the head of each data column. The person initiating a new log should correct it to agree with the master log, located in "Master Forms" file drawer.

Each person taking a log must report any abnormal conditions to the shift supervisor promptly. In addition, he must be alert for signs of trouble or malfunctioning equipment as he makes the rounds of the area.

Completed log sheets are placed in data holder in the control room and are subsequently filed in the operations office by day personnel.

3 LEAK-DETECTOR LOG

Since the operation of the leak-detector system is somewhat independent of the rest of the reactor, operations done on this system are recorded in a separate log.

It is particularly important to note the status of any leak-hunting operations and all valves that are closed at the end of each shift.

4 THERMOCOUPLE TABULATION LOG (12A-4)

There are some 900 thermocouples and 700 temperature readout locations at the MSRE. Since the readout of any thermocouple (except for 120 on the coolant radiator) can be easily changed at the patch panel, a thermocouple tabulation log will be maintained. In the "Thermocouple to Instrument" log, the thermocouples are listed numerically along with a brief description of their locations in the system. Columns are provided to enter the "readout" location of each thermocouple. When the "readout" of any thermocouple is changed, this fact should be entered along with the date, time, and initial of the person making the entry.

The "Instrument to Thermocouple" log lists the "readout" instruments and "readout" points in numerical order along with the location of the instrument in the building. Columns are provided for indicating which thermocouple is attached to each point. When a change is made on the input to any instrument, this fact should be entered along with the date, time, and initial of the person making the entry. Thus it is possible to determine where any thermocouple was recorded at any time or what thermocouple was recorded on any instrument.

5 HEATER CONTROLLER SETTINGS LOG (12A-5)

The heater controller settings will be recorded periodically on the building log; however, a chronological history of the settings will be helpful to operations. A log is available at the heater control area with columns for entering date, time and controller setting. As these are strictly an operational guide, they may be discarded after use.

6 FLANGE LOG

A history of all reactor system flanges monitored by the leak detector system will be kept jointly by operations and maintenance. Pertinent information on closing of these flanges such as torque and leak rates will be kept in this log.

In the back of this log will be kept a list of any fittings which have been opened which require helium leak testing. This list will be in the form of a punch list requesting the leak checks of a particular fitting. These punch lists are accumulated and all leak tested by maintenance during shutdown.

7 SAMPLE LOGS


A record of all samples taken from all systems will be kept in the sample logs in the operations office. Entries will be made in these logs both when the sample is taken and when the analysis result is obtained. A sample number will be assigned according to the last previous record in the sample log. The sample log will also contain information on the allowable limits for analysis of desired (or undesirable) contents.

Approved by *P. J. Keyman*

12A-5
10/13/65

8 DIESEL LOG

This log is maintained in the switch room, and entries will be made for any operations involving the diesel generators.



Approved by *A. H. Geyman*

12A-2A
8/6/65

12A-2A
CONTROL ROOM LOG
(Computer in Operation)

CONSOLE
Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	RADIATOR DOOR POSITION		RADIATOR		By-Pass Duct Damper Position ZI-AD-2
		CUTLET	INLET	ΔP	ΔP Demand	
		ZI-OD-A	ZI-ID-A	PdIAD2A2	PdIAD2A1	

Init.	Time	REACTOR OUTLET		COMP. ION CHAMBER					
		Temperature	Temperature Demand	Ammeter		Range		Rng Seal Light	
		TI 100-	XTELNARC A2	#1	#2	#1	#2	#1	#2
		1200°F ± 50°	1200°F ± 50°F						

Date Started _____

Approved by B. J. Haymon

12A-2A
8/6/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Flux Demand	Regulating Rod Position	Servo Mode Light	Servo Flux Channel Selector	CONTROL ROD POSITION*		
						Total		
						#1	#2	#3
			25 - 75%		#1 or #2			

* Read coarse position indicator to nearest printed number below pointer. Add fine reading to this and record the sum.

Init.	Time	Load Scram Lights On	Safety Channel Lights On	FISSION CHAMBER #1		FISSION CHAMBER #2		Chamber Selected
				Position	Count Rate	Position	Count Rate	
		None	None		10 ⁴ CPS*		10 ⁴ CPS*	

* If at low power counts may be <10⁴ cps.

Date Started _____

Approved by *D. H. Johnson*

12A-2A
8/6/65

MAIN CONTROL BOARD

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	Containment Stack Flow		Stack Fan	Standby Stack Fan	Comp. Coolant	CCP ΔP	Cell Pressure	OT-2 Pressure
		FI	SI	On	Light	Pump On	PDIC 960A	PI-RCA	PIG-510A
		>60%		#1	On	#1 or #2	8 psi	-2 psig	7 psig

Init.	Time	OT-2 Level	Coolant Oil Pump	Prime Stand-by Oil Pump		Bypass Damper Position	Annulus Blowers	Radiator Blowers
		LI-OT2	On	COP	Time	%	On	On*
		>50	#1 or #2		<10 sec		#2 & #4	

* Depending upon operation one or both radiator blowers may be on or off.

Init.	Time	Stack Flow FI-AD-3A	RADIATOR TEMPERATURE		HELIUM FLOW	
			Outlet TI-AD3-8A	Inlet TI-AD1-1A	From CP FI-526C	To CP FIC-512A
				Ambient	>.04ℓ/m	.55 to .65ℓ/m

Date Started _____

Approved by *A. H. Johnson*

12A-2A
8/6/65

Record every 8 hours except as otherwise indicated.

Init.	Time	OIL FLOW TO CP		OCT-2 LIGHT (On or OFF)	Radiator Temperature Difference TdI-201-A
		Shield FI 754	Bearings FI 753		
		6 to 9 gpm	3 to 5 gpm	Off	

Init.	Time	Radiator Outlet Temperature TI-202 A2	COOLANT PUMP				CP Pressure PRC 528-A (Green)	
			Speed	Amps		Watts		
				Salt	No Salt	Salt		No Salt
		>1000°F	1750 rpm	52	19 amp	38	2 kw	5 psig

Init.	Time	CP Level LR 595C (Red)	CP Level Selector S-39	Radiator Power XpR-201	Coolant Flow FR-201 % Scale	CDT Pressure PR 511D (Green)	

Date Started _____

Approved by *A. H. Guyman*

12A-2A
8/6/65

Record every 8 hours except as otherwise indicated.

Init.	Time	CDI Weight WR-CDT-C1 (Red)*	Reactor Power RR-8100 (Watts)	REACTOR TEMPERATURE	
				Red Pen Outlet TR-100-A5	Green Pen Inlet TR-102-5C
		<8%		1200°F ± 50°	1200°F ± 50°

* If coolant drain tank is full, WR-CDT should read ~ 55%.

Init.	Time	FUEL PUMP				SPEED
		WATTS		AMPS		
		Salt	No Salt	Salt	No Salt	
		36	2 kw	49	19 amp	1200 ± 50 rpm

Date Started _____

Approved by A. Kaymon

12A-2A
8/6/65

Record every 8 hours except when otherwise indicated.

Init.	Time	FP Pressure PRC-522A (Green)	FP Level LR-593C (Red)	FP Level Selector S-36	FD-2 Steam Dome Level LIC-807A
		5 psig	56-65%	2 or 3	

Init.	Time	FD-2 Pressure PR-574B (Green)	FD-2 Weight WR-FD-2C (Red)*	OIL TO FP	
				BEARINGS FI-703A	SHIELD FI-704A
		5 psig	<8%	3-5/gpm	6-9/gpm

* If FDT #2 is full, WR-FD-2 should read ~ 82%.

Init.	Time	OCT #1 Light (On or Off)	HELIUM FLOW		FFT Pressure PR-576B (Green)	FFT Weight WR-FFT-C (Red)*
			To FP FI-516B	From FP FI-524B		
		Off	2.2 - 2.6 l/m	7.04 l/m	5 psig	70%

* If flush salt is being used, WR-FFT should read <8%.

Date Started _____

Approved by *R. D. Guyman*

12A-2A
8/6/65

Record every 8 hours except when otherwise indicated.

Init.	Time	FUEL OIL PUMP OP	OT-1 LEVEL LI-OT-1	OT-1 PRESSURE PI-513-A	PRIME STAND-BY OIL PUMP		HELIUM READERS PRESSURE PI-500-A
					POP #	Time Reqd.	
		#1 or #2	>50	7 psig		<10 sec	150 to 250 psig

Init.	Time	FD-1 STEAM DOME LEVEL LIC-806-A	FD-1 PRESSURE PR-572-3 (Green)	FD-1 WEIGHT WR-FDI-C (Red)*	FST PRESSURE PR-638	FST WEIGHT WR-FST	LOG POWER RR-8200 (Watts)
					5 psig	<8%	1 to 5 psig

* If FDI #1 is full, WR-FDI-1 should read 50-55%.

Init.	Time	TWP	OTP	IF	CCO	RCC	DCC	CCP-3	AG	S-53 Position
		On	On	On						
		1 or 2	1 or 2		1 & 2	1 & 2	#1	On	1 or 2	Oper. Comp

Date Started _____

Approved by *R. H. Young*

12A-2A
8/6/65

Observe Temperature Recorders every 4 hours starting at 0830 and record any abnormal temperatures.

Init.	Time	TR 3100	TR 3500		Record Unusual Temperatures
		>950 <1300	>950 <1300		

AUXILIARY CONTROL ROOM

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	OCT-1 Level LI-524-C	MCB ΔP PdI-556-A	OCT-2 Level LI-526-A	Filter ΔP PdI-927-B2	Waste Tank Level LI-WT-A
		<50%	<2 psi	<50%	<4" water	<135"

Date Started _____

Approved by *P. N. Heyman*

12A-2A
8/6/65

Record every 8 hours unless otherwise indicated:

Init.	Time	Hi-Bay Pressure PI-HB-A	VOLTMETERS			
			TVA	Bus 3	Bus 4	Bus 5
		0.1" to 0.3" H ₂ O	400-440	400-440	400-440	400-440

Init.	Time	S A F E T Y		
		Reactor Outlet Temperature		
		TI-100-A1	TI-100-A2	TI-100-A3
		1200°F ± 50°	1200°F ± 50°	1200°F ± 50°

Init.	Time	S A F E T Y				
		Radiator Outlet Temperature			Coolant Salt Flow	
		TI-202-A	TI-202-B	TI-202-C	FI-201-A	FI-201-B
		1200°F ± 50°	1200°F ± 50°	1200°F ± 50°	~ 80%	~ 80%

Date Started _____

Approved by *B. H. Johnson*

12A-2A
8/6/65

Record every 8 hours unless otherwise indicated:

Init.	Time	S A F E T Y			
		Fuel Pressure		OFT Level	
		PI-592	PI-589	LI-599-B	LI-600-B
		5 psig	5 psig	<10%	<10%

Init.	Time	WIDE RANGE COUNTING CHANNEL #1				
		Power	Log CR	Chamber Position	Oper-Calib Sw. Setting	PHS Sw. Setting
		RXI-NCC-1A3	RI-NCC-1A1	RI-NCC-1A4		
			10 ⁴ cps*		0.3	174

* If at low power, counts may be <10⁴ cps.

Init.	Time	WIDE RANGE COUNTING CHANNEL #2				
		Power	Log CR	Chamber Position	Oper-Calib Sw. Setting	PHS Sw. Setting
		RXI-NCC-2A3	RI-NCC-2A1	RI-NCC-2A4		
			10 ⁴ *		0.3	174

* If at low power, counts may be <10⁴ cps.

Date Started _____

Approved by *D. H. Lyman*

12A-2A
8/6/65

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	POWER SUPPLY			
		Upper		Lower	
		Volts	Amps	Volts	Amps
		31-33	~ 4	31-33	~ 7.5

Init.	Time	SAFETY CHANNELS			CLUTCH CURRENT ROD #1			
		#1 Flux RM-HSC-1A1	#2 Flux RM-NSC-2A1	#3 Flux RM-NSC-3A1	BC	CA	AB	Clutch Cur.
		%	%	%	50-60	50-60	50-60	~ 165

Init.	Time	CLUTCH CURRENT							PICOAMMETERS		
		Rod #2				Rod #3			Channel #1	Channel #2	
		BC	CA	AB	Clutch Cur.	BC	CA	AB	Clutch Cur.	RINLC 1A1	RINLC 2A1
		50-60	50-60	50-60	~175	50-60	50-60	50-60	~175		

Date Started _____

Approved by *P. V. Guyon*

12A-2A
8/6/65

Record every 8 hours starting at 0830 unless otherwise indicated.
Check and reset calibration of all Q-1916 instruments at
(0.25 to 0.35) mr/hr before reading.

Init.	Time	RM-596A	RM-596B	RM-596C	RM-500D	RM-557A	RM-557B
		<.5	<.5	<.5	<.5		

Init.	Time	RM-528C	RM-528B	RM-565B	RM-565C	Check Q-1916 Set Points	RMS1A, B, C Int Time (sec)
		<.5	<.5			10 - 20 mr/hr	

Init	Time	RMS1A			RMS1B			RMS1C		
		Range Sw (CPM)	Rdg. (CPM)	Alarm Point	Range Sw (CPM)	Rdg. (CPM)	Alarm Point	Range Sw (CPM)	Rdg. (CPM)	Alarm Point
		<1000	<800	*	<1000	<800	*	<1000	<800	*

*Alarm should be set at Reading X2 but should be >150 and <1000.

Date Started _____

Approved by *R. N. Haymon*

12A-2A
8/6/65

List Jumper inserted in Jumper Board at start of each shift and have Shift Supervisor approve list.

0800-1600 Shift		1600-2400 Shift		2400-0800 Shift	
Jumper	Circuit No.	Jumper	Circuit No.	Jumper	Circuit No.

List Red Lights which are on on Jumper Board

Light	Circuit No.	Light	Circuit No.	Light	Circuit No.

<u>Initial</u>			
<u>Time</u>			
<u>S. S. Approval</u>			
<u>Time</u>			

Date Started _____

Approved by R. H. Gaymon

12A-2A
8/6/65

Check the following at approximate time indicated.

	Normal	0930	1230	1730	2030	0130	0430
All Charts Inking							
Time All Charts							
MCR Ann. Lamp Check							
ACR Ann. Lamp Check							
Sampler Permissive Switch Record On or Off	Off						
All Computer Typewriters Printing Properly							
Record Computer Time							
Record Clock Time							
Initial							

Date Started _____

Approved by *W. J. Johnson*

12A-2A
8/6/65


TI-3200

Record once per shift.

Point	TE	Normal				Point	TE	Normal			
1	AD1-3					25	R-7A				
2	CC-1					26	R-10				
3	CP-B2A					27	R-34				
4	CP-5A					28	R-36A				
5	CPLE-A5					29	R-37A				
6	CPLE-A6					30	R-38A				
7	CR-123					31	R-39A				
8	FD1-17A					32	R-40A				
9	FD1-19A					33	R-41A				
10	FD1-20A					34	FP-1B				
11	FD2-17A					35	100-1A				
12	FD2-19A					36	100-2A				
13	FD2-20A					37	102-5A				
14	FF-100-2					38	103-6				
15	FF-101-2					39	103-B11				
16	FF-102-2					40	512-1				
17	FF-200-2					41	516-1				
18	FF-201-2					42	101-3A				
19	FFT-5A					43					
20	FP-2B					44					
21	FP-3B					45					
22	CP-9A					46					
23	FP-12A					47					
24	H-103					48					

Recorded by _____
Time _____

Date Started _____



Approved by *R. H. Gaymon*

12A-2B
10/7/65

Record every 2 hours starting at 0830 unless otherwise indicated.

Init.	Time	REACTOR OUTLET		COMP. ION CHAMBER							
		Temperature EI 100-	Temperature Demand XETINARC A2	Ammeter		Range		Rng Seal Light			
				#1	#2	#1	#2	#1	#2		
		1200° F ± 50° F	1200° F ± 50° F								
			xx								
			xx								
			xx								
			xx								
			xx								
			xx								
			xx								

Date Started _____

Approved by



12A-2B
10/7/65

MAIN CONTROL BOARD

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Containment Stack Flow FI SI	Stack Fan On	Standby Stack Fan Light	Comp. Coolant Pump On	CCP ΔP PDIC 960A	Cell Pressure PI-RCA	OT-2 Pressure PIC-510A
		>60%	#1	On	#1 or #2	8 psi	-2 psig	7 psig
			xx	xx	xx			
			xx	xx	xx			
			xx	xx	xx			

Init.	Time	OT-2 Level LI-OT2	Coolant Oil Pump On	Prime Standby Oil Pump COP	Bypass Damper Position	Annulus Blowers On	Radiator Blowers On	Coolant Stack Flow FIAD3A
		>50%	#1 or #2		%	#2 #4	*	
			xx			xx		
			xx			xx		
			xx			xx		

*Depending on operation, one or both radiator blowers may be on or off.

Date Started _____

Approved by *S. A. Guyman*

12A-2E
10/7/65

Record every 4 hours except as otherwise indicated.

Init.	Time	RADIATOR TEMPERATURE		HELIUM FLOW	
		OUTLET TI AD3-8A	INLET TI AD1-1A	From CP FI 526C	To CP FI 512A
			Ambient	>.04ℓ/m	.55 to .65ℓ/m

Init.	Time	OIL FLOW TO CP		OCT-2 LJGFB (On or Off)	Radiator Temperature Difference TdI-201-A
		Shield FI 754	Bearings FI 753		
		6 to 9 gpm	3 to 5 gpm	Off	
				xx	
				xx	
				xx	
				xx	
				xx	

Date Started _____

Approved by *D. K. Simon*

12A-2B
10/7/65

Record every 4 hours except as otherwise indicated.

Init.	Time	Radiator Outlet Temperature TI-202 A2	COOLANT PUMP				CP Pressure PRC 528-A (Green)	
			Speed	Amps		Watts		
				Salt	No Salt	Salt		No Salt
		>1000°F	1750 rpm	52	19 amp	38	2 kw	5 psig
			xx	xx	xx	xx	xx	xx
			xx	xx	xx	xx	xx	
			xx	xx	xx	xx	xx	xx
			xx	xx	xx	xx	xx	
			xx	xx	xx	xx	xx	xx

Init.	Time	CP Level IR 595C (Red)	CP Level Selector S-39	Radiator Power XpR-201	Coolant Flow FR-201	CDE Pressure PR 511D (Green)
		56 to 72%	2, 3, or 4		800 gpm	5 psig
						xx
						xx
						xx

Date Started _____

Approved by *D. H. Guyman*

12A-2B
10/7/65

Record every 4 hours except as otherwise indicated.

Init.	Time	CDT Weight WR-CDT-Cl (Red)*	Linear Power RR-8100 (Watts)	REACTOR TEMPERATURE	
				Red. Pen Outlet TR-100-A5	Green Pen Inlet TR-102-5C
		<8%		1200° F ± 50° F	1200° F ± 50° F
		XX			
		XX			
		XX			

*If coolant drain tank is full, WR-CDT-Cl should read ~ 55%.

Init.	Time	FUEL PUMP				
		WATTS		AMPS		SPEED
		Salt	No Salt	Salt	No Salt	
		36	2 kw	49	19 amp	1200 ± 50 rpm
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX

Date Started _____

Approved by *D.H. Guyton*

12A-2B
10/7/65

Record every 4 hours except when otherwise indicated.

Init.	Time	FP Pressure PRC 522A (Green)	FP Level LR-593C (Red)	FP Level Selector S-36	FD-2 Steam Dome Level LIC-807A
		5 psig	56 - 65%	2 or 3	
					xx
					xx
					xx

Init.	Time	FD-2 Pressure PR-574B (Green)	FD-2 Weight WR-FD-2C (Red)*	OIL TO FP	
				BEARINGS FI-703A	SHIELD FI-704A
		5 psig	8%	3-5/gpm	6-9/gpm
		xx	xx		
		xx	xx		
		xx	xx		

*If FDT No. 2 is full, WR-FD-2C should read ~ 82%.

Date Started _____

Approved by



12A-2B
10/7/65

Record every 4 hours except when otherwise indicated.

Init.	Time	OCT No. 1 LIGHT (On or Off)	HELIUM FLOW		FFT PRESSURE PR-576-B (Green)
			To FP FI-516-B	From FP FI-524-B	
		Off	2.2 - 2.6 l/m	>.04 l/m	5 psig
		XX			XX
		XX			
		XX			XX
		XX			
		XX			XX

Init.	Time	FFT Weight WR FFT-C (Red)*	Fuel Oil Pump On	OT-1 Level LI-OT-1	OT-1 Pressure PI-513-A	Helium Headers Pressure PI-500-A	Prime Standby Oil Pump FOP No.
		70%	#1 or #2	>50%	7 psig	150 to 250 psig	
		XX	XX				XX
							XX
		XX	XX				XX
							XX
		XX	XX				XX

*If flush salt is in the reactor, WR-FFT-C should be <8%.

Date Started _____

Approved by *D. H. Seymour*

12A-2B
10/7/65

Record every 4 hours except when otherwise indicated.

Init.	Time	FD-1 Steam Dome Level LIC-806-A	FD-1 Pressure PR-572-B (Green)	FD-1 Weight WR-FDL-C (Red)*	FST Pressure PR-608	FST Weight WR-FST	Log Power RR-8200 (Watts)
			5 psig	<8%	1 to 5 psig	<5%	
		XX	XX	XX	XX	XX	
		XX	XX	XX	XX	XX	
		XX	XX	XX	XX	XX	

Date Started _____

Approved by *R. N. Gaymon*

12A-2B
10/7/65

Record which are on every 8 hours starting at 0830:

Init.	Time	TWP On	CWP On	TIF On	CCC	RCC	DCC	CCP-3	AC	S-53 Position
		1 or 2	1 or 2		1 & 2	1 & 2	#1	On	1 or 2	Oper. Comp

Observe Temperature Recorders every 2 hours starting at 0830 and record any abnormal temperatures.

Init.	Time	TR 3100	TR 3500	TR 3600	Record unusual temperatures
		>950 <1300	>950 <1300		
		XX	XX	XX	
		XX	XX	XX	
		XX	XX	XX	
		XX	XX	XX	
		XX	XX	XX	
		XX	XX	XX	
		XX	XX	XX	

Date Started _____

Approved by *[Signature]*

12A-2B
10/7/65

AUXILIARY CONTROL ROOM

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	OCT-1 Level LI-524-C	MCB ΔP PdI-556-A	OCT-2 Level LI-526-A	Filter ΔP PdI-927-B2	Waste Tank Level LI-WT-A
		<50%	<2 psi	<50%	<4" water	<135" H ₂ O
		XX	XX	XX	XX	XX
					XX	XX
		XX	XX	XX	XX	XX
					XX	XX
		XX	XX	XX	XX	XX

Record every 4 hours unless otherwise indicated.

Init.	Time	Hi-Bay Pressure PI-HB-A	VOLTMETERS			
			TVA	Bus 3	Bus 4	Bus 5
		0.1 to 0.3 H ₂ O	>420	>420	>420	>420
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX

Date Started _____

Approved by *P. H. Simpson*

12A-2B
10/7/65

Record the following every 4 hours unless otherwise indicated.

Init.	Time	SAFETY		
		Reactor Outlet Temperature		
		TI-100-A1	TI-100-A2	TI-100-A3
		1200 ± 50°F	1200 ± 50°F	1200 ± 50°F
		XX	XX	XX
		XX	XX	XX
		XX	XX	XX

Record every 4 hours unless otherwise indicated:

Init.	Time	SAFETY				
		Radiator Outlet Temperature			Coolant Salt Flow	
		TI-202-A	TI-202-B	TI-202-C	FI-201-A	FI-201-B
		1200 ± 50°F	1200 ± 50°F	1200 ± 50°F	~80%	~80%
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX

Date Started _____

Approved by 

12A-2B
10/7/65

Record every 4 hours unless otherwise indicated.

Init.	Time	SAFETY			
		Fuel Pressure		OFT Level	
		PI-592	PI-589	LI-599-B	LI-600-B
		5 psig	5 psig	<10%	<10%
		xx	xx	xx	xx
		xx	xx	xx	xx
		xx	xx	xx	xx

Date Started _____

Approved by



12A-2B
10/7/65

Record every 8 hours starting at 0830 unless otherwise indicated.

		WIDE RANGE COUNTING CHANNEL #1				
Init.	Time	Power RXI-NCC-1A3	Log CR RI-NCC-1A1	Chamber Position RI-NCC-1A4	Oper-Calib Sw. Setting	PHS Sw. Setting
			10 ⁴ cps*		0.3	174

*If at low power, counts may be <10⁴ cps.

Record every 8 hours starting at 0830 unless otherwise indicated.

		WIDE RANGE COUNTING CHANNEL #2				
Init.	Time	Power RXI-NCC-2A3	Log CR RI-NCC-2A1	Chamber Position RI-NCC-2A4	Oper-Calib Sw. Setting	PHS Sw. Setting
			10 ⁴ cps*		0.3	174

*If at low power, counts may be <10⁴ cps.

Record every 8 hours starting at 0830 unless otherwise indicated.

		POWER SUPPLY			
Init.	Time	Upper		Lower	
		Volts	Amps	Volts	Amps
		31-33	~ 4	31-33	~ 7.5

Date Started _____

Approved by *D. R. Hymon*

12A-2E
10/7/65

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	SAFETY CHANNELS			CLUTCH CURRENT ROD #1			
		#1 Flux RM-NSC-1A1	#2 Flux RM-NSC-2A1	#3 Flux RM-NSC-3A1	BC	CA	AB	Clutch Cur.
		%	%	%	47-53 ma	47-53 ma	47-53 ma	135-165 ma

Init.	Time	CLUTCH CURRENT							
		Rod #2				Rod #3			
		BC	CA	AB	Clutch Cur.	BC	CA	AB	Clutch Cur.
		47-53 ma	47-53 ma	47-53 ma	135-165 ma	47-53 ma	47-53 ma	47-53 ma	135-165 ma

Record every 4 hours unless otherwise indicated.

Init.	Time	PICOAMMETERS	
		Channel #1 RINLC-1A1	Channel #2 RINLC-2A1

Date Started _____

Approved by DPN Jay 211 PM

12A-2B
10/7/65

Every 4 hours list any nuclear modules which have the normal and the latch light on. Then push reset button and note that latch light clears.

Init.	Time	0800-1600		1600-2400		2400-0800	
		Normal + Latch Lt. On	Cleared When Reset	Normal + Latch Lt. On	Cleared When Reset	Normal + Latch Lt. On	Cleared When Reset

Date Started _____

Approved by *[Signature]*

12A-2B
10/7/65

Record every 4 hours starting at 0830 unless otherwise indicated. Push the neutralize button and zero the instruments before reading.

Init.	Time	RM-827A		RM-827B		RM-827C		RM-827 Alarm Set Point		
		Range	Rdg	Range	Rdg	Range	Rdg	A	B	C
		3×10^{-12}		3×10^{-12}		3×10^{-12}		20 mr	20 mr	20 mr
								xx	xx	xx
								xx	xx	xx
								xx	xx	xx

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	RM 6010		RM 6000*					
		Range	Rdg	Pos. 1		Pos. 2		Pos. 3	
				Range	Rdg	Range	Rdg	Range	Rdg

*Read each on lowest possible range. Switch to zero and change to next position. Do not go below 3×10^{-12} .

Init.	Time	RM 6000*					
		Pos. 4		Pos. 5		Pos. 6	
		Range	Rdg	Range	Rdg	Range	Rdg

*Read each on lowest possible range. Switch to zero and change to next position. Do not go below 3×10^{-12} .

Date Started _____

Approved by *R. W. Seymour*

12A-2B
10/7/65

Record every 4 hours starting at 0830 unless otherwise indicated.
Check and reset calibration of all Q-1916 instruments at (0.25 to 0.35) mr/hr before reading.

Init.	Time	RM-596A	RM-596B	RM-596C	RM-500D	RM-557A	RM-557B
		<.5	<.5	<.5	<.5		

Init.	Time	RM-528C	RM-528B	RM-565B	RM-565C	Check all Q 1916 Set Points	RMS1A, B, C Int. Time (sec)
		<.5	<.5			10 - 20 mr/hr	21
						xx	
						xx	
						xx	

Record every 8 hours.

Init.	Time	RMS1A			RMS1B			RMS1C		
		Range Sw (CPM)	Rdg. (CPM)	Alarm Point	Range Sw (CPM)	Rdg. (CPM)	Alarm Point	Range Sw (CPM)	Rdg. (CPM)	Alarm Point
		<1000	<800	*	<1000	<800	*	<1000	<800	*

*Alarm should be set at Reading X2 but should be >150 and <1000.

Date Started _____

Approved by RN Seymour

12A-2B
10/7/65

Check the following at approximate time indicated.

	Normal	0930	1230	1730	2030	0130	0430	
All Charts Inking								
Time All Charts								
MCR Ann. Lamp Check								
AGR Ann. Lamp Check								
Sampler Permissive Switch Record On or Off CP/FP	Off/Off							

Date Started _____

Approved by *R. N. Seymour*

12A-2B
10/7/65

MISCELLANEOUS
TEMPERATURES ON TI-3200

Record once per shift.

POINT	TE	8-4	4-12	12-8	POINT	TE	8-4	4-12	12-8
1	ADL-3				25	R-7A			
2	CC-1				26	R-10			
3	CP-B2A				27	R-34			
4	CP-5A				28	R-36A			
5	CPLE-A5				29	R-37A			
6	CPLE-A6				30	R-38A			
7	CR-123				31	R-39A			
8	FD1-17A				32	R-40A			
9	FD1-19A				33	R-41A			
10	FD1-20A				34				
11	FD2-17A				35	100-1A			
12	FD2-19A				36	100-2A			
13	FD2-20A				37	102-5A			
14	FF-100-2				38	103-6			
15	FF-101-2				39	103-B11			
16	FF-102-2				40	512-1			
17	FF-200-2				41	516-1			
18	FF-201-2				42				
19	FFT-5A				43				
20	FP-2B				44				
21	FP-3B				45				
22	CP-9A				46				
23	FP-12A				47				
24	H-103				48				

8-4 Initial _____ Time _____

4-12 Initial _____ Time _____

12-8 Initial _____ Time _____

Date Started _____

Approved by *D. H. Johnson*

12A-2B
10/7/65

CELL TEMPERATURES

Record once per shift.

Read out on spare point on TI-3200 or on a 0 - 200°F recorder.

TE No.	P. P. No.	TEMPERATURE*			TE No.	P. P. No.	TEMPERATURE*		
		8-4	4-12	12-8			8-4	4-12	12-8
RC-1	81				RC-9	89			
RC-2	82				RC-10	90			
RC-3	83				DTC-1	208			
RC-4	84				DTC-2	209			
RC-5	85				DTC-3	210			
RC-6	86				DTC-4	211			
RC-7	87				DTC-5	212			
RC-8	88				DTC-6	213			

*These should all be below 150°F. Any variations (>5°F) should be reported to the shift supervisor.

8-4 Initial _____ Time _____

4-12 Initial _____ Time _____

12-8 Initial _____ Time _____

Date Started _____

Approved by R. N. Layman

12A-2B
10/7/65

WATER AND OIL TEMPERATURES

Record the following every 8 hours.

TE No.	PP No.	Special Recorder	Readout Point	TEMPERATURES*		
				8-4	4-12	12-8
826-1	887					
831-1	888					
833-1	889					
837-1	890					
841-1	891					
845-1	892					
846-1	893					
851-1	894					
707-1A	875					
757-1A	881					

*Any Temperature variation greater than 5° F should be reported to the shift supervisor.

8-4 Initial _____ Time _____

4-12 Initial _____ Time _____

12-8 Initial _____ Time _____

Date Started _____

Approved by *R. K. Kingman*

12A-2B
10/7/65

ΔT - FUEL INLET TO LOWER HEAD AND SUPPORT FLANGE ANNULUS

These temperatures will be read either from a special recorder or may be plugged into an indicator depending on estimated time of computer shutdown.

FUEL INLET TEMPERATURE

RDT	TE NO.	PP NO.	BIAS	0800 - 1600		1600 - 2400		0000 - 0800	
				IND. TEMP	ACTUAL TEMP*	IND. TEMP	ACTUAL TEMP*	IND. TEMP	ACTUAL TEMP*
	102-								
	50	385							

ΔT AND LOWER HEAD AND SUPPORT FLANGE ANNULUS TEMPERATURES


RDT	TE NO.	PP NO.	BIAS	0800 - 1600			1600 - 2400			0000 - 0800		
				IND. TEMP	ACTUAL TEMP*	ΔT **	IND. TEMP	ACTUAL TEMP*	ΔT **	IND. TEMP	ACTUAL TEMP*	ΔT **
	R-2	2										
	R-26A	39										
	R-27A	41										
	R-28A	43										
	R-29A	45										
	R-30A	47										
	R-31A	49										
	R-49	20										
	R-50	28										
	R-51	36										

*To get actual temperature, subtract the bias from the indicated temperature.

**To get ΔT , subtract actual fuel inlet temperature from actual temperatures in this table. If ΔT is more than ___ °F, notify the shift supervisor.

8-4 Initial _____ Time _____
 4-12 Initial _____ Time _____
 12-8 Initial _____ Time _____
 Date Started _____

Approved for Use

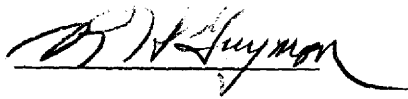

12A-3
10/5/65

12A-3 BUILDING LOG

SERVICE TUNNEL

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Personnel Monitors		FI-753	FI-754	OT-2 Water Temperature		Flow FI-823-A
		Monitron RE 7017	CAM RE 7005			Out TI 822-1	In TI 823-1	
		<3 mr/hr	<1000 cpm	3-5 gpm	6-9 gpm	~ 85°F	~ 80°F	7.5 gpm
						xx	xx	xx
						xx	xx	xx
						xx	xx	xx

Init.	Time	Coolant Oil Pump Pressure*		Filter AP PI-752-C Minus PI-753-C	OT-1 Water Temperature		Flow FI 821-A
		#1 PI 751A	#2 PI 752A		Out TI 820-1	In TI 821-1	
		**	**	ΔP <5 psi	~ 85°F	~ 80°F	7.5 gpm
		xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx

* Call control room and aid in priming standby oil pumps.

** Discharge pressure from the pumps which are on should be >60 psig.

Date Started _____

Approved by



12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Fuel Oil Pump Pressure*		Filter ΔP PI-702-C Minus PI-703-C	FI-703	FI-704
		#1 PI 701-A	#2 PI 702-A			
		**	**	<5 psi	3-5 gpm	6-9 gpm
		XX	XX	XX		
				XX		
		XX	XX	XX		
				XX		
		XX	XX	XX		

* Call control room and aid in priming standby oil pumps.

** Discharge pressure from the pumps which are on should be >60 psig.

SERVICE AREA

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	F. Oil Supply Tank		C. Oil Supply Tank		Process Monitor*	
		Reading LIOT1A3	Set Point	Reading LIOT2A3	Set Point	RM OT-1	RM OT-2
		>50%	Reading -2%	>50%	Reading -2%	<.5 mr/hr	<.5 mr/hr
		XX	XX	XX	XX		
		XX	XX	XX	XX		
		XX	XX	XX	XX		

* Set calibration at 0.25 to 0.35 mr/hr before reading.

Date Started _____

Approved by *R. W. Guyman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Lube Oil Pump Current			
		FOP-1	FOP-2	COP-1	COP-2
		PUMP RUNNING 7-9 amps			
		xx	xx	xx	xx
		xx	xx	xx	xx
		xx	xx	xx	xx

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	Instrument Air Station #9			Instrument Air Station #4		Cont. Air PdI
		PI 9010-3	PI 9010-2	PI 9010-1	PI 9004-2	PI 9004-1	ST-D
		20	30	70-80	20	70-80	>0
		xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx

Date Started _____

Approved by B. N. Heymon

12A-3
10/5/65

HORN HALL

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	PERSONNEL MONITOR			AIR CONDITTONER COMPRESSOR 3 Gages Within Limits	BUILDING EVACUATION			
		Monitron RE 7016	Q-2091 RE 7029 Scale	Reading		Horn Pressure RA 7023-A2		Cylinder and Supply Valves Tagged	
					High	Low	Open	Closed	
		<3 mr/hr	Lowest Possible	<3/4 scale	As Marked*	>1500	~ 100	N or S	N or S
						xx	xx	xx	xx
						xx	xx	xx	xx
						xx	xx	xx	xx

* If running and out of limits, turn off and punch list.

TRANSMITTER ROOM

Init.	Time	PERSONNEL MONITOR		LEAK DETECTOR PRESSURE	
		Monitron RE 7015	CAM RE 7004	PI 407	Other PI If Isolated
		<3 mr/hr	<1000 cpm	90-110 psig	90-110 psig
				xx	xx
				xx	xx
				xx	xx

Date Started _____

Approved by *R. H. H. mon*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

NOTE: Record all readings to the nearest 0.01 in. Hg. Tare setting need only to be within 0.1 in. of Hg.

Init.	Time	FD-1				FD-2				FFT			
		Pos 1		Pos 2		Pos 3		Pos 4		Pos 5		Pos 6	
		Tare	Live	Tare	Live	Tare	Live	Tare	Live	Tare	Live	Tare	Live
		80.3		80.4		83.5		80.7		43.9		44.0	
		xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx

Init.	Time	FST				CDT			
		Pos 1		Pos 2		Pos 3		Pos 4	
		Tare	Live	Tare	Live	Tare	Live	Tare	Live
		48.82		49.31		71.1		76.2	
		xx	xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx	xx

Date Started _____

Approved by B. H. Lyman

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	OFT BUBBLER FLOWS			OFT LEVEL		PI-589-A2	PI-501A
		FI-599	FI-589	FI-600	LI-599B	LI-600B		
		20-30 psig	20-30 psig	20-30 psig	<10%	<10%		35 psig
					xx	xx	xx	xx
					xx	xx	xx	xx
					xx	xx	xx	xx

Init.	Time	FP BUBBLER FLOWS			FP LEVEL	
		FI-596	FI-592	FI-593-A	LI-593C	LI-596B
		23-27 psig	23-27 psig	23-27 psig	5.6-6.5 in.	5.6-6.5 in.
					xx	xx
					xx	xx
					xx	xx

Date Started _____

Approved by *Allyman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	CP BUBBLER FLOWS			CP LEVEL		
		FI-598	FI-594	FI-595	LI-595C	LI-598C	Float
		20-30 psig	20-30 psig	20-30 psig	5.6 to 7.2 in.	5.6 to 7.2 in.	5.6 to 7.2 in.
					XX	XX	XX
					XX	XX	XX
					XX	XX	XX

Record HIC Settings every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	REACTOR NECK AIR FLOW*			FP HIC 903A	FI-903 SCALE x 10 = CFM	Control Rod 915 A
		Sampler 961 A	Outside 962 A	Inside 963 A			
		0	0	0		***	**

* Set HIC's at minimum to give maximum air flow.

** Set HIC at Maximum to get maximum air flow

*** 20 scfm if salt is in FP. Zero CFM if salt is not in FP.

Date Started _____

Approved by *R. A. Chapman*

12A-3
10/5/65

Record HIC Settings every 8 hours starting at 0830 unless otherwise indicated.

		FREEZE VALVES								
		103			106			105		
		919-A2		Set Point	910-A2		Set Point	909-A2		Set Point
Init.	Time	919 A1	Temp.		910 A1	Temp.		909-A1	Temp.	
		xx			xx			xx		
		xx			xx			xx		

		FREEZE VALVES						
		104		204		110		
		908 A1	908 A2	906 A1	906 A2		969 A1	969 A2
Init.	Time				Temp.	Set Point		
		xx	xx	xx			xx	xx
		xx	xx	xx			xx	xx

		FREEZE VALVES					
		112		109		108	
		924 A1	924 A2	913 A1	913 A2	919 A1	919 A2
Init.	Time						
		xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx

Date Started _____

Approved by *A. H. Guyton*

12A-3
10/5/65

Record HIC Settings every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	FREEZE VALVES						
		107		206			111	
		911 A1	911 A2	907 A2		907 A1	929 A1	929 A2
Temp.	Set Point							
		XX	XX			XX	XX	XX
		XX	XX			XX	XX	XX

Init.	Time	Power Supply for Drain Tank Level Probe	REACTOR CELL SUMP		DRAIN TANK CELL SUMP	
			N ₂ Flow FCRC-C	Level LI RC-C	N ₂ Flow FC DTC-A	Level LI DTC-A
		40-45v	0.75 scfh	0	0.75 scfh	0

Init.	Time	FUEL PROCESSING CELL SUMP		SPARE CELL SUMP		STORAGE CELL SUMP	
		FC-FSC-A	LI-FSC*	FC-TCA	LI-FSC*	FC-SCA	LI-FSC*
		0.4 scfh	0	0.4 scfh	0	0.4 scfh	0

* Read manometer when sump of interest only is valved into manometer.

Date Started _____

Approved by B. Keyman

12A-3
10/5/65

Record every 8 hours unless otherwise specified.

Init.	Time	WASTE TANK FC-WI-A	WASTE TANK CELL SUMP		CONTAINMENT AIR	
			FC-WIC-A	LI-FSC*	TR to 840 ΔP PdI 937A	SESA to TR ΔP PdI 938A
		0.4 scfh	0.4 scfh	0	>0	>0

* Read manometer when sump of interest only is valved into manometer.

Record every 4 hours unless otherwise specified.

Init.	Time	Reactor Cell ΔP PdI-RC-E		
		Dial Readings*		ΔP
		Right	Left	(Left + Right)

* Record dial readings at point where needles touch liquid surface. Right side is connected to cell, left side is connected to reference volume.

Date Started _____

Approved by *P. A. Seymour*

12A-3
10/5/65

Record every 8 hours unless otherwise specified.

Init.	Time	ECI Power Supplies XEM 1001-					
		-A1	-E1	-C1	-D1	-E1	-F1
		60-65	60-65	60-65	60-65	60-65	60-65

NESA

Record every 4 hours unless otherwise specified.

Init.	Time	CONTROL ROD DRIVE Fan Motor Lights*		
		#1	#2	#3
		Out	Out	Out

*If any light is on, contact the Shift Supervisor immediately. A light on indicates that the fuse is blown in the fan-motor circuit.

Date Started _____

Approved by *R. H. Guyman*

12A-3
10/5/65

NESA

TE HEADER TEST*

Record every 8 hours unless otherwise indicated.

Init.	Time	JBL-1	JBL-2	JBL-3	JB 10-1	JB 10-2	JB 10-3	JB2-1	JB2-2	JB2-3	JB2-4

* All pressures on headers should be >5 psig. If any header is below 5 psig repressurize to 50 psig. Header valves should normally be closed.

Blow down Line 519 once per day on 8:00 to 4:00 shift.

Init.	Time	PI-519		CONTAINMENT		
		Before	After	PI-RC-B	PI-RC-F	PI-RC-G
		~ 2 psig	~ 2 psig	~ 4" Hg Vac.		
		xx	xx			
		xx	xx			

Record every 8 hours unless otherwise indicated.

Init.	Time	INSTRUMENT AIR STATION #2			
		PI 9002-4	PI 9002-5	PI 9002-2	PI 9002-1
		25	20	30	70-80
		xx	xx	xx	xx
		xx	xx	xx	xx

Date Started _____

Approved by *R. H. Geymon*

12A-3
10/5/65

Record every 8 hours unless otherwise indicated.

Init.	Time	INST. AIR STA. #8		INST. AIR STA. #13
		PI 9008-2	PI 9008-1	PI 9013-1
		20	70-80	75-80
		XX	XX	XX
		XX	XX	XX

Init.	Time	BERYLLIUM DETECTION SYSTEM			
		#1 Blower		#2 Blower	
		On-Off	Pressure	Off-On	Pressure
		On*	1.8" Hg Vac	Off*	1.8" Hg Vac
		XX	XX	XX	XX
		XX	XX	XX	XX

* #2 Blower is standby for #1. If #1 is off #2 should be on.

Date Started _____

Approved by *P. H. Johnson*

12A-3
10/5/65

HEATER CONTROL PANEL

Record all values on one log of each shift, preferably the first log.

8:00 - 4:00 Initial _____ Time Started _____

4:00 - 12:00 Initial _____ Time Started _____

12:00 - 8:00 Initial _____ Time Started _____

HEATER CURRENT																	
CR-1			CR-2			CR-3			CR-4			CR-5			CR-6		
1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3

HEATER CURRENT														
CR-7			CR-8			H-200-13			H-201-12			H-202-2		
1	2	3	1	2	3	1	2	3	1	2	3	1	2	3

GROUND DETECTOR VOLTAGE												
CR-1			CR-4			CR-5			CR-6			
1	2	3	1	2	3	1	2	3	1	2	3	

Date Started _____

Approved by *P. H. Wymon*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT							
H-200-14		H-200-15		H-201-10		H-201-11	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
H-201-13		H-202-1		H-204-2		H-205-1	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWER STAT SETTING AND CURRENT							
FV-204-3		FT-201A-1		FT-201A-3		FT-201A-2	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
FT-201A-4		FT-201B-1		FT-201B-3		FT-201B-2	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

Date Started _____

Approved by *A. Kuyman*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT							
FT-201B-4		H-203-2		FV-204-1A		LE-CP-1	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
LE-CP-2		FV-204-1		FV-204-2		FV-206-1	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
FV-206-1A		H-204-1	H-206-1	CDT-1	H-203-1	CDT-2	
Setting	Amps	Amps	Amps	Amps	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT									
CDT-3		CP-1		CP-2		H-200-1		H-200-11	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

Date Started _____

Approved by *R. W. Grayson*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT									
H-200-12		H-201-1		H-201-2		H-201-9		H-100-1	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT											
RCH-1			RCH-2			RCH-3			RCH-4		
1	2	3	1	2	3	1	2	3	1	2	3

GROUND DETECTOR VOLTAGE								
R-1			R-2			R-3		
1	2	3	1	2	3	1	2	3

HEATERS POWERSTAT SETTING AND CURRENT											
H-100-2		H-101-2		H-101-3		RCH-5			RCH-6		
Setting	Amps	Setting	Amps	Setting	Amps	1	2	3	1	2	3

Date Started _____

Approved by *D. H. Guyman*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT																	
RCH-7			H-102-2			R-1			R-2			R-3			HX-1		
1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3

HEATERS POWERSTAT SETTING AND CURRENT													
HX-2			HX-3			FP-1			FP-2			RAN-1	
1	2	3	1	2	3	1	2	3	1	2	3	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT									
RAN-2		H-200-16		H-201-14		H-102-1			
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps		

HEATERS POWERSTAT SETTING AND CURRENT							
H-102-4		H-102-5		H-103		FV-103	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

Date Started _____

Approved by *R. H. Guyman*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT											
H-104-1		FV-104-1A		FV-105-1A		FFT-1			FFT-2		
Setting	Amps	Setting	Amps	Setting	Amps	1	2	3	1	2	3

HEATERS POWERSTAT SETTING AND CURRENT													
FD 1-1			FD 1-2			FD 2-1			FD 2-2			FV-104-1	
1	2	3	1	2	3	1	2	3	1	2	3	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
FV-104-3		H-104-5		H-104-6		FV-105-1	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
FV-105-3		H-105-1		H-105-4		FV-106-1	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

Date Started _____

Approved by *R. H. Seymour*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT							
FV-106-3		H-106-1		H-106-4		FV-106-1A	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
	H-104-2	H-104-3		H-104-4	H-105-2	H-105-3	H-104-7
	Amps	Amps		Amps	Amps	Amps	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
	H-106-2	H-106-3	H-110-2	H-110-3	H-107-1		
Amps	Amps	Amps	Amps	Amps	Setting	Amps	

HEATERS POWERSTAT SETTING AND CURRENT							
H-107-2		H-107-3		FV-107-1			
Setting	Amps	Setting	Amps	Setting	Amps		

Date Started _____

Approved by *R. H. Guymon*

12A-3
10/5/65

HEATERS POWERSTAT SETTING AND CURRENT							
FV-107-3		H-108-1		H-108-2		H-108-3	
Setting	Amps	Setting	Amps	Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
FV-108-1				FV-108-3		H-109-1	
Setting	Amps			Setting	Amps	Setting	Amps

HEATERS POWERSTAT SETTING AND CURRENT							
H-109-2		H-109-3		FV-109-1			
Setting	Amps	Setting	Amps	Setting	Amps		

HEATERS POWERSTAT SETTING AND CURRENT			
FV-109-3		H-110-1	
Setting	Amps	Setting	Amps

Date Started _____

Approved by *A. K. Seymour*

12A-3
10/5/65

HEATER CONTROL PANEL

8:00 - 4:00 Initial _____ Time Finished _____
 4:00 - 12:00 Initial _____ Time Finished _____
 12:00 - 8:00 Initial _____ Time Finished _____

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	NITROGEN FLOW To Scanners scfh					Purge Pressure	SCANNER GAINS					Scanner Selected*
		A	B	C	D	E		A	B	C	D	E	
		.15 to .25					5-10 psig	50	50	50	100	100	A
		xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx	xx

*In order to get best results from scanner in control room, leave "A" as the scanner selected at scanner panel.

Record every 8 hours starting at 0830 unless otherwise indicated.

		RECORD MAXIMUM AND MINIMUM SCANNER TEMPERATURES									
Init.	Time	A		B		C		D		E	
		High	Low	High	Low	High	Low	High	Low	High	Low

Date Started _____

Approved by *P. H. Layman*

12A-3
10/5/65

SCANNER SPAN -- Obtain from Instrument Mechanic (Daily)

Init.	Time	Scanner	Gain	°F/in.
		A		
		B		
		C		
		D		
		E		

Record every 8 hours unless otherwise indicated.

Init.	Time	TEMPERATURE RECORDERS		
		TR-3300	TR-3400	Record Unusual Temperatures
		*	>950°F <1300°F	

* On TR-3300, points 1, 2, and 7 through 17 should read 400°F to 600°F.
The remainder of the points should read between 1000°F and 1200°F.

Date Started _____

Approved by *J. H. Guyman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	PERSONNEL MONITORS	
		Monitor RE-7014	CAM RE-7003
		<3 mr/hr	<1000 cpm

Check blowers to induction regulators every 4 hours unless otherwise noted.

Init.	Time	TIC-1	TIC-2	TIA-1	TIA-2	TIB-1	G5		G5	T2	
							TIB-2	BB-1			
		ON	ON	ON	ON	ON	ON	ON	ON	ON	
		XX	XX	XX	XX	XX	XX	XX	XX	XX	
		XX	XX	XX	XX	XX	XX	XX	XX	XX	
		XX	XX	XX	XX	XX	XX	XX	XX	XX	

Date Started _____

Approved by *B. P. Haysmon*

12A-3
10/5/65

48v DC CONTROL PANEL

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	MOTOR GENERATORS #2 and #3									Battery Room Fan	
		Gv. Lts		CURRENT			VOLTAGE			M.G.		
		#2	#3	Batt.	#2	#3	Load	Gen #2	Batt.	Gen #3		On
		Dim	Dim	>0				52v		52v	*2 or #3	On
												xx
												xx

N. WALL 840' LEVEL

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	Scanner N ₂ Header Pressure*		Header In Service	Header Pressure PI-9012
		West	East		
		>250 psig	>250 psig	W or E	50 psig

Init.	Time	Emergency N ₂ Header Pressure*		Header In Service	Emergency N ₂ Controller Set Point PIC 9006-1 A & B	Emergency Air Flow FI-9006
		West PI 9006-1	East PI 9006-2			
		>500	>500	W or E	65 psig	

* Standby headers should be at 1500 psig or greater.

Date Started _____

Approved by *B. A. Guymon*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	MG-1			Gnd Det Lights On-Dim-Off	MG-4 Transfer Switch Red-TVA Green-MG-4	MG-4 Blower On (Light)
		Voltmeter		Amps DC			
		Gen.	Bat.				
		260v			Dim	Green	On

Init.	Time	MG-4				TVA Bus Voltage 1 2 3	Gd. Det Lts Sect. 5 Dim-Bat-Out		
		Volts AC	Amps		Cycles		1	2	3
			L-1	L-2					
		120 ± 2			60	450 to 480	Dim	Dim	Dim

Date Started _____

Approved by *W. H. Hymon*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

BUILDING EVACUATION			
Horn Pressure RA 7023A3		Cylinder and Supply Valves	
High	Low	Tagged Open	Closed
>1500	~ 100	N or S	N or S
XX	XX	XX	XX
XX	XX	XX	XX
XX	XX	XX	XX

Record every 8 hours unless otherwise specified.

Init.	Time	Blow Down AC #3 (Valve East of South Door)	DG #5 Air Tank Pressure	Pressure #3 Receiver	Inst. Air Moisture Content (%)*	Inst. Air Flow FI-9000
			>200 psig			15-30%

* Turn switch to "Adj. 100" and adjust indicator to read 100%. Then switch to "Operate" and record reading.

Date Started _____

Approved by *[Signature]*

12A-3
10/5/65

Record every 8 hours unless otherwise specified.

Init.	Time	AC #3		HEADER PI-9000-1	DG #4	
		Cooler 881-3B	Head 881-3A		Load Limit	Speed Droop
		<110°F	<115°F	80 psig	5	0
					XX	XX
					XX	XX

Init.	Time	PRESSURES		DG #3	
		#1 Receiver PI-R1	#2 Receiver PI-R2	Load Limit	Speed Droop
		~ 80 psig	~ 80 psig	5	0
				XX	XX
				XX	XX

Init.	Time	AIR COMPRESSORS OUTLET WATER TEMPERATURE			
		AC-2		AC-1	
		Cooler 881-2B	Head 881-2A	Cooler 881-1B	Head 881-1A
		<110°F	<115°F	<110°F	<115°F

Date Started _____

Approved by *P. W. Layman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

		He TREATING STATION TEMPERATURES					
		Station #1			Station #2		
Init.	Time	Preheater TIC-PH-1	TIC-O ₂ -R1	TS-O ₂ -R1-2	Preheater TIC-PH-2	TIC-O ₂ -R-2	TS-O ₂ -R2-2
		800°F	* 1200°F	<1000°F	800°F	* 1200°F	<1000°F

* Standby unit should be held at 800°F.

		Emergency He Pressure		He SUPPLY HEADERS			He Flow
Init.	Time	PI-502A	PI-502B	Trailer PI-500-F	Treating Station PI-500-H	Low Pressure PI-500-M	FIC-500-J
		>500 psig	>500 psig	>500 psig	250	35	<10 l/m

Date Started _____

Approved by *B. K. Guyman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	MOISTURE ANALYZER			OXYGEN ANALYZER				Line Monitored	He STATION Ambient Temp. at Moisture Analyzer
		Flow	Range	Moist. (ppm)	Flow	Span Adj.	Rdg.	O ₂ Cont. PPM		
		100 cc/min		<10 ppm	100 cc/min				548 or 549	°F

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	TREATED WATER COOLER °F			TW FILTER PRESSURE	
		TW In TI 829	TW Out TI 826	CTW Out TI 854	In PI 829	Out
					ΔP <20 psig	

Date Started _____

Approved by *R. H. Guyman*

12A-3
10/5/65

Record every 4 hours unless otherwise specified.

Init.	Time	PERSONNEL MONITOR Q-2091 RE-7030		TW Cooler	DTC Cooler	RC Cooler #1	RC Cooler #2
		Scale	Reading	FI-851-C	FI-836-A	FI-838-A	FI-840-A
		Lowest Possible	<3/4 Scale	260 gpm	>50 gpm	> 50 gpm	>50 gpm

Init.	Time	Thermal Shield FI-844-A	LI-FWT-1A	LI-FWT-2A	PI-906-B2
		50 gpm			9 psig

Date Started _____

Approved by *R. A. Gungor*

12A-3
10/5/65

Record every 4 hours unless otherwise specified.

Init.	Time	C.T. TEMPERATURE TIC 858		LI-CST-2	LI-ST-B	#2 FI-812	#1 FI-810
		Set Point	Reading				
		79°F	85°F	50-150 gal		40 gpm	40 gpm

Init.	Time	LI-CST-1	Fuel Pump FI-830	Coolant Pump FI-832	C.C.P. Oil FI-875	CP Cooler FI-873	PI-829-A or PI-835-A
		150-190 gal	4.5 gpm	5 gpm	10 gpm	20 gpm	>60 psig
							xx
							xx
							xx
							xx
							xx

Date Started _____

Approved by *A. H. Keyman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Thermal Shield Slides PI-859	Cell Annulus	PI-844-D
		17% (3.6 gpm)	In.	<13 psig

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	INSTRUMENT AIR Station #5		
		PI-9005-1	PI-9005-2	PI-9005-3
		70-80	60	20

Init.	Time	INSTRUMENT AIR Station #10					
		PI 9011-1	PI 9011-2	PI 9011-6	PI 9011-5	PI 9011-3	PI 9011-4
		70-80	60	20	30	30	20
		XX	XX	XX	XX	XX	XX
		XX	XX	XX	XX	XX	XX

Date Started _____

Approved by *B. N. Guyan*

12A-3
10/5/65

COOLING TOWER

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	PI-851-A	PI-853-A	POWER TO FREEZE PROTECTION LIGHTS*		
				White On	Green On Off	Red
		35 psig	35 psig			
		xx	xx			
		xx	xx			
		xx	xx			

* Record these every 4 hours November through March.


VENT HOUSE

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	PI-950-A	PI-VH-A
		>0	>0
		xx	xx
		xx	xx
		xx	xx

Date Started _____

Approved by



12A-3
10/5/65

VENT HOUSE

Record every 4 hours unless otherwise specified.

Init.	Time*	PERSONNEL MONITOR Q-2091 RE-7031		Tower Water to Charcoal Bed FI-893	Process Water to Charcoal Bed FI-895	Wet Test Meter FQI-569-A*
		Scale	Reading			
		Lowest Possible	<3/4 Scale			

* Time to be recorded is the time that FQI-569-A is read.

Init.	Time	FQI-569 Water Level	FI-569
		At Pointer	

Date Started _____

Approved by *A. Haymon*

12A-3
10/5/65

Record every 8 hours starting at 0830 unless otherwise indicated.

Init.	Time	Calibrate O ₂ Analyzer*	OXYGEN ANALYZER			
			Analyzer Flow	Pressure	Scale	O ₂ Content
			50-250 cc/min		0-10%	<5%
		xx				
		xx				

* Analyzer should be calibrated per Procedure 3H, Step 6.2.

CHARCOAL BED TEMPERATURES: All should be between _____ °F and _____ °F.
Record daily on 12-8 shift.

THERMOCOUPLE	TEMPERATURE	THERMOCOUPLE	TEMPERATURE
TE-CB-1A-1		TE-CB-2B-1	
TE-CB-1A-2		TE-CB-2B-2	
TE-CB-1A-3		TE-CB-2B-3	
TE-CB-1B-1		TE-AC-B1-1	
TE-CB-1B-2		TE-AC-B2-1	
TE-CB-1B-3		TE-CBW-3	
TE-CB-2A-1		TE-CBW-1	
TE-CB-2A-2		TE-CBW-2	
TE-CB-2A-3			

Date Started _____

Approved by *B. H. Symon*

12A-3
10 5 65

BERYLLIUM MONITOR

Record every 4 hours unless otherwise indicated.

Init.	Time	Amperage	Voltage Scale Selector	High Voltage	Spark**	RECORDER	
						Beryllium Level (Sparking)	Elect. Zero (No Spark)
		~ 3 amps*	Volts	800v-1000v	Yes	<85%	%

*When sparking.

**If monitor is operating on "continuous" the spark should be continuous.
If operation is "intermittent" listen through one complete cycle for unusual noises.

STACK PANEL

Record every 8 hours unless otherwise indicated.

Init.	Time		PI-927A	PI-927C	PdI F ₁ A ₁	PdI-F ₁ A ₂
					xx	xx
					xx	xx

Date Started _____

Approved by *R. H. Guyman*

12A-3
10/5/65

Record every 8 hours unless otherwise indicated.

Init.	Time	PdI-F ₂ A ₁	PdI-F ₂ A ₂	PdI-F ₃ A ₁	PdI-F ₃ A ₂	PI-927-B1	Small Beryllium Blower
							On
		XX	XX	XX	XX		
		XX	XX	XX	XX		

ABOVE SPECIAL EQUIPMENT ROOM

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	East CCC Water Flow FI-864-A	CONTAINMENT AIR PRESSURE		PERSONNEL MONITOR Q-2091 RE-7027	
			Coolant Cell PdI-933	Special Equipment Room PI SER B	Scale	Reading
		20 gpm	>0	>0	Lowest Possible	<3/4 Scale
		XX	XX	XX		
		XX	XX	XX		
		XX	XX	XX		

Date Started _____

Approved by *R. W. Seymour*

12A-3
10/5/65

ABOVE VAPOR SUPPRESSION SYSTEM

Init.	Time	PI-VT-1	Annunciators
		0 psig	None

SOUTH SIDE OF OFFICE BUILDING

Init.	Time	BUILDING EVACUATION			
		HORN PRESSURE RA-7023-A4		CYLINDER AND SUPPLY VALVES	
		High	Low	Tagged	Closed
		>1500	~ 100	E or W	E or W
		xx	xx	xx	xx
		xx	xx	xx	xx
		xx	xx	xx	xx

Date Started _____

Approved by *A. W. Johnson*

12A-3
10/5/65

HOT CHANGE ROOM AND HIGH BAY

Init.	Time	CHANGE ROOM Q-2091 RE-7028	
		Scale	Reading
		Lowest Possible	<3/4 Scale

BERYLLIUM MONITOR

Check following every 4 hours.

Init.	Time	Reload ³ Light	Re-Zero ¹	Indicator Readings
		Off		

¹Re-zero instrument every 4 hours (about) by following the procedure:

- A) Turn black knob to CAL. position and zero with potentiometer marked CAL.
- B) Depress zero check and adjust meter to zero with potentiometer marked zero.
- C) Reset black knob to integrate position.

²If Spark light is lit, wait and re-zero.

³If reload light is on or machine is not operating properly, turn off and punch list for day shift to repair.

Date Started _____

Approved by *A. H. Simpson*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	Nuc Pen Recycle Pump Press PI-848	PERSONNEL MONITORS			PERSONNEL MONITORS		
			HB-S CAM RE-7001	HB-S Monitron RE-7012	West CCC Water Flow FI-862-A	HB-W Monitron RE-7013	EBW CAM RE-7000	H.P. CAM RE-7006
		>5 psig	<1000 cpm	<3 mr/hr	20 gpm	<3 mr/hr	<1000 cpm	<1000 cpm
					xx			
					xx			
					xx			

HIGH BAY

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	CONTAINMENT AIR PRESSURE						
		Fuel Processing Cell FI-940	Spare Cell PdI-941A	Fuel Processing Cell PdI-940A	Storage Cell PdI-942A	Decon. Cell PdI-943A	Maint. Practice Cell PdI-945A	Waste Cell PdI-946A
			>0	>0	>0	>0	>0	>0
		xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx	xx

Date Started _____

Approved by *A. H. Guyman*

12A-3
10/5/65

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	BUILDING EVACUATION			
		Horn Pressure RA-7023A1		Cylinder and Supply Valves	
		High	Low	Tagged Open	Closed
		>1500	~ 100	E or W	E or W

852 LEVEL

Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	PERSONNEL MONITORS	
		(Office Hall) CAM RE-7002	(Control Room) Monitron RE-7011
		<1000 cpm	<3 mr/hr

Date Started _____

Approved by *A. W. Guyman*

12A-3
10/5/65

CONTROL ROOM

Record every 8 hours starting at 0830 unless otherwise indicated.


Init.	Time	Instrument Air Station 1		Instrument Air Station #6			
		PI-9001-1	PI-9001-2	PI-9007-1	PI-9007-4	PI-9007-5	PI-9007-2
		70-80	20	70-80	20	30	60
		xx	xx	xx	xx	xx	xx
		xx	xx	xx	xx	xx	xx

852 LEVEL


Record every 4 hours starting at 0830 unless otherwise indicated.

Init.	Time	PERSONNEL MONITOR (N. of HB) Q-2091 RE-7026	
		Scale	Reading
		Lowest Possible	<3/4 Scale

Date Started _____



Approved by

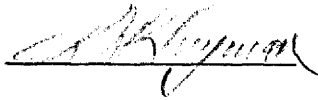

12B-1
10/13/65

12B CHECK LISTS

Check lists are provided for detailed operations which are repeated often. When properly completed, these serve as data sheets and are placed with other logs and completed data in the holder in the control room. These are subsequently filed by day personnel in the operations office. Available check lists are listed below:

4A to 4I	Auxiliary Systems Startup Check Lists
5A to 5K	Reactor Startup
6A to 6H	Sampling Check Lists
8A	Neutron Level Detector Check List
8B	Process Monitor's Check List
8C	Personnel Monitor's Check List
8D	Safety Circuits Check List
9A to 9N	Unusual Operating Conditions
10	Reactor Shutdown
11	Shutdown Operations
12A-2A	Control Room Log
12A-2B	Control Room Log
12A-3	Building Log
12B-1.1	Shift Supervisor's Check List
12B-1.2	Assistant Shift Supervisor's Check List
12B-2.1	12-8 Weekly Check List
12B-2.2	8-4 Weekly Check List
12B-2.3	4-12 Weekly Check List
12B-3	Operations Supplies Check List
12B-4	Salt Inventory

The check lists are filed in procedures file in the operations file. Before using these, they should be corrected to agree with the master copy, which is also kept in the operations office.

Approved by *J. W. [Signature]*

12B-2
10/13/65

TABLE 12B 1.1
SHIFT SUPERVISOR'S CHECK LIST

The following should be done each shift unless otherwise indicated:

	<u>0000 - 0800</u>	<u>0800 - 1600</u>	<u>1600 - 2400</u>
1. Read console log.	_____	_____	_____
2. Review building log, control room log and computer typed logs.	_____	_____	_____
3. Review scanner photos.	_____	_____	_____
4. Review auxiliary control room for bypassed alarms, etc.	_____	_____	_____
5. Review TI 3200 temperatures.	_____	xx	xx
6. Review console log summary.	_____	_____	_____

Initial when all items are complete. _____

If the computer is out of operation, see Table 12B 1.1 Addendum 1.

Date Started _____

Approved by [Signature]

12B-3
10/13/65

TABLE 12B 1.1 ADDENDUM 1
SHIFT SUPERVISOR'S CHECK LIST

The following items are to be done whenever the reactor is in operation but the computer is not. These are "must" items and should be performed each shift unless otherwise indicated.

	<u>0000 - 0800</u>	<u>0800 - 1600</u>	<u>1600 - 0000</u>
1. Calculate a reactivity balance (This need not be done if the reactor is subcritical.).	_____	_____	_____
2. Calculate a heat balance if the reactor power is greater than 1 MW.	<u>xx</u>	<u>xx</u>	_____
3. If any changes in power are made, check that a reactivity balance and heat balance (if >1 MW) are calculated before and after the power change.	_____	_____	_____
4. Review the temperatures of the reactor cell, drain tank cell, TW return lines and oil return lines. These are recorded on the last few pages of the control room log.	_____	_____	_____
Initial when all items are complete.	_____	_____	_____

Date Started _____

Approved by *R. V. [Signature]*

12B-4
10/13/65

TABLE 12B 1.2
ASSISTANT SHIFT SUPERVISOR'S CHECK LIST

The following should be done each shift.

	<u>0000 - 0800</u>	<u>0800 - 1600</u>	<u>1600 - 2400</u>
1. Check out work requests for day shift maintenance.	_____	_____	_____
2. Review all punch list items.	_____	_____	_____
3. Read console log.	_____	_____	_____
4. Isolate salt sample from FP (Check list 6A-3). This will be done weekly if flush salt is circulating.	_____	_____	_____
5. Isolate a cooling tower water sample according to check list 6C, make entry in sample log, analyze for items listed in Table 6-1 and make additions if out of limits. If not possible to sample on designated shift punch list for following shift. Cooling tower water (CTW).	_____	_____	_____
6. Tour entire building.	_____	_____	_____
7. Check out completed work requests.	_____	_____	_____
8. Check that all required samples are taken.	_____	_____	_____
9. Read console log.	_____	_____	_____
10. Review weekly check list.	_____	_____	_____
Initial when complete.	_____	_____	_____

Date Started _____

Approved by *J. W. Johnson*12B-5
10/13/65

12B 2.1

12-8 SHIFT WEEKLY CHECK LIST

Perform the following each week (If possible these should be done on Sunday or Monday unless otherwise indicated) on 12-8 shift.

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 1. Blow down instrument air filters: | | |
| Service area, Stations No. 9 and 4; | _____ | |
| Transmitter room, Stations No. 2 and 7; | _____ | |
| Blower House, Stations No. 5 and 10; | _____ | |
| High Bay, South wall of change room, Station No. 8; | _____ | |
| Behind ACP in Main Control room, Stations No. 1 and 6. | _____ | _____ |

2. Check that traps are working on entrainment separators.

Sight Glass Level

AC No. 1	_____	_____	
AC No. 2	_____	_____	
AC No. 3	_____	_____	_____

Should H₂O level appear in any sight glass, the level should be recorded, reported to the shift supervisor, and the entrainment separator should be blown down by opening the drain valve upstream of the condensate trap. The entrainment separator should then be checked each two hours and blow down as necessary.

3. Check that air compressor receiver tank traps are working by opening the drain valve upstream of each trap and recording the volume of H₂O drained from each tank. Should the volume be in excess of about 300 ml, notify the shift supervisor, determine the rate at which the H₂O is collecting in the receiver tank and blow down as necessary.

Approved by R. W. [Signature]

12B-6
10/13/65

3 (continued)

	<u>Vol.</u>	<u>Init.</u>	<u>Date/Time</u>
Receiver Tank No. 1	_____	_____	
Receiver Tank No. 2	_____	_____	
Receiver Tank No. 3	_____	_____	_____

4. Check that all emergency lights operate 1st week of each month.

<u>No.</u>	<u>Location</u>		
13	840 ft. level and ESA	_____	
3	High bay area	_____	
3	Control room	_____	
5	852 ft level, offices and hall	_____	
1	Service tunnel	_____	
1	Vent house	_____	
1	Switch house	_____	
1	Diesel house	_____	_____

These emergency lights can be operated by opening holding coil at right of lighting panel H on the North end of the 840-ft level.

5. Record the following timers.

	<u>Reading</u>		
(Max. = 4000 hr) CCP-1 (Switch House)	_____		
(Max. = 4000 hr) CCP-2 (Switch House)	_____		
CCP-3	_____		
EP (Switch House)	_____		
CP (Switch House)	_____		
FOP-1 (Switch House)	_____		
COP-1 (Switch House)	_____		
FOP-2 (Service tunnel) (zero = 3314 hr)	_____	_____	_____
COP-2 (Service tunnel) (zero = 5218 hr)	_____	_____	_____
AC 1 (Diesel House) (zero = 4790 hr)	_____	_____	_____
AC 2 (Diesel House) (zero = 5308 hr)	_____	_____	_____

6. Record all TC's not monitored. Plug portable instrument into each patch panel point not

Approved by [Signature]

12B-7
10/13/65

6 (continued)

Init. Date/Time

filled except scanners D and E patch panel
No. 505 to 624. Data sheets and master in
"Master Forms" drawer in operations office.

- 7. Check that thermocouples TE-200AS-BIB and
TE-201AS-BIB are between 500°F and 700°F.
Adjust heaters (if necessary) H-200-16 and
H-201-14 respectively.

JP No. 936 TE-200AS-BIB _____ °F

JP No. 940 TE-201AS-BIB _____ °F

- 8. Check that battery room fan is operating
properly.

- 9. Check that there is essentially no water leaking
from the back flow preventers vents.

BFP 809-1 _____

BFP 819 _____

- 10. Check the ventilation air inlet house for steam
leaks and sticking louvers. Check the weighted
damper action by operating the attached rope.

- 11. Isolate and analyze the following water samples
semi-weekly. Use sample check list 6C, making
entry in sample log, analyze for items listed
in Table 6-1. If out of limits, make additions
as necessary on Saturday and Wednesday of each
week. Sample:

Treated Water System (TW)

Process Water System (PW)

Nuclear Penetration (NPW)

- 12. A number of samples need to be taken on a weekly
basis, and submitted to the proper lab for
analysis. Take these samples per the check list
in parenthesis and make entry in sample log.

Approved by [Signature]

12B-8
10/13/65

12 (continued)

	<u>Init.</u>	<u>Date/Time</u>
Fuel pump (6A-3)*	_____	_____
Coolant pump (6B-2)	_____	_____
Treated water, loop (6C)	_____	_____
Treated water, nuclear penetration (6C)	_____	_____
Cooling tower water, loop (6C)	_____	_____
Cell air (6D)	_____	_____
Coolant lube oil (6E)	_____	_____
Fuel lube oil (6E)	_____	_____

*When flush salt is in the pump bowl.

Approved by


*W. Layman*12B-9
10/13/65

12B 2.2

8-4 SHIFT WEEKLY CHECK LIST

	<u>Init.</u>	<u>Date/Time</u>
Perform the following (If possible these should be done on Sunday or Monday unless otherwise indicated.).		
1. Change caustic in O ₂ analyzer.	_____	_____
2. Check level of Diesel oil storage tank.	_____	_____
3. Check that "Day Tank" levels are normal for all three diesels.	_____	_____
4. Check or clean cooling tower basin.	_____	_____
5. Parallel DG No. 3 with TVA and load.	_____	_____
This is to be done during the weekly check of diesels on the first week of the month.		
6. Parallel DG No. 4 with TVA and load.	_____	_____
This is to be done during the weekly check of diesel on the second week of the month.		
7. Load DG No. 5.	_____	_____
This is to be done during the weekly check of diesel on the third week of the month.		
8. Check that voltmeter for DT level probes (on TB-8) is between 40 and 60 volts.	_____	_____

Approved by

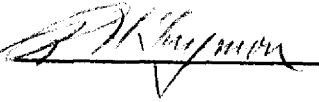

12B-11
10/13/65

	<u>Init.</u>	<u>Date/Time</u>
(e) Most of the areas are equipped with a clock. Set each clock to agree with the control room time.	_____	_____
3. Areas inspected for housekeeping and safety.		
(a) Control room and data room	_____	
(b) Offices and HP room	_____	
(c) Change Rooms	_____	
(d) High Bay 852	_____	
(e) Transmitter room and area	_____	
(f) Service tunnel and area	_____	
(g) Heater control area	_____	
(h) Nitrogen bottle rack area	_____	
(i) Switch room	_____	
(j) Diesel House	_____	
(k) Blower House	_____	
(l) Water Room	_____	
(m) Vent house and area	_____	
(n) Exterior	_____	_____
4. Check that cutie pies and victoreens are located in the following areas:		
Control room	_____	_____
HP office	_____	_____
(Cutie Pie only) Guard Shack	_____	_____
5. Check that there is a flashlight for emergency use in MCR.	_____	_____
6. Items noted requiring attention have either been corrected or punch listed.	_____	_____
7. Each Monday, switch the units which are operating to standby and put the standby unit in operation.	_____	_____

Approved by _____

12B-13
10/13/65

12B-3

OPERATIONS SUPPLIES CHECK LIST

(To be taken weekly by day shift technicians)

Work order number to be used for supplies is A-50865-95.

- | | <u>Init.</u> | <u>Date/Time</u> |
|--|--------------|------------------|
| 1. Check for adequate supply of Polaroid film and reorder when down to 50 packs. (ASA 3000 type 47 from Chem. Stores.) | _____ | _____ |
| 2. Check supply of gases. | | |
| <u>Helium</u> | | |
| 2.1 Bottle - keep minimum of 10 (Order from Mr. Simpson - phone 3-6476.) | _____ | _____ |
| 2.2 Trailer - reorder when pressure reaches 500 psig. (Mr. Easter - phone 3-6674.) | _____ | _____ |
| 2.3 Nitrogen - keep minimum of 20 bottles. (Mr. Simpson - phone 3-6476.) | _____ | _____ |
| 3. Check operations supply cabinets (electrical area 840') for the following items and reorder if necessary. | | |
| 3.1 Rubber gloves. | | |
| 3.2 Sample bottles. | | |
| 3.3 Rubber coat and apron. | | |
| 3.4 Plastic bags, large and small. | | |
| 3.5 Operations tags. | | |

Approved by [Signature]

12B-14
10/13/65

Init. Date/Time

4. Check the hot change house for the following items and order if necessary.

- 4.1 Plastic bags - large.
- 4.2 Plastic bags - small.
- 4.3 Cleaning gauze.
- 4.4 Clean filter masks (minimum of 10)
(Bldg. 3550).
- 4.5 Caps and coveralls.
- 4.6 Tape.
- 4.7 Shoe covers.
- 4.8 Soap and towels.
- 4.9 Rubber gloves.
- 4.10 Cotton gloves.
- 4.11 Cleaning rags.

5. Check for supplies in the HP emergency cabinet (MCR) for items listed on the inventory card.

6. Check in operations office for following items and order as necessary.

- 6.1 Adequate supply of check lists and operating procedures - especially ones used often.
- 6.2 Control room and building logs 12A-2A, 12A-2B.
- 6.3 Console log books. (Order from S. B. Newman Printing Co., P. O. Box 2029, Knoxville.)

Approved by S. R. Higgins

12B-15
10/13/65

	<u>Init.</u>	<u>Date/Time</u>
6.4 Thermocouple log sheets (forms UNC 6676 UNC 6677).	_____	_____
6.5 MSRE data sheets and punch lists (forms UNC 5928, UNC 5929, UNC 5879).	_____	_____
6.6 Sample analysis request forms (UNC 1910).	_____	_____
6.7 Radiation work permit (UNC 2779).	_____	_____
7. Check for adequate supply (one month) of water treatment chemicals stored in the diesel house.	_____	_____
7.1 NAICO 360 (balls).	_____	_____
7.2 NAICO 215 (balls).	_____	_____
7.3 Potassium nitrite (KNO_2).	_____	_____
7.4 Potassium tetraborate ($K_2B_4O_7$).	_____	_____
8. Check for adequate supply of 25% KOH (stored behind O_2 analyzer in diesel house). Order from Laing's Lab., Building 4500-SM, Rm. S-156, phone - 3-1511.	_____	_____

Approved by *[Signature]*

12B-16
10/13/65

TABLE 12B-4 SALT INVENTORY AND TRANSFER DATA SHEET

Before transfer or drain, check that level probe voltage is 40 to 60 volts (On TB-8).

F D T		Pos. #1		Pos. #2		Calc. Wt.	WR-FD1	Procedure & Step No.	Date & Time	Init.
		Tare	Live	Tare	Live					
		80.3	--	80.4	--					
1	Start									
	Finish									
	Transferred									

F D T		Pos. #3		Pos. #4		Calc. Wt.	WR-FD2	Procedure & Step No.	Date & Time	Init.
		Tare	Live	Tare	Live					
		83.5	--	80.7	--					
2	Start									
	Finish									
	Transferred									

F F T		Pos. #5		Pos. #6		Calc. Wt.	WR-FFT	Procedure & Step No.	Date & Time	Init.
		Tare	Live	Tare	Live					
		43.9	--	44.0	--					
	Start									
	Finish									
	Transferred									

F S T		Pos. #1		Pos. #2		Calc. Wt.	WR-FST	Procedure & Step No.	Date & Time	Init.
		Tare	Live	Tare	Live					
		48.8	--	49.3	--					
	Start									
	Finish									
	Transferred									

C D T		Pos. #3		Pos. #4		Calc. Wt.	WR-CDT	Procedure & Step No.	Date & Time	Init.
		Tare	Live	Tare	Live					
		71.1	--	76.2	--					
	Start									
	Finish									
	Transferred									

This form is to be used for all transfers, fills, and drains. The tares should be set per master copy of building log before each reading. Assuming that the tares have been set, the weight is calculated as follows: $Wt. = (x + y - 12.26) \times F$ where x & y are live manometer readings. $F = 78.0$ for FD-1, FD-2, FFT, & FST. $F = 58.3$ for CDT. (Tare factors are 38.3 & 19.6 respectively.)
TX-3846 (11-65)

Approved by



12C-1
10/13/65

12C RECORDERS AND INDICATORS

Numerous recording and indicating instruments are used throughout the plant. In general, indicators are used where needed as guides to operation and where only periodic records are necessary. Recorders are used where a continuous record of the variable is required or when a trend would be helpful to operating personnel. In order that the recorder charts are of maximum value, proper functioning of the instrument must be assured. This necessitates periodic inspection to assure that the instrument is running, chart paper is installed properly and is tracking, and that the pen is marking (or points printing). It is, of course, highly important that the instrument never runs out of chart paper without immediate replacement.

Since no timing devices are installed, the time should be carefully marked on all operating charts at least twice per shift. This should be at the start and near the middle of the shift. When operating conditions are changed or disturbances occur, the time and probable reason for the disturbance or change should be noted.

The 12-8 shift will routinely remove charts from all operating recorders each day at approximately 0700 (exception - cams). If a special experiment is in progress, it may be desirable to remove them at different intervals. All charts removed on a given date are filed together in a pigeonhole file in Building 7503. Charts are held in this file for three weeks after removal from the recorders. Then they are placed in boxes and sent to Laboratory Records for storage in Building 4500. Each chart file box is given an identification number and can be checked out through Laboratory Records at any time for study of the contents. A file index is kept so that the location of the chart from any instrument covering any period of time can be determined. When special experiments are being run, the person in charge of the experiment may have sections of chart removed at any time if this will facilitate analysis of the experiment. However, these sections of chart should be filed in the same manner as other charts.

Approved by



12C-2
10/13/65

One person will be placed in charge of the chart filing system.

It is his duty to do the following:

1. Each day check all newly removed charts to see that they are properly marked with recorder number, time and date of installation and removal.
2. Twenty-one days after removal from recorder, place charts in a chart file box.
3. When a file box is full, transmit to Laboratory Records for storage. Record the dates covered by the charts. Laboratory Records will record the identification number of the file box in the Chart File Index.

Referring to Charts.

Recent charts can be found in the pigeonhole file under the date of removal. When a chart is removed, a slip telling who borrowed what must be placed in the pigeon hole. Charts should be replaced as soon as possible.

Charts not filed in the pigeonholes should be obtained from the Analysis Group.

Details of Recorder and Indicator Operations are as follows:

1. Avoid parallax when reading.
2. Record pen reading rather than pointer on recorders.
(Exception - beryllium monitor in vent house.)
3. Mark charts where pen is inking.
4. Push reset buttons once per shift.
5. When a chart is removed, mark it with the recorder number, time, and date of removal. If the chart covers some particular experiment or test, record this information also.
6. When installing a new chart, mark it with the recorder number, time, and date of installation.
7. If a chart is cut in two, mark both edges with the time, date, and recorder number.

Approved by

J. H. Taylor

12D-1
10/13/65

12D COMPUTER

The normal, permanent output of the computer is in the form of typewritten sheets from each of the four typewriters and full, or partly full, reels of magnetic tape. During special experiments, graphs may be produced on the X-Y plotter as part of the output. In general, all of this material will be permanently stored at the reactor site with special arrangements as required.

1 TYPED OUTPUT

The preprinted log sheets used in Typer 2 must be replaced once each shift using the detailed procedure in the Reactor Operators' Computer Manual. The completed sheets from the other typers may be removed at the convenience of the operators, depending on the volume of paper generated. It is the responsibility of the operators to insure that each sheet contains a calendar date to identify the data. All typer sheets will be placed in the box for completed data forms. Day personnel will file and subsequently bind the sheets in chronological order by typer number and run number for permanent storage.

2 MAGNETIC TAPES

Magnetic tapes will be removed from the drives, as required, according to the procedure in the computer manual. The identification and removal of magnetic tapes should be recorded in the control room log book as a backup for other records. The operators are responsible for adequate identification of all magnetic tapes which they remove. In general, all magnetic tapes will be stored in the tape cabinet in the computer room; full tapes will be filed chronologically in the top of the cabinet, and blank tapes will be stored in the bottom. Groups of partially filled tapes will be consolidated periodically on single tapes and the partial tapes returned to blank-type storage. Special arrangements will be made if the storage capacity of the tape cabinet is exceeded.

Approved by



12D-2
10/13/65

3 GRAPHS

Graphs of reactor parameters may be made at will by reactor operators or other personnel. Any graphs that are pertinent to the reactor operation or experimental program will be stored at the reactor site with other run data. The original graphs may be stored as such or they may become the property of individual experiments. If original graphs are to be permanently removed, properly identified copies must be made for the reactor files.

12E TAGS AND SIGNS

It is the policy of all personnel at the MSRE to honor all tags and signs and assume that they are valid until definitely proven otherwise. When it is determined that tags or signs no longer apply, they should be removed. Removing them often requires the permission of the person who installed them.

1 TAGS

There are only 3 types of official tags in use at the MSRE. Others should be used only in emergency and should be replaced by an official tag as soon as possible. Tags should be installed by operations personnel only.

1.1 Operational Tags


During operation there are certain valves, electrical breakers, etc. which are normally open or closed. When these are extremely important or could cause operational difficulties or hazards if improperly operated, an operational tag is attached. (See Figure 12E-1 and 12E-2.) In keeping with the color scheme used at the MSRE, tags on closed valves or switches which are off (Figure 12E-1) are green, and those on open valves or switches which are on (Figure 12E-2) are red. As indicated the shift supervisor's permission is required to remove the tag or operate the valve or switch. An entry is made in the console log when an operational tag is removed, and the tag is discarded.

1.2 "Do Not Operate" Tags

During maintenance it is often necessary to tag out valves or switches for the safety of the reactor or personnel. A "do not operate" tag is used for this purpose. (See Figure 12E-3.) These tags are also used for special procedures etc. where additional information needs to be included on the tag or on the procedure. The tag is red cardboard. The bottom half has a white paper on top with carbon paper between it and the red cardboard. After the blanks have been filled in,

Approved by *R. Maymon*

12E-2
10/7/65



**KEEP VALVE CLOSED
OR SWITCH OFF**

This is the normal position for this valve or switch during operation. It should not be operated without permission of the shift supervisor.

Item No.: _____ Date _____


Signed _____

UCN - 5924
(3 7-64)

Figure 12E-1

Approved by *P. Haymon*

12E-3
10/7/65

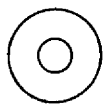

**KEEP VALVE CLOSED
OR SWITCH OFF**

This is the normal position for this valve or switch during operation. It should not be operated without permission of the shift supervisor.

Item No.: _____ Date _____

Signed _____

UCN - 5923
(3 7-64)

Figure 12E-2

Approved by *A. Hayman*

12E-4
10/7/65

DO NOT OPERATE

UCN - 5925
(3 7-64)

Item No. _____ Work Order No. _____

Description _____

Location _____

Reason for Tagging _____

Conditions Required to Remove Tag _____

Signed _____

Date _____

RED CARDBOARD

WHITE PAPER WITH
RED CARDBOARD
BEHIND AND CARBON
PAPER BETWEEN

Figure 12E-3

Approved by




12E-5
10/7/65

1.2 (continued)

the white sheets and carbon paper are removed. The white sheets are filed with the work request or the procedure. When the work or the procedure has been completed, all tags are removed. These are cross checked with the white slips to assure that none were missed and are then discarded. The valves or switches are then free to be operated as needed.

2 SIGNS

All signs should be kept current at all times. Permanent signs, if not applicable, should be removed or covered until they again are applicable. When temporary signs are installed, the reason for the sign should be clearly stated, signed, and dated.



Approved by

R. H. Kayman


13-1
10/21/65

13 MAINTENANCE AND CHANGES


Responsibilities of the MSRE operations group with regard to maintenance include recognizing the need, requesting the necessary work, and coordinating operations and maintenance. The maintenance group of the MSRE staff will schedule and arrange for the necessary materials and manpower to do the work.

Because the MSRE is an experiment, operation will inevitably show the need for some changes. These will be approved, made, and documented with care equal to that exercised in the original design.

This section contains procedures whose object is to insure that maintenance and changes are made in an orderly, efficient, and safe manner.



Approved by

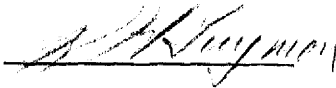

13A-1
10/21/65

13A MAINTENANCE

1 DEFINITION

Maintenance means repair or replacement of defective components, servicing of equipment, and alterations or additions which do not come under the definition of modifications given in 13B.

2 PROCEDURE

The following procedure applies to all maintenance except for emergencies which require immediate "first-aid."

2.1 Initial Request

The initial request for maintenance is made through the Punch List. Anyone seeing a need for maintenance describes it on a punch list form (Fig. 13.1), available in the reactor control room. The following instructions apply to filling out the punch list form:

- (a) Enter date of request.
- (b) Describe location, equipment and work as specifically as possible, using sketches where they would clarify the request.
- (c) At end of description, state when the job needs to be finished.
- (d) List any precautions known to be needed.
- (e) Sign on line above "SIGNED."

Normally the requestor leaves the completed form on the punch list clipboard in the reactor control room. If a high priority is needed, the requestor contacts the Operations Chief (OC) or Assistant Operations Chief (AOC) to expedite action.

2.2 Handling by Operations Group

The Shift Supervisor periodically reviews the punch list and assigns suitable jobs to shift craftsmen. A job is suitable for this type of handling if the job is straightforward, has no wide-reaching effects and can be handled by the shift craftsmen without interference with their primary function,


PUNCH LIST

TO	PRIORITY	DATE
LOCATION		
EQUIPMENT, LINE NO., ETC.		
DESCRIPTION		
PRECAUTIONS		
SIGNED:		
Approval for Shift Craftsman to proceed _____ or Work Request to be written _____		
Shift Craftsman has completed job _____		

UCN-5879
(3 1-65)

FIGURE 13.1

Approved by

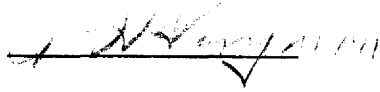

13A-3
10/21/65

which is to take care of emergency or essential work.

At the beginning of each day shift, the OC or AOC reviews the punch list and removes jobs which will not be done by shift craftsmen. He puts aside requests which he cannot approve and notifies the requestor of the reasons for denying approval. He signs the punch list forms for approved requests, checks priorities and passes the forms on to the MSRE Maintenance Supervisor. Priority may be one of these three:

(a) Urgent

The work is or could become the critical path and should be completed as soon as possible.

(b) Medium

The work should be completed as soon as it can be done without delaying work having an URGENT priority.


(c) Low

The scheduling of this work is at the convenience of the craft groups.

2.3 Execution of Simple Jobs

"Simple" here means that the job is not hazardous to the craftsmen, does not interfere with reactor operations, and does not otherwise require extensive arrangements. No form other than the punch list is used for these jobs. The procedure is as follows.

- (a) The Maintenance Supervisor checks that the priority is in line with other work in progress, and resolves any conflict with the OC or AOC.
- (b) If necessary, the Maintenance Supervisor checks that the required material is available.
- (c) The Maintenance Supervisor addresses the punch list form and turns it over to the executing group (normally P and E or I and C).
- (d) Immediately after the work is finished, the craft foreman initials the form and returns it to the

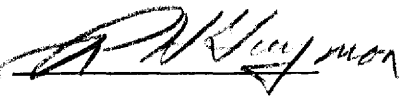

- (d) (continued)
Maintenance Supervisor.
- (e) The Maintenance Supervisor checks the job, marks the punch list form "completed" and returns it to the control room.

2.4 Execution of Complicated Jobs

A job is "complicated" if it could interfere with the operation of the reactor or is hazardous. A form called "MSRE Work Request" (Fig. 13.2) is used in connection with this type job. The procedure is as follows.

- (a) The Maintenance Supervisor checks the priority as in "simple" jobs.
- (b) The reactor maintenance group assigns a work request number and enters this on the Work Request form along with a description based on the punch list description. Where necessary, "CAUTION - CHECK WITH OPERATIONS BEFORE PROCEEDING" is stamped on the work request. The original of the work request is held in the Maintenance Supervisor's file; copies are made as necessary. One copy of the work request goes to the craft group involved, one to the AOC and one to the OC.
- (c) The Maintenance Supervisor, after consultation with the executing craft group, estimates the time required and passes this information on to the Operations Chief.
- (d) The OC reviews the request, initials his copy and passes it on to the MSRE Shift Supervisor.
- (e) If the job has a high priority, the Maintenance Supervisor coordinates preparations of the craft group and operations. Otherwise the craft supervision will schedule the work on the basis of requested date of completion, relative priorities of other jobs, and available manpower. In such cases the craft supervision notifies the Shift Supervisor



- (e) (continued)
a day in advance of scheduled work.
- (f) Before work starts, the MSRE Shift Supervisor will make necessary preparations such as shutting down machinery, closing valves and opening switches. He uses MSRE tags where advantageous, and attaches the white copy of the tag to the Control Room copy of the work request. (MSRE tags and their use are described in Section 12E.)
- (g) When all preparations have been made, the Shift Supervisor signs control room copy and the craftsman's copy of the work request, permitting the crafts to proceed.

Columns are provided for indicating when the work can be started and when the work must be completed or stopped. The shift supervisor enters this information and any additional precautions or restrictions on the craftman's copy as well as the control room copy.


- (h) As soon as the work is completed, inspected, and approved by craft supervision and the MSRE Maintenance Supervisor, the signed copy is turned over to the Shift Supervisor.
- (i) The Shift Supervisor removes tags, compares these with the white slips attached to the WR, and makes an operational check of the job.

He changes control room copies of affected drawings and indicates this on the work request and briefly states what was done to check out the job. The work requests are then turned over to the Assistant Operations Chief or Operations Chief. Should the operational check show that more work needs to be done, the Shift Supervisor contacts the Maintenance Supervisor who arranges for the completion

Approved by *R. H. Longman*

13A-7
10/21/65

- (i) (continued)
of the job.
- (j) The Maintenance Supervisor keeps a record of all completed work requests. In addition, on any job relevant to the performance or service of important machinery or equipment, he files a copy of the completed work request in the folder for that piece of equipment.



Approved by



13B-1
10/21/65

13B MODIFICATIONS

1 DEFINITION

A modification is defined as a change in the physical plant which produces a significantly different characteristic or function in any component or system.

2 PROCEDURE

2.1 Request

A person should formally request any modification which he believes to be worthwhile or to possess advantages at least worth considering. The requestor describes the change on an MSRE Change Request Form (Fig. 13.3) and submits it to the MSRE Design Liaison Engineer.

2.2 Review

No modification will be made before adequate review and approval. To insure that all aspects are considered, a person responsible for each area affected by the change will be asked to review and approve the change. The MSRE Operations Department Head will review all requests and will determine what other reviewers are necessary.

When the Design Liaison Engineer (DLE) receives a request, he assigns it a number. He then has the request typed on a Change Request Form. A copy of the typed request goes to the MSRE Project Director for his consideration. The typed request goes to the Department Head, who checks the appropriate boxes under "Approval to Proceed" and routes the request to reviewers in the MSRE area (Buildings 7503 and 7509). When the internal review is completed, the form comes back to the DLE, who sends it out for external reviews which may be required. After external reviews, the request is again returned to the DLE. He sends a copy of the request, with approvals and comments of the reviewers, to the Reactor Division Director for his information.

Approved by



13B-3
10/21/65

Any reviewer may either approve or not and may suggest alternatives. If he disapproves he should indicate his reasons under "Comments" or on a separate sheet which becomes part of the request. The reviewer may register his views on alternatives in the same way.


The DLE will maintain a file of change requests which will reveal the status of all requests at any time.

2.3 Action


If all reviewers approve a change, the DLE will arrange for necessary design work; on jobs requiring no design, he will arrange with the MSRE Maintenance Supervisor to get the work done. Changes not unanimously approved or for which alternatives are proposed must be arbitrated. The DLE will attempt to obtain agreement, but if this is impossible the MSRE Department Head or the Project Director will decide what to do about the change.

On change requests where only the desired result is specified, "Approval to Proceed" means merely that the reviewer approves study or design of means to the desired end. Responsibilities for design will be listed under "Assignments." After the design is completed, the MSRE Department Head or the Project Director must approve the design before the change is actually made.

When a modification is completed, the DLE is responsible for seeing that affected documents are changed. Changes in Control Room documents will be made by the MSRE Operations Chief or his assistant.



Approved by



13C-2
10/21/65

brief, he will write in the change in the Crew Copy of the Operating Procedures. (An up-to-date Crew Copy will be maintained by each crew for its information and use.) If it is a lengthy change, the Shift Supervisor will circle with red pencil the superseded portion in the Crew Copy and mark it "Revised -- See Master," with the date. The Shift Supervisor will then instruct his crew with regard to the change. After each crew member has been instructed and has read the change, the Shift Supervisor will initial the change list on the bulletin board. When revised sheets are distributed, marked pages in the Crew Copy will be replaced by the Shift Supervisor.

Whether or not revised sheets are issued depends mainly on the length of the change. If a change can be easily and clearly transcribed by the Shift Supervisors to the Crew Copies, retyping and issuing revised pages is not compulsory or desirable. If pages are retyped, copies will be sent to persons who need to have an up-to-date version of the Procedures.

Every page of the Operating Procedures has the approval and date at the top, as on this page. Revised pages bear the revision date; this applies to retyped pages and also to marked pages in the Master Copy and Crew Copies, where the date is changed when the change is written in. Holders of loose-leaf copies of the Procedures can tell if their copy is up-to-date by comparing page dates with those in the Master Copy.

Approved by

R. H. Hymon

13D-1
10/21/65

13D CHANGES IN COMPUTER PROGRAM

One of the advantages of the computer-logger over conventional recorders is that its functions can be readily changed to meet the changing needs of the Reactor Experiment or to improve the operation of the computer. Changes in the computer program are made by a programmer after proper approval.

Anyone recognizing the need for a change, describes it on a Change Request Form. Requests from the Operations Group go first to the Operations Chief; others send their requests to the head of the Nuclear and Mechanical Analysis Group of the MSRE Operations Department. Requests are handled as described in Section 3H of the Operating Procedures.



Approved by



13E-1
10/21/65

13E REVISION OF APPROVED DOCUMENTS

The MSRE has been the subject of many documents of all kinds, many of them preliminary and now out-of-date. "Approved documents" are those which are intended to give an accurate, up-to-date description of the MSRE and its operation. Because the operator needs to make use of these documents in training and operation, they must be revised to keep up as nearly as is practical with changes in the system.

A set of up-to-date approved documents will be kept on file at the MSRE. They include:

- (a) all published parts of the MSRE Design and Operations Report,
- (b) drawings,
- (c) instrument application tabulations,
- (d) instrument specifications,
- (e) switch tabulations,
- (f) line schedule,
- (g) thermocouple tabulations,
- (h) design data sheets.

Revision of these documents to reflect modifications in the system is routinely handled as part of the procedure for modifications (Section 13B, These Procedures). Other revisions will be in the nature of corrections. Anyone discovering an error or recognizing a need to bring an approved document up-to-date should notify the MSRE Department Head in writing of the required change. He will arrange for errata sheets or other corrections.



Internal DistributionBound Copies

- | | | | |
|--------|-------------------|--------|---------------------------------|
| 1. | R. G. Affel | 31. | H. B. Piper |
| 2. | T. Arnwine | 32. | B. E. Prince |
| 3. | S. E. Beall | 33. | L. P. Pugh |
| 4. | N. E. Bolton | 34. | W. E. Ramsey |
| 5. | R. B. Briggs | 35. | M. Richardson |
| 6. | G. H. Burger | 36. | H. C. Roller |
| 7. | R. L. Clark | 37. | D. Scott |
| 8. | J. L. Crowley | 38. | A. N. Smith |
| 9. | J. R. Engel | 39. | W. Spencer |
| 10. | E. N. Fray | 40. | R. C. Steffy |
| 11. | R. B. Gallaher | 41. | J. R. Tallackson |
| 12. | A. F. Gillen | 42. | R. E. Thoma |
| 13. | E. H. Guinn | 43. | R. W. Tucker |
| 14-18. | R. H. Guymon | 44. | J. L. Underwood |
| 19-23. | P. N. Haubenreich | 45. | J. A. Watts |
| 24. | C. C. Hurtt | 46. | B. H. Webster |
| 25. | A. I. Krakoviak | 47. | K. W. West |
| 26. | R. B. Lindauer | 48. | S. R. West |
| 27. | C. D. Martin | 49-52. | Central Research Library |
| 28. | C. K. McGlothlan | 53-54. | Y-12 Document Reference Section |
| 29. | R. L. Moore | 55-58. | Laboratory Records Department |
| 30. | W. W. Ogg | 59. | Laboratory Records, RC |

External DistributionBound Copies

60. D. F. Cope, AEC, ORO
61. H. M. Roth
62. R. W. Garrison, AEC, Washington
63. Bruce Deering, AEC
- 64-78. Division of Technical Information Extension, DTIE
79. Wayne Smalley, AEC Administration Building