


105
12-8-78

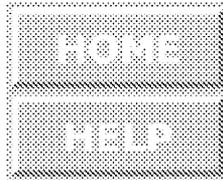

02-548
ORNL/TM-5540
ORNL/TM--5548

System Design Description of Forced-Convection Molten-Salt Corrosion Loops MSR-FCL-3 and MSR-FCL-4

W. R. Huntley
M. D. Silverman

MASTER

OAK RIDGE NATIONAL LABORATORY

OPERATED BY UNION CARBIDE CORPORATION FOR THE ENERGY RESEARCH AND DEVELOPMENT ADMINISTRATION

Printed in the United States of America. Available from
National Technical Information Service
U.S. Department of Commerce
5285 Port Royal Road, Springfield, Virginia 22161
Price: Printed Copy \$5.50; Microfiche \$2.25

This report was prepared as an account of work sponsored by the United States Government. Neither the United States nor the Energy Research and Development Administration/United States Nuclear Regulatory Commission, nor any of their employees, nor any of their contractors, subcontractors, or their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness or usefulness of any information, apparatus, product or process disclosed, or represents that its use would not infringe privately owned rights.

ORNL/TM-5540
Dist. Category UC-76

Contract No. W-7504-eng-26

Engineering Technology Division

SYSTEM DESIGN DESCRIPTION OF FORCED-CONVECTION MOLTEN-SALT
CORROSION LOOPS MSR-FCL-3 AND MSR-FCL-4

W. R. Huntley
M. D. Silverman

Date Published: November 1976

NOTICE
This report was prepared as an account of work sponsored by the United States Government. Neither the United States nor the United States Energy Research and Development Administration, nor any of their employees, nor any of their contractors, subcontractors, or their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness or usefulness of any information, apparatus, product or process disclosed, or represents that its use would not infringe privately owned rights.

Prepared by the
OAK RIDGE NATIONAL LABORATORY
Oak Ridge, Tennessee 37830
operated by
UNION CARBIDE CORPORATION
for the
ENERGY RESEARCH AND DEVELOPMENT ADMINISTRATION

MASTER

DISTRIBUTION OF THIS DOCUMENT IS UNLIMITED

C

11.

C

CONTENTS

	<u>Page</u>
PREFACE	v
ABSTRACT	1
1. INTRODUCTION	1
2. FUNCTIONS AND DESIGN REQUIREMENTS	2
2.1 Functional Requirements	2
2.2 Design Requirements	3
2.2.1 Structural requirements	3
2.2.2 Instrumentation and control requirements	4
2.2.3 Quality assurance	4
2.2.4 Codes and standards - mechanical and electrical	5
3. DESIGN DESCRIPTION	6
3.1 Detailed Systems	6
3.2 Component Design Description	12
3.2.1 Salt pump and lubrication system	12
3.2.2 Auxiliary tank	20
3.2.3 Piping system	20
3.2.4 Corrosion specimens	22
3.2.5 Fill-and-drain tank	25
3.2.6 Salt coolers	25
3.2.7 Main heaters	31
3.2.8 Auxiliary heaters	32
3.2.9 Helium cover-gas system	34
3.3 Electrical Systems	36
3.4 Instrumentation and Controls	41
3.4.1 Temperature measurement and control	41
3.4.2 Pressure measurement and control	42
3.4.3 Pump speed measurement and control	42
3.4.4 Power measurements	43
3.4.5 Thermal conductivity measurement	43
3.4.6 Digital data system (Dextir)	43
3.4.7 Block diagram	44
3.4.8 Instrument application diagram	44
3.4.9 Molten-salt level measurements	48
3.4.10 Molten-salt flow measurement	48
3.4.11 Control panels	48
4. SYSTEM LIMITATIONS, SET POINTS, AND PRECAUTIONS	50
5. OPERATION	53
5.1 Initial Salt Filling of the Fill-and-Drain Tank	53

5.2 Filling the Loop with Salt	55
5.3 Bringing the Loop to Design Conditions	56
6. MAINTENANCE	56
6.1 Maintenance Philosophy	56
6.2 Normal Maintenance Requirements	57
ACKNOWLEDGMENTS	59
REFERENCES	59
APPENDIX A. ELECTRICAL DRAWING LIST (MSR-FCL-3)	61
APPENDIX B. INSTRUMENT DRAWING LIST (MSR-FCL-3)	63
APPENDIX C. MECHANICAL DRAWING LIST (MSR-FCL-3)	67
APPENDIX D. ALPHA PUMP DRAWING LIST (MSR-FCL-3 AND -4)	71
APPENDIX E. INSTRUMENT LIST FOR FCL-3 OR -4	73
APPENDIX F. WELDING OF 2% Ti-MODIFIED HASTELLOY N	93

PREFACE

This report presents the System Design Description of molten-salt corrosion loops MSR-FCL-3 and MSR-FCL-4, which are high-temperature test facilities designed to evaluate corrosion and mass transfer of modified Hastelloy N alloys for use in molten-salt breeder reactors. These loops were in the advanced stages of assembly when construction was halted due to termination of the Molten-Salt Breeder Reactor Program. The MSR-FCL-3 is essentially complete except for installation of piping system components, and the MSR-FCL-4 is about 60% complete.

The design features are documented here for the benefit of those who may want to use the facilities for similar experimentation. The facilities are available for use on other programs as appropriate.



11



SYSTEM DESIGN DESCRIPTION OF FORCED-CONVECTION MOLTEN-SALT
CORROSION LOOPS MSR-FCL-3 AND MSR-FCL-4

W. R. Huntley
M. D. Silverman

ABSTRACT

Molten-salt corrosion loops MSR-FCL-3 and MSR-FCL-4 are high-temperature test facilities designed to evaluate corrosion and mass transfer of modified Hastelloy N alloys for future use in Molten-Salt Breeder Reactors. Salt is circulated by a centrifugal sump pump to evaluate material compatibility with LiF-BeF₂-ThF₄-UF₄ fuel salt at velocities up to 6 m/s (20 fps) and at salt temperatures from 566 to 705°C (1050 to 1300°F).

This report presents the design description of the various components and systems that make up each corrosion facility, such as the salt pump, corrosion specimens, salt piping, main heaters, salt coolers, salt sampling equipment, and helium cover-gas system, etc. The electrical systems and instrumentation and controls are described, and operational procedures, system limitations, and maintenance philosophy are discussed.

Key words: molten salt, test facility, MSBR, corrosion, mass transfer, systems design description, forced convection, LiF-BeF₂-ThF₄-UF₄, fuel salt, high temperature, centrifugal pump.

1. INTRODUCTION

Molten-salt corrosion loops MSR-FCL-3 and -4 were planned as part of the effort to develop a suitable metal alloy for the piping and components of future Molten-Salt Breeder Reactors (MSBRs). The corrosion loop design was based on the design of similar experiments that have been conducted at Oak Ridge National Laboratory (ORNL).¹⁻³

Construction of the loops was not completed due to termination of the MSBR program at ORNL; however, the two identical loops were in advanced states of assembly when work was halted, with FCL-3 about 90% complete and FCL-4 about 60% complete.

This design report has been prepared to document design features in case the facilities are reactivated for some similar use and also to

provide design information for anyone initiating future forced-convection corrosion studies with molten salts. Since corrosion loops FCL-3 and -4 were identical, much of the descriptive material included in this report refers to only one loop, FCL-3, to avoid needless repetition.

2. FUNCTIONS AND DESIGN REQUIREMENTS

2.1 Functional Requirements

Corrosion loops FCL-3 and -4 were designed as part of the program to develop a structural containment material for the primary circuit of MSBRs. The primary salt circuit of a molten-salt reactor contains fission products, including tellurium, which have been shown to cause intergranular attack of standard Hastelloy N alloy. These test facilities are designed to permit evaluation of corrosion of modified Hastelloy N alloys with salt containing tellurium at typical MSBR temperature gradients and salt velocities. The equipment is designed for reliable operation over periods of several years to evaluate modified alloys containing titanium and niobium additions initially and to demonstrate adequate corrosion resistance of reference alloys for typical reactor lifetimes.

The capability for frequent inspection of removable metal corrosion specimens is provided by a unique system of salt freeze valves coupled with vertically oriented specimen-removal stations at three locations in the piping system. Based on past experience, we anticipate specimen removal at 500-hr increments initially and at 1000-hr increments during prolonged test runs. Salt samples are taken from the loop about two to four times per month during routine operation. The sampling is done at the auxiliary pump tank, where salt samples are removed in a small copper dip sampler via ball valves on a vertical riser pipe. The salt samples are removed in an air lock and analyzed elsewhere. On-line salt chemistry monitoring is accomplished by insertion of an electrochemical probe through another riser on the auxiliary tank. The electrochemical probe monitors the U^{4+}/U^{3+} ratio in the salt and provides an extremely sensitive method for detecting changes in oxidation potential of the salt.⁴ We anticipate measuring this ratio several times per week.

The corrosion loops are designed for reliable long-term service and for unattended operation on nights and weekends. A diesel-driven motor-generator (M-G) set provides emergency electrical power in the event of normal power interruption. Automatic protective features will "scram" the loop to place it in a safe standby condition if abnormal conditions occur. In the event of an alarm action during unattended operation, an alarm is sounded at the Plant Shift Supervisor (PSS) office, which is manned 24 hr/day. If time permits, the PSS will investigate the alarm at the facility; but in any case, a designated list of people will be telephoned until someone familiar with the facility is alerted that trouble has occurred.

The salt piping system is built to recognized standards of design, materials, and construction, but additional safety is provided by a metal shield enclosure to lessen operator hazard in the event of pipe rupture or component failure.

The corrosion loops were placed in Building 9201-3, Y-12 Area, because experimental space and utility services were available there. Equipment on hand at no cost to this project included a helium-purification system, emergency diesel-generator, electrical power supplies, electric bus bars, overhead crane, compressed air, etc.

2.2 Design Requirements

2.2.1 Structural requirements

All parts of the system that are exposed to high-velocity salt are made of 2% Ti-modified Hastelloy N. Other parts of the system that are exposed to salt, such as the fill-and-drain tank, are made of standard Hastelloy N. Some pressure-containing parts that are not exposed to flowing salt are made of stainless steel; these stainless steel parts are used only at sealing members, such as liquid-level-probe penetrations and ball valves, in the inert-gas space above the salt liquid level and are generally at the end of vertical pipe extensions where temperatures are relatively low.

Pressures in the system range up to a maximum of 2.0 MPa (290 psia) at the pump discharge. The pressure drops slightly to 1.9 MPa (270 psia)

at the point of entry into heater 1, where the design metal temperature is 670°C (1240°F).

The maximum temperature to which pressure-containing metal in the system is exposed is 793°C (1450°F) at the outlet of heater 2, where the pressure is 1.3 MPa (185 psia).

2.2.2 Instrumentation and control requirements

The instrumentation and control systems installed in the FCL-3 and -4 facilities are designed to maintain all system parameters within safe and acceptable ranges during both attended and unattended operation and to place the facility in a standby condition in the event of certain abnormal conditions, such as loss of electrical power, low helium system pressure, low pump coolant-oil flow, low pump speed, high main-heater temperature, low cooler temperature, or high temperature on the freeze valves of the specimen-removal stations.

In addition to the automatic safety actions, a number of additional alarm circuits are provided to alert the operator during attended operation (or the PSS during unattended operation) when certain parameters are outside prescribed limits. The alarms are both audible and visual.

Key parameters are measured and recorded either on strip-chart analog recorders or on a digital data-acquisition system (Dextir). Less important parameters are measured and indicated on appropriate instruments from which they may be logged by the operator as required.

Sufficient documentation is provided by drawings, calibration sheets, operating instructions, etc., to insure that the data are sufficient in both scope and quality to accomplish the objective of the experiment.

2.2.3 Quality assurance

Design, fabrication, inspection, and testing of the molten-salt system are performed in accordance with Quality Level III requirements, as defined in ORNL Quality Assurance Procedure QA-L-1-102, "Guide for the Selection of Quality Levels," and the requirements of Reactor Division Engineering Document No. Q-11628-RB-001-S-0, "Quality Assurance Program Index for Molten-Salt Corrosion Loop MSR-FCL-3."

The loop drawings specify standard Hastelloy N tubing, bar, etc., to be manufactured in accordance with Reactor Development Technology (RDT) standards of the Energy Research and Development Administration. However, such material was not available due to the limited quantities of Hastelloy N used at ORNL, and it was necessary to substitute material conforming to internal ORNL material standards. The ORNL material standards satisfy the significant quality provisions of the RDT standards.

RDT standards were not specified on the drawings for the 2% Ti-modified Hastelloy N alloy shapes, because this was a new alloy that was being procured in small lots and procurement to RDT standards was not practical. Therefore, the 2% Ti-modified Hastelloy N plate, bar, and tubing were purchased to applicable ASTM standards for standard Hastelloy N.

Welding procedures for 2% Ti-modified Hastelloy were not specified on the drawings because such procedures were not known at the time the drawings were issued. However, procedures were later developed (see Appendix F), and it was found that existing procedures for welding standard Hastelloy N were applicable to 2% Ti-modified Hastelloy N. Therefore, welds involving the modified alloy were done according to ORNL weld specifications WPS-1402 and WPS-2604.

2.2.4 Codes and standards - mechanical and electrical

Mechanical. Pressure vessels in the system are designed according to the rules of the ASME Boiler and Pressure Code, Section VIII, Division 1, 1974, "Pressure Vessels," and addenda thereto. Piping is designed in accordance with rules of ANSI Standard B31.1-1973, "Power Piping," and addenda thereto.

Prior to 1974, design and construction of Hastelloy N vessels, per Section VIII of the Code, were performed under the provisions of Code Case 1315. During 1974 this case was annulled, and these provisions were included in the basic code in the form of addenda to the Code. Allowable stresses for Hastelloy, referred to in the Code as alloy "N" with a nominal composition of Ni-Mo-Cr-Fe, are now given in the Code without change from their previous values in Case 1315.

Electrical. The electrical materials, workmanship, and completed installation comply with the following codes and standards: National

Electric Code, National Electric Manufacturers Association, American National Standards Institute, Institute of Electrical and Electronic Engineers, and Underwriters' Laboratories, Inc.

Also specific details for the installation of the heater elements are given in an internal Union Carbide Corporation Engineering Standard ES2.1-1, "Installation Specification - Ceramic and Tubular-Type Heaters," and internal Checkout Procedure QA-10596-RB-008-S-0.

3. DESIGN DESCRIPTION

3.1 Detailed Systems

The physical arrangement of mechanical components and piping is shown in the simplified drawing of Fig. 1, and the test facility is shown schematically in Fig. 2. A centrifugal sump pump is located at the high point of the facility. Liquid salt volume changes due to temperature cycling are accommodated within the auxiliary pump tank and pump bowl. The salt is discharged from the pump at a flow rate of $\sim 2.5 \times 10^{-4} \text{ m}^3/\text{s}$ (4 gpm) and flows through a piping system fabricated of 12.7-mm-OD X 1.07-mm-wall (1/2-in.-OD X 0.042-in.-wall) tubing. The pump discharges into resistance heater 1, where the salt temperature is increased from 566 to 635°C. The salt then flows past the corrosion specimens of metallurgical station 2 (MET 2) and is heated further to 705°C as it passes through resistance-heated section 2. The salt passes vertically through corrosion station MET 3 and enters the two air-cooled finned heat exchangers, where the salt temperature is reduced to 566°C before it flows past the corrosion specimens at station MET 1. This arrangement allows metallurgical specimens to be exposed to salt at the high, intermediate, and low bulk fluid salt temperatures of the loop. The corrosion specimens are mounted on holders that can be removed vertically for frequent examination via salt freeze valves and ball valves, as described in detail elsewhere. The corrosion stations are designed so that specimens may be removed without draining the molten salt from the facility. Therefore, the specimen stations are vertically oriented and the freeze valves are located at the same vertical elevation as the free liquid surface in the pump and pump auxiliary tank. This

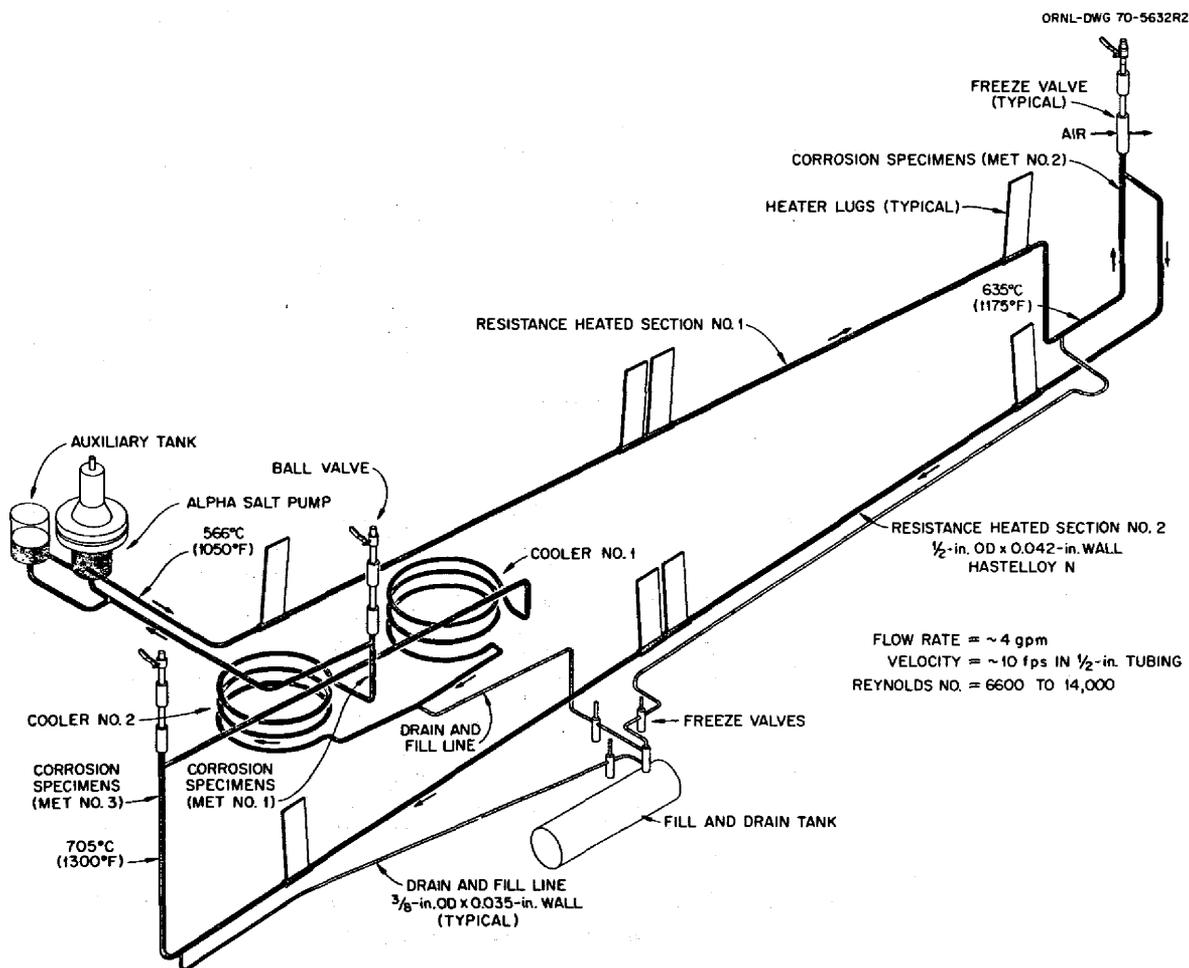


Fig. 1. Isometric drawing of Molten-Salt Forced Convection Corrosion Loop MSR-FCL-3 (1 in. = 25.4 mm; 1 gpm = 3.785 liters/min; 1 fps = 0.305 m/s).

configuration results in a piping system with three low points, and a corresponding number of fill-and-drain lines are required. Freeze valves are used in the fill-and-drain lines, since they provide dependable zero-leakage shutoff at reasonable cost. The fill-and-drain lines are fabricated of standard Hastelloy N tubing of 9.5 mm OD X 0.9 mm wall (3/8 in. OD X 0.035 in. wall) and attach to a common dip tube in the fill-and-drain tank. The fill-and-drain tank is located at the lowest point of the system to allow gravity drainage.

Corrosion loops FCL-3 and -4 are designed to operate with the MSBR reference fuel salt mixture $\text{LiF}-\text{BeF}_2-\text{ThF}_4-\text{UF}_4$ (72-16-11.7-0.3 mole %).

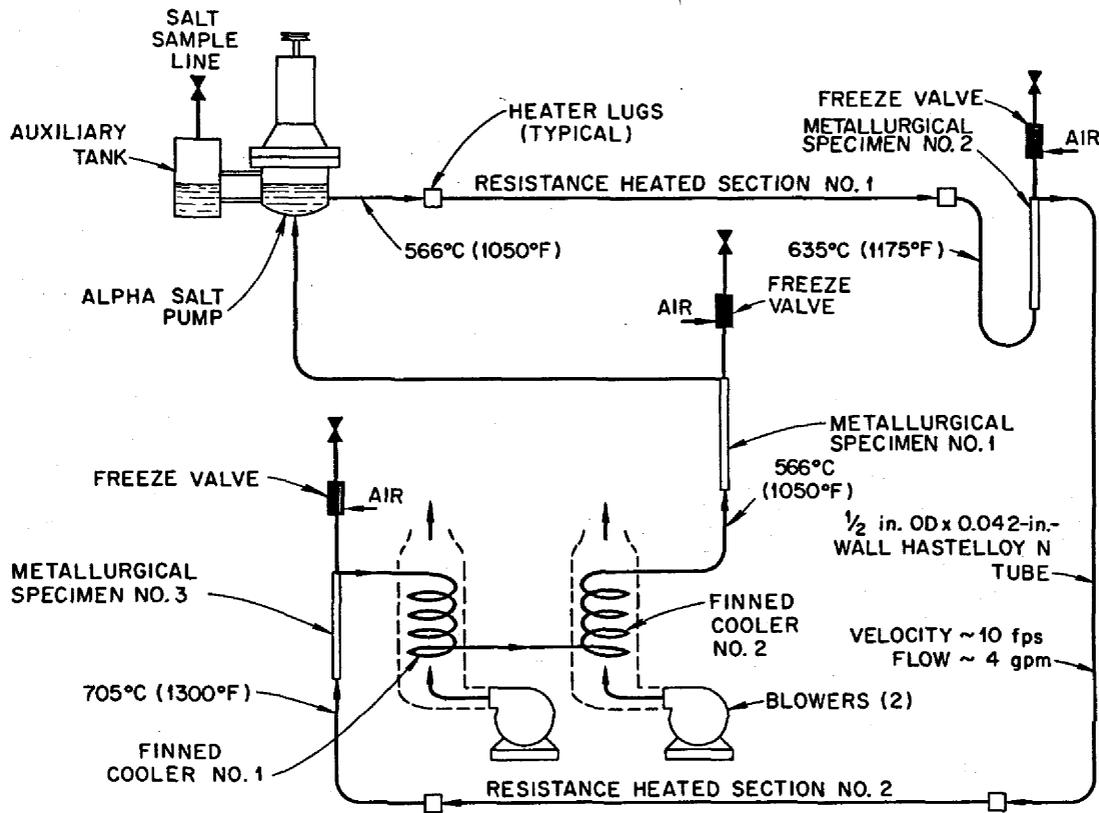


Fig. 2. Simplified schematic drawing of Molten-Salt Corrosion Loop MSR-FCL-3 (1 in. = 25.4 mm; 1 gpm = 3.785 liters/min; 1 fps = 0.305 m/s).

The thermophysical properties⁵⁻⁷ of the salt mixture are shown in Table 1. The salt is quite viscous and dense; for example, at the minimum loop temperature of 566°C the viscosity is 0.0144 Pa·s (35 lb ft⁻¹ hr⁻¹) and the density is 3.3 g/cm³ (207 lb/ft³). At design temperature and design flow rate of 2.5 X 10⁻⁴ m³/s (4 gpm), the calculated loop pressure drop is 1.9 MPa (270 psi). This pressure loss can be matched by operating the ALPHA centrifugal salt pump at about 5000 rpm.

A temperature profile of the loop was calculated and is shown graphically in Fig. 3. The symbols at the top of the figure indicate the components through which the salt flows, starting at the pump, passing through heaters 1 and 2, coolers 1 and 2, and returning to the pump suction. The solid heavy line represents the bulk fluid temperature as it ranges over the MSBR reference design conditions of 566 to 705°C. The inner wall temperatures, shown by the finely dashed line, vary greatly from the bulk salt

Table 1. Thermophysical property data for molten-salt mixture
LiF-BeF₂-ThF₄-UF₄ (72-16-11.7-0.3 mole %)

Parameter	Value	Uncertainty (%)	Ref.
Viscosity, μ			
lb ft ⁻¹ hr ⁻¹	0.264 exp (7370/T) (°R)	10	6
Pa·s	1.09 × 10 ⁻⁴ exp (4090/T) (K)	10	6
Thermal conductivity, ^a k			
Btu hr ⁻¹ ft ⁻¹ (°F) ⁻¹	0.71	15	7
W m ⁻¹ (K) ⁻¹	1.23	15	7
Density, ρ			
lb/ft ³	228.7 - 0.0205T (°F)	1	6
g/cm ³	3.665 - 5.91 × 10 ⁻⁴ T (°C)	1	6
Specific heat, C _p			
Btu lb ⁻¹ (°F) ⁻¹	0.324	4	5
J kg ⁻¹ (K) ⁻¹	1357	4	5
Liquidus temperature			
°F	932	5°C	5
°C	500	5°C	5

^aEstimated from values given in Ref. 7 for analogous salts.

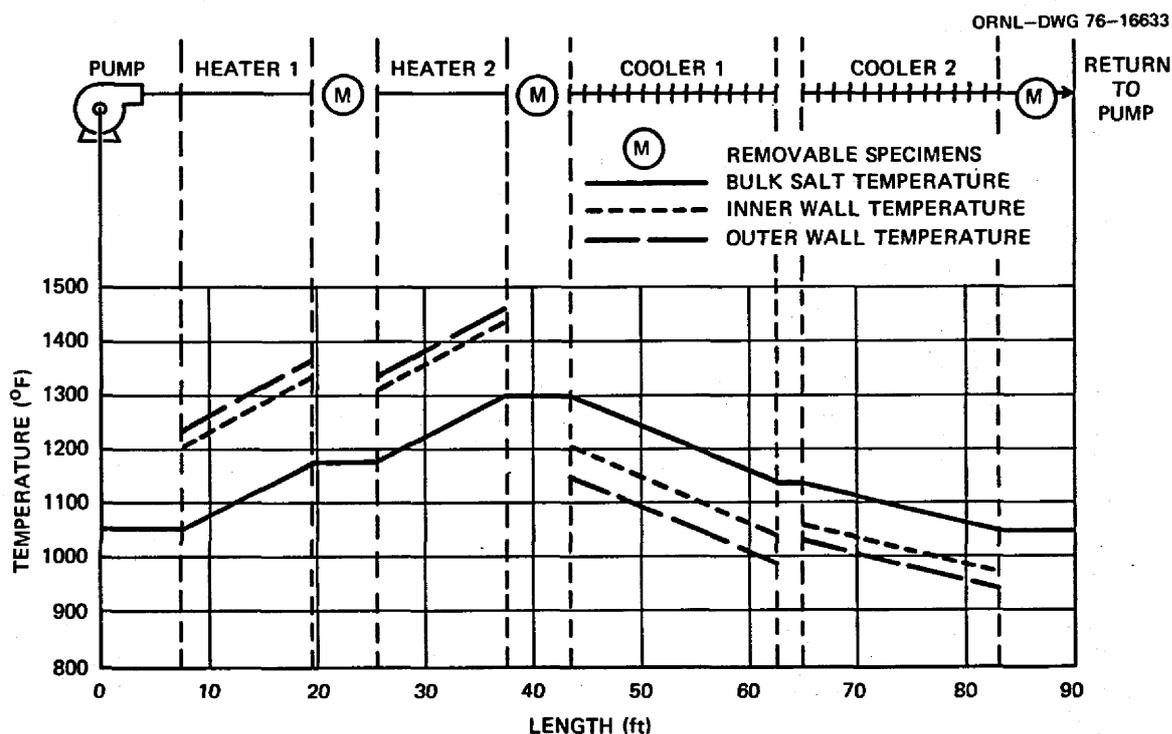


Fig. 3. Temperature profile of Molten-Salt Forced Convection Corrosion Loop, MSR-FCL-3, at design operating conditions (1 ft = 0.305 m).

temperature due to the large temperature drop across the fluid film at the pipe surface. The film drop and ΔT across the Ti-modified Hastelloy N tube wall result in outer wall temperatures ranging from 793°C at the outlet of heater 2 to 504°C at the outlet of cooler 2. The amount of air cooling at cooler 2 is intentionally less than that at cooler 1 so as to keep the inner wall temperature of cooler 2 just above the salt liquidus temperature. At design conditions, the inner wall temperature at this point is 521°C, which is about 21°C above the liquidus temperature of the salt. Table 2 is a summary of engineering design data for FCL-3 and -4.

The general status of loop construction at the time the project was halted is indicated in Fig. 4, an overhead photograph of the test area. FCL-3 and -4 were 90 and 60% completed, respectively, and were being built adjacent to the earlier corrosion loop FCL-2. The new control panels and overhead cable trays are readily visible in the photograph.

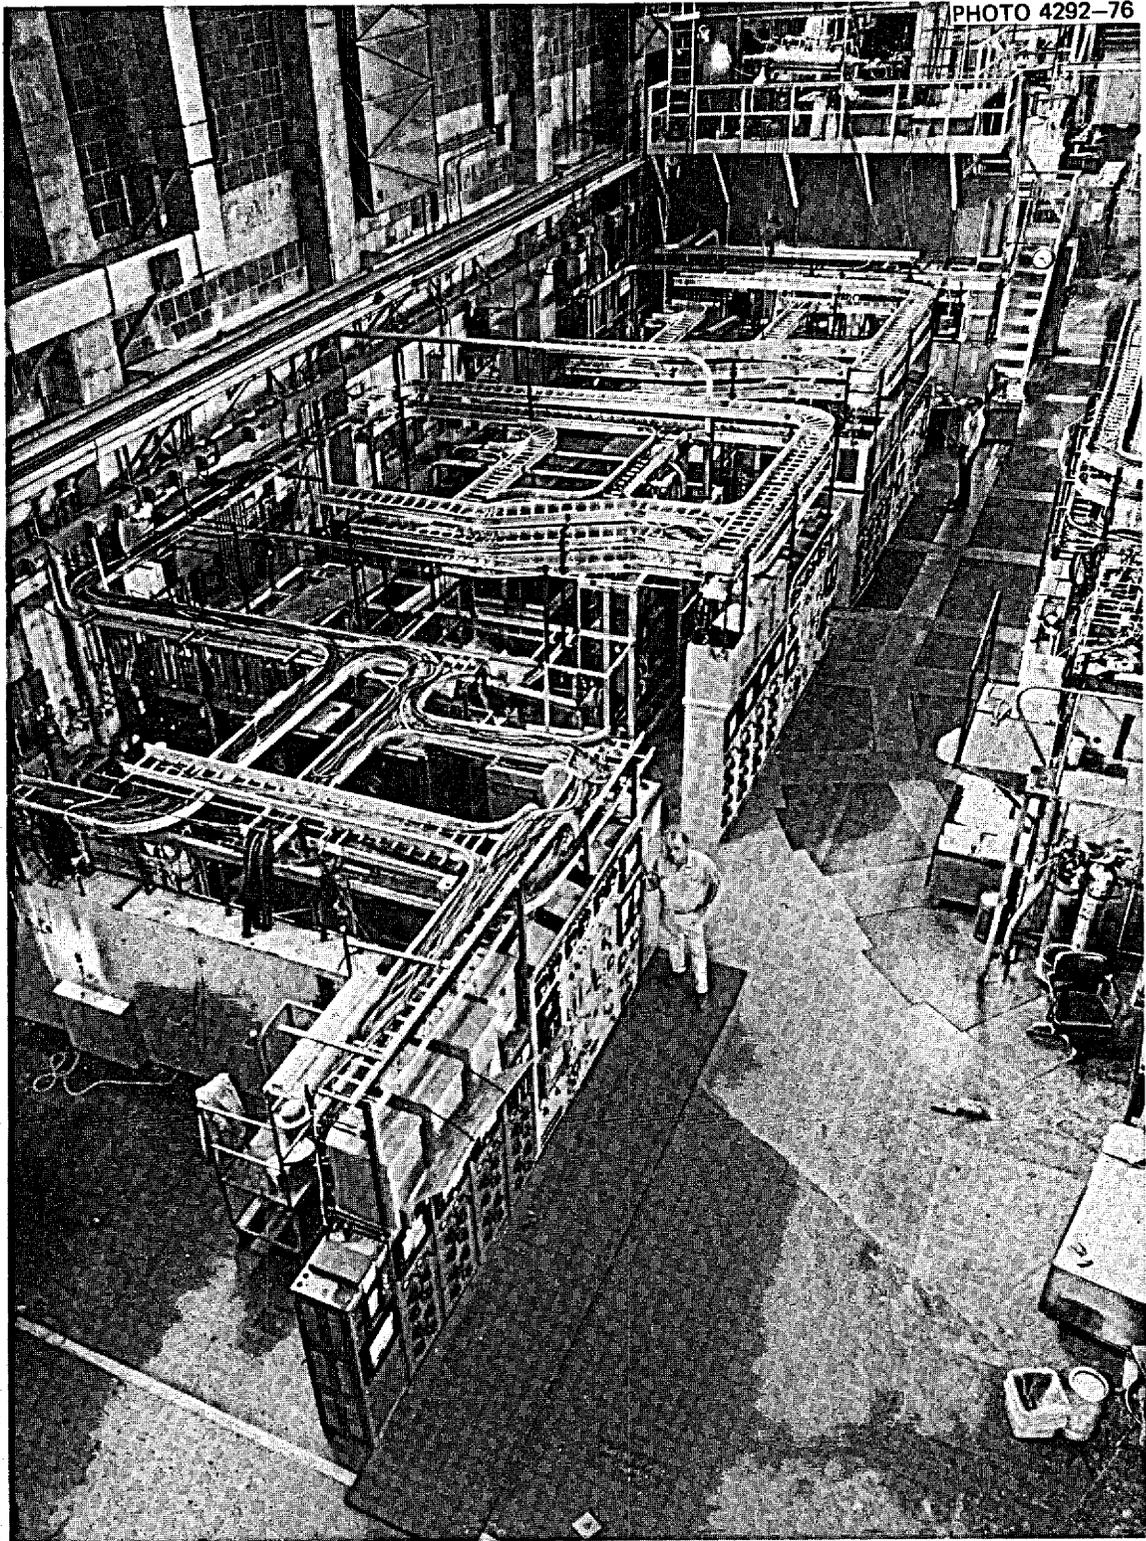


Fig. 4. Overhead view of test area showing corrosion loops FCL-2, -3, and -4.

Table 2. Engineering design data for loops FCL-3 and -4

Materials, temperatures, velocities, volumes, etc.	
Tubing and corrosion specimens	2% Ti-modified Hastelloy N
Nominal tubing size	12.7 mm OD × 1.1 mm wall (0.5 × 0.042 in.)
Approximate tubing length	27 m (90 ft)
Bulk fluid temperatures	566–705°C (1050–1300°F)
Bulk fluid ΔT	139°C (250°F)
Fluid velocity past corrosion specimens	3 to 6 m/s (10 to 20 fps)
Flow rate	2.5×10^{-4} m ³ /s (4 gpm)
System ΔP at 4 gpm	1.9 MPa (270 psi)
Salt volume in loop	4920 cm ³ (300 in. ³)
Surface-to-volume ratio	3.2 cm ² /cm ³ (8.1 in. ² /in. ³)
Pump speed	5000 rpm
Type of salt	LiF-BeF ₂ -ThF ₄ -UF ₆ (72-16-11.7-0.3 mole %)
Cooler data	
Material	12.7-mm-OD × 1.1-mm-wall (0.5- × 0.42-in.) 2% Ti-modified Hastelloy N with 1.6-mm-thick (1/16-in.) nickel fins
Number of cooler sections	2
Finned length of cooler 1	5.7 m (18.8 ft)
Finned length of cooler 2	5.5 m (17.9 ft)
Coolant air flow per cooler	~0.9 m ³ /s (~2000 cfm)
Cooling load, cooler 1	100 kW (342,000 Btu/hr)
Cooling load, cooler 2	58 kW (200,000 Btu/hr)
Total heat removal from both coolers	158 kW (540,000 Btu/hr)
Cooler 1 heat flux at tube ID	0.53 MW/m ² (167,000 Btu hr ⁻¹ ft ⁻²)
Cooler 2 heat flux at tube ID	0.3 MW/m ² (96,000 Btu hr ⁻¹ ft ⁻²)
Inside wall temperature at outlet, cooler 2	521°C (970°F)
Heater data	
Material	2% Ti-modified Hastelloy N
Heater size	12.7 mm OD × 1.1 mm wall (0.5 × 0.042 in.)
Current to center lugs on heater	1700 A
Number of heated sections	2
Length of each heater	3.7 m (12 ft)
Heat input each heater	79 kW (270,000 Btu/hr)
Total	158 kW (540,000 Btu/hr)
Inside wall temperature at outlet heater 2	777°C (1430°F)
Outside wall temperature at outlet heater 2 (maximum pipe wall temperature)	793°C (1460°F)
Heat flux	0.65 MW/m ² (205,000 Btu hr ⁻¹ ft ⁻²)
Salt Reynolds number in piping	6600 to 14,000

3.2 Component Design Descriptions

3.2.1 Salt pump and lubrication system

The ALPHA pump, shown in Fig. 5, is a centrifugal sump pump designed at ORNL for molten-salt or liquid-metal service. The impeller, shaft, and lower liquid-wetted portions of the pump are fabricated of 2% Ti-modified Hastelloy N alloy, and the bearing housing is fabricated of stainless steel.

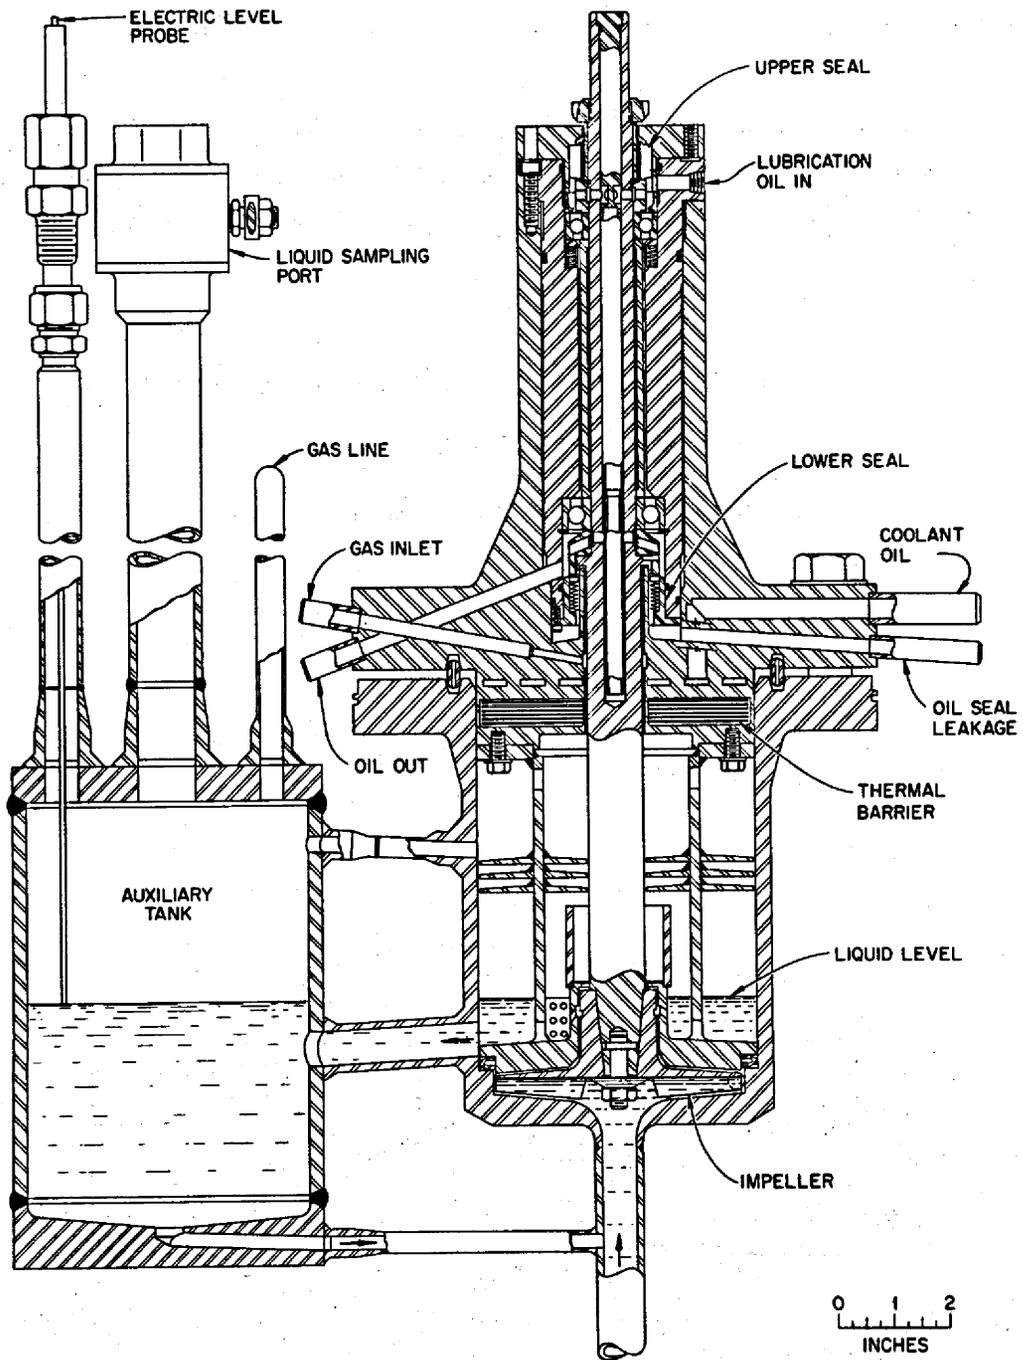


Fig. 5. Cross section view of ALPHA pump (1 in. = 25.4 mm).

The pump is designed to operate at speeds up to 6000 rpm to provide flows to $1.9 \times 10^{-3} \text{ m}^3/\text{s}$ (30 gpm) at temperatures to 760°C . However, in this corrosion loop application the pump will normally operate at about 5000 rpm and a flow rate of $2.5 \times 10^{-4} \text{ m}^3/\text{s}$ (4 gpm) at 566°C and a head of 58 m (191 ft). Pump drawings are listed in Appendix D.

The pump performance data with water, shown in Fig. 6, shows that the pump will be operating far below its design flow rate. At low flow rates

ORNL-DWG 73-4163R

- 1 0.045-in. CLEARANCE AT TOP AND BOTTOM OF IMPELLER
- 2 4.4 psig COVER GAS PRESSURE
- 3 WATER TEMPERATURE $\approx 68^\circ\text{F}$
- 4 0.622-in. ID AT INLET NOZZLE

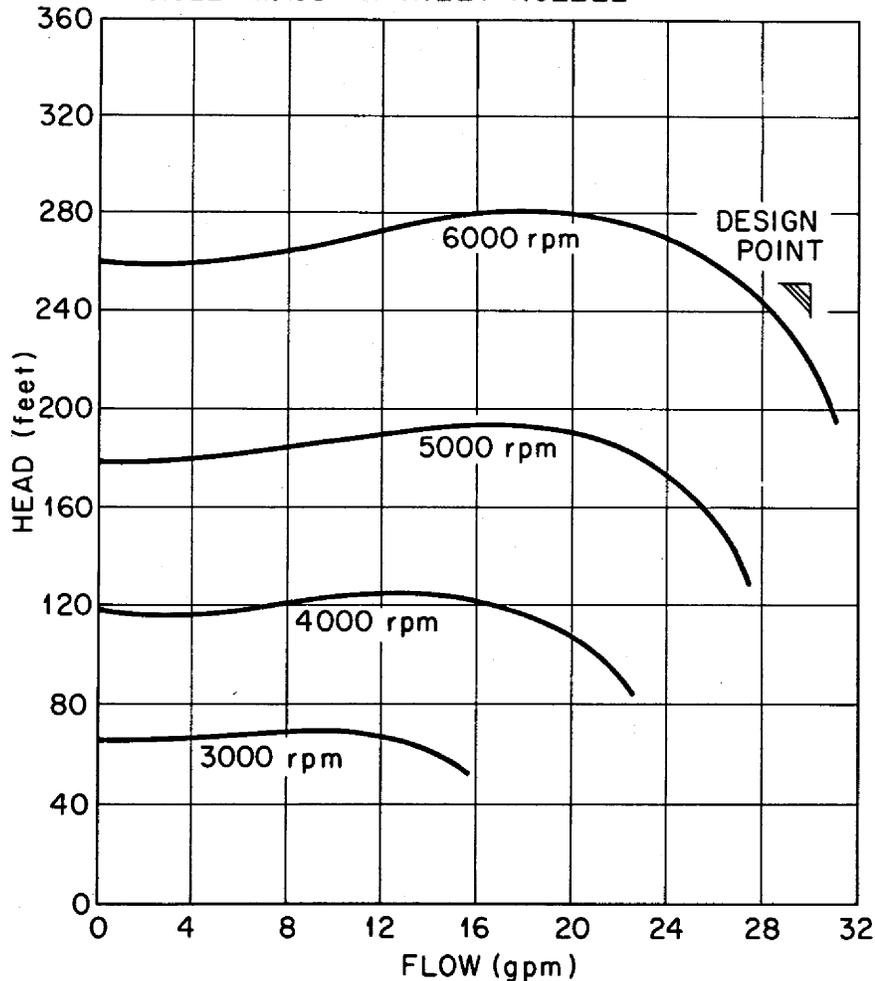


Fig. 6. ALPHA pump performance in water (1 ft = 0.305 m; 1 gpm = 3.785 liters/min).

the efficiency of the ALPHA pump is also low; however, comprehensive efficiency data are not available over the range of flow rates and speeds shown in Fig. 6. One specific efficiency data point was obtained during operation of a preceding corrosion loop in which sodium fluoroborate salt was pumped at 4800 rpm, at a temperature of 455°C, and at a flow rate of 2.5×10^{-4} m³/s (4 gpm), and the efficiency was found to be only 8.3%. Therefore, the pump efficiency is expected to be about 8% at design conditions in corrosion loops FCL-3 and -4. Pump efficiencies approaching 50% would be expected for salt flow rates near the pump design rate of 1.9×10^{-3} m³/s (30 gpm).

The ALPHA pump is driven by a 15-kW (20-hp) variable-speed motor which in turn is supplied by a variable-frequency, variable-voltage M-G set. The motors are much larger than required for this particular application but were purchased in this size in case the ALPHA pumps are used in future applications that demand more pumping power. The motor and generator are described in Section 3.4, Electrical Systems. The drive motor is supported over the ALPHA pump by a special alignment spool piece, and the motor is directly connected to the pump shaft by a flexible coupling (Thomas Catalog No. 861, type DBZ-A, size 101). In previous applications, the ALPHA pump has been driven by V-belts, but this has proved unreliable at speeds above 4000 rpm, particularly with the relatively dense fuel salt mixture, due to upper shaft flexing and vibrations from the belt torque. Therefore, the direct drive was selected for corrosion loops FCL-3 and -4, even though it is more costly because it involves a high-speed motor design and an M-G set for each corrosion loop. The M-G sets were available from other facilities at no cost.

An auxiliary tank, mounted adjacent to and on the same level as the pump bowl, provides the necessary space to accommodate thermally created volume changes in liquid inventories. The auxiliary tank also provides space to mount liquid-level indicators and liquid-sampling equipment and may be easily replaced to accommodate the requirements of a particular experiment. Interconnecting piping between the auxiliary tank, pump bowl, and pump inlet permits liquid flow from the shaft labyrinth above the impeller to the auxiliary tank and then to the pump inlet. The liquid flow rate through the auxiliary tank (shaft labyrinth leakage) varies with pump speed and flow as shown in Fig. 7. At the required loop design condition of 5000

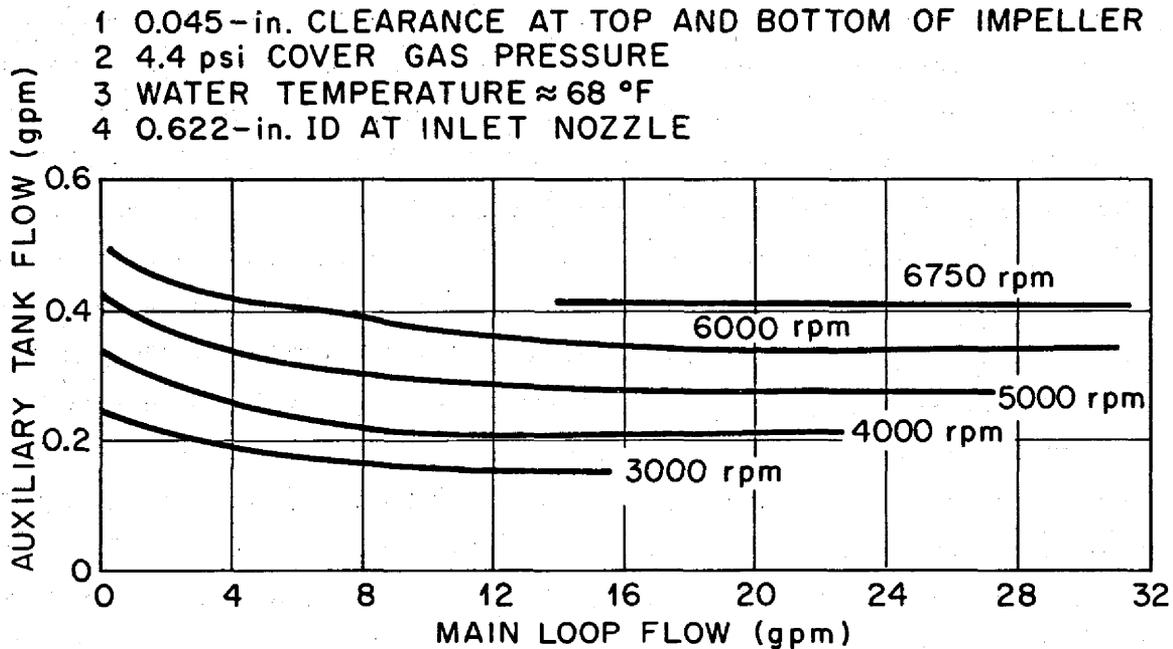


Fig. 7. ALPHA pump main loop flow vs auxiliary tank flow (1 gpm = 3.785 liters/min).

rpm and flow rate of $2.5 \times 10^{-4} \text{ m}^3/\text{s}$ (4 gpm), the auxiliary tank flow rate will be approximately $20 \text{ cm}^3/\text{s}$ (0.34 gpm).

The pump has an overhung vertical shaft with two oil-lubricated ball bearings and two oil-lubricated mechanical face seals located above the process liquid surface. Oil enters at the top of the pump to lubricate the bearings and seals and also to provide shaft cooling. A second oil stream enters the pump flange to provide cooling and acts as a protective heat dam between the bearings and seals and the elevated-temperature process fluid. An inert-gas purge flow of $80 \text{ cm}^3/\text{min}$ introduced at the "gas inlet" is directed to the shaft annulus, flows upward to exit through the seal leakage line, and carries leakage from the lower oil seal overboard. Although the pump is designed for a split purge gas flow at the shaft annulus, the downward flow portion of the split gas purge is not needed when handling liquids, such as molten salt, which have low vapor pressures.

A separate oil system is provided to supply lubrication and coolant oil to the ALPHA pump. The system uses a light turbine oil, Gulfspin 35, which is a paraffinic straight mineral oil with a flash point of 161°C and

a fire point of 175°C. The oil viscosity ranges from 66 Saybolt seconds at 38°C to 36 Saybolt seconds at 100°C, the heat capacity is 1.9 kJ/kg.K, and the specific gravity is 0.85. The oil system is cooled by a water-cooled heat exchanger located in the oil reservoir, as shown in the instrument application diagrams, Figs. 20 and 21, in Section 3.4.8. Oil flow is provided by a 90-W (1/8-hp) centrifugal pump which discharges oil at a pressure of 220 kPa (17 psig). The oil flow is continuously filtered to ensure its cleanliness. A flow switch, FS-005A, is used to automatically start the spare oil pump in case of loss of flow. In the event of loss of normal power, both oil pumps are automatically switched to the emergency generator power supply to ensure that coolant oil flow is maintained while the pump bowl is at elevated temperature. The total oil flow from one operating oil pump is throttled to 2.3 liters/min such that the bearings and oil seals receive 0.6 liter/min of "lube oil" and the remainder flows in parallel through "coolant oil" passages within the pump.

A throttle valve (HV-008) is installed in the lubrication return line to create oil back pressure at the lower oil seal. This feature is provided to ensure that the oil pressure outside the seal is equal to, or greater than, the helium pressure within the seal and thereby maintain lubrication of the lapped seal surfaces. A pressure switch (PS-008) and an alarm are provided to alert the operators if the oil back pressure drops below the normal operating pressure of helium within the lower seal assembly and pump bowl.

The ALPHA pump has been successfully operated in two previous high-temperature molten-salt applications. The pump has operated for 6800 hr at 4800 rpm, pumping $2.5 \times 10^{-4} \text{ m}^3/\text{s}$ (4 gpm) of sodium fluoroborate salt ($\text{NaBF}_4\text{-NaF}$, 92-8 mole %) at a temperature of 455°C. A posttest inspection showed that the bearings and seals were in excellent condition. The pump has accumulated an additional 12,000 hr at 4000 rpm, pumping $2 \times 10^{-4} \text{ m}^3/\text{s}$ (3.1 gpm) of fuel salt mixture ($\text{LiF-Bef}_2\text{-ThF}_4\text{-UF}_4$) at temperatures ranging from 566 to 727°C. These previous pump applications imply that reliable pump operation can be expected in corrosion loops FCL-3 and -4. A summary of expected operating conditions for the ALPHA pump in FCL-3 and -4 is shown in Table 3.

Table 3. Expected operating conditions^a for ALPHA pump in FCL-3 and -4

Type of salt being pumped	LiF-BeF ₂ -ThF ₄ -UF ₄ (72-16-11.7-0.3 mole %)
Salt temperature	566°C (1050°F)
Salt density at 566°C	3.33 g/cm ³ (206 lb/ft ³)
Pump speed	5000 rpm
Salt flow rate	2.5 × 10 ⁻⁴ m ³ /s (4 gpm)
Pump head	58.2 m (191 ft)
Auxiliary tank flow rate	21 cm ³ /s (0.34 gpm)
Pump efficiency ^b	~8%
Cover gas pressure	143 kPa (6 psig)
Type of cover gas	Helium
Lubrication oil flow rate	0.6 liter/min
Lubrication oil pressure at bearing housing exit	157 kPa (8 psig)
Coolant oil flow rate	1.7 liters/min
Helium flow rate through lower oil seal catch basin	80 cc/min
Helium flow rate downward in the shaft annulus	None
Typical lower oil seal leakage	2 to 25 cc/day
Typical upper oil seal leakage	2 to 25 cc/day
Inlet temperature of lubrication oil	32°C (90°F)
Outlet temperature of lubrication oil	42°C (108°F)
Inlet temperature of coolant oil	32°C (90°F)
Exit temperature of coolant oil	35°C (95°F)

^aBased on actual ALPHA pump operation at 566°C in corrosion loop MSR-FCL-2b.

^bThe pump efficiency is very low in this application because the pump operates far from its design point.

Parts were fabricated to provide four complete ALPHA pump rotary assemblies for the corrosion loop program. Also, two pump bowls and two auxiliary tanks were fabricated. Figure 8 shows an exploded view of all the parts of the rotary assembly plus the pump bowl. The auxiliary tank is described in more detail in the next section of this report.

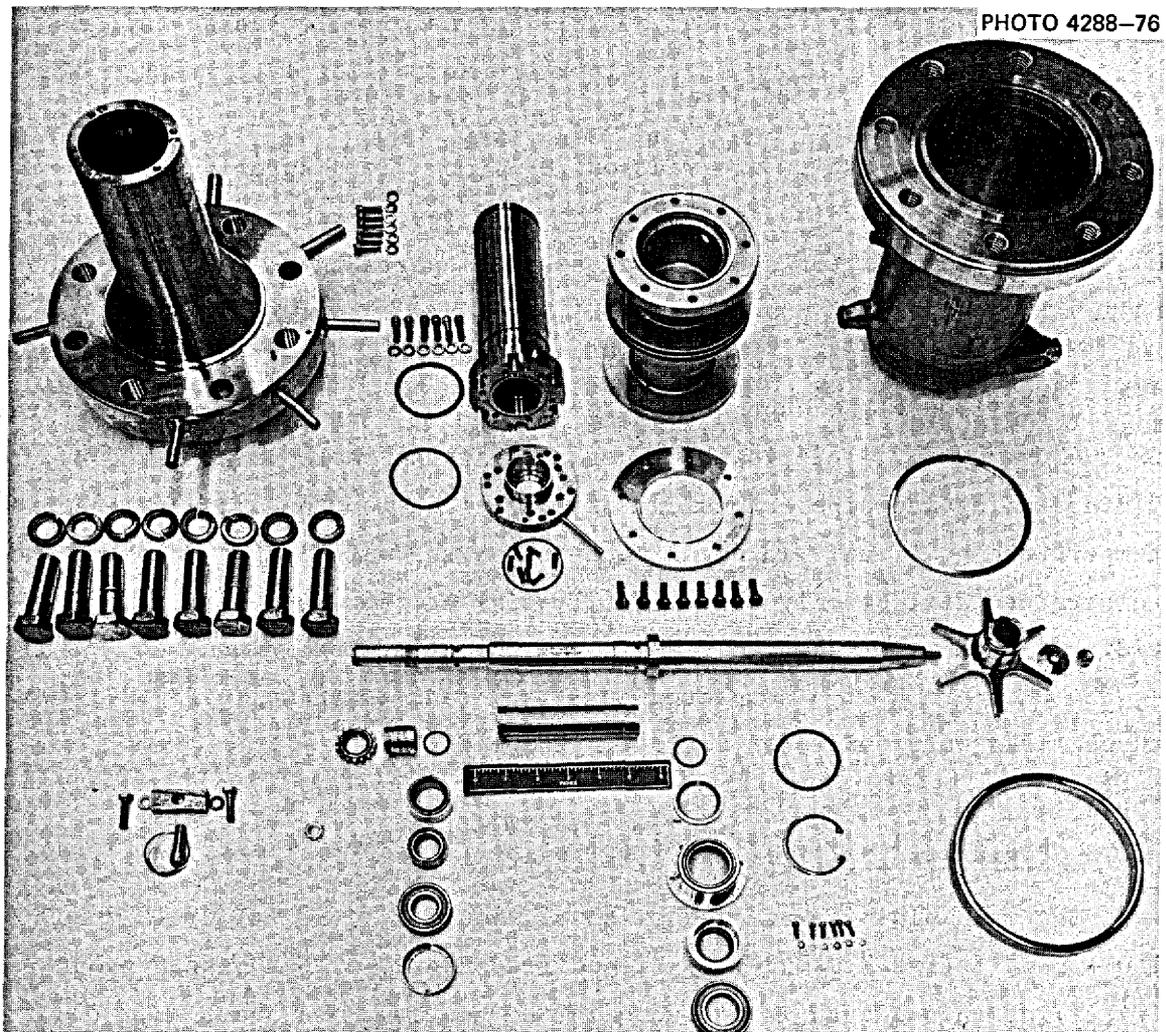


Fig. 8. Exploded view of the ALPHA salt pump rotary assembly and pump tank.

3.2.2 Auxiliary tank

The auxiliary tank serves as an extension of the ALPHA pump bowl. It is connected to the pump bowl by circulating salt lines and by a single vent connection into the helium space above the gas-salt interface.

Six nozzles penetrate the top head of the auxiliary tank. Three of these are of 19-mm-OD (3/4-in.) tubing for insertion of liquid level probes. The other three nozzles are 33-mm-OD (1-in., sched-40 IPS). These latter three penetrations are for salt sampling, chemical additions, and electrochemical probes. The liquid-level-probe penetrations are provided with compressed Teflon seals. The salt sampling, chemical addition, and electrochemical probe ports are sealed by ball valves with Teflon seats.

The inside dimensions of the tank are approximately 152 mm in diameter (6 in.) by 178 mm high (7 in.) The lower portions of the tank, which are exposed to flowing salt, are made of 2% Ti-modified Hastelloy N. Upper parts of the tank, which are above the salt level, are made of standard Hastelloy N, except for some stainless steel parts that are used at the ball valves and level probe seals.

The design pressure and temperature of the tank are 0.5 MPa (65 psia) and 705°C (1300°F), except at the Teflon seals, where the design temperature is 204°C (400°F). This lower temperature at the seals is achieved by providing tubing and pipe extensions of sufficient length to assure the proper temperature gradient. In normal operation, the anticipated pressure and temperature will be only 0.15 MPa (21 psia) at 566°C (1050°F), thus providing a good margin between design and operating conditions.

A photograph of a completed auxiliary tank is shown in Fig. 9; two of these tanks were built for corrosion loops FCL-3 and -4.

3.2.3 Piping system

The main piping system consists of about 27 m (90 ft) of 13-mm-OD X 1.07-mm-wall (1/2 X 0.042-in.) Ti-modified Hastelloy N tubing. About 7 m (24 ft) of this length is included in the heaters, and about 12 m (38 ft) is in the coolers. Corrosion specimens are installed at three points in the piping system, as described in detail in Section 3.2.4.

PHOTO 4290-76

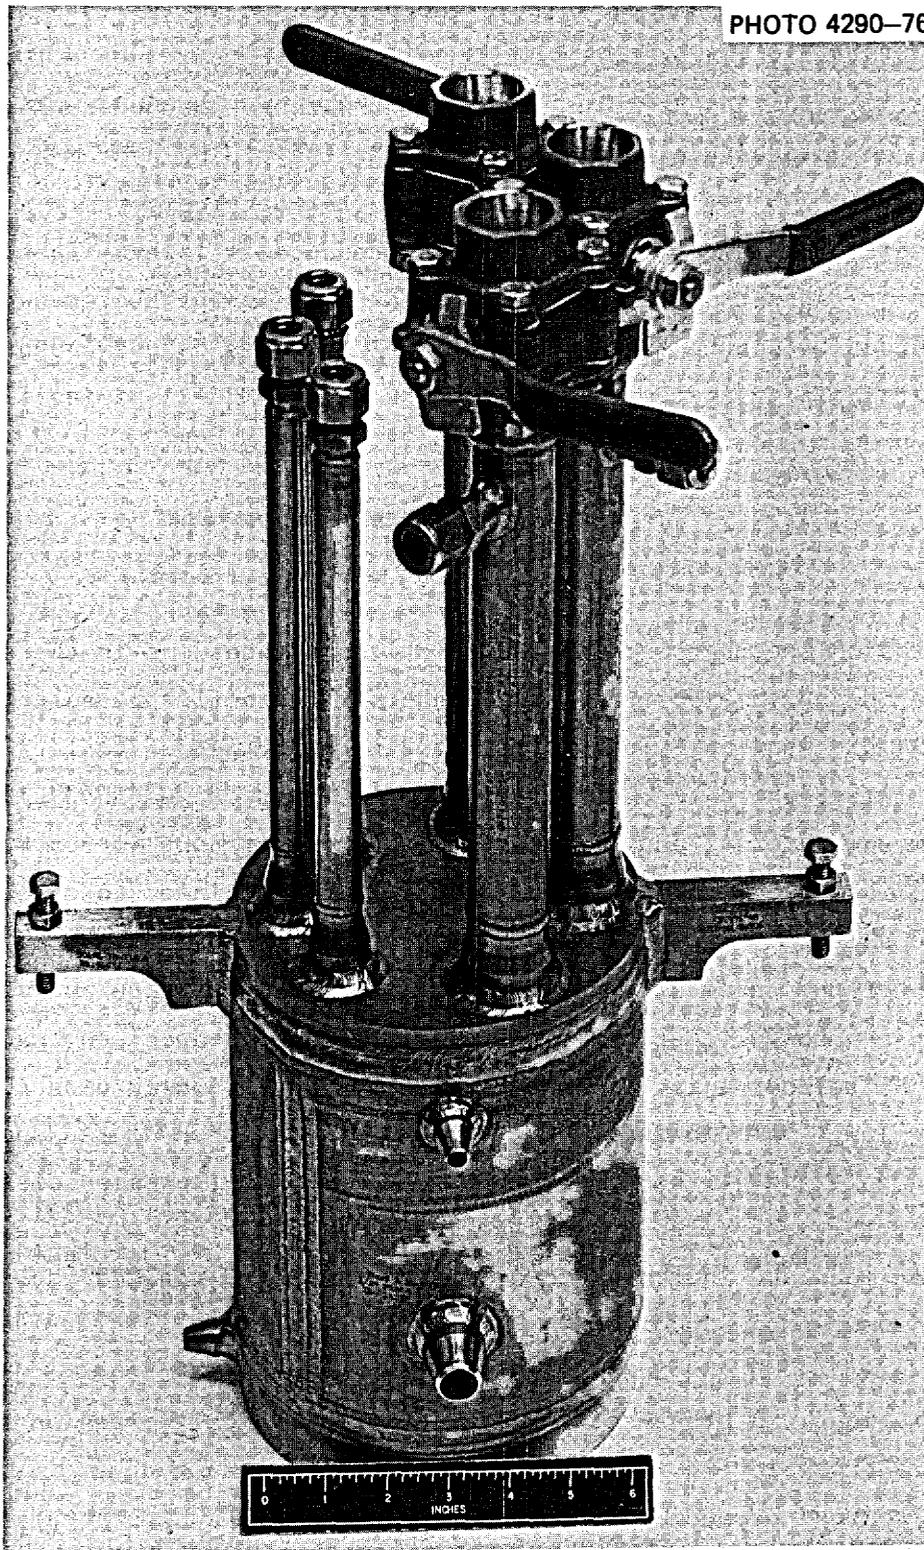


Fig. 9. Auxiliary tank for ALPHA salt pump (1 in. = 25.4 mm).

The normal flow rate of salt in the piping system is $2.5 \times 10^{-4} \text{ m}^3/\text{s}$ (4 gpm). This gives a velocity of about 3 m/s (10 fps) in the 10.5-mm-ID (0.413-in.) tubing and Reynolds moduli in the range of 6600 to 14,000.

The design pressure and temperature for the piping system are 1.8 MPa (265 psia) and 705°C (1300°F), except in heater sections, where a higher metal temperature is permitted since the pressure is lower. (See Section 3.2.7 for pressure-temperature design conditions in the heater sections.)

In order to ensure that cyclic thermal stresses do not cause fatigue failure, the piping system was analyzed using the MEC-21 piping flexibility computer program⁸ developed at the Mare Island Naval Shipyard, San Francisco, Calif.

3.2.4 Corrosion specimens

Corrosion specimens are installed at three locations in the system that were chosen to expose the specimens to three different salt temperatures. Sample station 1 is located between the outlet of cooler 2 and the pump inlet, where the bulk salt temperature is 566°C (1050°F). Station 2 is between heaters 1 and 2, where the salt temperature is 635°C (1175°F). Station 3 is between the outlet of heater 2 and the inlet to cooler 1, where the salt temperature is 705°C (1300°F).

Each of the three stations has provision for insertion and withdrawal of a specimen holder that holds six specimens. Each specimen, made of Ti-modified Hastelloy N, is 0.86 mm thick (0.034 in.), 4.6 mm wide (0.181 in.), and 43 mm long (1 11/16 in.). The cross-sectional area of the specimen holder is enlarged at the upper end to decrease the flow area of the salt. Therefore, the salt velocity is a nominal 3 m/s (10 fps) over the lower three specimens and increases to a nominal 6 m/s (20 fps) as the salt passes over the upper three specimens. This design feature allows evaluation of velocity effects on the corrosion rates at each of the three corrosion sample stations. A cross-section drawing of a typical corrosion specimen station is shown in Fig. 10.

The corrosion specimens are inserted and withdrawn through a salt freeze valve and two ball valves at each station. This feature allows frequent specimen removal at minimum cost, since no cutting or welding operations are required to gain access to the specimens within the piping system.

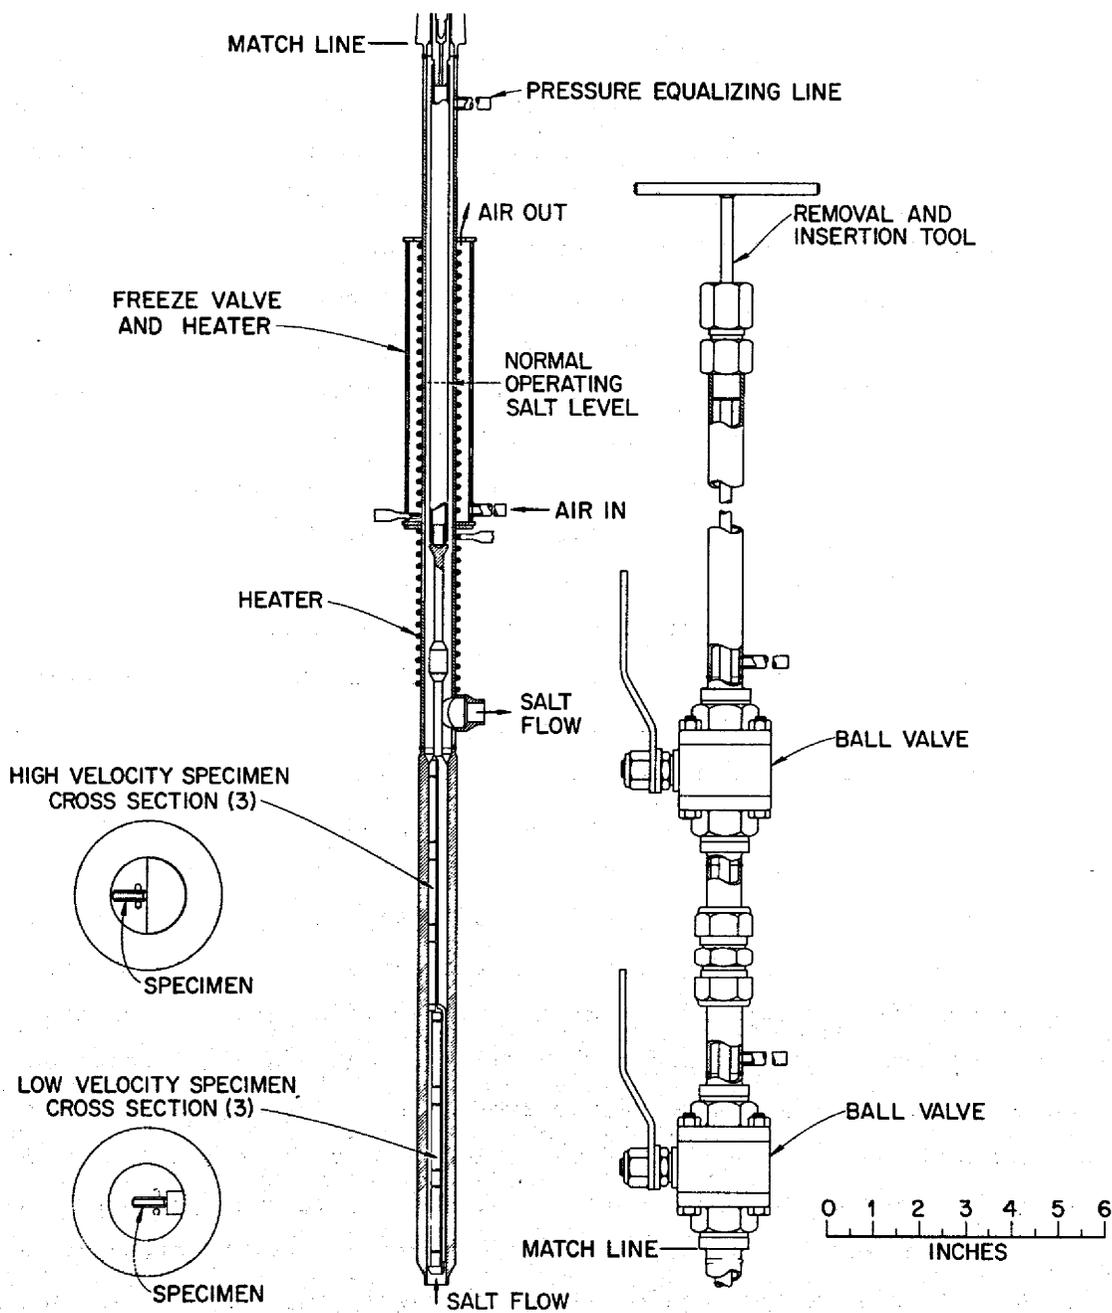


Fig. 10. Corrosion specimen installation and removal system for MSR-FCL-3 (1 in. = 25.4 mm).

Also, the specimens are attached to the specimen holder by special clips and 0.8-mm-diam (0.031-in.) wire to eliminate welding operations during installation of specimens on the holder.

The freeze valve serves as a block valve to prevent escape of salt through the access port during normal operation. The two ball valves provide an air lock for evacuation and helium purging during insertion or withdrawal operations, since it is desirable to minimize atmospheric contamination during specimen removal or reinsertion.

The salt will usually not be drained from the loop during specimen examination, since this might alter the salt composition slightly by mixing with the heel of salt remaining in the fill-and-drain tank. The salt in the drain tank can have significantly different impurity levels than the circulating salt due to corrosion processes over long periods of time or due to experimental salt chemistry modifications that are sometimes made to the pumped salt inventory. The ability to change corrosion specimens without salt drainage is a relatively new feature in pumped salt corrosion loops at ORNL and is expected to be very useful in precisely monitoring corrosion and mass transfer phenomena.

A typical corrosion specimen removal and examination proceeds as follows. The thermal gradient in the salt loop is removed by lowering the input of the main resistance heaters while simultaneously turning off the air blowers on the coolers. The salt pump is then stopped, and all gas equalizer lines are opened between the three corrosion specimen stations and the free liquid salt surface in the pump auxiliary tank. The three corrosion specimen stations and pump auxiliary tank are all located at the same vertical elevation to permit free liquid surfaces at all four locations while the freeze valves are melted. Careful operation is required to ensure that no sudden pressure surges or unequal pressures occur during specimen removal or insertion, since this will lift salt above the normal salt levels in the freeze valves and result in plugged gas lines or damaged ball valves.

Past experience on a similar loop has shown that corrosion specimen removal, examination, reinsertion, and loop restarting can be accomplished in 8 hr.

3.2.5 Fill-and-drain tank

The fill-and-drain tank, as the name implies, is used in routine filling and draining operations. It also serves as a sump into which loop contents may be dumped in the event of an emergency. The tank is installed at the lowest point in the system. The cylindrical fill-and-drain tank is installed with the axis horizontal and is about 0.18 m in diameter (7.1 in.) by 0.56 m long (22 in.), with an internal volume of ~14 liters (0.49 ft³). The tank is provided with a series of nozzle connections for (1) filling, (2) draining, (3) evacuation, (4) salt sampling, and (5) installation of liquid-level probes. All parts of the tank that are exposed to salt are fabricated of standard Hastelloy N except for the area of the low temperature seals, where some stainless steel materials are used. A photograph of the fill-and-drain tank is shown in Fig. 11.

A 33-mm-OD (1-in., sched-40) nozzle extension with Teflon-seated ball valve closure is provided for evacuation and salt sampling. Two 33-mm-OD (1-in., sched-40) nozzles with Teflon compression seals are used for liquid-level probe insertion. A 13-mm-diam (0.5-in.) tubing nozzle with compression fitting is provided for pressurizing, off-gas, and pressure equalization. Another 13-mm-diam (0.5-in.) tubing nozzle, normally capped off with a compression fitting plug, is available for external filling and draining of the tank. Three 9.5-mm-diam (0.4-in.) tubing connections are welded to the loop fill-and-drain lines.

Design pressure and temperature for the tank are 0.8 MPa (115 psia) and 648°C (1200°F) except at the Teflon seals, where the design temperature is 204°C (400°F) maximum. Anticipated normal operating pressure and temperature are 0.24 MPa (35 psia) and 566°C (1050°F).

3.2.6 Salt coolers

The heat that is added to the salt in the circulating loop by means of resistance-heated pipes and by pumping power input is removed at the two salt-to-air coolers, which are installed in the system in series. Cooling capacity is 100 kW (342,000 Btu/hr) for cooler 1 and 58 kW (200,000 Btu/hr) for cooler 2, for a total of 158 kW (542,000 Btu/hr).

Each cooler was designed for 0.9 m³/s (2000 cfm) of ambient air flow from inside Bldg. 9201-3 by a centrifugal forced-draft fan. However,

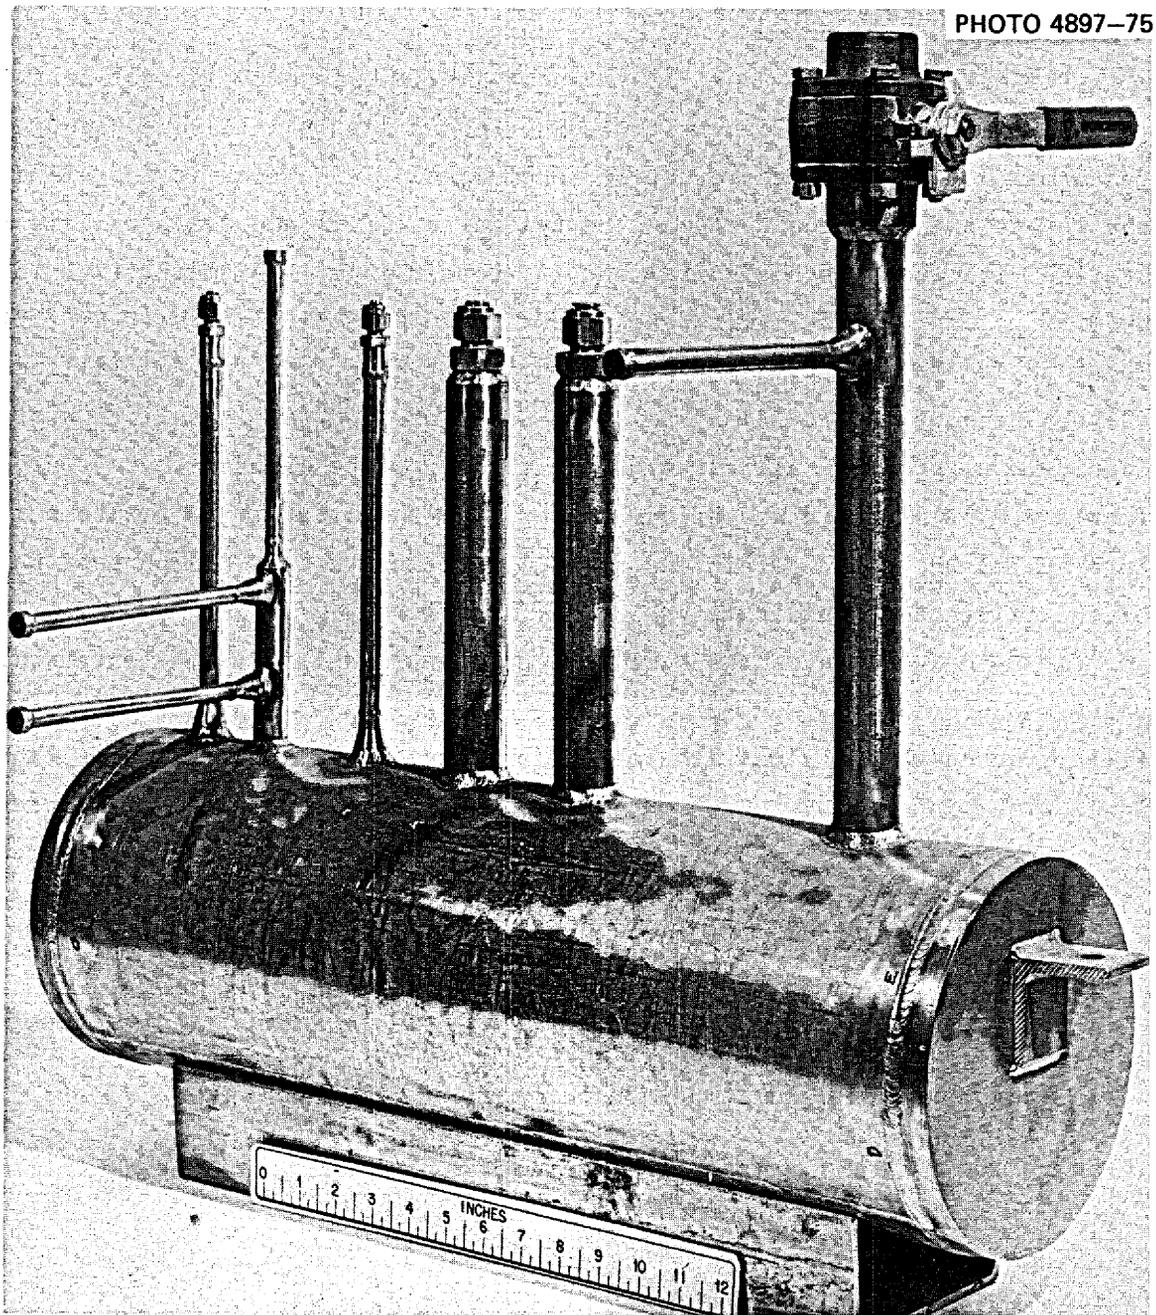


Fig. 11. Fill-and-drain tank for FCL-3 and -4 (1 in. = 25.4 mm).

actual field measurements on FCL-2 showed that more than $1.4 \text{ m}^3/\text{s}$ (3000 cfm) is available with the present 2.2-kW (3-hp), 1750-rpm blower motors. Therefore, excess cooling capacity is available on FCL-3 and FCL-4 if needed. The air flows over the finned helical tubes of coolers and is then exhausted vertically into the high-bay area of the building.

Each cooler consists of four helical coils of finned tubing with a coil diameter of 0.46 m (18.1 in.) and a pitch of 0.076 m (3.0 in.). Fin material is nickel and fin thickness is 1.6 mm (0.063 in.). Fins are brazed to the Ti-modified Hastelloy N tubes, using Coast Metals No. 52 brazing alloy. The effective lengths of the finned sections are 5.7 m (18.8 ft) for cooler 1 and 5.5 m (17.9 ft) for cooler 2.

The fins for coolers 1 and 2 have different outside diameters and spacing. The fin is 51 mm OD (2 in.) for cooler 1 and 38 mm (1.5 in.) for cooler 2. The fin spacing pitch is 5.6 mm (0.22 in.) for cooler 1 and 8.5 mm (0.33 in.) for cooler 2. This difference in fins is used to provide a lesser degree of cooling in cooler 2 in order to prevent freezing of salt in the latter cooling stage. The fin spacing was increased from that used in an earlier corrosion loop, MSR-FCL-2, because FCL-3 and FCL-4 have a higher operating temperature at the coolers and therefore require fewer fins to reject the design heat load. A finned cooler coil fabricated for MSR-FCL-2 is shown in Fig. 12 for information purposes. The cooler coils for FCL-3 and FCL-4 were not completed prior to project termination but would have been similar to Fig. 12.

A unique feature of these coolers is the requirement that they must serve as ovens for preheating their respective portions of the system during startup when the entire system must be heated to a temperature above the liquidus of the salt. The coolers are designed to serve as heaters at this time, with electrical connections provided so that the finned tubes are heated by direct electrical resistance in a manner similar to the main heaters. Air flow is restricted at this time to the maximum degree possible, not only by cutting off the blowers but also by closing the specially designed air duct valves or dampers to further reduce natural convection inside the coolers. The cooler heaters are energized at all times, whether in preheating operation or during ΔT operation. Power inputs of about 5 kW are required at each cooler heater to keep the fuel-salt mixture from freezing. A photograph of two of the cooler housings, which discharge the heated air vertically, is shown in Fig. 13.

Operation of corrosion loop MSR-FCL-2 showed that a modification of the original cooler design and other related scram features was needed to reduce heat losses at the coolers after a scram. In FCL-2, any scram

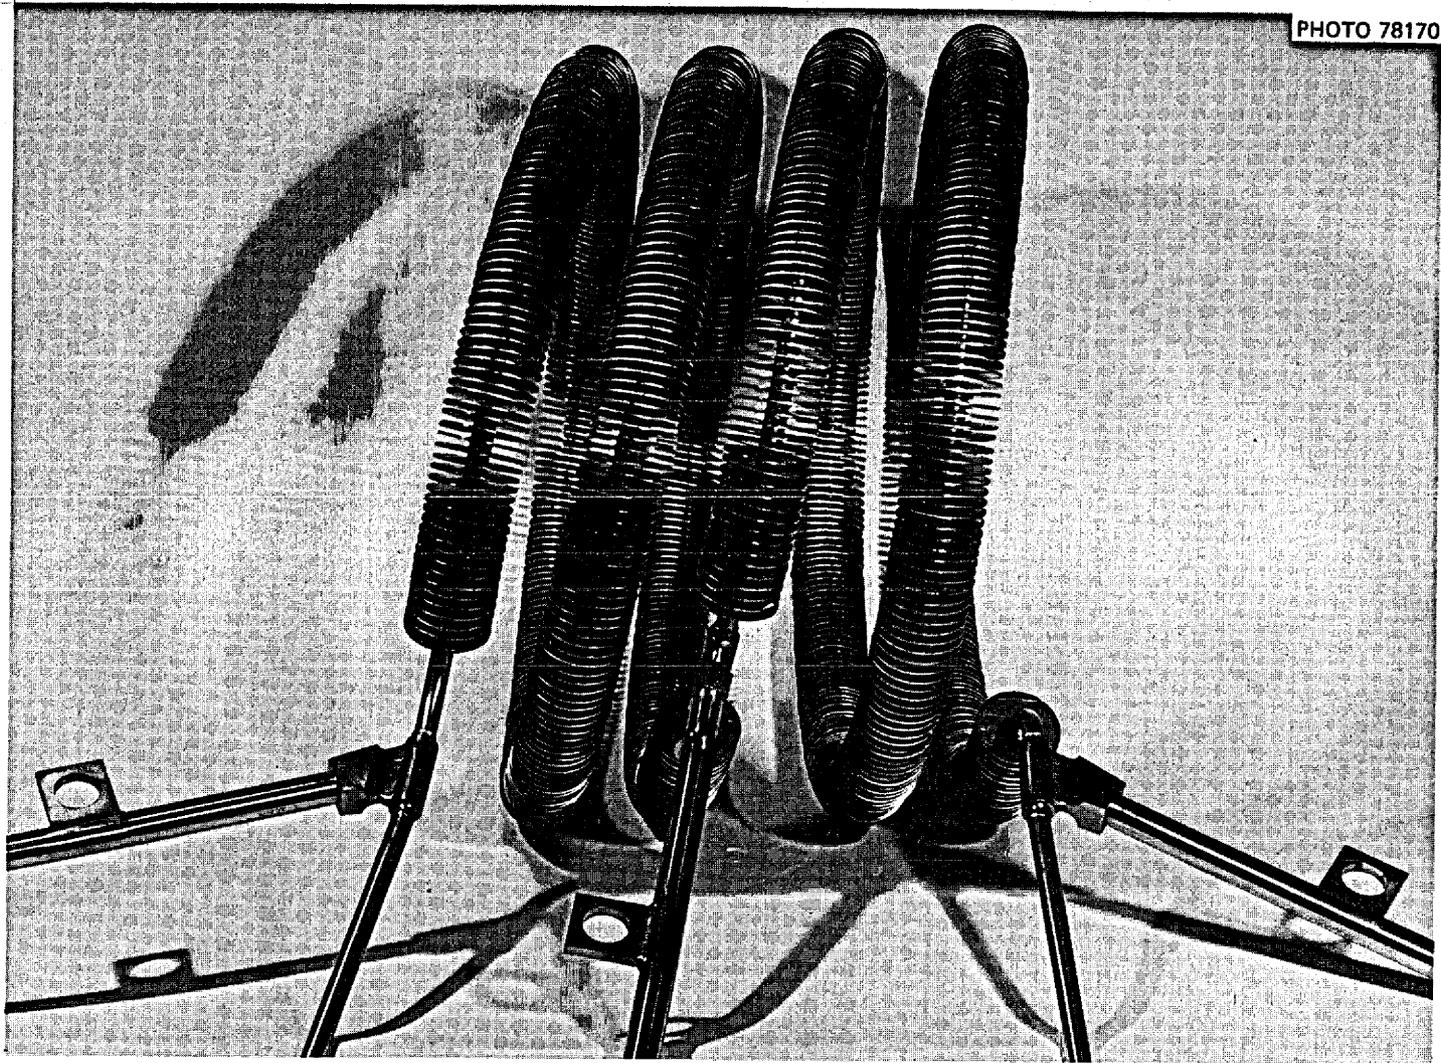


Fig. 12. Air-cooled heat exchanger coil for molten-salt corrosion loop.

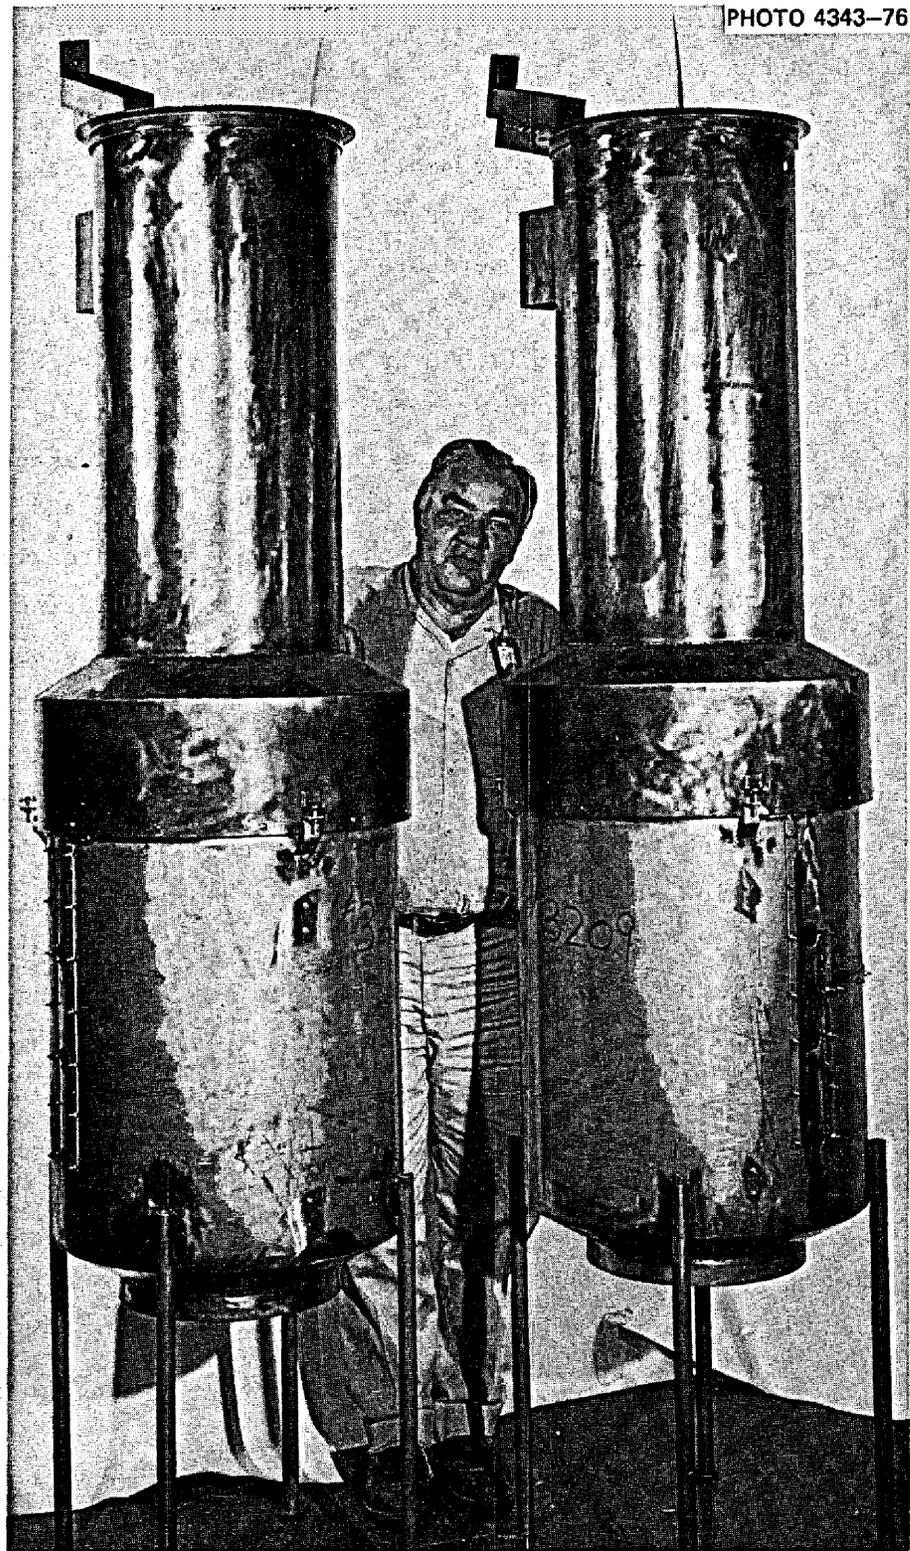


Fig. 13. Cooler housings for corrosion loop FCL-3.

action (manual or automatic) turned off the main resistance heaters, turned off the air blowers, closed the insulated dampers on the cooler housing, and stopped the ALPHA pump. Salt freezing always occurred in the coolers of FCL-2 after loop scram, due to the large mass of air-cooled metal within the cooler housing and the relatively small mass of hot salt within the cooler coils. Temperature recordings from the bottom, coldest, portions of the cooler coils showed that temperatures dropped as low as 260°C after a scram, which is far below the salt liquidus of 500°C. This did not cause significant problems during about 17,000 hr of operation other than delaying resumption of salt circulation for a few hours while gradual remelting occurred. However, in two shutdowns, pipe rupture and salt leakage occurred because salt froze in another portion of the loop in addition to the known freezing in the coolers. Since the second frozen area was not apparent to the operators during either incident, normal operating and remelting programs were followed, which resulted in salt liquid expansion and pipe rupture between the frozen coolers and the unsuspected salt plug.

Several design modifications were made to FCL-2 to reduce the likelihood of further incidents of this type. The scram circuits were revised to provide continuous salt-pump operation at a reduced speed of 2000 rpm after each scram in lieu of the previous scheme which provided for stopping the pump. This provides more heat energy to the cooled metal within the cooler housing via the flowing salt. Also, the cooler housing was modified with internal thermal insulation and added electric "guard" heaters to reduce the mass of cold metal to which the salt-containing cooler coil can transfer heat. The guard heaters are energized after the cooling air is flowing through the coolers and are automatically de-energized to prevent overheating of the cooler if air flow is interrupted, as is done during a scram or shutdown. Thirdly, an automatic solenoid valve was added to turn off auxiliary cooling air to the heating lugs on the main resistance heaters after a scram or whenever the heaters are deactivated.

Tests of the FCL-2 automatic system shutdown from ΔT operation were made to verify that the design modifications would prevent salt freezing in the coolers after a scram. The tests were successful and showed that the newly added automatic features worked as planned; that is, the pump

speed was reduced from design speed to 2000 rpm, the guard heaters on the coolers were de-energized, and the cooling air on the resistance heater lugs was cut off. Due to the new design modifications, the salt continued to flow at a reduced rate after the scram and the isothermal circulating salt temperature fell only to 565°C (1050°F), which is considered a safe level above the salt liquidus of 500°C (932°F).

It was planned to include the above design features in FCL-3 and FCL-4 because they worked successfully in FCL-2. However, the molten-salt program was canceled before the design changes were effected. Therefore, record design drawings for FCL-3 and FCL-4 do not show these changes, but they would have been included if the program had proceeded to completion. Record drawings of FCL-2 do show these various modifications.

3.2.7 Main heaters

Power input to the main heater of the loop is accomplished by means of direct resistance heating of a portion of the piping. Two sections of tubing, 12.7 mm OD (0.5 in.) X 1.07 mm wall (0.042 in.), are designated as heaters 1 and 2. Each heater is approximately 3.7 m long (146 in.), and heat input at each is 79 kW (270,000 Btu/hr) for a total of 158 kW (540,000 Btu/hr). The heat flux for this rate of heat input is 0.65 MW/m² (205,000 Btu/hr ft²). Each heater section has four large electrical lugs; the two outer lugs are at ground potential and the two center lugs are at higher potential. At design power, the voltage potential from center to end lug is about 46 V, and the current in the pipe wall is about 860 A.

Pressure and temperature gradients through the two heater sections are such that the temperature of the salt increases as pressure decreases. This is beneficial in that the advantage of higher strength in the metal wall of the piping is present at that part of the heater that must contain the higher pressure. For heater 1, design and operating pressure and temperature range from 1.9 MPa (270 psia) at 670°C (1238°F) to 1.6 MPa (235 psia) at 738°C (1360°F). For heater 2, these values range from 1.48 MPa at 727°C (1340°F) to 1.3 MPa at 793°C (1460°F). The specified pneumatic test pressure is 38.9 MPa (5640 psia) at room temperature for both heaters.

Main loop heaters 1 and 2 and cooler heaters 1 and 2 are controlled by individual saturable reactors and associated monitoring and control

circuitry. The monitoring and instrumentation circuitry is described in Sect. 3.4. Main loop heater 2 is automatically controlled to maintain a selected heater outlet temperature, while the other three direct resistance heaters are manually set at selected power levels. The 110-kVA transformers and saturable reactors that supply power for the main resistance heaters of FCL-4 are shown in Fig. 14.

3.2.8 Auxiliary heaters

The auxiliary heaters trace the system piping, and individual heater output is manually adjustable by operation of the associated variable transformer. The operation of the heaters is monitored and recorded by thermocouples and recording instruments. The proper voltage setting is determined experimentally to establish the desired preheating temperature, and then mechanical stops are installed on the controller to preclude accidental overheating by the operator.

Tubular electric heaters are used for auxiliary heating on the loop components and all sections of piping that are not direct resistance heated. The tubular-type auxiliary heaters are rated 1640 W/m (500 W/ft), 230 V, and 815°C (1500°F) sheath temperature. These heaters are operated at a maximum of 140 V, which provides a convenient method of derating commercially available 230-V heaters from 1640 to 575 W/m (175 W/ft). This greatly increases the life of the heaters and consequently reduces maintenance and associated downtime of the facility.

All tubular electric heaters are x-rayed before installation on the loop piping to precisely determine the location of the heating coil within the heater. Past experience has shown that manufacturing tolerances on the internal heater lead lengths are large enough to create unintentional frozen areas in molten-salt piping systems unless such precautionary measures are used.

Clamshell auxiliary heaters are used on the main loop heater piping systems 1 and 2 and also on freeze valves and connecting lugs. These heaters are rated 115 V or 120 V with maximum heater temperatures of 980°C (1800°F). These heaters are also operated at reduced voltage and power for the reasons stated above. Clamshell heaters were selected for the direct resistance heated section of the loop because they are mounted on

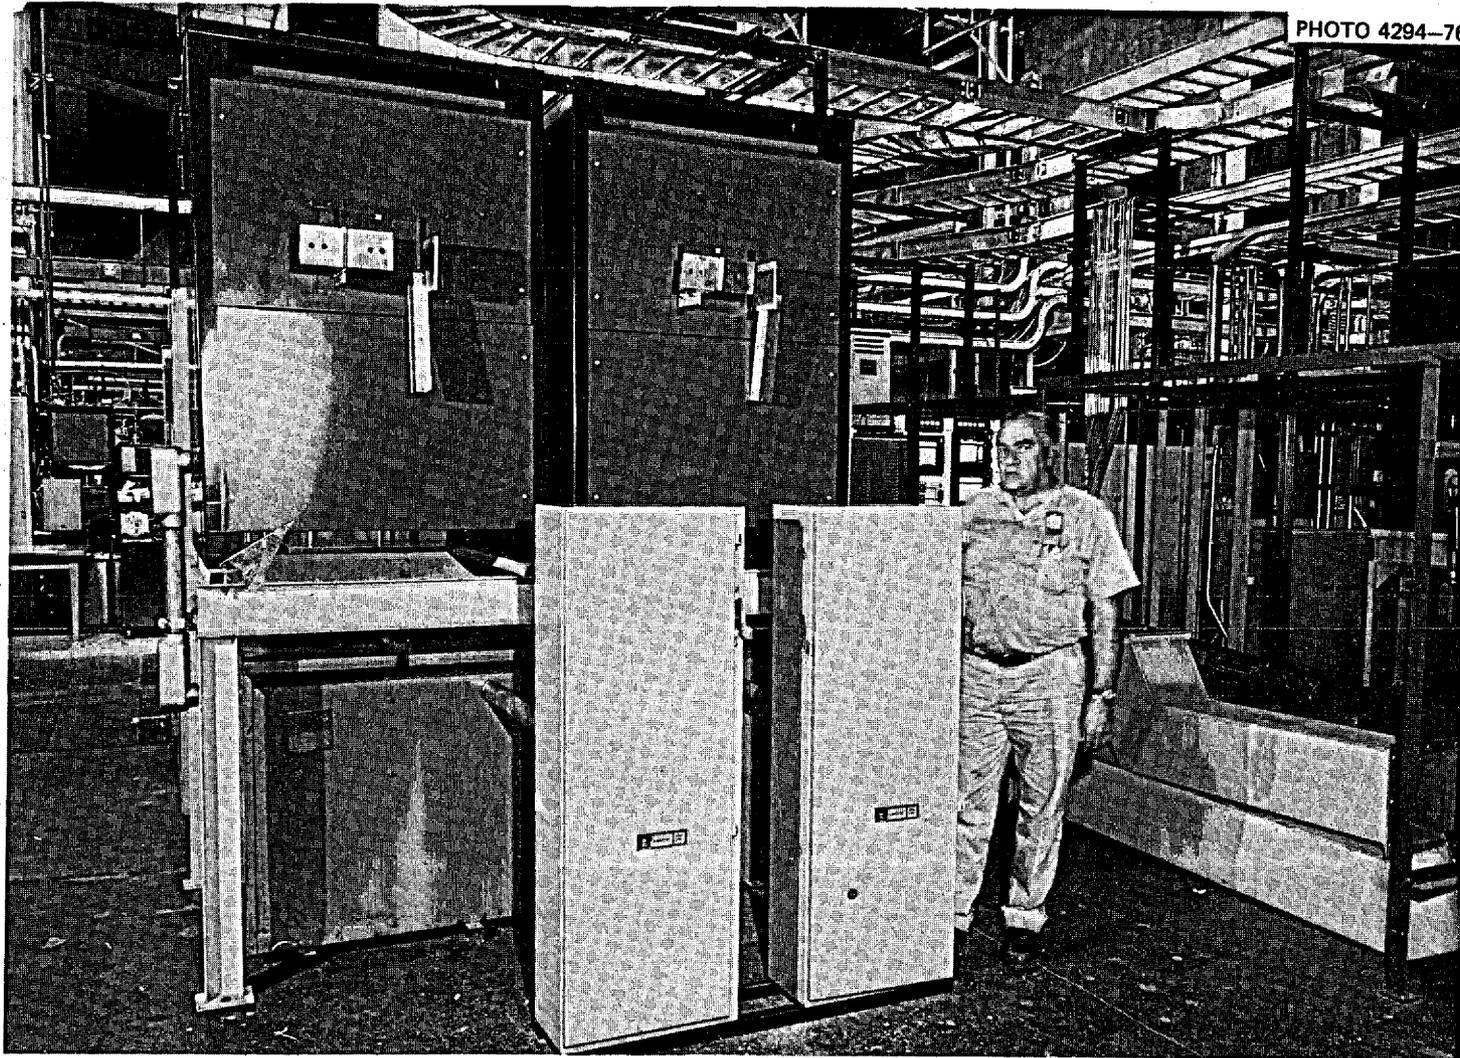


Fig. 14. 110-kVA transformers and saturable reactors for main resistance heaters on FCL-4.

fired-lava spacers and thereby electrically insulated from the voltage that is applied directly to the piping and lugs.

3.2.9 Helium cover-gas system

Dry oxygen-free helium is supplied to FCL-3 and FCL-4 by the cover-gas system previously used at the Molten-Salt Reactor Experiment (MSRE). This gas system, shown schematically in Fig. 15, is shared with the Coolant-Salt Technology Facility, Gas-Systems Technology Facility, and corrosion loop MSR-FCL-2.

Helium is normally supplied by one of two banks of three standard cylinders. The supply line has a pressure indicator and alarm (PIA-500E), which is activated at 2.2 MPa (300 psig); this is followed by a pressure-reducing valve (PCV-500G), which lowers the supply pressure to 1.8 MPa (250 psig). This pressure is monitored by a high-low alarm switch (PA-500) set at 2.0 MPa (275 psig) and 1.5 MPa (200 psig). The supply line also has a tee leading to the oxygen analyzer AO₂-548.

The supply line then branches into two parallel stainless steel tubing lines to supply the two helium-treatment stations. The identical branches contain a tee to a purge vent, gas-treatment equipment, a tee leading to a rupture disk, a tee for a gas cylinder connection, and isolation valves.

The purge vents, lines 504 and 505, are used to vent helium from cylinders that can be connected at V-500B and V-500C to backflush and regenerate the helium dryers. The vents combine into a single tube that contains a flow indicator (FI-505) before the helium is vented to the atmosphere.

The rupture disks in lines 506 and 507 provide overpressure protection for the helium-treatment equipment. These lines also contain high-pressure alarms, PA-506 and PA-507, that are set at 2.0 MPa (275 psig).

The two branches of the treatment system recombine as line 500, which is connected to a flow-indicating controller and an air-operated control valve (FCV-500) that limits the supply gas flow to 10 liters/min (0.35 ft³/min).

A third dryer (DR-3) is located downstream of FCV-500 in the line leading to the treated-helium storage tank and subsequently to corrosion loops FCL-3 and FCL-4. The gas supply for the corrosion loops tees off

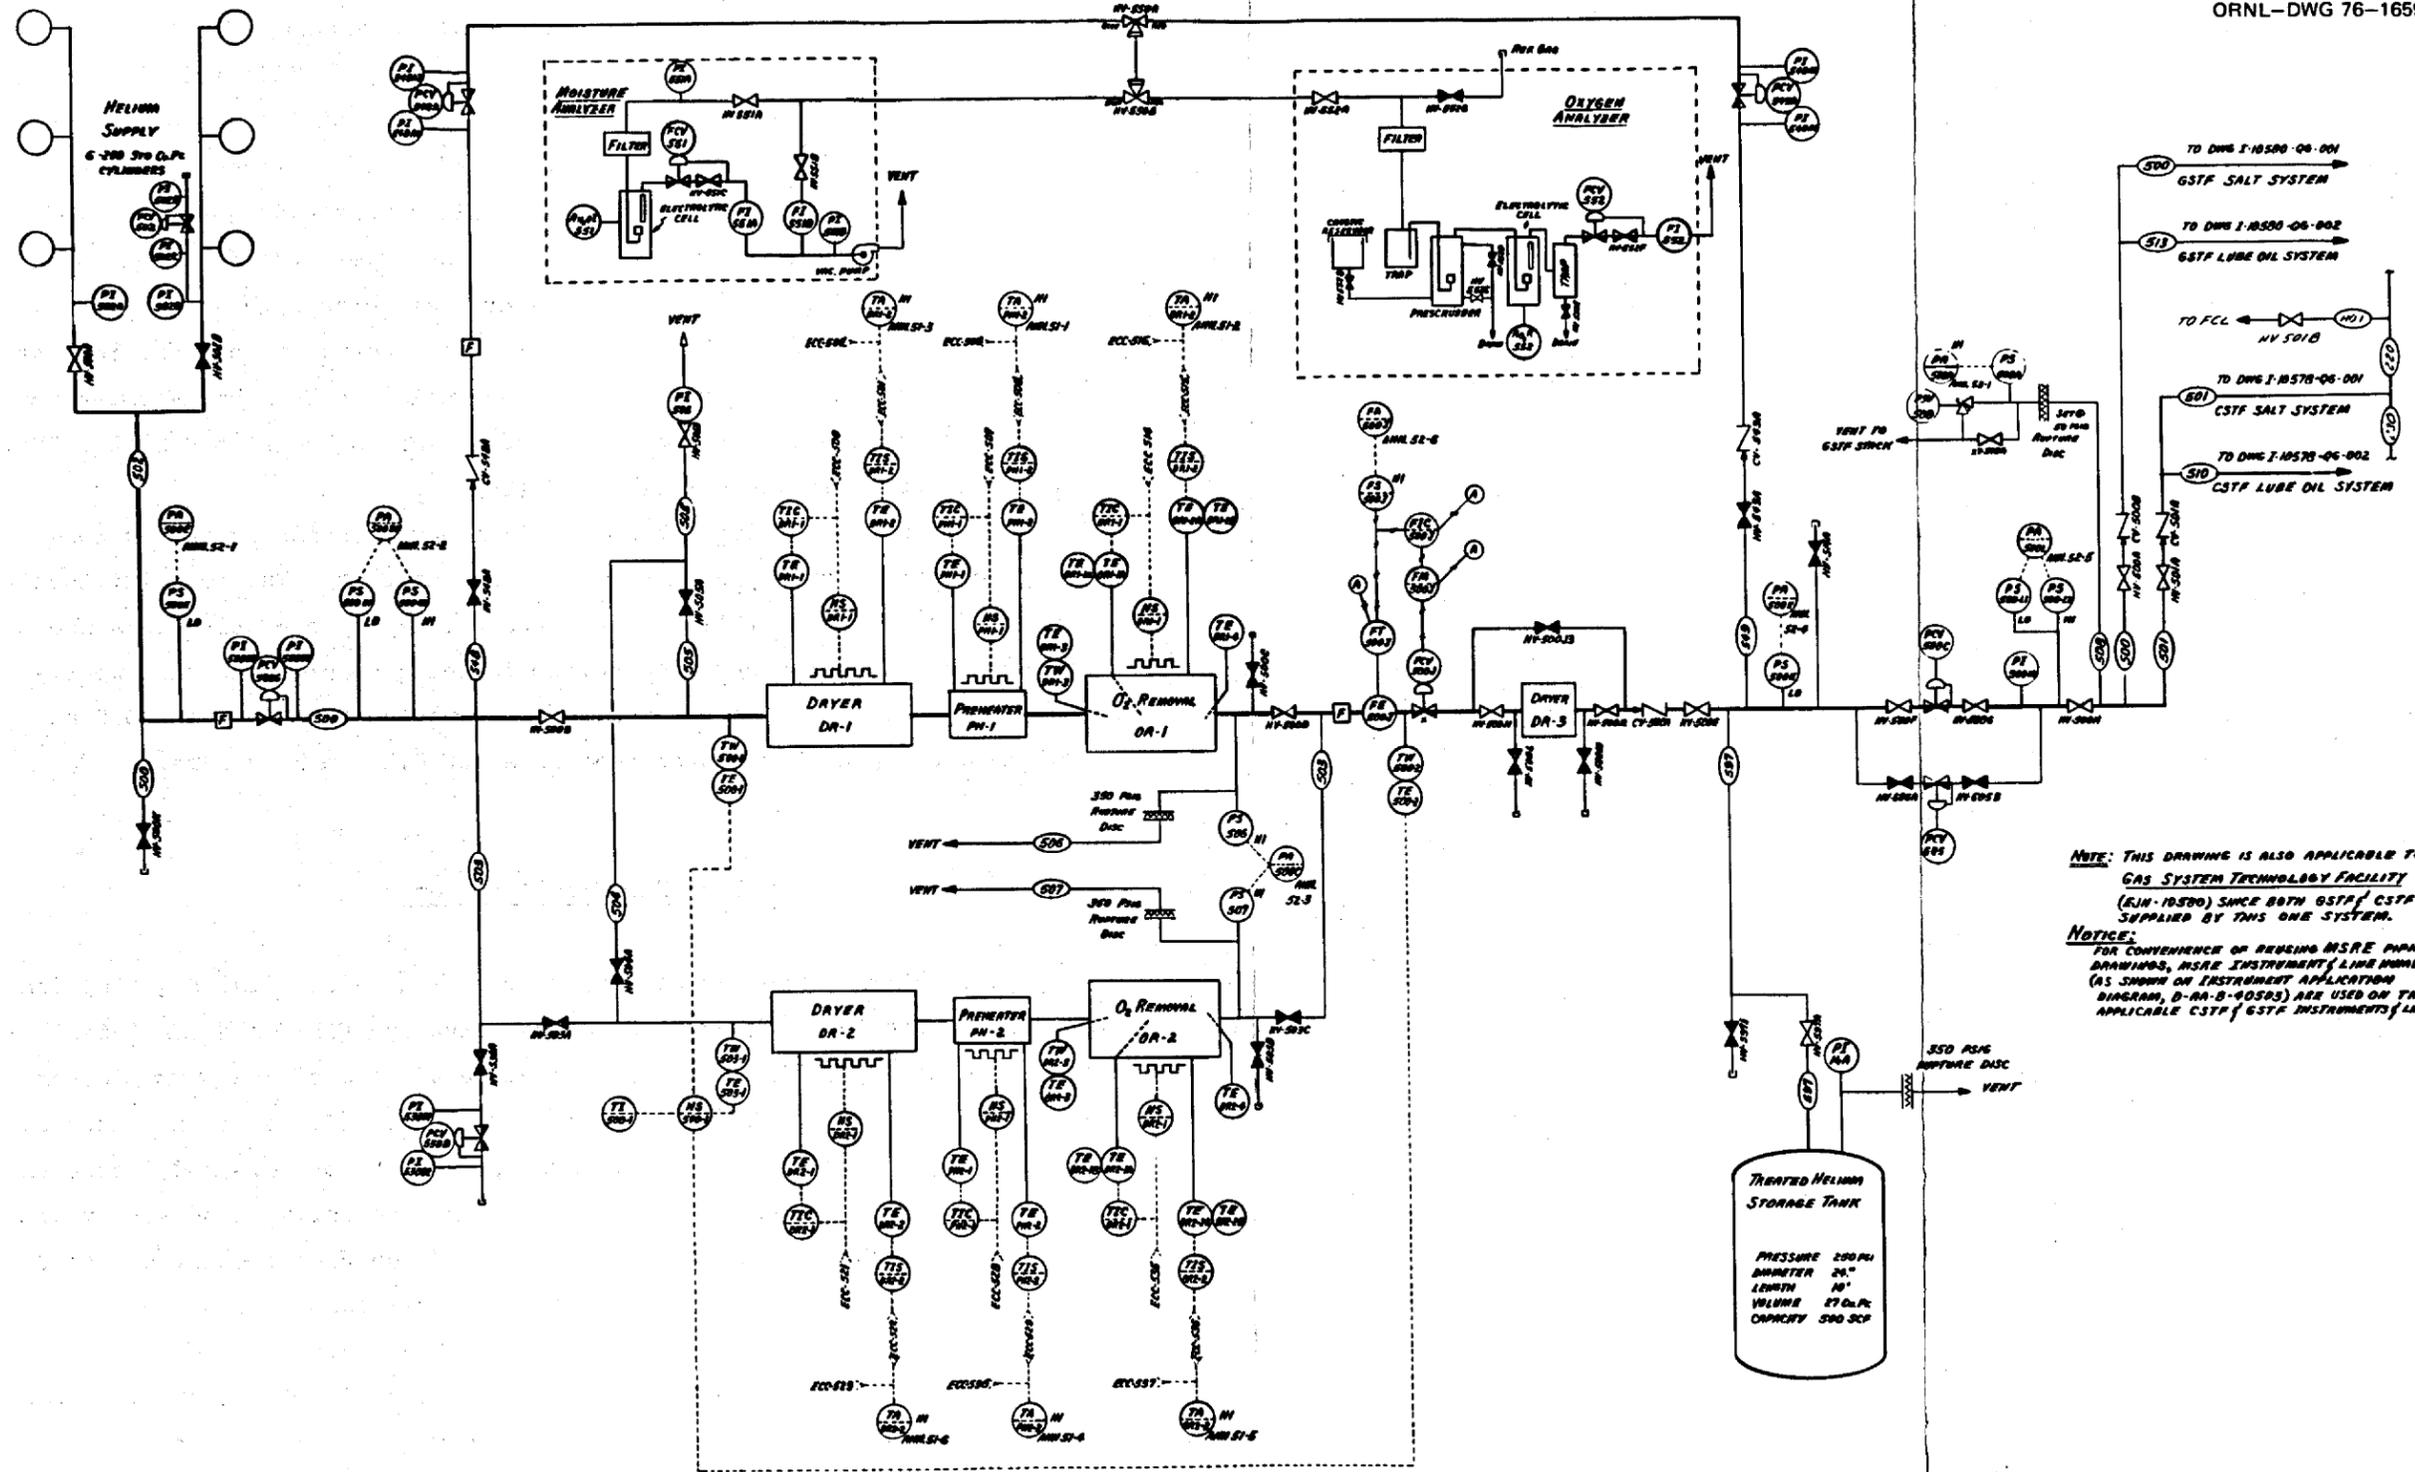


Fig. 15. Instrument application diagram for the helium cover-gas system.

from line 501, which supplies the Coolant-Salt Technology Facility, and then branches again for each of the corrosion loop facilities. The remainder of the gas lines on corrosion loops FCL-3 and FCL-4 are shown on the instrument application diagrams, Figs. 20 and 21 of Section 3.4.8.

The three gas dryers are filled with Linde molecular sieve No. 13X and normally operate at room temperature. The dryers can be regenerated by heating to 205°C (400°F) and flowing dry gas through the bed to carry off accumulated moisture. The preheater is not normally used and is kept at room temperature. Oxygen removal is accomplished by a high-temperature bed of titanium chips. The operating bed is maintained at 540°C (1000°F), while the standby bed is kept at 425°C (800°F).

The helium gas leaving the MSRE helium purification system is constantly monitored for oxygen and water vapor content. The impurity levels are checked and logged at least once each weekday by operating personnel to ensure that properly purified helium is being supplied to the experiments. Past data show that typical water vapor content is about 0.2 ppm by volume and typical oxygen content is about 0.3 ppm by volume.

3.3 Electrical Systems

Figure 16 is a one-line diagram of the plant electrical distribution system to substations 18E and 15E, which serve the FCL-3 and FCL-4 facilities, respectively. Figure 17 is a one-line diagram of the normal power and emergency power electrical systems for FCL-3. (An identical installation is designed for FCL-4.) Electrical power for controls and instruments that are necessary for experimental operation, monitoring, and safety are supplied from both the normal power system and the diesel-generator emergency power system through automatic transfer switches.

Normal power is supplied by TVA from a 154-kV network through a 40-MVA, 154/13.8-kV transformer to a 13.8-kV bus distribution system. Circuit breaker 1332 and disconnect switch 1332EA serve transformer 418E (13.8 kV, 460 V, 1500 kVA), which in turn serves substation 18E. Circuit breaker 1333 and disconnect switch 1333EC serve transformer 415E (13.8 kV, 460 V, 1500 kVA), which in turn serves substation 15E.

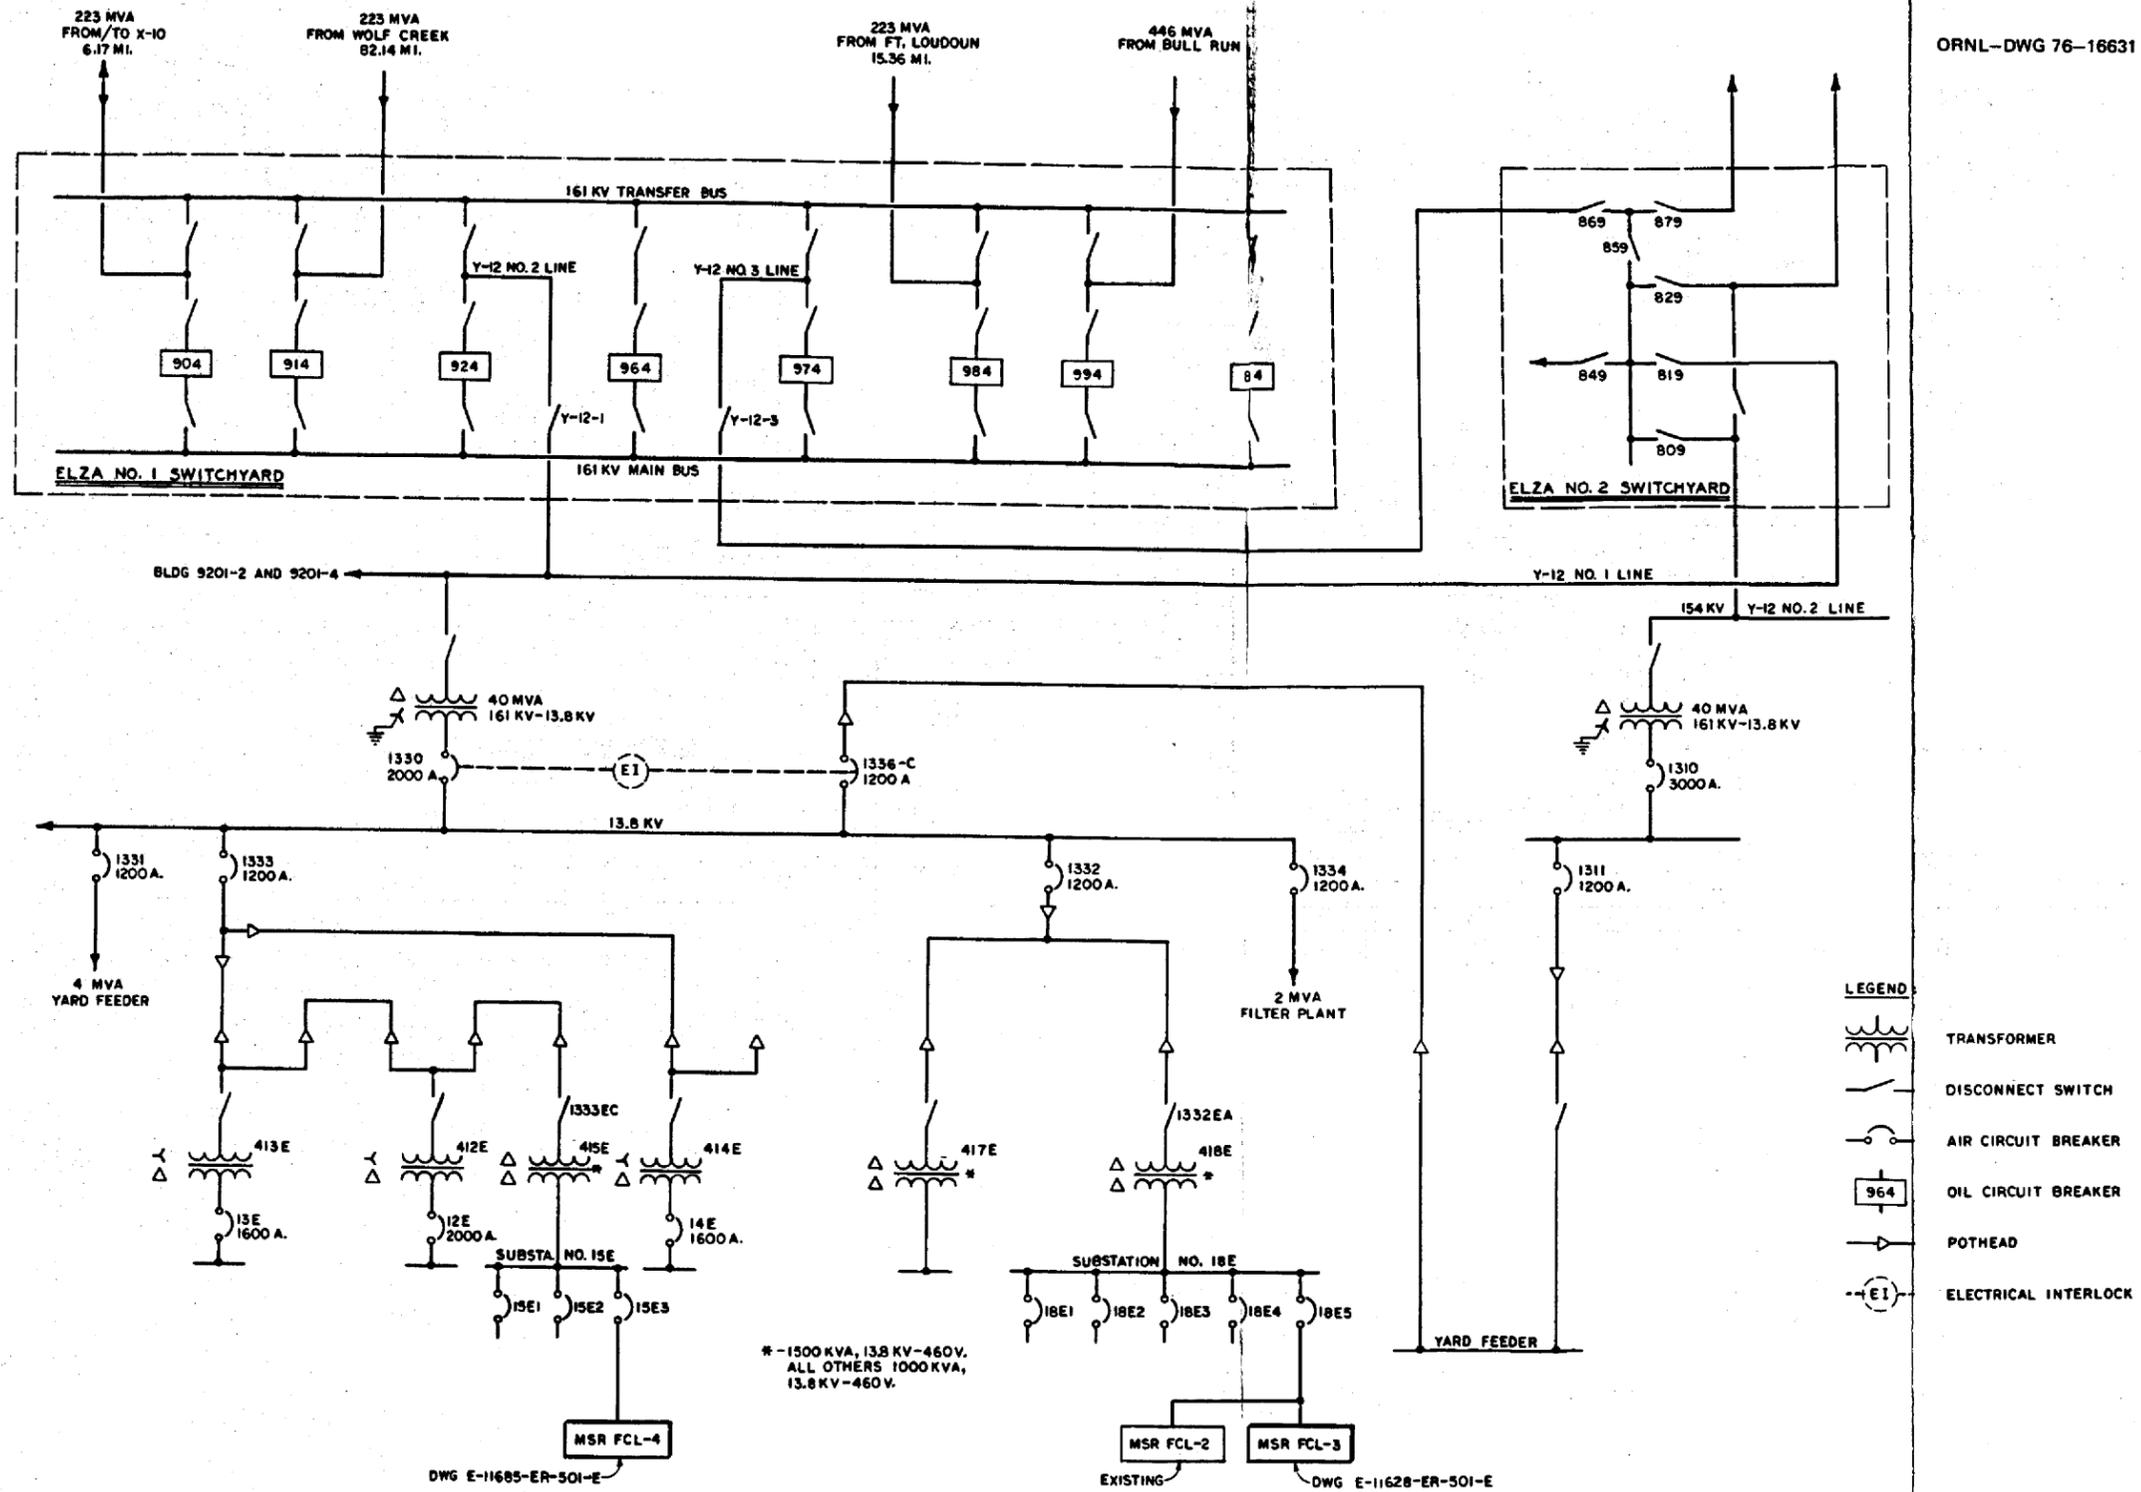


Fig. 16. One-line diagram of area power supply.

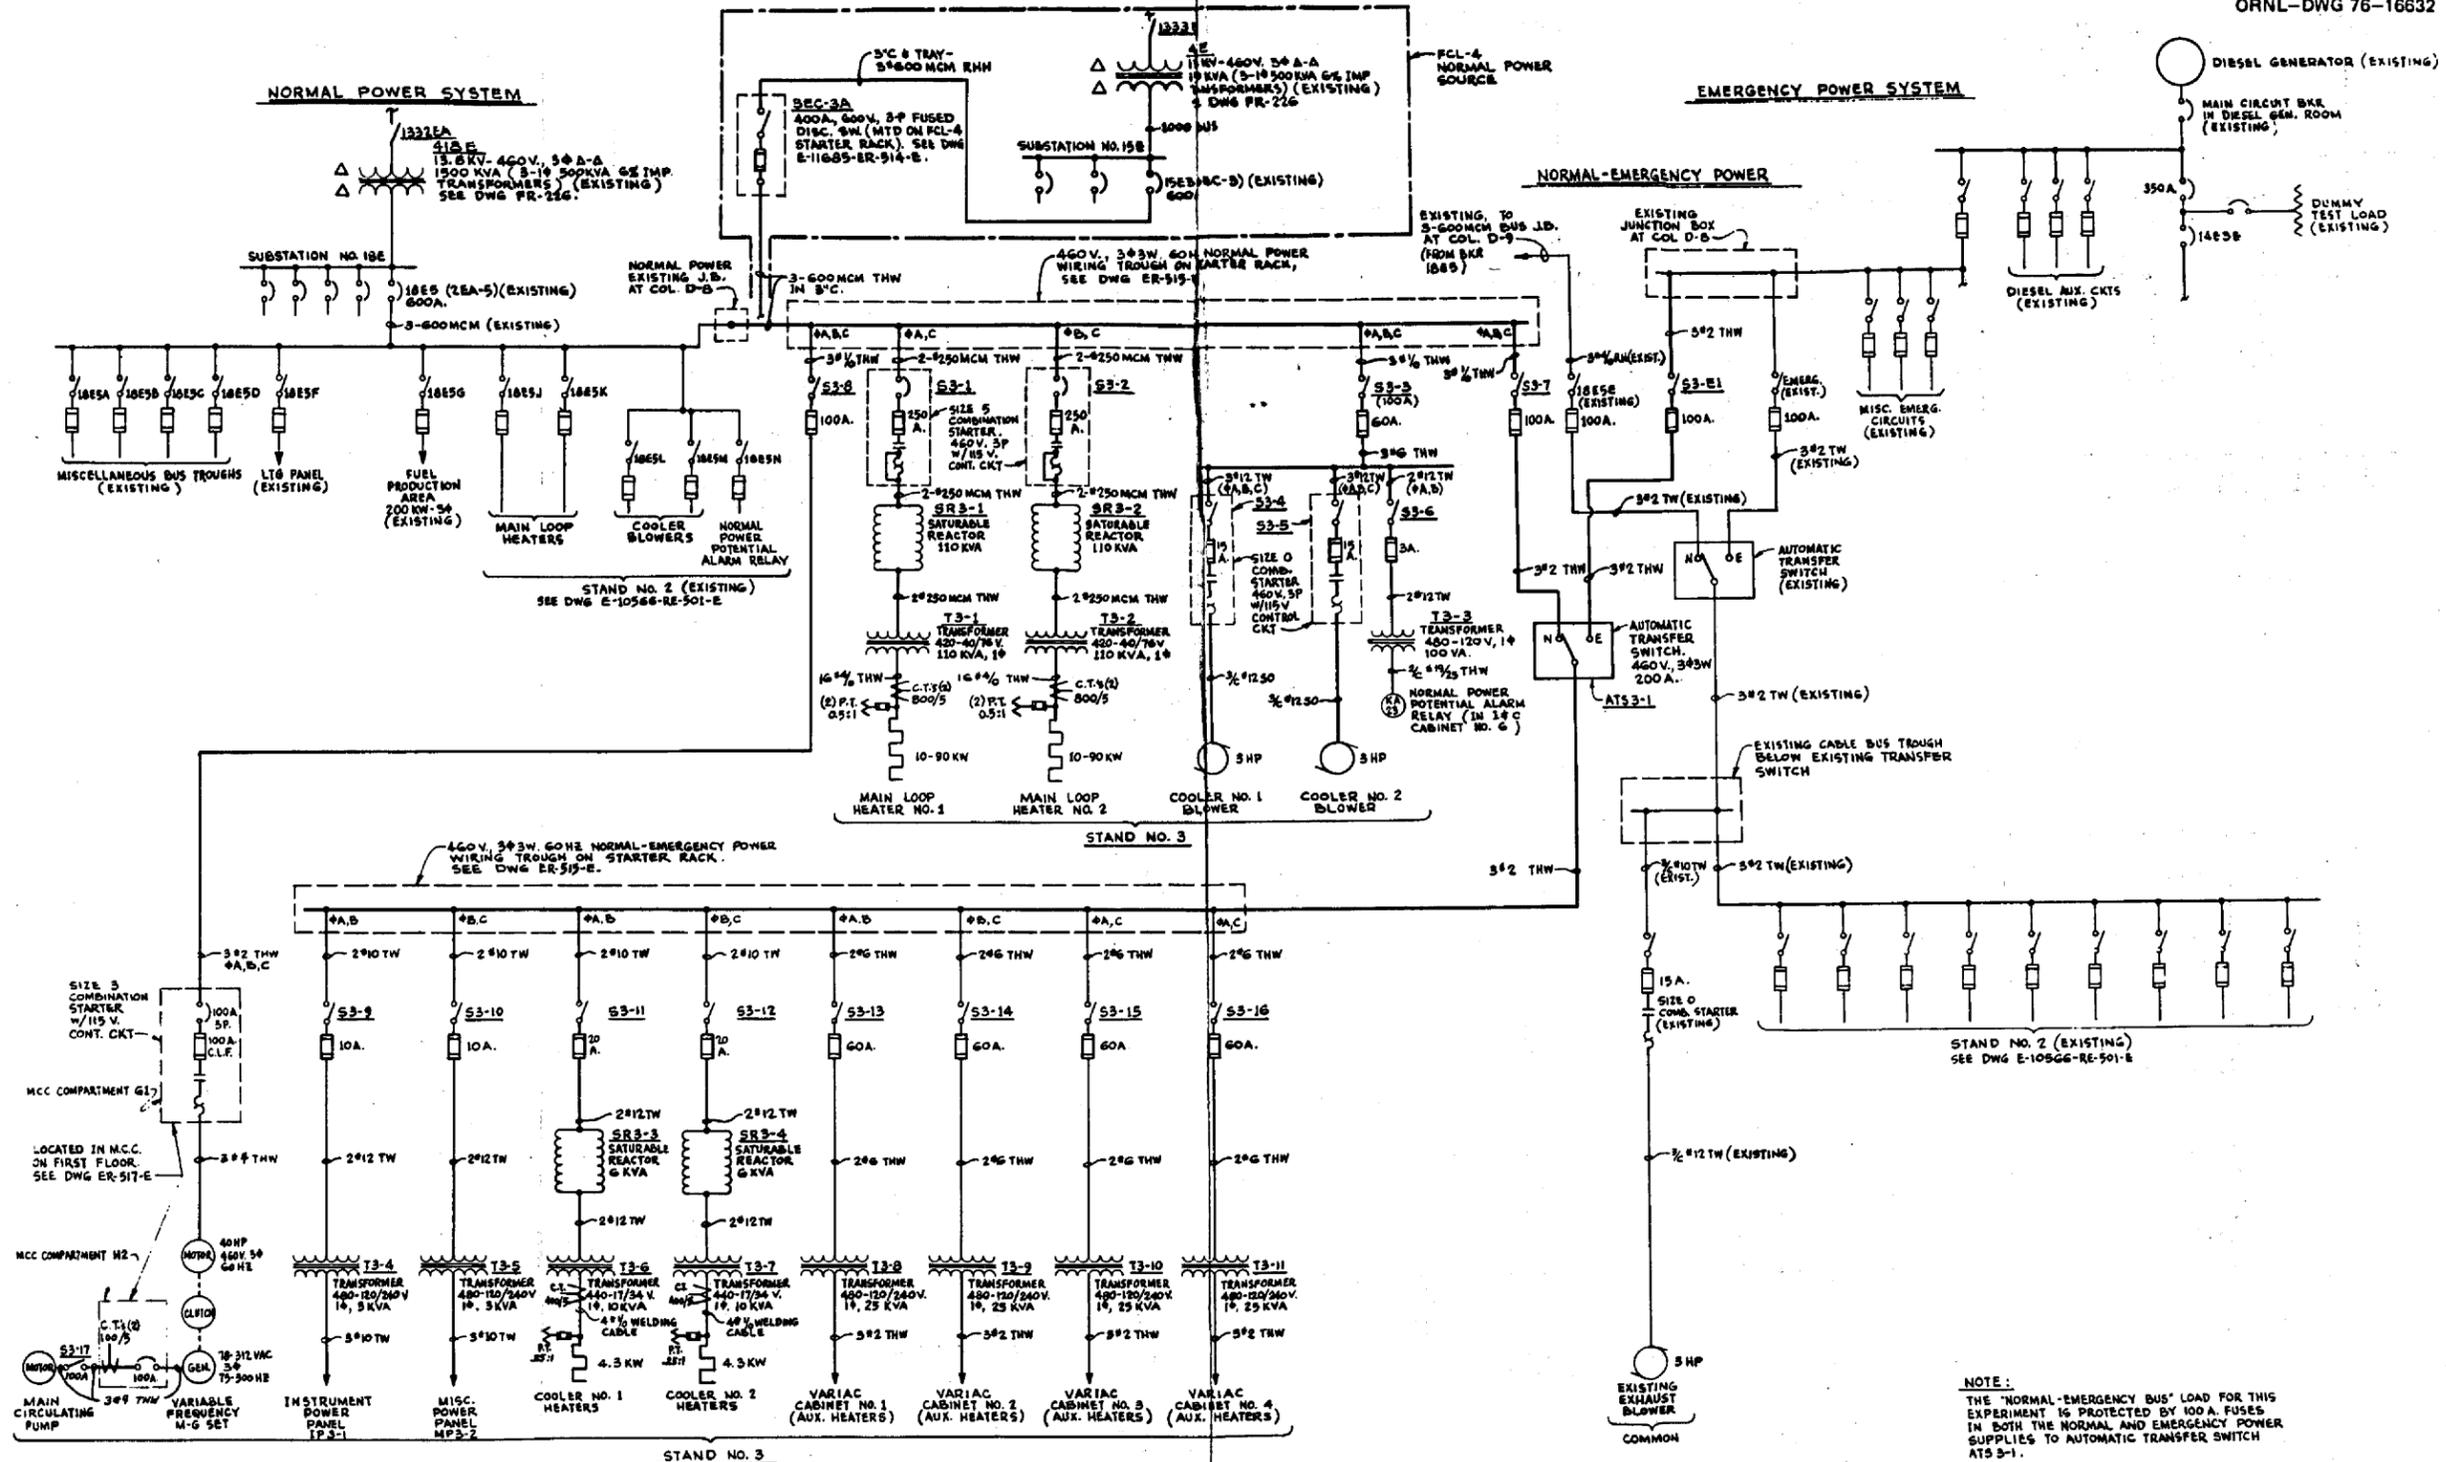


Fig. 17. One-line diagram of power supply for FCL-3 (or FCL-4).

Emergency power is supplied by a diesel-engine-driven generator, rated 300 kW, 460 V, 3 phase, 60 Hz, which is designed to start automatically within 20 sec after a failure of the normal 460-V power supply. Emergency power is supplied through an automatic transfer switch to provide resistance heating of coolers 1 and 2 and also to energize the four variable transformer cabinets that serve all auxiliary heaters for the piping system.

The ALPHA salt pump is driven by a 15-kW (20-hp) variable-speed motor, which is supplied by a variable-frequency, variable-voltage motor-generator set. The motor is a squirrel-cage, induction-type designed for 5000 rpm, 6 pole, 3 phase, 250 Hz, 260 V, open drop proof, NEMA design B, Class F insulation, with vertical solid shaft and mounting flange downward. It is designed for continuous operation from 75 to 250 Hz, with a constant torque load equivalent to 15 kW at 5000 rpm, with the supply voltage equal to 1.04 times the frequency. The motors were procured in accordance with Job Specification E-11628-ER-001-S-0.

One desired modification of the pump control system was not incorporated in the drawings because the MSR project was canceled before the change was effected. We wanted to alter the scram sequence so that the pump would continue to operate at a reduced speed of about 2000 rpm after any scram action to help avoid salt freezing in the cooler coils. A design for providing such a speed reduction was not completed, but this system would be desirable if the loops were ever reactivated and operated with a salt mixture having a relatively high liquidus temperature.

The motor-generator set is rated at 30 kVA. The pump motor is directly connected electrically to the generator output such that the motor will start when the generator is started. The motor-generator installation for both FCL-3 and FCL-4 is shown in Fig. 18.

The FCL-3 electrical system drawing numbers and titles are shown on the drawing list included as Appendix A. The list for FCL-4 is similar. The FCL-4 electrical drawings were essentially complete, except for modifications for low-speed pump operation after scram, when the project was canceled. Due to the cancellation, FCL-4 drawings were not formally approved or issued.

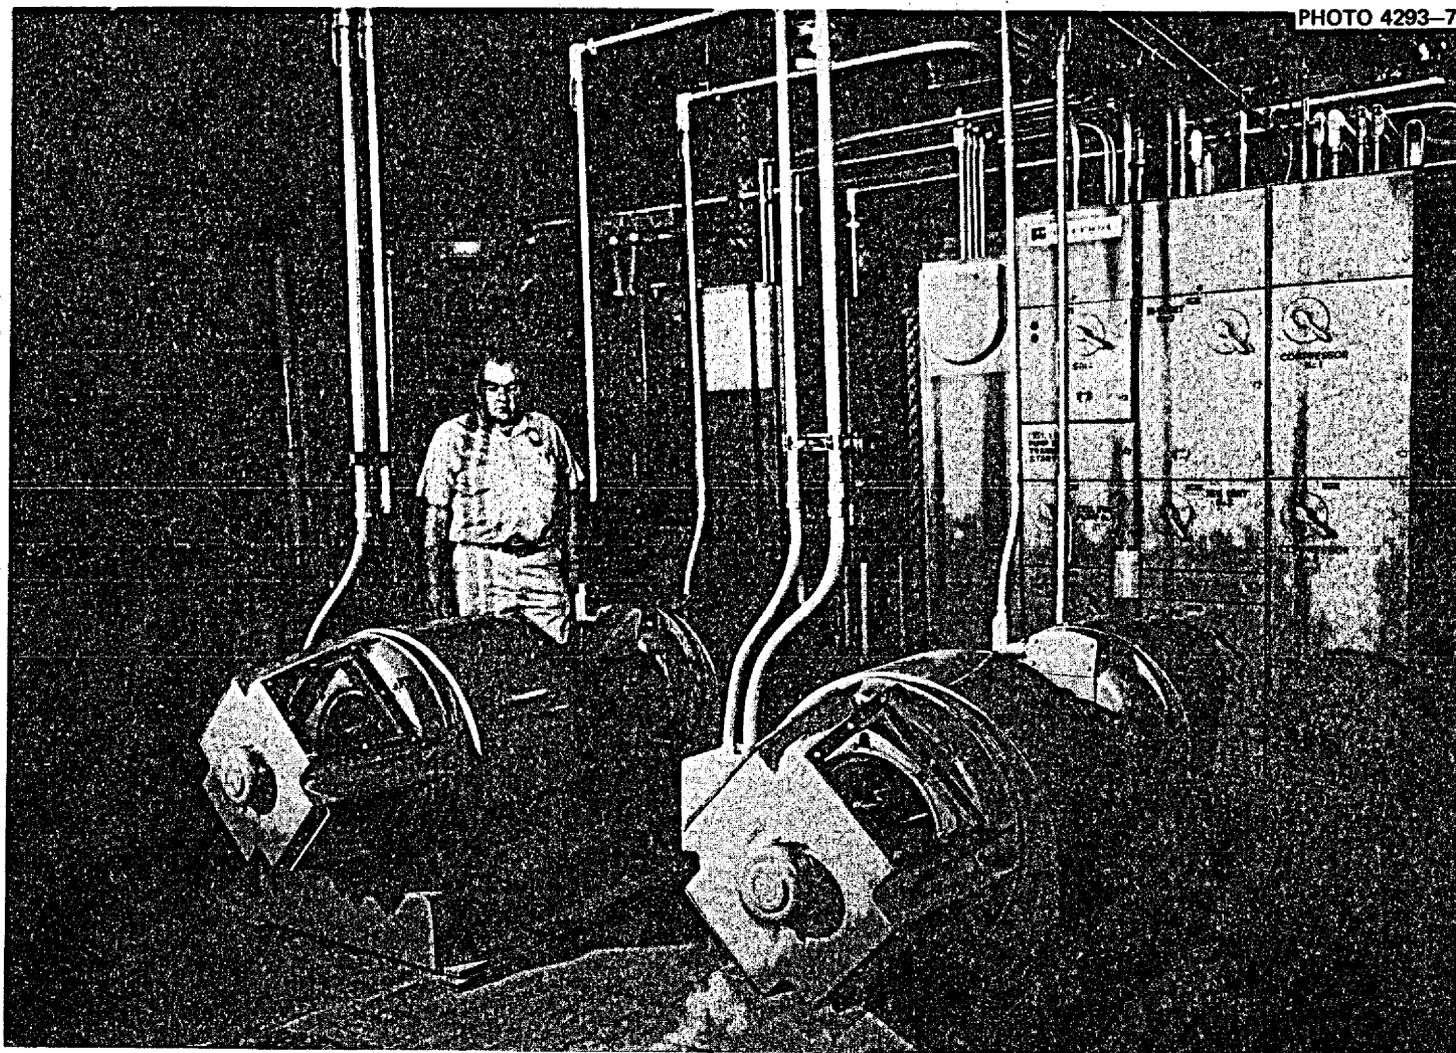


Fig. 18. Variable-speed motor-generator sets for ALPHA pump drive motors on FCL-3 and -4.

Details of the main heaters and auxiliary heaters were discussed in Sections 3.2.7 and 3.2.8.

3.4 Instrumentation and Controls

3.4.1 Temperature measurement and control

There are approximately 125 numbered thermocouples in each of the FCL-3 and FCL-4 loops. These thermocouples are industrial grade (0.075%), type K (Chromel-Alumel), with stainless steel sheaths and MgO insulation and ungrounded measuring junctions. Most are 1 mm (0.040 in.) in diameter; others are 1.6 mm (0.063 in.) in diameter. Of the 125 temperature measurements, 53 are recorded on strip-chart recorders (42 of these are also recorded automatically on the Dextir digital data-acquisition system); 6 are used with temperature-indicating switches in alarm and/or safety circuits, while the remainder are indicated on a manually operated digital temperature indicator.

Temperature control of the entire electrical preheating system for the loop piping and coolers is by manual adjustment of a number of variable auto transformers that either supply power directly to resistance heaters or modulate current that is subsequently rectified and used to control power supplied by saturable reactors to the resistance heaters.

The main resistance heaters, which produce the temperature rise in the salt flowing to metallurgical samples in stations 2 and 3, receive their power from two saturable reactors with step-down transformers to match the transformer impedance to the load. The saturable reactor supplying resistance heater 2 is controlled by an automatic three-term (proportional, derivative, and reset) controller (TRC-6) that operates through a magnetic amplifier. The saturable reactor supplying resistance heater 1 is controlled by TC-5, which is manually set to provide a constant power input. Both TC-5 and TRC-6 have electrical interlocks in the heater control circuits (circuits 2 and 3) that prevent energizing the power to the heaters without first adjusting the controls to minimum power input. This feature reduces the probability of operator error and accidental overheating of the loop piping during restarting of the loop. These interlocks

are bypassed for a period of approximately 2 sec following a complete loss of power; this permits restoration of power following momentary power dips such as those caused by lightning.

High-temperature limit switches are actuated by the thermocouples located on the downstream end of each of the main resistance heaters, and a low-temperature limit switch is actuated by a thermocouple located at the exit of cooler 2 to provide scram action as required. In addition, there is a high-temperature scram on each of the three metallurgical-sample-station freeze valves.

3.4.2 Pressure measurement and control

System pressure is maintained at a fixed value by supplying helium gas to the system through pressure regulator PV-H02A while simultaneously bleeding helium gas plus pump seal oil leakage via oil traps at a controlled rate through PdC-H11A.

An absolute-pressure transmitter is located on each of the three metallurgical sample lines and on each of the two salt sample lines. These pressure measurements are used to ensure that pressures in all the sample lines are equalized during filling and sampling operations to prevent forcing salt into the gas lines. These five pressure signals are selectively indicated on digital pressure indicator PI-14 by operating switch PS-14. Additionally, the two pressure signals transmitted from the salt sample stations are recorded on a two-pen strip-chart recorder, since they indicate operating pressures of the pump bowl and drain tank.

In addition to the above pressure measurements, five vacuum gages (Hastings) and numerous dial gages (pressure, vacuum, and compound) are located throughout the system.

No direct measurements of salt pressure are included because of the cost and complexity of instrumentation suitable for this purpose.

3.4.3 Pump speed measurement and control

The pump speed is measured by a magnetic pickup and gear tooth arrangement that is located just below the direct-drive coupling on the pump shaft. The pulses generated by the magnetic pickup are counted and

converted to an analog current signal, which is indicated on panel meter SI-11. Pump speed is controlled by adjusting the frequency of a variable-frequency motor-generator set that supplies power to the pump drive motor. Low pump speed, which is detected by switch SS-11, initiates a scram and produces an alarm.

3.4.4 Power measurements

Power supplied to the main loop resistance heaters is measured by thermal-watt converters and recorded on a two-pen strip-chart recorder (and on the Dextir data system), with each pen recording the power dissipated in one of the two heaters. Power to the pump motor is recorded on recording wattmeter E_wR-11. Power to the two resistance cooler heaters is indicated on panel-mounted wattmeters.

3.4.5 Thermal conductivity measurement

Thermal conductivity of the helium cover gas is measured by a heated filament conductivity bridge (CE-HO4A) and recorded on a strip-chart recorder. The pure helium input to the loop is used as a reference and compared to helium vented from the oil catch basin of the pump. This provides a means of detecting helium contamination by air, moisture, and impurities from the salt. The thermal conductivity measurement system was originally used in the early corrosion loops (MSR-FCL-1 and MSR-FCL-2) to monitor boron trifluoride (BF₃) carried away from the sodium fluoroborate coolant salt within the pump bowl. The thermal conductivity system has been retained for corrosion loops FCL-3 and FCL-4 primarily because it has proved useful in monitoring air and moisture contamination, particularly from outgassing that occurs during initial preheating operations.

3.4.6 Digital data system (Dextir)

A number of the data points, including temperatures, heater power, and pump speed, are recorded on a central digital data-acquisition system, which consists of Beckman Dextir data-collection hardware interfaced to a Digital Equipment Corporation PDP-8 computer. Data may be converted on line to engineering units and printed out on a teletype terminal or they

may be recorded on magnetic tape and converted off line by the IBM-360/75 (or other) computer.

The 23-channel analog boxes and one 25-channel digital box are installed on each of the FCL-3 and FCL-4 facilities. In addition, a 43-channel, 338.6 K (150°F), or equivalent, thermocouple reference box is installed on each loop.

Each digital box of 25 channels is normally scanned automatically at hourly intervals but may be scanned at intervals of 5, 15, or 30 min as well. Any box may be set to scan continuously, or a single scan may be initiated manually at any time.

The Dextir system has three ranges of 0 to 10, 0 to 100, and 0 to 1000 mV that may be preselected for each individual channel. Overall accuracy is $\pm 0.07\%$ of full scale, and resolution is one part in 10,000.

3.4.7 Block diagram

Referring to Fig. 19, Control System Block Diagram, there are two sources of power for the test facility: building power and diesel power. There are also two power buses. One bus is energized only from the building power source (normal TVA power) and supplies power to the main loop heaters, the cooler blowers, the damper motors, and the variable-frequency M-G set. The other bus is energized from the building power source when it is available, but is automatically switched to the diesel power source if the building power fails. This bus supplies power to all heaters (except the main loop resistance heaters) and to the lube oil pumps. The objective of this design is to scram the loop, but keep the salt molten during TVA power outages, and to ensure that cooling oil flow is maintained in the centrifugal pump at all times.

3.4.8 Instrument application diagram

There are two drawings for each test loop comprising the Instrument Application Diagram. Figures 20 and 21 show the diagram for FCL-3 only, because the diagrams for FCL-4 are identical. The first of these shows the salt system, including the pump, the main loop heaters, the coolers, the fill-and-drain tank, and the three metallurgical sample lines with


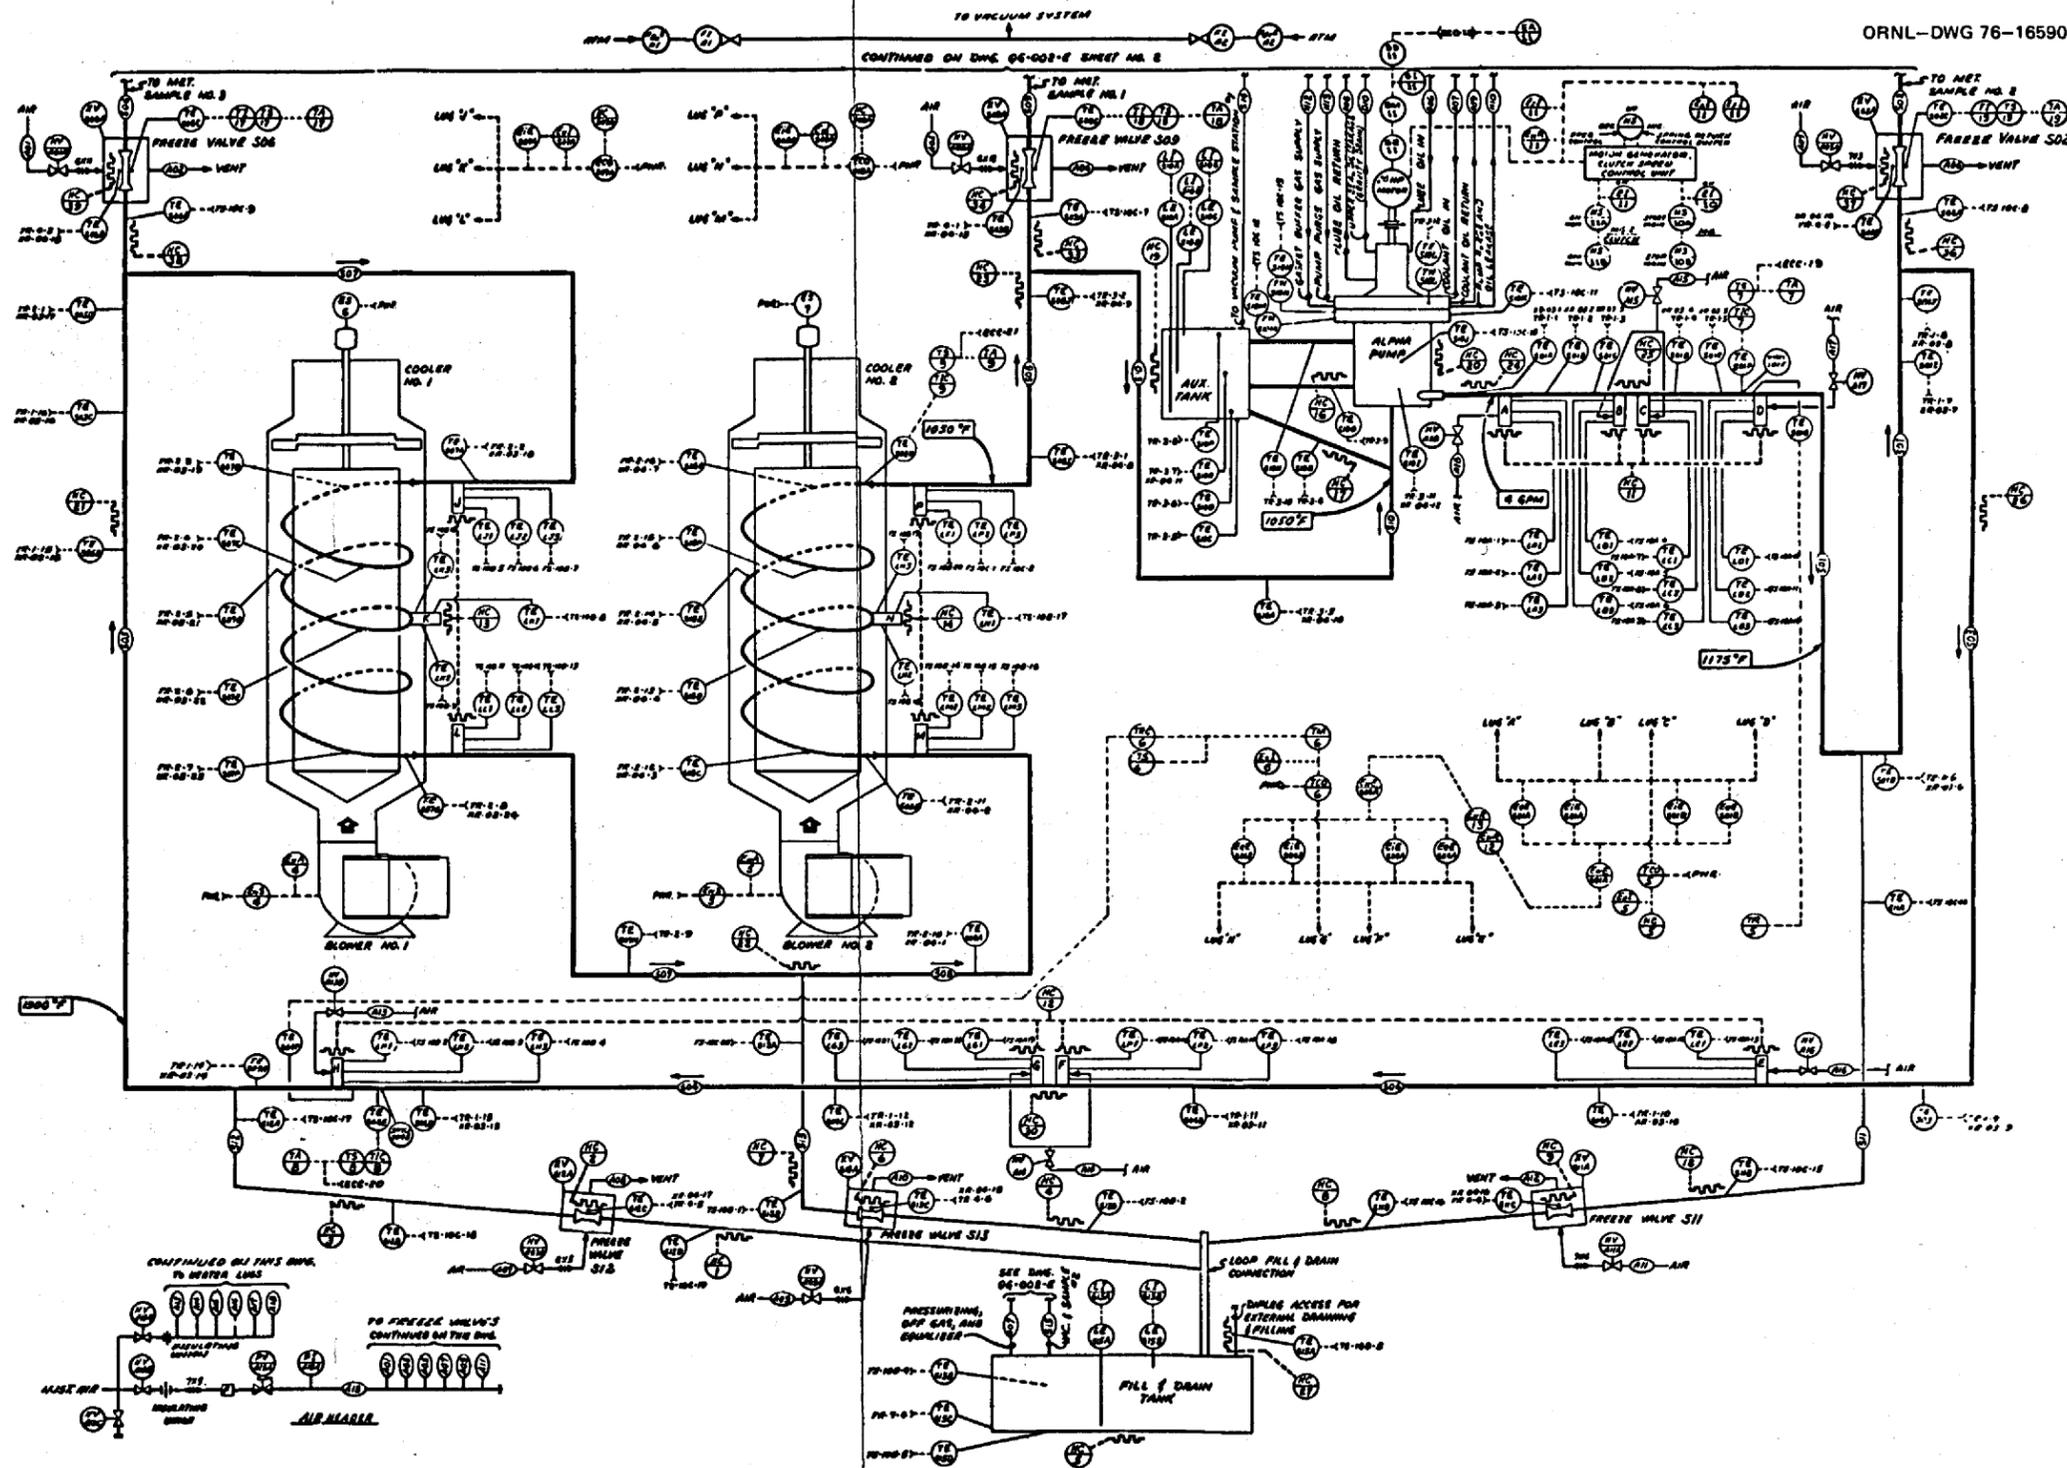


Fig. 20. Instrument application diagram for MSR-FCL-3 - sheet 1.

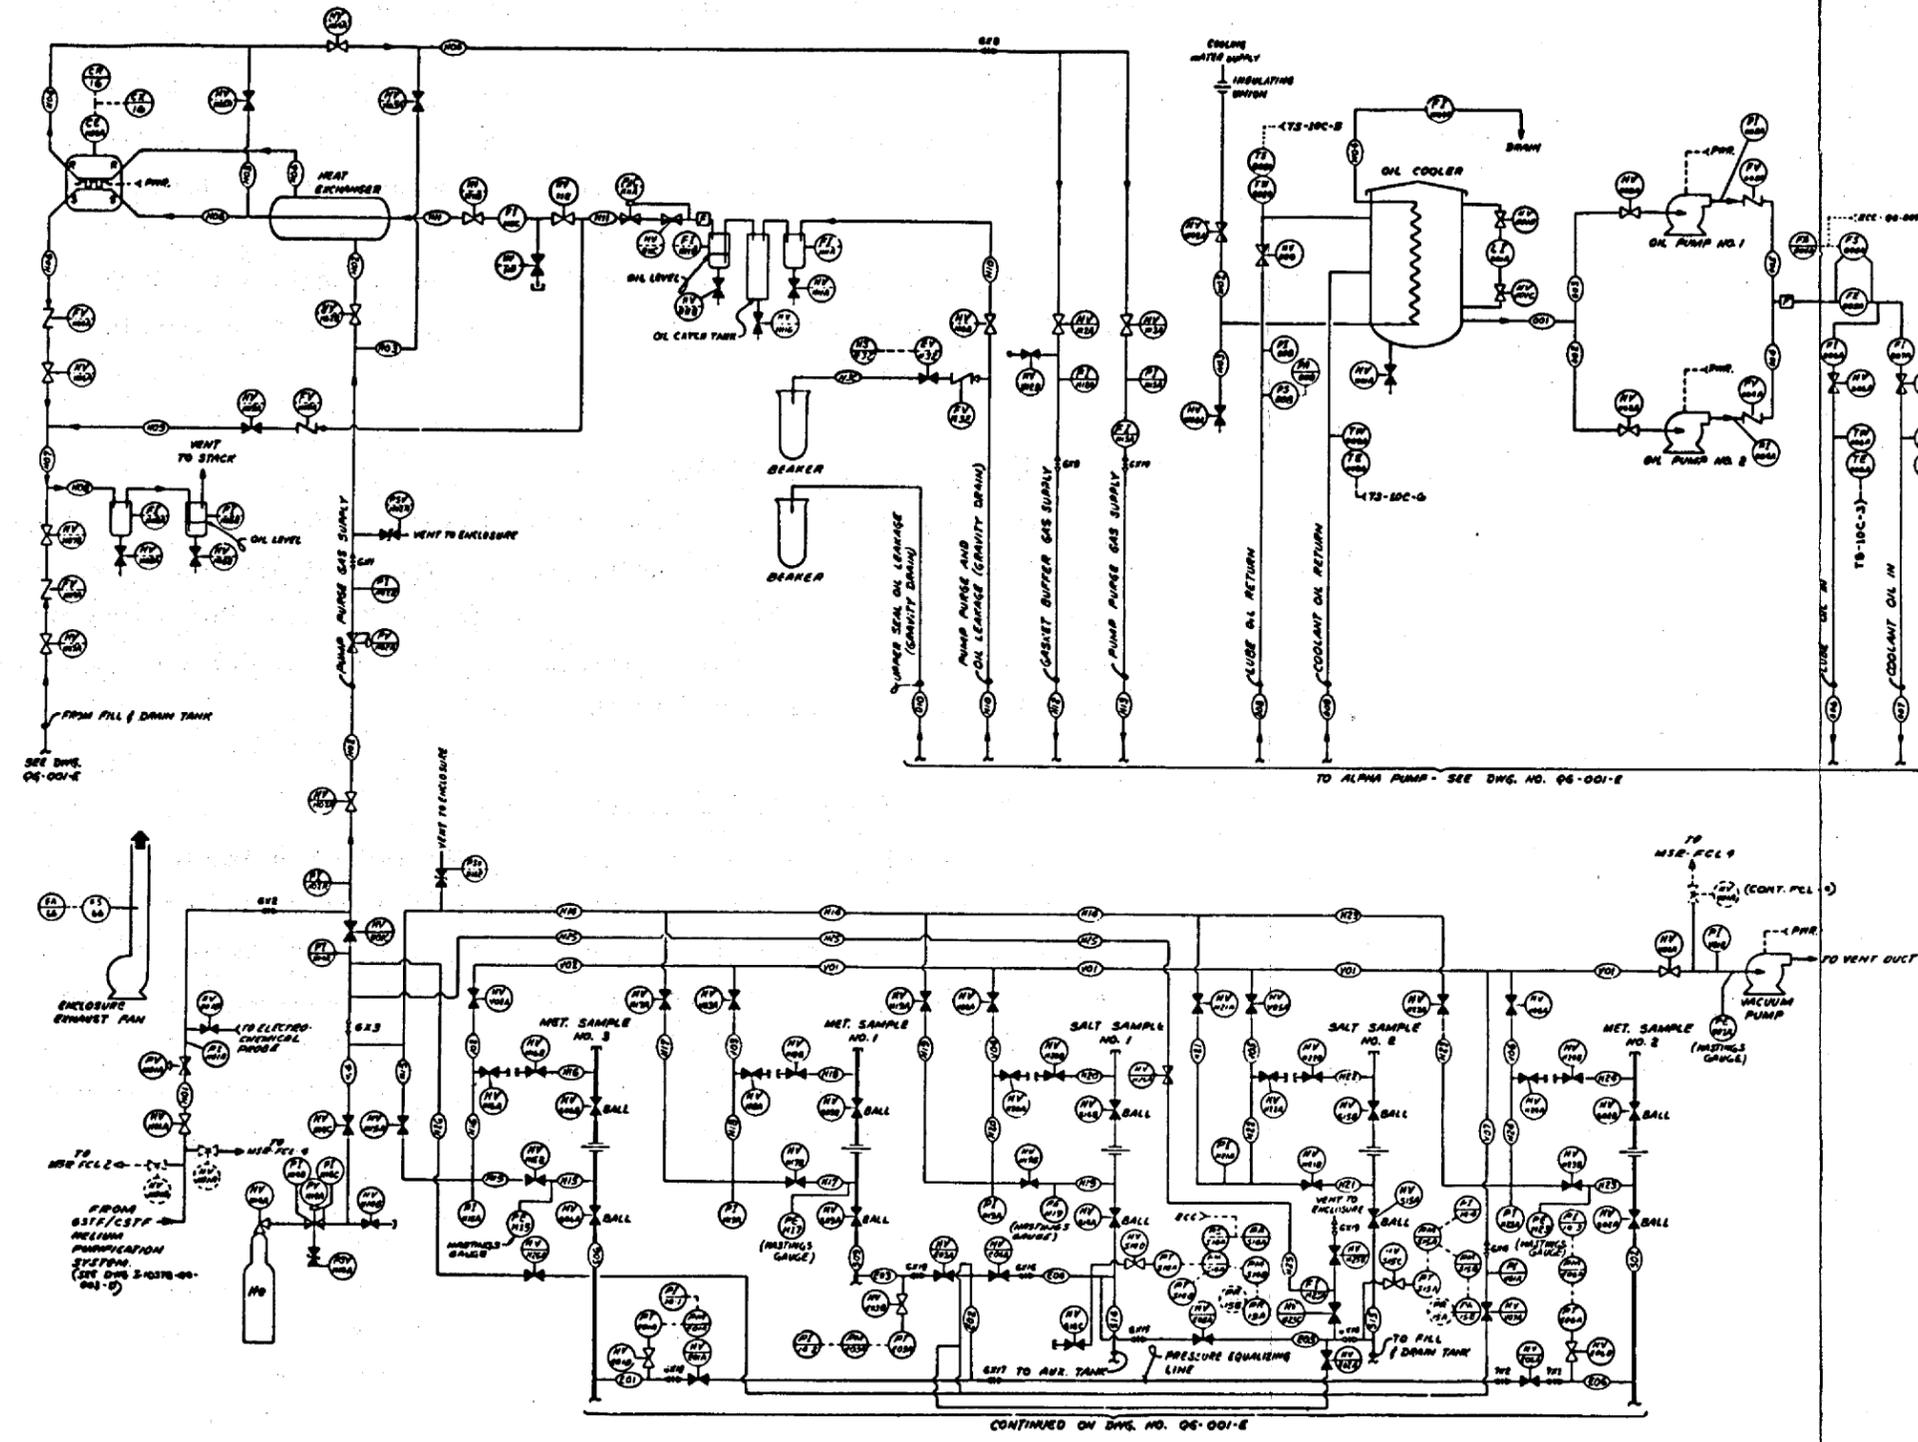

LEGEND

- FIELD MOUNTED INSTRUMENT
- INSTRUMENT INSTALLED IN VALVE STATION
- PANEL MOUNTED INSTRUMENT
- LINE NUMBERS
- FILTER

NOTES

1. THE FIRST LETTER OF EACH INSTRUMENT DENOTES INSTRUMENT LOCATION AS FOLLOWS:

MSR-FCL-3 LINE SCHEDULE	PROCESS	LAST NO USED
A	AIR	3
E	EQUILIBRIUM LINES	6
H	HELIUM	25
L	LUG (HEATER)	17
O	OIL	17
S	SALT	17
V	VACUUM	6
W	WATER	4

2. REFER TO ORNL CR NO. ST-1 FOR EXPLANATION OF INSTRUMENT SYMBOLS.

Fig. 21. Instrument application diagram for MSR-FCL-3 - sheet 2.

their associated freeze valves. The second drawing shows the helium supply system, the sample station valving, the lube oil pumps, the vacuum systems, and the thermal conductivity measuring system. These diagrams are intended to show schematically the instrumentation of the entire facility and are not, of course, intended to show or imply any dimensional data.

A complete list of instruments shown on these diagrams is given in Appendix E, and a list of Instrumentation and Control drawings is included in Appendix B.

3.4.9 Molten-salt level measurements

Salt level is measured in the fill-and-drain tank and in the auxiliary tank by "spark plug"-type continuity probes. The level detection circuitry operates with a low ac voltage of approximately 6.3 V at 60 Hz on the probe when it is not in contact with molten salt. This voltage drops to approximately 1 V when the salt contacts the probe.

3.4.10 Molten-salt flow measurement

Due to the high cost and complexity of instruments suitable for measuring molten-salt flow directly, no direct flow measurements are made. In lieu of a direct measurement, the main loop resistance heater sections are used as calorimetric flowmeters. By using the auxiliary heaters to make up for heat losses, the flow rate of the salt through the heater sections can be calculated from measurements of the temperature rise and power input to the resistance-heated section.

3.4.11 Control panels

The control panels for corrosion loops FCL-2, FCL-3, and FCL-4 are shown assembled in the experimental area of Building 9201-3 in Fig. 22. Each of the new loops requires four control panels with variable transformers for electrical preheating and four special-purpose cabinets for the most frequently used controls. Two additional cabinets are required on each loop for data logging and auxiliary instrumentation, but they are located behind the main panel and are not visible in Fig. 22.

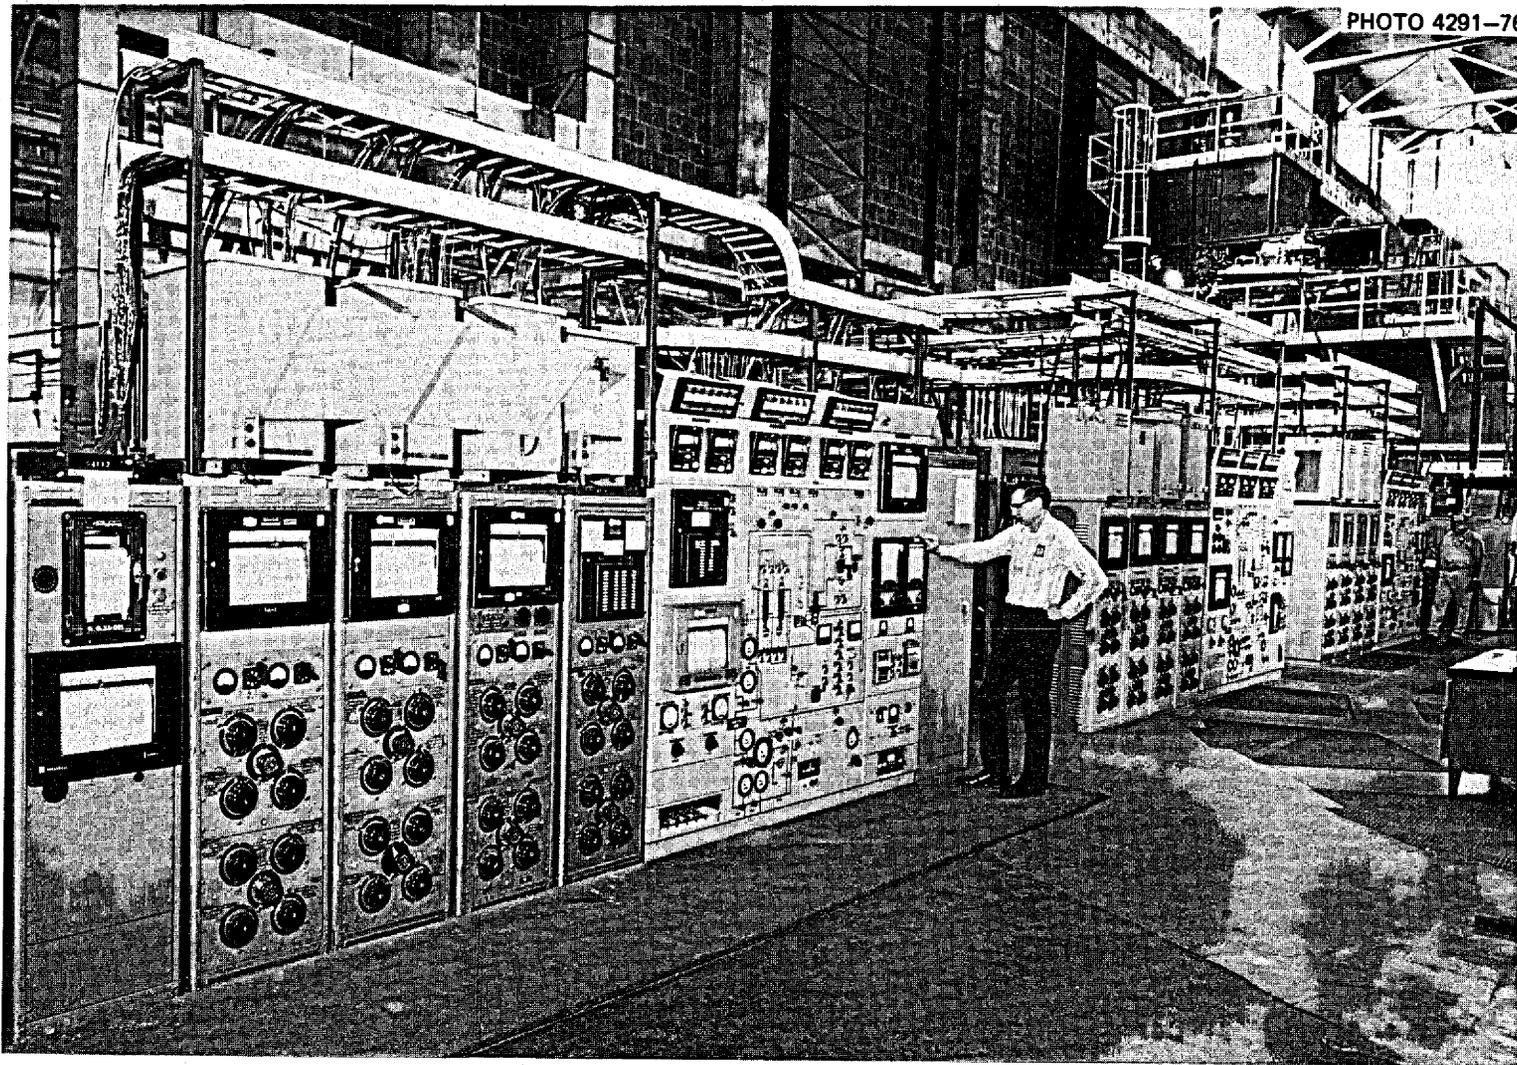


Fig. 22. View of control panels for corrosion loops FCL-2, FCL-3, and FCL-4.

4. SYSTEM LIMITATIONS, SET POINTS, AND PRECAUTIONS

The loop automatic instrumentation is designed to prevent (1) over-pressurization, (2) overheating, (3) loop damage if the pump stops, and (4) accidental salt freezing if normal electric power supply is lost. If specified limits are exceeded, the more critical parameters will place the loop in standby condition (scram) by turning off the main resistance heaters, turning off the air coolers, and reducing the pump speed. Pressure relief valves PSV-H02A and PSV-H14B, which are set to relieve at 0.3 MPa (30 psig), are located on the helium supply lines to the pump bowl and to other gas systems to preclude excess cover-gas pressure. High-temperature alarms are provided near the exit regions of the main resistance-heated sections 1 and 2. Protection against overheating is particularly important on the main heaters because of the high heat flux in these regions and corresponding rapid temperature rise if salt flow is reduced or stopped. High-temperature alarm and scram action to the standby condition is also provided on the three salt freeze valves of the metallurgical specimen removal stations. A low-temperature alarm warns of near freezing conditions at the exit of cooler 2 via TIC-9, and scram action will result. Scram action also occurs if the flow rate of lubrication oil to the pump is low or if the helium cover-gas pressure drops below 117 kPa (17 psia).

A number of less critical alarms provide operator information about off-design conditions but do not place the loop in standby. These alarms include low temperature on the guard heaters of the coolers, low flow of the ventilation air from the shielded loop enclosures, bypass of the building alarm, or low oil pressure at PS-008. A summary of all alarms and respective parameter set points is shown in Table 4.

The major precaution in loop design is to prevent accidental freezing of the salt within the piping system. Freezing of salt is avoided because melting operations can easily lead to pipe rupture as the salt expands during reheating. To this end, the heaters on the piping should be arranged, as much as practical, so that melting operations can be carried out by progressing in short increments of length from a free surface, such as the salt level within the pump tank. Emergency diesel-driven auxiliary power

Table 4. Alarm summary for FCL-3 or -4

Alarm conditions	Control action	Instrument No.	Set point
High loop temperature	Scram	TIC-7 (TE-S01T) TIC-8 (TE-S04Y)	790°C (1460°F) 840°C (1550°F)
Low loop temperature	Scram	TIC-9 (TE-S08T)	495°C (925°F)
Low pump speed	Scram	SI-11	2500 rpm
Low loop pressure	Scram	PR-15A	117 kPa (17 psia)
Low pump oil flow	Scram	FI-005A	50% of normal flow
Loss of building power	Scram and switch to emergency power		
Cooler No. 1 blower off	Cooler No. 1 damper closes		
Cooler No. 2 blower off	Cooler No. 2 damper closes		
Interlocks bypassed (switches HS2, HS3, HS4, HS5, HS6, HS7, HS8)	None ^a		
High temp. freeze valve S09, MET sample 1	Scram	TIS-18 (TE-S09C)	205°C (400°F)
High temp. freeze valve S02, MET sample 2	Scram	TIS-19 (TE-S02C)	205°C (400°F)
High temp. freeze valve S06, MET sample 3	Scram	TIS-17 (TE-S06C)	205°C (400°F)
Cooler guard heater at low temperature	None	Brown Recorder cabinet 11	93°C (200°F)
Vent stack flow	None ^a	Damper in air duct	Off-on
Building alarm bypass	None ^a		
Pump electric power lost	Scram		
Lubrication oil at low pressure	None ^a	PS-008	134 kPa (4.8 psig)

^aLocal alarm only.

supply is available if normal electric power fails, and automatic switching between power supplies is provided. A low-temperature alarm is provided at the exit of cooler 2, and the loop will automatically scram to the standby condition if the salt temperature approaches 500°C (932°F). No automatic salt draining features were included, as is normal for larger test facilities, because the circulating salt inventory is only about 5 liters (1.3 gal).

The loop is operated within a shielded enclosure to prevent operator injury due to leakage of the high-temperature salt. The shielded enclosure is ventilated by an exhaust system, so that smoke or fumes from leakage are carried to a stack on the roof. Ventilation is required because the molten salt contains both beryllium and a small amount of alpha-radioactive material. Constant air monitor filters (two each) are located at each end of the enclosure, and these are periodically removed and checked by Health Physics personnel to ensure that contamination levels are within safe limits adjacent to the loops.

These corrosion loops generally operate at full design conditions 24 hr/day, and therefore all instrument alarms are monitored both by local alarms and by an annunciator panel located at the PSS office. An automatic timer switch transfers alarm signals to the PSS office at night and on weekends because someone is on duty there at all times. In the event of an alarm, operator personnel familiar with the equipment are notified of the alarm condition from the PSS office by telephone. Operator personnel are expected to investigate the alarm condition by coming to the operating area to determine appropriate action.

The only significant fire hazard of the facility is related to the 8 liters of lubrication oil for the pump. The salt will not self-ignite in the event of a salt leak, but the salt temperature is high enough to ignite the oil if the two fluids mix accidentally. An oil catch pan is provided around the pump bowl and bearing housing so that any oil leakage in this area will safely drain away rather than drop onto the thermal insulation and the hot exterior surfaces of the pump and piping. Overhead clearance at the test facility is such that an oil fire could safely burn itself out without endangering other experiments or the loop operators.

Instrumentation is provided to allow the loop to continue operation without scrambling in the event of electrical power dips or brief outages of 2 sec or less. This feature is particularly useful during the summer months when severe electrical storms occur and momentary outages due to lightning are frequent. The coastdown time of the ALPHA pump is such that some salt flow is maintained during the 2-sec interval and the salt in the coolers does not freeze. Therefore, the power dip instrumentation allows the loop to accumulate more operating time at design conditions and is particularly beneficial during periods of unattended operation on nights and weekends.

5. OPERATION

Operation of corrosion loops MSR-FCL-3 and -4 will profit from previous operation of MSR-FCL-2 for more than 19,000 hr, particularly since there is a high degree of commonality among the three systems. Prior to operation, standard practice dictates

1. preparation of an operating manual describing the loop design and equipment, initial system check-out, and detailed operating procedures;
2. posting of emergency procedures at the loop control panel;
3. posting of a loop schematic diagram identifying significant system components;
4. posting of an isometric diagram of the system indicating the location of electric heaters and their associated thermocouples and controllers.

Due to program cancellation, this work was not completed.

5.1 Initial Salt Filling of the Fill-and-Drain Tank

The system is readied for operation after completing pneumatic and helium leak testing, electrical checkout, etc., by baking out the piping system to remove water vapor from the metallic surfaces. Care must be exercised to ensure that the pump cooling oil is turned on before heating

begins. The system is evacuated repeatedly to ~ 3 kPa (0.5 psia) and re-filled with purified helium to purge moisture. A high vacuum is specifically avoided during evacuation of the loop piping, because the light turbine oil in the pump oil catch basin would diffuse under high vacuum pumping and contaminate interior surfaces of the loop piping. After bake-out and purging is completed, the fill-and-drain tank is prepared for salt filling. A small transfer pot containing about 20 kg (22 lb) of fuel salt is attached to the Swagelok compression fitting on the drain tank dip-leg access riser pipe via 6.3-mm-OD \times 0.9-mm-wall (1/4-in.-OD \times 0.035-in.-wall) Hastelloy N tubing. The transfer pot is preheated to about 705°C (1300°F), and purified helium is bubbled through the dip tube for at least an hour to stir the salt and ensure that no salt segregation has occurred during melting. Failure to stir the salt can result in transfer of an atypical, segregated fuel-salt mixture into the drain tank. Prior to salt transfer, the adjustable level probes in the fill-and-drain tank are set to observe the desired filling level and the tank is preheated to about 600°C (1112°F). The helium pressure above the salt surface of the transfer pot is increased slightly to force the molten salt through the transfer line into the fill-and-drain tank. The proper salt level in the fill-and-drain tank can easily be obtained if the end of the fill line is located at the desired salt elevation. Of course, this must be done at the time the salt transfer line is installed initially in the drain tank dip-leg access riser. Salt is transferred until it rises above the end of the dip tube, and then helium pressure is reversed to blow the salt back toward the transfer pot. When the salt level reaches the end of the dip tube, an audible bubbling can be heard as the helium flows back through the salt remaining in the transfer pot. This method provides a positive method of filling to a precise level and additionally blows most of the salt out of the transfer line when the salt transfer is completed. After the transfer pot is cooled and removed, a salt sample is taken from the drain tank and analyzed for contamination.

Safety procedures require that personnel wear protective clothing while working on the salt-transfer equipment whenever the salt is molten. This safety equipment consists of a long chrome leather coat, chrome

leather hood, and gloves. Two men are required in any salt-transfer operation as a safety precaution.

5.2 Filling the Loop with Salt

The operators must establish cooling oil flow through the pump before any heat is applied to the pump bowl to prevent damage to bearings and seals. The loop piping is then readied for filling by adjusting the manual variable transformer preheat controls until all piping and components are heated to at least 650°C (1200°F). No specific heating rate is observed during preheating of the piping. The adjustable transformers are normally set at the voltage required to heat the piping to about 650°C (1200°F) and allowed to come to equilibrium. All gas equalizer lines are opened to allow pressure balancing between the free salt surface in the pump bowl and the free surfaces at each of the three metallurgical sample stations. Filling of this system is a critical operation, because the four free surfaces at the pump and metallurgical sample stations fill simultaneously. Any surge of pressure or sudden venting can cause salt level surging at the metallurgical sample station, which results in salt freezing in the small unheated gas lines located just above the freeze valve elevation. An improper filling technique and resultant salt surging can also result in salt damage to the Teflon parts of the ball valve located about 21 cm (8 in.) above the normal salt level within the metallurgical sample stations. About 5 liters (1.3 gal) of salt is required to fill the loop to the normal operating level [i.e., a salt depth of 10 cm (3.9 in.) in the auxiliary pump tank]. Salt transfer is halted by careful pressure balancing between the drain tank and the auxiliary pump tank, and then the separate drain lines are cooled and frozen. After the drain lines are frozen, the metallurgical sample stringers are lowered through their respective air locks and ball valves to be immersed in the salt. The tee handles are then disengaged from the metallurgical specimen stringers, the ball valves closed, and the freeze valves established on each station. Forced salt circulation may now commence by starting the ALPHA pump.

5.3 Bringing the Loop to Design Conditions

The loop is brought from isothermal to ΔT operation by first bringing the ALPHA pump to normal operating speed of 5000 rpm to create a flow rate of $2.5 \times 10^{-4} \text{ m}^3/\text{s}$ (4 gpm) and then gradually applying the ΔT by incremental manual increases in the main resistance heaters with corresponding manual adjustment of the blower inlet dampers to increase cooler air flow. Past experience with corrosion loop FCL-2 has shown that an experienced operator can convert loop operation from isothermal to ΔT conditions in 0.5 hr or less.

After the system is at ΔT conditions, the guard heaters on the coolers must be manually set at their proper heating range by adjusting four variable transformers. These heaters increase the temperature of the metal mass within the cooler air ducts during ΔT operation to help prevent salt freezing in the event of a scram. This feature was added to corrosion loop FCL-2 after actual operating experience showed that the small salt inventory of the loop came dangerously close to freezing after special manual scrams during which the salt pump continued to circulate salt after the scram.

After the loop temperatures are at operating conditions, the power-dip circuit is actuated by pushing reset switch ES-9A. If the power-dip circuit were not reset, the loop would scram if any momentary power outage occurred. After ES-9A is reset, the loop can tolerate a 2-sec power outage and resume operation without alarm or operator assistance. It is noted that the power-dip circuit cannot be reset while any parameter that scrams the loop is in either a scram condition or bypassed. The loop is now at design conditions and ready for extended operation.

6. MAINTENANCE

6.1 Maintenance Philosophy

Maintenance of the loop equipment within the shielded enclosure will not be done while the piping is full of salt and operating at full pump speed, because the pump discharge pressure is quite high [i.e., 2.0 MPa (290 psia)] and any salt leakage might endanger personnel. Minor repairs

to instrumentation and controls within the enclosure can be done with the loop full of salt and with the pump stopped, since the maximum pressure within the loop is then about 0.136 MPa (5 psig). Maintenance will be performed by properly supervised and experienced craftsmen wearing prescribed safety clothing. The entry of personnel into the facility shielded enclosure is controlled by the project leader. A safety work permit and the safety equipment indicated in Table 5 are required for entry into the enclosure. If a salt leak occurs, respirators are required, in addition to the equipment shown in the table, until the salt spill had been removed and the area approved by Health Physics personnel.

Table 5. Safety requirements

	For enclosure entry	For opening salt piping
System empty and at ambient temperature	a	a
System empty with heat applied	b	Not permitted
System full of salt, pump stopped	b	Not permitted
System full, pump at full speed	c	Not permitted

^aSafety glasses and gloves.

^bFull protective equipment -- chrome leather suit, gloves, and head cover.

^cMaintenance is not permitted, but inspection by loop operators in full protective equipment (b) is sometimes required.

6.2 Normal Maintenance Requirements

During normal operation of loop FCL-3 or FCL-4, routine checks, calibrations, and preventive maintenance of the loop components, auxiliary equipment, and instrumentation are required to minimize malfunction of the facility. A check list of the facility equipment and the required maintenance is given in Table 6. Scram circuits are periodically tested during actual loop operation to ensure that the required safety actions occur.

Table 6. Preventive maintenance check list

Equipment or function	Action	Time between checks
Check alarms and scrams^a		
Loop temperature, high (TIC-7, TIC-8)	Scram	3 months
Loop temperature, low (TIC-9)	↓	↓
Freeze valve temperature, high, MET sample 1 (TIS-18)		
Freeze valve temperature, high, MET sample 2 (TIS-19)		
Freeze valve temperature, high, MET sample 3 (TIS-17)		
Loop pressure, low (PR-15A)		
Pump cooling and lubrication oil flow, low (FI-005A)		
Pump lubrication oil pressure, low		
Pump low speed	Scram	3 months
Low-temperature alarm on cooler guard heaters	Alarm	3 months
Check and calibrate temperature, pressure, and power recorders and controllers		
Temperature recorders	Data	6 months
Temperature indicators	Data	↓
Temperature controllers	Control	
Pressure recorders	Data	↓
Pressure transducers and pressure indicators	Data	
Loop power recorders	Data	6 months
Pump speed indicators and conductivity cell	Data	3 months
Change vacuum tubes, TICs	Control	6 months
ALPHA pump^b		
Check pump lubrication oil low-pressure alarm (PS-008)	Alarm	3 months
Check speed with strobe light	None	1 month
Check lubrication oil sump level	↓	1 week
Check lower shaft seal leakage (oil)		1 day
Check upper shaft seal leakage (oil)		1 day
Check drive motor for excessive noise or vibration		1 day
Check M-G set for noise or vibration		1 week
Check lubrication and cooling oil system leakage		1 week
Clean "auto clean" filter in cooling and lubrication oil system by rotating wiper handle		3 months

^aScram condition transfers loop from design (ΔT) operation to standby.

^bALPHA pump bearings and seals are designed for at least 8000 hr operation; they may require less frequent replacement, as determined by experience.

ACKNOWLEDGMENTS

We express our thanks to the many persons who contributed to the design, fabrication, and construction of molten-salt corrosion loops FCL-3 and FCL-4. We specifically acknowledge H. E. McCoy, R. E. MacPherson, and J. R. Engel for project management and guidance; C. J. Claffey for mechanical design; C. W. Collins for vessel and piping stress analysis; W. E. Sallee for electrical design; and G. W. Greene for instrumentation and control design. Messrs. Claffey, Sallee, and Greene also contributed sections of this design report in their respective specialities. J. R. Keiser provided metallurgical advice; E. M. Lees and H. E. Robertson gave fabrication and construction assistance; and Virginia Maggart provided secretarial assistance.

REFERENCES

1. W. R. Huntley and P. A. Gnadt, Design and Operation of a Forced-Circulation Test Facility (MSR-FCL-1) Employing Hastelloy N Alloy and Sodium Fluoroborate Salt, ORNL/TM-3863 (January 1973).
2. W. R. Huntley, J. W. Koger, and H. C. Savage, MSRP Semiannu. Progr. Rep. Aug. 31, 1970, ORNL-4622, pp. 176-8.
3. J. W. Koger, A Forced-Circulation Loop for Corrosion Studies: Hastelloy N Compatibility with NaBF₄-NaF (92-8 mole %), ORNL/TM-4221 (December 1972).
4. H. W. Jenkins et al., "EMF and Voltametric Measurements on the U⁴⁺/U³⁺ Couple in Molten LiF-BeF₂-ZrF₄," J. Electrochem. Soc. 116, 1712 (1969).
5. S. Cantor et al., Physical Properties of Molten-Salt Reactor Fuel, Coolant, and Flush Salts, ORNL/TM-2316 (August 1968).
6. S. Cantor, Density and Viscosity of Several Molten Fluoride Mixtures, ORNL/TM-4308 (March 1973).
7. J. W. Cooke, MSRP Semiannu. Progr. Rep. Aug. 31, 1969, ORNL-4449, p. 92.
8. J. H. Griffin, Piping Flexibility Analyses Program MEC-21, LA-2929 (July 1964).



Appendix A

ELECTRICAL DRAWING LIST (MSR-FCL-3)

Electrical drawing list (MSR-FCL-3)

Drawing No.	Size	Title
E 11628 E R 501	E	Single-Line Diagram — Normal and Emergency Power
E 11628 E R 502	E	Schematic Diagram — Sh. 1 — Normal and Emergency Power
E 11628 E R 503	E	Schematic Diagram — Sh. 2 — Normal and Emergency Power
E 11628 E R 504	E	Schematic Diagram — Sh. 3 — Normal and Emergency Power
E 11628 E R 505	E	Auxiliary Heaters — Schem. Diag. — Sh. 4 — Normal and Elec. Power
E 11628 E R 506	E	Main Pump Motor — Schematic and Control Diagram
E 11628 E R 507	E	Exp. Piping Isometric — Heater and T/C Arrangement
E 11628 E R 508	E	Auxiliary Heater and Power Supply Schedule
E 11628 E R 509	E	Variac Cabinet No. 1 — Assembly and Wiring
E 11628 E R 510	E	Variac Cabinet No. 2 — Assembly and Wiring
E 11628 E R 511	E	Variac Cabinet No. 3 — Assembly and Wiring
E 11628 E R 512	E	Variac Cabinet No. 4 — Assembly and Wiring
E 11628 E R 513	E	Metering Cabinet No. 10 — Assembly and Wiring
E 11628 E R 514	E	Exp. Area—Equipment Arrangement — Plan
E 11628 E R 515	E	Exp. Area—Equipment Arrangement — Elevations
E 11628 E R 516	E	Starter Rack Frames & Trans. Support Frame — Assembly & Details
E 11628 E R 517	E	Main Pump Drive—Motor Generator Installation — 1st F. Plans
E 11628 E R 518	E	Equipment Grounding
E 11628 E R 519	E	Electrical Auxiliary Details
E 11628 E R 520	E	Type "E" Variac Control Panel — Assembly & Wiring Diagram

Appendix B

INSTRUMENT DRAWING LIST (MSR-FCL-3)

Instrument drawing list (MSR-FCL-3)

Drawing No.	Size	Title
I-11628-QG-001	E	Instrument Application Diagram, Sh. No. 1
I-11628-QG-002	E	Instrument Application Diagram, Sh. No. 2
I-11628-QG-003	E	Control System Block Diagram
I-11628-QG-004	D	Typ. T/C Installation and Dextir Tab.
I-11628-QG-005	D	Ann. Common Conn. M. E. D.
I-11628-QG-006	D	Control Circuit 1 through 13 M. E. D.
I-11628-QG-007	D	Control Circuit 14 through 33
I-11628-QG-008	D	Ann. Circuit No. 50 through 67
I-11628-QG-009	D	AC Power M. E. D.
I-11628-QG-010	D	Power Measurement Control Cir. 45 through 48
I-11628-QG-011	D	Conductivity Measuring System M. E. D.
I-11628-QG-012	D	Pressure Transducers M. E. D.
I-11628-QG-013	D	M. E. A. Diagram for M-G Set and Clutch
I-11628-QG-014	D	T/C Tabulation
I-11628-QG-015	D	Instrument Cabinets No. 5, 6, 7, 8, and 9, Front Elev.
I-11628-QG-016	D	Instrument Panels Det's. No. 5E, 6C, 6D, and 6E Cutouts
I-11628-QG-017	D	Instrument Panels Det's. No. 7C, 7D, 7E, 8D, and 8G Cutouts
I-11628-QG-018	D	Instrument Panels Det's. No. 5C, 5F, and 9C Cutouts
I-11628-QG-019	D	Cabinet No. 5 Rear View
I-11628-QG-020	D	Cabinet No. 6 Rear View
I-11628-QG-021	D	Cabinet No. 7 Rear View
I-11628-QG-022	D	Cabinet No. 8 Rear View
I-11628-QG-023	D	Graphic Symbols
I-11628-QG-024	D	Relay Mounting Board Details
I-11628-QG-025	D	Side Plate and Ground Bus Details
I-11628-QG-026	D	Leeds and Northrup CAT Control Modifications
I-11628-QG-027	D	Instrument Cab. No. 5 Wiring Table
I-11628-QG-028	D	Instrument Cab. No. 6 Wiring Table

Drawing No.	Size	Title
I-11628-QG-029	D	Instrument Cab. No. 7 Wiring Table
I-11628-QG-030	D	Instrument Cab. No. 8 Wiring Table
I-11628-QG-031	D	Instrument Cab. No. 10 Wiring Table
I-11628-QG-032	D	Level Element Control Box LS-10 Details and Assembly




Appendix C

MECHANICAL DRAWING LIST (MSR-FCL-3)

Mechanical drawing list (MSR-FCL-3)

Drawing No.	Size	Title
P 11628 E R 002	E	Views (B-B, C-C, and D-D) Loop Piping and Equipment
P 11628 E R 003	E	Plan and Elevation Loop Piping and Equipment
M-11628 E R 004	E	Cooler No. 1 Assembly
M 11628 E R 005	E	Cooler No. 2 Assembly
M 11628 E R 006	E	Removable Specimen Assembly
M 11628 E R 007	E	Removable Specimen Details
M 11628 E R 008	E	Removable Specimen Details
M 11628 E R 009	E	Cooler No. 2, Details of Lower Housing and Support Legs
M 11628 E R 010	E	Coolers No. 1 and 2, Subassembly of Core and Dampers
M 11628 E R 011	E	Coolers No. 1 and 2, Upper Removable Duct and Details
M 11628 E R 012	E	Blower and Duct Assembly No. 1 and 2 Blowers
M 11628 E R 013	E	Blower Duct Details for No. 1 and 2 Blowers
P 11628 E R 014	E	Cooler No. 1 Coil Weldment and Details
P 11628 E R 015	E	Cooler No. 2 Coil Weldment and Details
M 11628 E R 016	E	Fill-and-Drain Tank Assembly and Details
M 11628 E R 017	E	Cooler No. 1 Subassembly Lower Housing
S 11628 E R 018	E	Support Frame Assembly Plan
S 11628 E R 019	E	Support Frame Details, Sh. 1
S 11628 E R 020	E	Support Frame Details, Sh. 2
P 11628 E R 021	E	Special Fittings and Freeze Valve
M 11628 E R 022	E	Resistance Heater No. 2
M 11628 E R 023	E	Pump Auxiliary Tank
P 11628 E R 024	E	Lube Oil and Purge Gas Cabinet Piping
M 11628 E R 025	E	Location and Service Piping, FCL 3 and 4
M 11628 E R 026	E	Enclosure Exhaust Duct and Support Weldments
M 11628 E R 027	E	Service Piping for FCL-3 and -4
M 11628 E R 028	E	Enclosure (Shielding) Assembly
M 11628 E R 029	E	Enclosure (Shielding) Section and Details

Drawing No.	Size	Title
M 11628 E R 030	E	Enclosure (Shielding) Section and Details
M 11628 E R 031	E	Enclosure Panels
M 11628 E R 032	E	Enclosure (Shielding) Weldment
M 11628 E R 033	E	Sampler Assembly and Details
P 11628 E R 034	E	Corrosion Specimen and Salt Sample Valving, Vacuum and Helium Service
S 11628 E R 035	E	Purge Gas Cabinet
S 11628 E R 036	E	Purge Gas Cabinet - Details
P 11628 E R 037	E	Lube Oil and Purge Gas Cab. Piping Sections, Weldments & Details
S 11628 E R 039	E	Support Frame Details, Sh. 3
S 11628 E R 040	E	Support Frame Assembly Elevation
M 11628 E R 041	E	Auxiliary Tank Details
M 11628 E R 042	E	Miscellaneous Details
M 11628 E R 043	E	Resistance Heater No. 1
M 11628 E R 044	E	Lube Oil and Purge Gas Cabinet Details
M 11628 E R 045	E	Circulating Pump Drive Motor Assembly
M 11628 E R 046	E	Flexible Coupling



Appendix D

ALPHA PUMP DRAWING LIST (MSR-FCL-3 AND -4)

ALPHA pump drawing list (MSR-FCL-3 and -4)

Drawing No.	Size	Title
M 11628 E R 101	E	ALPHA Pump Assembly
M 11628 E R 102	D	Outer Bearing Housing Assembly
M 11628 E R 103	D	Seal Details
M 11628 E R 104	D	Inner Shaft and Details
M 11628 E R 105	D	Inner Bearing Housing
M 11628 E R 106	D	Details
M 11628 E R 107	D	Shaft Assembly
M 11628 E R 108	D	Pump Impeller
M 11628 E R 109	E	Casing Sleeve
M 11628 E R 110	D	Outer Bearing Housing Weldment
M 11628 E R 111	D	Pump Casing Blank
M 11628 E R 112	D	Details
M 11628 E R 113	D	Details
M 11628 E R 115	D	Shroud Assembly
M 11628 E R 116	D	Shaft
M 11628 E R 117	D	Polygon Gages

Appendix E

INSTRUMENT LIST FOR FCL-3 OR -4

Instrument list for FCL-3 or -4

Instrument No.	Service	Description	Location
CE-H04A	Thermal conductivity	GOW-MAC 24-100	Valve box
CR-16	Conductivity recorder	Minneapolis-Honeywell Class 15, single pen	Panel 5D
CX-16	Conductivity power supply and controller	GOW-MAC 24-510	Panel 8D
ECO-S07A	Cooler heater 1 control	6 kVA single-phase saturable reactor	Electrical equip. rack
ECO-S08A	Cooler heater 2 control	6 kVA single-phase saturable reactor	Electrical equip. rack
EeE-S01A	Potential transformer 0.5:1	GE type JE-27; Cat. No. 760X90G119	Cabinet 10
EeE-S01B	Potential transformer 0.5:1	GE type JE-27; Cat. No. 760X90G119	Cabinet 10
EeE-S04A	Potential transformer 0.5:1	GE type JE-27; Cat. No. 760X90G119	Cabinet 10
EeE-S04B	Potential transformer 0.5:1	GE type JE-27; Cat. No. 760X90G119	Cabinet 10
EeE-S07A	Potential transformer 0.25:1	GE type JE-27; Cat. No. 760X90G126	Cabinet 10
EeE-S08A	Potential transformer 0.25:1	GE type JE-27; Cat. No. 760X90G126	Cabinet 10
EeI-5	Saturable reactor control volts	Weston 0-150 VDC Model 301-57	Panel 8C
EeI-6	Saturable reactor control volts	Weston 0-150 VDC Model 301-57	Panel 8C

Instrument No.	Service	Description	Location
EeI-11	Clutch volts	Weston 0-300 VAC Model 744	Panel 7D
EfI-11	M-G set frequency	Louis Allis 0-400 CPS	Panel 7D
EiE-S01A, B	Current transformer	Esterline-Angus Model D 800:5	On 110 kVA XFORMER Sec
EiE-S04A, B	Current transformer	Esterline-Angus Model D 800:5	On 110 kVA XFORMER Sec
EiE-S07A	Current transformer	GE type JAK-0 400:5	Elect. equip. rack
EiE-S08A	Current transformer	GE type JAK-0 400:5	Elect. equip. rack
EiI-11	Clutch current	Weston 0-5 A ac, Model 744	Panel 7D
EI-10	M-G set "power on" indicator	Pilot light, 115 V, green lens	Panel 8C
EI-11	Clutch "power on" indicator	Pilot light, 115 V, green lens	Panel 8C
ES-6	Damper motor power switch	Allen Bradley Bulletin 800T	Panel 6C
ES-7	Damper motor power switch	Allen Bradley Bulletin 800T	Panel 6C
ES-32	Remote vent switch	Allen Bradley Bulletin 800T	Panel 7C
EV-H10B	Solenoid vent valve	ASCO 8262B208, or equal	Valve station
EwA-4	Loss of blower power alarm	Tigerman 416 NCL-52 annunciator	Panel 6A
EwA-5	Loss of blower power alarm	Tigerman 416 NCL-52 annunciator	Panel 6A

Instrument No.	Service	Description	Location
EwE-S01A	Power to millivolt transducer	Sangamo type CW-10, Cat. No. S1477	Cabinet 10
EwE-S04A	Power to millivolt transducer	Sangamo type CW-10, Cat. No. S1477	Cabinet 10
EwI-S07A	Indicating wattmeter	GE Model AB-10	Panel 5E
EwI-S08A	Indicating wattmeter	GE Model AB-10	Panel 5E
EwR-11	Pump power recording wattmeter	Esterline Angus Model AW	Panel 8D
EwR-12	Main loop heater 1 power	Minn.-Honeywell Class 15, 2 pen	Panel 8B
EwR-13	Main loop heater 2 power	Minn.-Honeywell Class 15, 2 pen	Panel 8B
EwS-4	Cooler 1 power switch	Allen Bradley Bulletin 800T	Panel 6D
EwS-5	Cooler 2 power switch	Bulletin 800T	Panel 6D
FA-005A	Oil-flow-low alarm	Tigerman 416 NCL-S2 annunciator	Panel 5A
FA-66	Enclosure exhaust low-flow alarm	Tigerman 416 NCL-S2 annunciator	Panel 7A
FE-005A	Total oil flow orifice	Fabricated in-house	Oil pump discharge
FE-66	Enclosure exhaust flow switch	Honeywell type 543B 1019-1	In exhaust duct
FI-H08A	Bubbler flow indicator and oil trap	Meriam Model C-1241	System vent line
FI-H08B	Bubbler flow indicator and oil trap	Meriam Model C-1241	System vent line

Instrument No.	Service	Description	Location
FI-006A	ALPHA pump lubrication oil flow	Rotameter, Brooks Model 8-1110-10, or equal	Pump lubrication oil line
FI-007A	ALPHA pump coolant oil flow	Rotameter, Brooks Model 8-1110-10, or equal	Pump coolant line
FI-W04A	Water flow to oil cooler	Rotameter, Brooks Model 8-1110-10, or equal	Water coolant line
FI-11A	Oil leakage trap	Meriam Model C-1241	In valve box
FI-11B	Oil leakage trap	Meriam Model C-1241	In valve box
FI-11C	Off-gas flow indicator	Fischer and Porter Model 10A 1340	In valve box
FI-13A	Pump helium purge flow	Fischer and Porter Model 10A 1340	ALPHA pump purge line
FI-25A	Helium flow to fill-and-drain tank	Fischer and Porter Model 10A 1340	Panel 6D
FS-005A	Oil-flow-low alarm switch	Meletron Model 402	Across FE 005A
FV-H06A	Pump purge vent check valve	Whitey B-4C4-1/3, or equal	Valve box
FV-H07A	Fill-and-drain tank vent check valve	Whitey B-4C4-1/3, or equal	Valve box
FV-H09A	Conductivity cell bypass check valve	Whitey B-4C4-1/3, or equal	Valve box
FV-004A	Oil pump discharge check valve	O1C W547Y, or equal	Oil pump
FV-005A	Oil pump discharge check valve	O1C W547Y, or equal	Oil pump

Instrument No.	Service	Description	Location
FV-H32	Pump oil leakage check valve	Whitey 8-4C4-1/3, or equal	Inside encl.
HC-S07A	Cooler 1 power adjuster	General Radio Model W2 w/rect.	Panel 5F
HC-S07B	Cooler 2 power adjuster	General Radio Model W2 w/rect.	Panel 5F
HS-10A	M-G set motor start switch	Cutler-Hammer maintain contact	Panel 7D
HS-10B	M-G set motor stop switch	Cutler-Hammer maintain contact	Panel 7D
HS-11A	Clutch voltage on switch	Allen Bradley Bulletin 800T	Panel 7D
HS-11B	Clutch voltage off switch	Allen Bradley Bulletin 800T	Panel 7D
HS-11C	Clutch voltage adjust switch	GE SB switch	Panel 7D
HV-A01A	Adjust cooling air to freeze valve S06	Hand valve, Whitey B-1V56, or equal	Panel 6C
HV-A03A	Adjust cooling air to freeze valve S09	↓	Panel 6C
HV-A05A	Adjust cooling air to freeze valve S02		Panel 7C
HV-A07A	Adjust cooling air to freeze valve S12		Panel 6E
HV-A09A	Adjust cooling air to freeze valve S13		Panel 6E
HV-A11A	Adjust cooling air to freeze valve S11		Panel 7E
HV-A13	Adjust cooling air to heater lug H		Inside encl.
HV-A14	Adjust cooling air to heater lugs F & G		Inside encl.

Instrument No.	Service	Description	Location
HV-A15	Adjust cooling air to heater lugs B & C	Whitey B-1K54, or equal	Inside encl.
HV-A16	Adjust cooling air to heater lug E	↓	Inside encl.
HV-A17	Adjust cooling air to heater lug D		Inside encl.
HV-A18	Adjust cooling air to heater lug A		Inside encl.
HV-E01A	Equalize pressure between lines E01 and E02		Panel 6C
HV-E01B	Block line to PT-E01A		Inside encl.
HV-E02A	Equalize pressure between lines E02 and E05		Panel 6E
HV-E03A	Equalize pressure between lines E02 and E03		Panel 6C
HV-E03B	Block line to PT-E03A		Inside encl.
HV-E04A	Equalize pressure between lines E02 and E04		Panel 6C
HV-E05A	Equalize pressure between lines E04 and E05		Panel 6C
HV-E06A	Equalize pressure between lines E02 and E06		Panel 7C
HV-E06B	Block line to PT-E06A		Inside encl.
HV-H01A	Line H01 from GSTF/CSTF He system		At helium supply

Instrument No.	Service	Description	Location
HV-H01B	In line to electrochemical probe	Whitey B-1K54, or equal	At helium supply station
HV-H01C	In helium supply system		Panel 6E
HV-H02A	In helium line H02		Panel 6E
HV-H02B	In line to helium heat exchanger		In valve station
HV-H03A	Conductivity cell bypass valve		
HV-H04A	Conductivity cell block valve		
HV-H05A	Conductivity cell "zero" valve		
HV-H06A	ALPHA pump purge block valve		
HV-H07A	Fill-and-drain tank purge block valve		
HV-H07B	Fill-and-drain tank purge block valve		
HV-H08A	FI-H08A drain valve		
HV-H08B	FI-H08B drain valve		
HV-H09A	Conductivity cell bypass valve		
HV-H10A	ALPHA pump purge block valve		
HV-H11A	FI-H11A drain valve		
HV-H11B	FI-H11B drain valve		

Instrument No.	Service	Description	Location
HV-H11C	ALPHA pump purge throttling valve	Hoke 2 PY 281, or equal	In valve station
HV-H11D	ALPHA pump purge block valve	Whitey B-1K54, or equal	↓
HV-H11E	ALPHA pump purge block valve		
HV-H11F	Conductivity cell calibration port		
HV-H11G	Oil catch tank drain valve		
HV-H12A	Pump gasket buffer gas supply valve		
HV-H12B	Pump gasket buffer gas supply valve		
HV-H13A	Pump purge gas supply valve		
HV-H14A	Helium station bottle valve	Supplied with helium bottle	
HV-H14B	Helium supply valve (utility)	Whitey B-1K54, or equal	
HV-H14C	Helium bottle supply block valve		
HV-H15A	MET sample station 3 He supply valve		MET sample station 3
HV-H15B			↓
HV-H16A			
HV-H16B			

Instrument No.	Service	Description	Location	
HV-H17A	MET sample station 1 He supply valve	Whitey B-1K54, or equal	MET sample station 1	
HV-H17B				
HV-H18A				
HV-H18B				
HV-H19A	Salt sample station 1 He supply valve			Salt sample station 1
HV-H19B				
HV-H20A				
HV-H20B				
HV-H21A	Salt sample station 2 He supply valve			Salt sample station 2
HV-H21B				
HV-H22A				
HV-H22B				
HV-H23A	MET sample station 2 He supply valve			MET sample station 2
HV-H23B				
HV-H24A				
HV-H24B				

Instrument No.	Service	Description	Location
HV-H25A	Fill-and-drain tank He throttling valve	Whitey B-1V54, or equal	Panel 6E
HV-H25B	Fill-and-drain tank vent valve	Whitey B-1K54, or equal	Panel 6D
HV-H25C	Fill-and-drain tank block valve	Whitey B-1K54, or equal	Panel 6D
HV-H26A	Fill-and-drain tank block valve	Whitey B-1K54, or equal	Panel 6E
HV-001A	Oil cooler drain valve	Nibco/Scott T-235Y, or equal	Oil cooler
HV-001B	Oil cooler level indicator block valve	Nibco/Scott T-235Y, or equal	Oil cooler
HV-001C	Oil cooler level indicator block valve	Nibco/Scott T-235Y, or equal	Oil cooler
HV-002A	Oil pump 2 inlet block valve	Hammond 1B643, or equal	Oil pump 2 inlet
HV-003A	Oil pump 1 inlet block valve	Hammond 1B643, or equal	Oil pump 1 inlet
HV-006A	Lubrication oil throttling valve	Powell Fig. 180A, or equal	Lubrication oil line
HV-007A	Cooling oil throttling valve	Powell Fig. 180A, or equal	Cooling oil line
HV-S02A	MET sample station 1 ball valve	Worcester No. 466-T-SW	MET sample station 1
HV-S02B	MET sample station 1 ball valve	Worcester No. 466-T-SW	MET sample station 1

Instrument No.	Service	Description	Location
HV-S06A	MET sample station 3 ball valve	Worchester No. 466-T-SW	MET sample station 3
HV-S06B	MET sample station 3 ball valve	↓	MET sample station 3
HV-S09A	MET sample station 2 ball valve		MET sample station 2
HV-S09B	MET sample station 2 ball valve		MET sample station 2
HV-S14A	Salt sample station 1 ball valve		Salt sample station 1
HV-S14B	Salt sample station 1 ball valve		↓
HV-S14C	Auxiliary tank helium valve	Whitey B-1K54, or equal	
HV-S14D	PT-S14A block valve	Whitey B-1K54, or equal	
HV-S15A	Salt sample station 2 ball valve	Worchester No. 466-T-SW	Salt sample station 2
HV-S15B	Salt sample station 2 ball valve	Worchester No. 466-T-SW	Salt sample station 2
HV-S15C	PT-S15A block valve	Whitey B-1K54, or equal	Salt sample station 2
HV-V01A	Vacuum pump isolation valve	WRC 1253 3/4, or equal	Vacuum pump inlet
HV-V02A	MET sample 3 vacuum valve	Whitey B-1K54, or equal	MET sample 3
HV-V03A	MET sample 1 vacuum valve	↓	MET sample 1
HV-V04A	Salt sample 1 vacuum valve		Met sample 3
HV-V05A	Salt sample 2 vacuum valve		Salt sample 2

Instrument No.	Service	Description	Location	
HV-V06A	MET sample 2 vacuum valve	Whitey B-1K54, or equal	MET sample 2	
HV-V07A	Equalizing lines vacuum valve	Whitey B-1K54, or equal	Panel 6E	
HV-W02A	Oil cooler water throttling valve	Whitey B-1V54, or equal	Valve station	
HV-W02B	Oil cooler water drain valve	Whitey B-1K54, or equal	Valve station	
LE-10A	Auxiliary tank low salt level	Salt probe	Auxiliary tank	
LE-10B	Auxiliary tank medium salt level			
LE-10C	Auxiliary tank high salt level			
LE-S15A	Fill-and-drain tank low salt level		Fill-and-drain tank	
LE-S15B	Fill-and-drain tank high salt level			
LI-10A	Auxiliary tank low-level indicator	115-V pilot light, white lens	Panel 6C	
LI-10B	Auxiliary tank medium-level indicator			
LI-10C	Auxiliary tank high-level indicator			
LI-S15A	Fill-and-drain tank low-salt-level indicator			Panel 7E
LI-S15B	Fill-and-drain tank high-salt-level indicator			
PA-S14A	Auxiliary tank low pressure alarm	Tigerman 416 NCL-S2 annunciator	Panel 5A	

Instrument No.	Service	Description	Location
PdC-H11A	Loop exhaust gas diff. pressure control	Moore Products type 63SU-L	In valve station
PE-H15	MET sample station 3 vacuum	Hastings vacuum gage type DV-6M ↓	MET station 3
PE-H17	MET sample station 1 vacuum		MET station 1
PE-H19	Salt sample station 1 vacuum		Salt station 1
PE-H23	MET sample station 2 vacuum		MET station 2
PE-V01A	Vacuum pump inlet vacuum		Vacuum pump inlet
PI-A13A	Air header pressure		Norten-Ketay 3 1/2 in., 0-30 psig, or equal
PI-14	Digital pressure indicator	Data Technology Corp. Model 412-03	Panel 5C
PI-H01A	Purified helium regulated pressure	Ashcroft Cat. No. 1009A, or equal	Helium bottle station
PI-H02A	Helium pressure from regulated source	Norten Ketay, or equal; 3 1/2 in. diam, 0-30 psig ↓	Panel 6E
PI-H02B	Helium pressure to ALPHA pump		Panel 6E
PI-H12A	Helium pressure to gasket buffer		Panel 6D
PI-H13A	Helium pressure to pump purge		Panel 6D
PI-H14A	Helium pressure to sampling station		Panel 6E

Instrument No.	Service	Description	Location
PI-H14B	Helium bottle supply pressure	Integral with PV-H14A (bottle regulator)	Helium bottle station
PI-H14C	Helium bottle regulated pressure	Integral with PV-H14A (bottle regulator)	Helium bottle station
PI-H15A	MET sample 3 pressure	2 1/2 in. diam, 30 in. Hg, 5 psi compound gage	MET sample 3
PI-H17A	MET sample 1 pressure	↓	MET sample 1
PI-H19A	Salt sample 1 pressure		Salt sample 1
PI-H21A	Salt sample 2 pressure		Salt sample 2
PI-H23A	MET sample 2 pressure		MET sample 2
PI-004A	Oil pump 2 discharge pressure		2 in. diam, 0-60 psig pressure gage
PI-005A	Oil pump 1 discharge pressure	2 in. diam, 0-60 psig pressure gage	Oil pump stand
PI-V01A	Vacuum system pressure	Ashcroft Duragage 0-30 in. Hg, or equal	Panel 6E
PI-V01B	Vacuum system pressure	Ashcroft Duragage 0-30 in. Hg, or equal	Vacuum pump inlet
PM-E01A	MET sample 3 pressure modifier	Bell & Howell Model 18-112A-M31	Instr. cabinet 5
PM-E03A	MET sample 1 pressure modifier	Model 18-112A-M31	Instr. cabinet 5
PM-E-6A	MET sample 2 pressure modifier	Model 18-112A-M31	Instr. cabinet 5
PM-S14A	Auxiliary tank pressure modifier	Bell & Howell Model 18-112A-AA	Instr. cabinet 5

Instrument No.	Service	Description	Location
PM-S14B	Auxiliary tank pressure modifier	Foxboro Model 66GT-OW	Instr. cabinet 5
PM-S15A	Fill-and-drain tank pressure modifier	Bell & Howell Model 18-112A-AA	Instr. cabinet 5
PM-S15B	Fill-and-drain tank pressure modifier	Foxboro Model 66GT-OW	Instr. cabinet 5
PR-15A, B	Auxiliary tank and fill-and-drain pressure recorder	Foxboro 2-pen Model M-64	Panel 5C
PS-S14A	Auxiliary tank low pressure switch	In PM-S14A	Instr. cabinet 5
PS-008	Lubrication oil return line pressure switch	Honeywell Model LR404H 10271, or equal	Lubrication oil stand
PSV-H02A	ALPHA pump helium pressure relief	Circle Seal model	Inside encl.
PSV-H14A	Helium bottle regulator relief	Integral with PV-H14A	Helium bottle station
PSV-H14B	Sample station pressure relief	Circle Seal model	Inside encl.
PT-E01A	MET sample 3 pressure transmitter	Bell & Howell Model 4-402-0004	MET sample 3
PT-E03A	MET sample 1 pressure transmitter	↓	MET sample 1
PT-E06A	MET sample 2 pressure transmitter		MET sample 2
PT-S14A	Auxiliary tank pressure transmitter	Bell & Howell Model 4-402-0004	Auxiliary tank
PT-S15A	Fill-and-drain tank pressure transmitter	Bell & Howell Model 4-402-0004	Fill-and-drain tank
PV-A13A	Air header pilot pressure regulator	Fisher Controls type 67, or equal	Panel 7E

Instrument No.	Service	Description	Location
PV-H01A	Purified helium pressure regulator	Fisher Controls type 67, or equal	Helium bottle station
PV-H02A	Pump purge gas pressure regulator	Fisher Controls type 67, or equal	Panel 6E
PV-H14A	Helium bottle pressure regulator	Dual-gage helium cylinder regulator	Helium bottle station
TCO-5	I ² R heater 1 control operator	Hevi-duty 110 kVA saturable reactor	Electrical equipment
TCO-6	I ² R heater 2 control operator	Hevi-duty 110 kVA saturable reactor	Electrical equipment
TIC-7	I ² R heater 1 temperature indicator-controller	Barber-Colman Model 292P	Panel 5B
TIC-8	I ² R heater 2 temperature indicator-controller	↓	Panel 5B
TIC-9	Cooler 2 temperature indicator-controller		Panel 6B
TI-17	Freeze valve S06 temperature indicator		Panel 6B
TI-18	Freeze valve S09 temperature indicator		Panel 7B
TI-19	Freeze valve S02 temperature indicator		Panel 7B
TI-20	Miscellaneous temperature indicator	Doric Scientific Model DS-350	Panel 5C
TR-1	Miscellaneous temperature indicator-recorder	Minneapolis-Honeywell Class 15 multipoint	Variac cabinet 1

Instrument No.	Service	Description	Location
TR-2	Miscellaneous temperature indicator recorder	Minneapolis-Honeywell Class 15 multipoint	Variac cabinet 2
TR-3	↓	↓	Variac cabinet 3
TR-4			Variac cabinet 4
TR-5	I ² R heater 1 temperature recorder	Leeds & Northrup Model H recorder	Panel 8C
TRC-6	I ² R heater 2 temperature recorder-controller	L&N Model H recorder-controller	Panel 8C
TS-7	I ² R heater 1 temperature limit switch	Integral with TIC-7	Panel 5B
TS-8	I ² R heater 2 temperature limit switch	Integral with TIC-8	Panel 5B
TS-9	Cooler 2 temperature limit switch	Integral with TIC-9	Panel 6B
TS-17A	Freeze valve S06 temperature alarm switch	Integral with TI-17	Panel 6B
TS-18A	Freeze valve S09 temperature alarm switch	Integral with TI-18	Panel 7B
TS-19A	Freeze valve S02 temperature alarm switch	Integral with TI-19	Panel 7B
TS-20	Thermocouple selector switch	Lewis type 1154	Panel 5C
TS-20A	Thermocouple selector switch	Lewis type 10S20	Panel 5C
TS-20B	Thermocouple selector switch	Lewis type 10S20	Panel 5C

Instrument No.	Service	Description	Location
TS-20C	Thermocouple selector switch	Lewis type 10S20	Panel 5C
TS-20D	Thermocouple selector switch	Lewis type 10S20	Panel 5C



Appendix F

WELDING OF 2% Ti-MODIFIED HASTELLOY N

INTRA-LABORATORY CORRESPONDENCE

OAK RIDGE NATIONAL LABORATORY

July 1, 1975

To: L. E. McNeese

Subject: Welding of 2% Ti-Modified Hastelloy N

Standard Hastelloy N is a code-approved material, and welding procedures are in common use at ORNL for joining this material to itself (WPS 1402) and for joining Hastelloy N to the 300-series stainless steels (WPS 2604). We have found it necessary to modify the chemical composition of this alloy to obtain better nuclear performance. One of the modified compositions contains 2% Ti, and we are using this material in the construction of two forced-circulation loops. Thus, we must determine whether the modified alloy can be welded by the existing procedures or whether new procedures must be established.

Three test welds were prepared by Frizzell et al. and the reports are attached. The welds were:

1. modified Hastelloy N to modified Hastelloy N with modified Hastelloy N wire,
2. modified Hastelloy N to standard Hastelloy N with modified Hastelloy N wire, and
3. modified Hastelloy N to 300 stainless steel with 82T filler wire.

These welds were made by the same parameters specified in WPS 1402 and WPS 2604. They were quite sound and passed all tests.

The observations from these three weldability tests and the similarity of the physical and mechanical properties of the 2% Ti-modified and standard Hastelloy N led to the conclusion that the 2% Ti-modified Hastelloy N is equivalent to the standard Hastelloy N described in ASME Code Cases 1315 and 1345. Thus WPS 1402 can be used for any combination of standard and 2% Ti-modified Hastelloy N base and filler metals. Similarly, WPS 2604 can be used to join the 2% Ti-modified alloy to 300-series stainless steels. Welders already qualified on WPS 1402 and 2604 are qualified to weld 2% Ti-modified Hastelloy N.

Since the exact chemical modification of Hastelloy N to be used in the future has not been determined, we view the steps taken here as an interim measure. When we determine the final composition, we will proceed to establish this

L. E. McNeese


2

July 1, 1975

alloy as a separate code-approved material with its own welding procedures. In the meantime the existing procedures will be used.



R. J. Beaver
QAC-Materials



H. E. McCoy, Manager
Molten Salt Reactor Materials Program

HEM:kd

Att.

cc: J. R. Engel, w/o att.
D. R. Frizzell, w/att.
R. H. Guymon, w/o att.
W. R. Huntley, w/o att.
B. McNabb, w/o att.
C. A. Mills, w/att.
T. K. Roche, w/o att.
J. R. Weir, w/att.
C. H. Wodtke, w/o att.



ORNL/TM-5540
Dist. Category UC-76

Internal Distribution

- | | |
|--------------------------|--------------------------------------|
| 1. R. F. Apple | 32. J. R. Keiser |
| 2. C. R. Brinkman | 33. A. D. Kelmers |
| 3. W. D. Burch | 34. C. J. McHargue |
| 4. C. J. Claffey | 35. R. E. MacPherson |
| 5. W. E. Cooper | 36. W. J. McCarthy, Jr. |
| 6. J. M. Corum | 37. H. E. McCoy |
| 7. W. B. Cottrell | 38-40. L. E. McNeese |
| 8. J. M. Dale | 41. R. L. Moore |
| 9. J. H. DeVan | 42. H. E. Robertson |
| 10. J. R. Engel | 43. T. K. Roche |
| 11. G. G. Fee | 44. W. E. Sallee |
| 12. D. E. Ferguson | 45. Myrtlelen Sheldon |
| 13. L. M. Ferris | 46. M. D. Silverman |
| 14. M. H. Fontana | 47. A. N. Smith |
| 15. A. P. Fraas | 48. I. Spiewak |
| 16. M. J. Goglia | 49. J. J. Taylor |
| 17. G. W. Greene | 50. J. R. Weir |
| 18. A. G. Grindell | 51. G. D. Whitman |
| 19. R. H. Guymon | 52. W. J. Wilcox |
| 20. W. O. Harms | 53. L. V. Wilson |
| 21. J. R. Hightower, Jr. | 54. ORNL Patent Office |
| 22. H. W. Hoffman | 55-56. Central Research Library |
| 23-30. W. R. Huntley | 57. Document Reference Section |
| 31. P. R. Kasten | 58-60. Laboratory Records Department |
| | 61. Laboratory Records (RC) |

External Distribution

62. Research and Technical Support Division, ERDA, ORO
 63. Director, Reactor Division, ERDA, ORO
 64-65. Director, Division of Nuclear Research and Applications, Energy Research and Development Administration, Washington, D.C. 20545
 66-169. For distribution as shown in TID-4500 under UC-76, Molten-Salt Reactor Technology